

 
Precautions

1. Please fix the product on a solid and reliable wall. When hitting, please hit the area, and do not hit the corner area to avoid hand injury or equipment damage.
2. This product is suitable for adults. Children should use it under adult supervision.
3. Beginners should not be too strong to avoid hand injury. First of all, pay attention to safety during the exercise. It is strictly forbidden to hit legs and knees.
4. Do not hit the horn area.
5. The device can not be turned on or abnormal please check whether the power is too low, should be charged in time, charging time should not exceed 8 hours, long-term use is recommended to charge once 1-2 months.
6. This product is not waterproof, wipe boxing target need to use dry cloth do not touch water.
7. Please take good care of the instructions for emergency use.



Smart Music Boxing Target Instruction Manual

Product Description

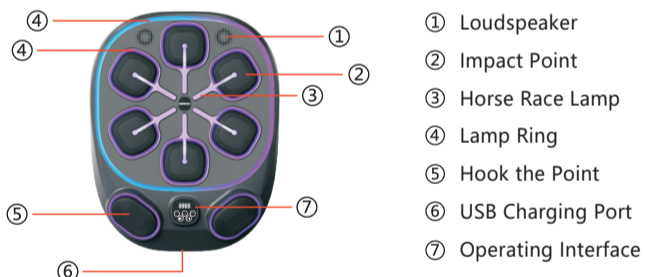


Installation Notes

Installation Way 1:


1. Hole No.1/2/3/4 are mounting holes for brackets.
2. First fix the No.2 and No.3 holes of the back of the boxing target with flat head screws.
3. Draw the No.1 and No.4 holes of the bracket on the wall, drill the holes with an impact electric drill, and fix them on the wall with expansion screws.
4. Before using the product, please make sure the installation is firm.

 (Bracket installation is the most secure)

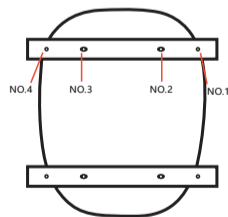

Installation Way 2:

 1. Align and paste the hook and loop fasteners with glue on the back of the product.
2. Peel off the double-sided tape on the top half.
3. Align the position with the wall and stick it firmly.

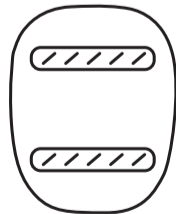

Installation For Use

Bluetooth Name: GDBX- Serial number, serial number is 6 numbers or letters A-F

Switch on and off: Long press button for 2 seconds to switch on and off the machine. When the Bluetooth is not connected, the machine will automatically shut down without any operation.

Volume up or down: Long press button to lower the volume, long press button to increase the volume

Mode Selection: Press button to select P01-P09, a total of 9 modes. P01 is a random mode, the others are fixed pattern.

Speed Selection: Press to select HAU, H01-H09, a total of ten speeds, in which HAU is the music rhythm mode, the others are fixed speed.

Sound Switch: Press button to turn on or off the impact sound.

Play Pause: After connecting Bluetooth, short press the power button to control Bluetooth music play pause.

Next Music: Short press , you can switch the next music.

Charging: After plugging in the charger, the battery icon will increase step by step, and when the battery is full, the battery icon will flash together.

Low Battery Warning: When the device battery is low, the display will flash "----" to prompt charging.

Power Out: The power is completely exhausted, the key operation will not have any reaction, must be charged to a certain amount of power to turn on.

Troubleshooting

NO.	Symptoms	Cause Analysis	Method of exclusion
1	No lights and no sound	The product is not powered on	Short press the switch
2	No lights and no sound	Battery drain	Charge
3	Lights flicker	Low battery	Charge
4	Short press the switch can not turn on	The main chip capacitor is short of power due to long-term non-startup	Repeatedly short press the switch
5	Banging sound inside the device	Issued by the internal active stress structure	Normal phenomenon