 


ENTERTAINMENT UNIT

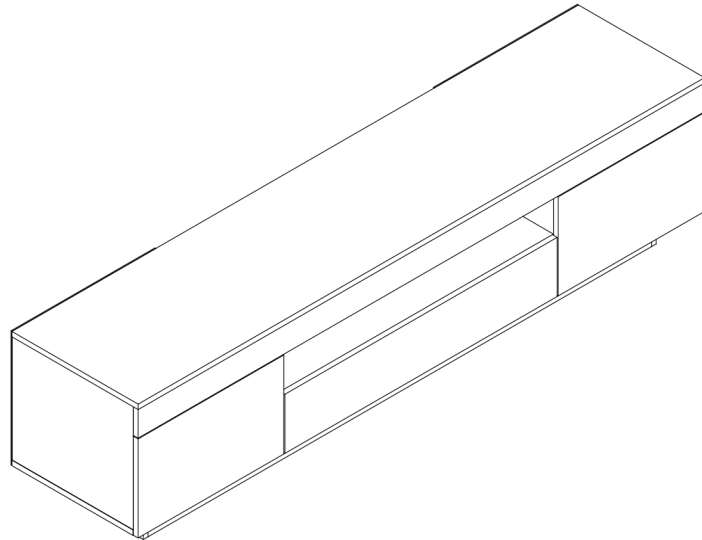

 





MODEL: EU-B6-180-WD




ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.

HARDWARE

A 54sets  A1 A2	B 20pcs 	C 4pcs 	D 4pcs  35x3.5mm
E 32pcs  14x3.5mm	G 40pcs 	H 8pcs 	F 1 set  F1 F2

 PARTS

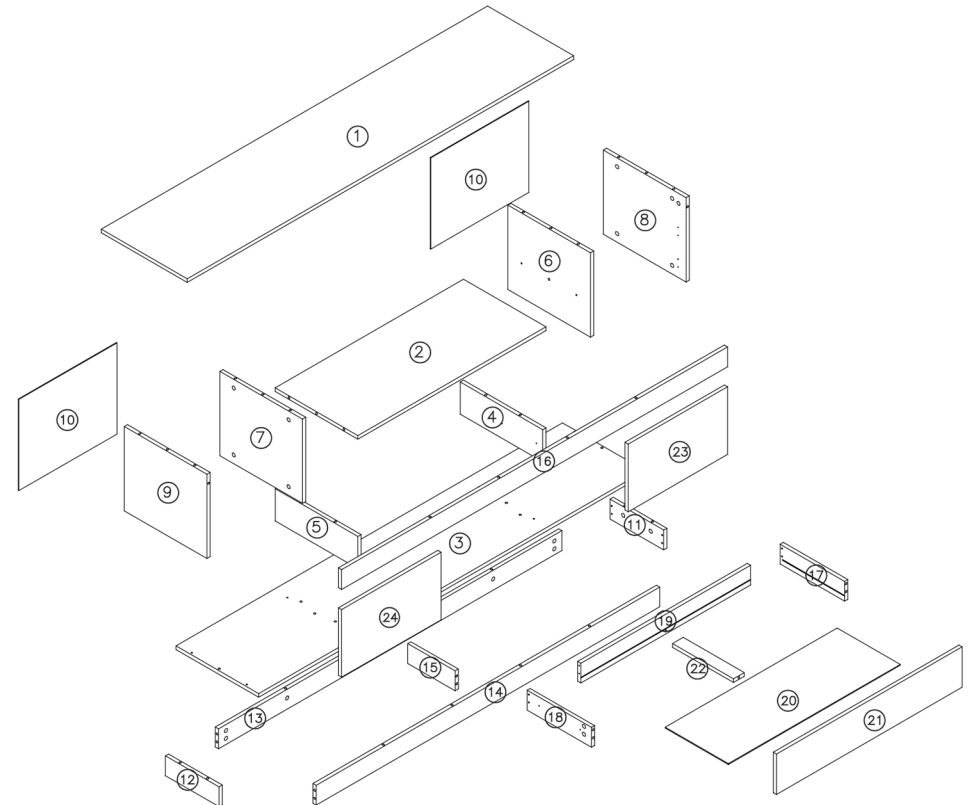

ASSEMBLY CHECKLIST



 
Read through the instructions carefully before starting assembly.



Make sure that you have the required tools. Do not use power tools.



Identify and lay out all parts to familiarise yourself with them.

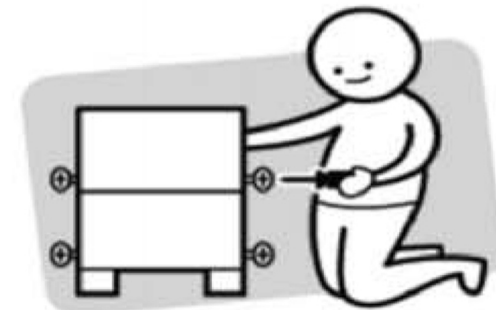


Do not fully tighten all screws until the step or process has been completed.

USEFUL INFORMATION


1. Never use power tools for assembly. They can damage the components or hardware if used incorrectly.
2. The most common mistakes made during assembly are using the wrong hardware or getting components from back to front.
3. Always assemble the product on a soft surface such as a carpet or cardboard to avoid scratching or damaging the surface of the product.

 1

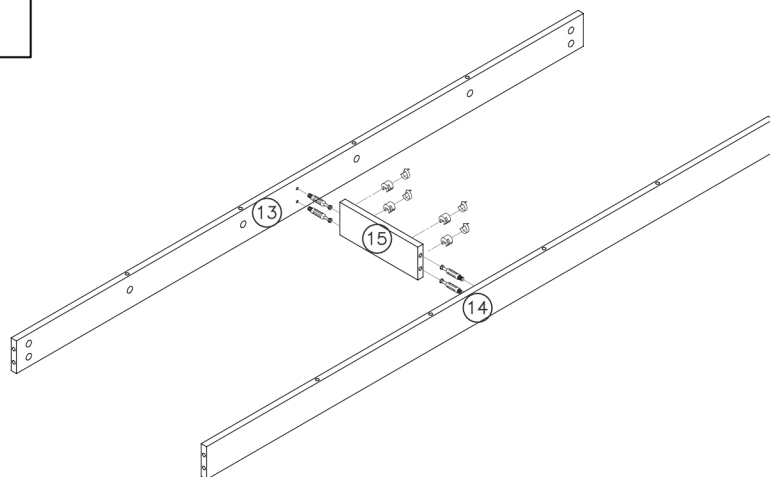


A1x4 A2x4

 2

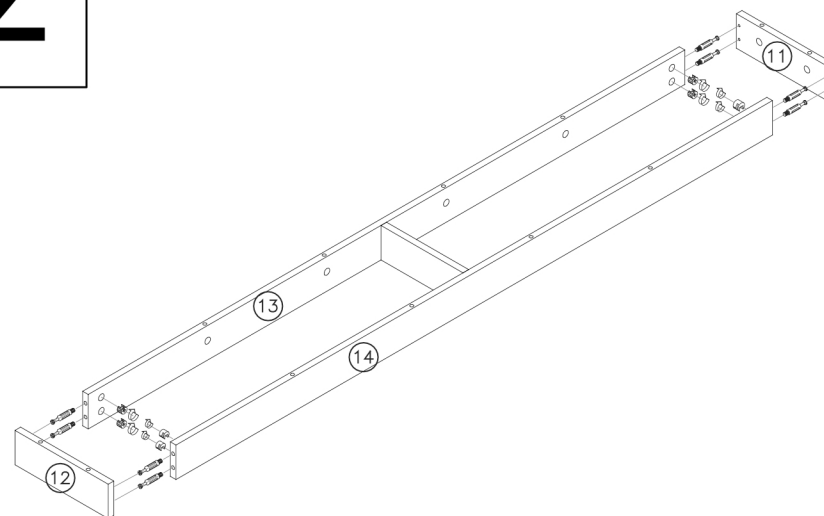


A1x8 A2x8

 3

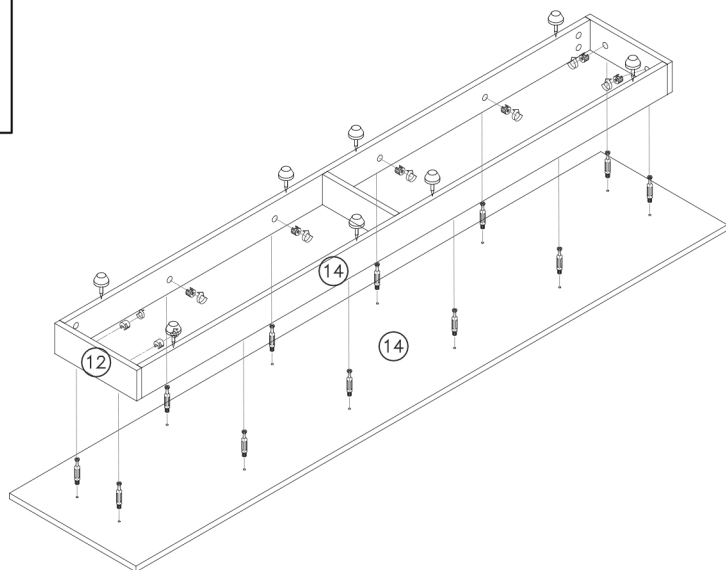

A1x12 A2x12 Hx8

 
4

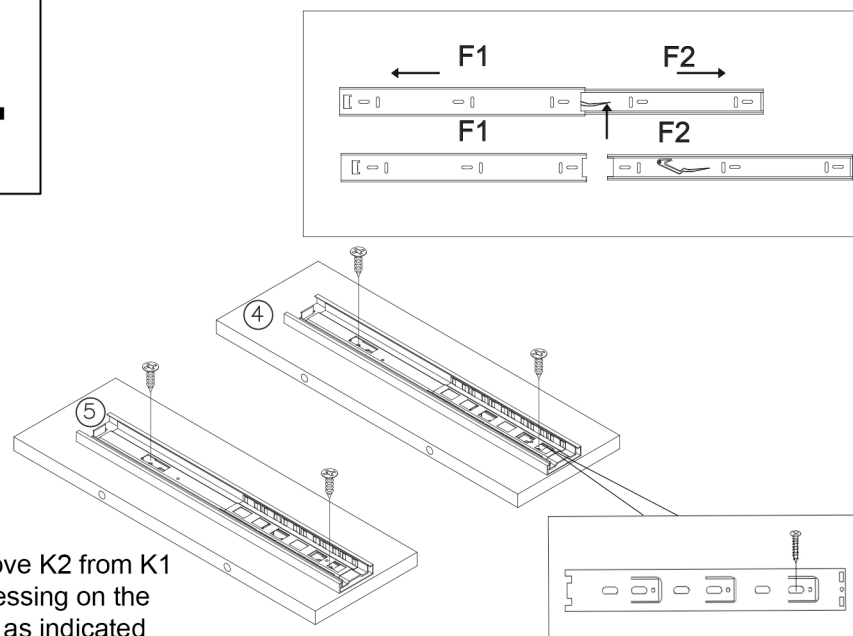

Remove K2 from K1
by pressing on the
catch as indicated
and sliding it out.


F1x2 Ex4

 5

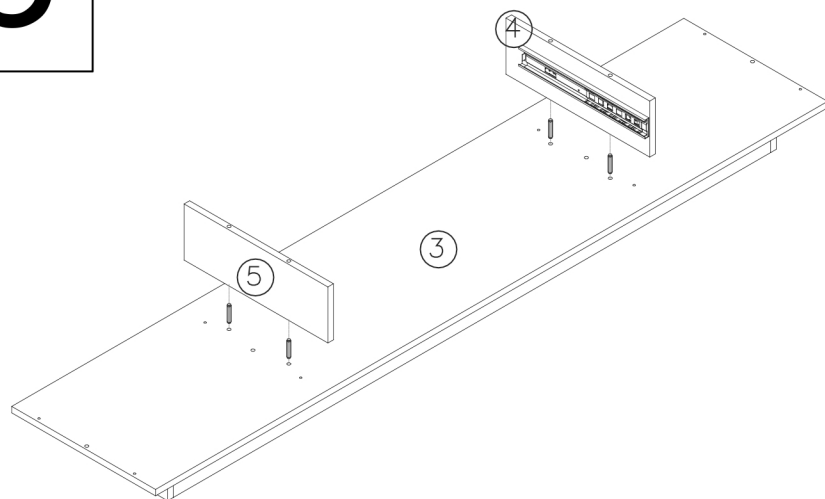


Bx4

 6

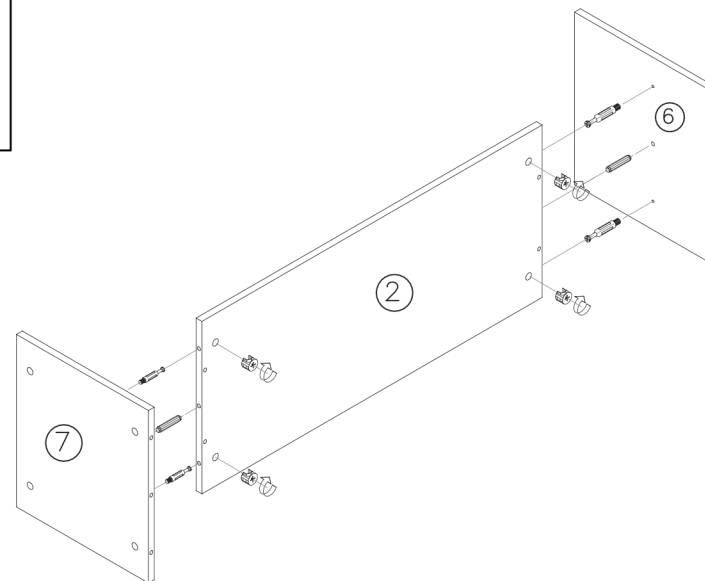


A1x4 A2x4 Bx2

 7

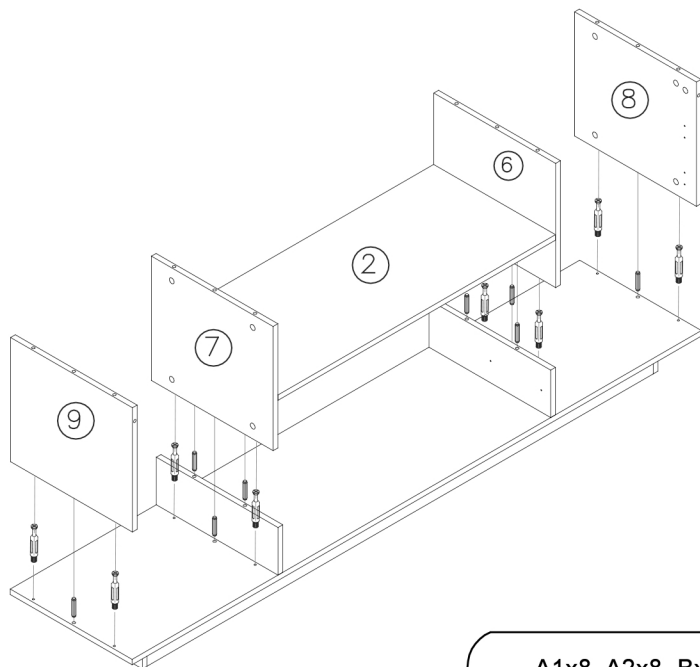


A1x8 A2x8 Bx8

 8

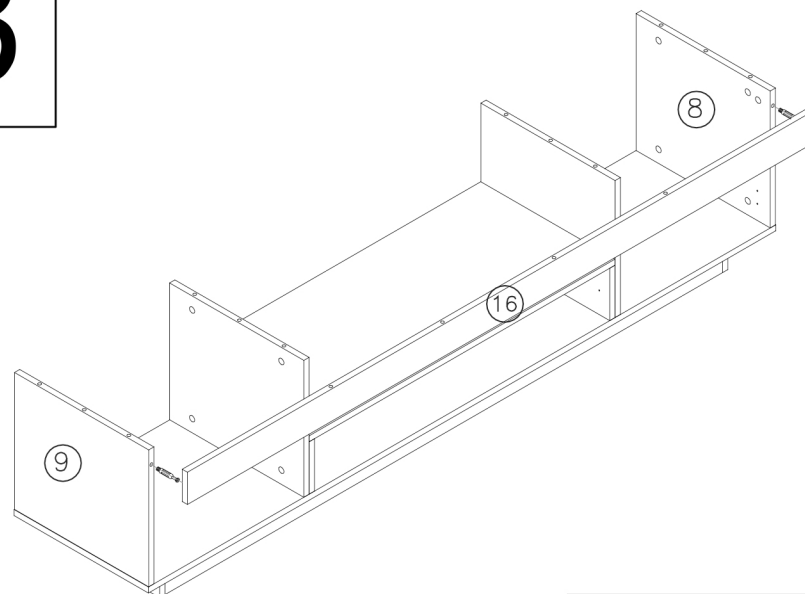


A1x2 A2x2

 9

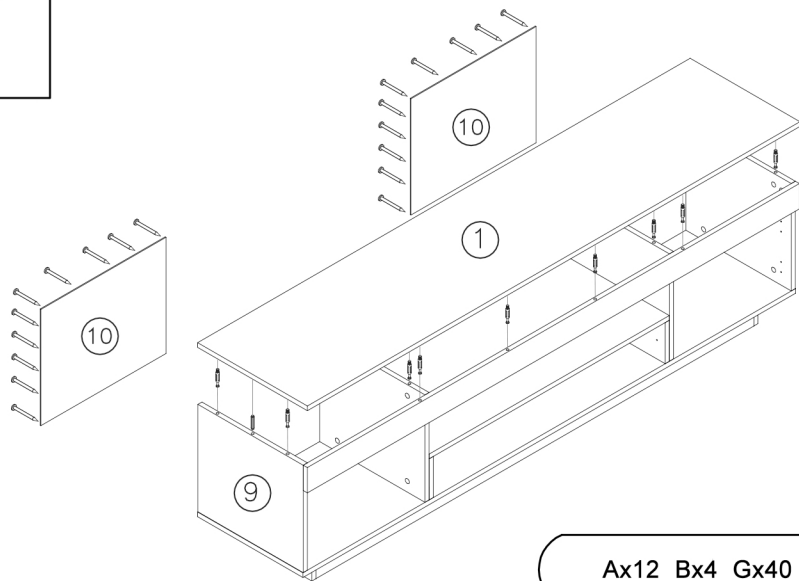


Ax12 Bx4 Gx40

 10

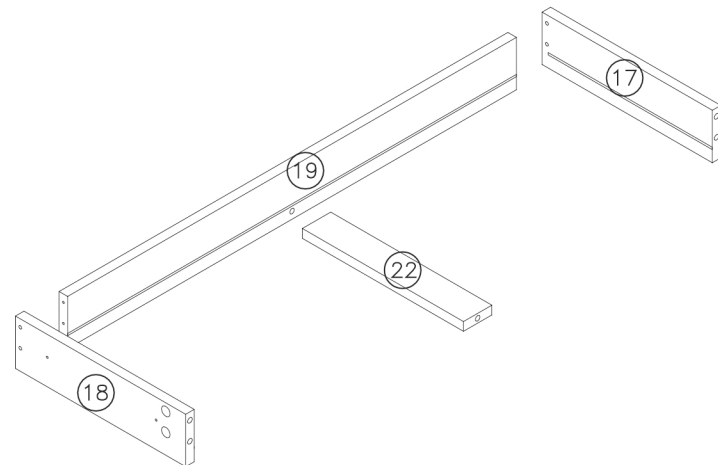


Dx4 Bx1

 11

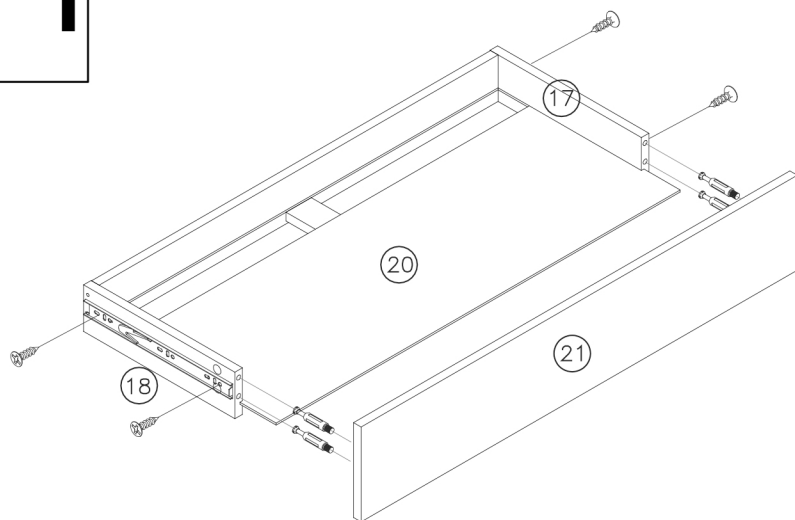

Ax4 Bx2 F2x2 Ex4

 12

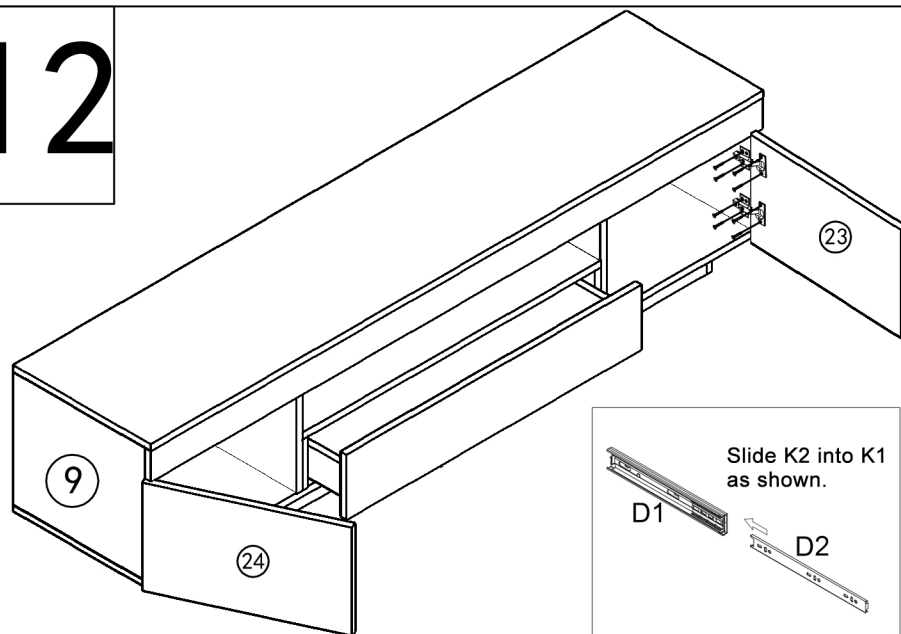

Cx4 Ex24

13

 
 
Hinge adjustment

If the doors do not appear to be aligned, loosen or tighten the appropriate screws on each hinge as illustrated.

A. SIDE-TO-SIDE ADJUSTMENT
Loosen screw A, adjust the gap with screw B and re-tighten screw A.

B. DEPTH ADJUSTMENT
Loosen screw A, push hinge forward or backward, and re-tighten screw A and screw B with a ¼ turn clockwise.

C. HEIGHT ADJUSTMENT
Loosen screw C, adjust door height and re-tighten screw C.

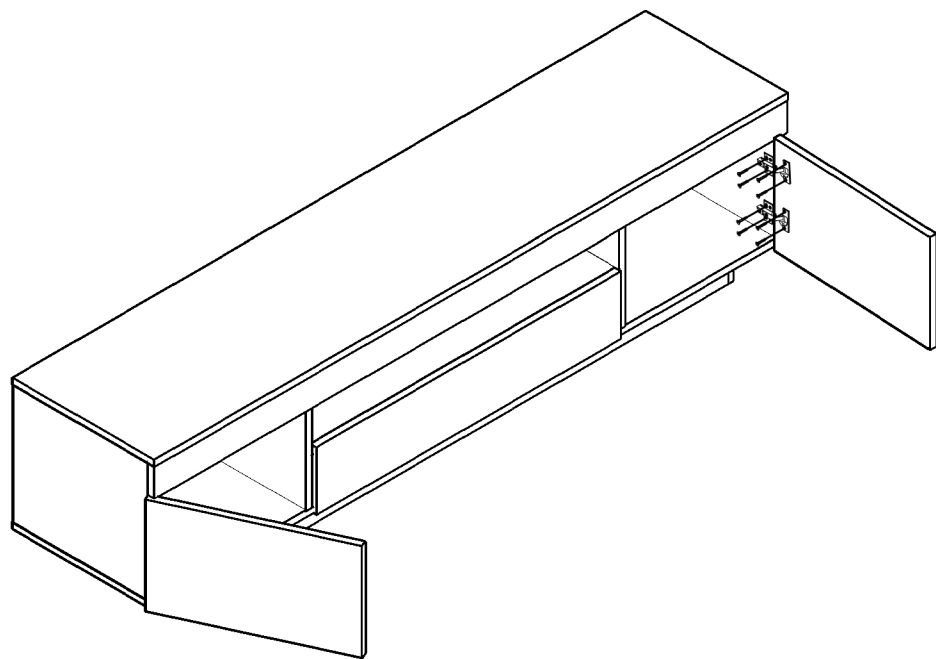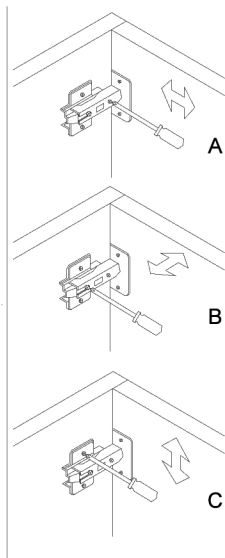

Cx4 Ex24

14

