


**FUNCTIONS P- 1**

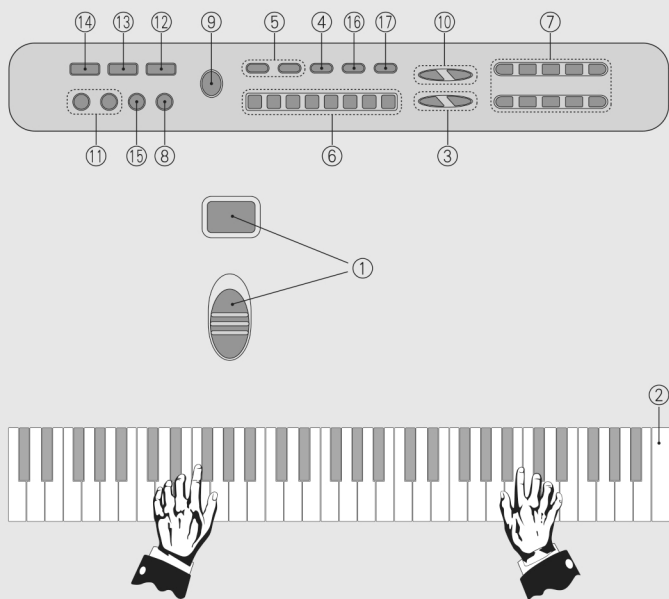

**OPERATING INSTRUCTIONS P- 2**

**FUNCTIONS**

- |                          |                             |
|--------------------------|-----------------------------|
| <b>1</b> POWER           | <b>10</b> TEMPO + -         |
| <b>2</b> KEYBOARD        | <b>11</b> CHORD             |
| <b>3</b> VOLUME + -      | <b>12</b> SOUND EFFECT/PLAY |
| <b>4</b> TONE/DRUM       | <b>13</b> RECORD            |
| <b>5</b> TONE A-B        | <b>14</b> PROG              |
| <b>6</b> TONE/DRUM GROUP | <b>15</b> DEMO              |
| <b>7</b> RHYTHM GROUP    | <b>16</b> FOLLOW            |
| <b>8</b> FILL-IN         | <b>17</b> OKON              |
| <b>9</b> STOP            |                             |

**1 POWER**

Press the POWER button and slide up the POWER switch (1) to turn on the KEYBOARD (2).

**2 VOLUME**

Use the VOLUME switch (3) to increase or reduce the volume.

**3 TONE**

- Press the TONE/DRUM button (4) to switch from drum to tone mode.
- Press the TONE A-B button (5) to assign the area of tone.
- Press the TONE/DRUM GROUP button (6) to select the tone.

**OPERATING INSTRUCTIONS P- 3**

**4 RHYTHM**

- Press the RHYTHM button (7) to select the rhythm.
- Then press the FILL-IN button (8) to insert a transition rhythm.
- Press the STOP button (9) to exit the playing mode.

**5 TEMPO**

Use the TEMPO button (10) to increase or decrease the tempo.

**6 CHORD**

- To play chords with a single finger or fingers, press the RHYTHM button (7).
- Then select the SINGLE or FINGER button (11).
- You can choose different areas of the keyboard to play single finger or fingers chords to suit your requirements.

**7 DRUM**

Press the TONE/DRUM GROUP button (6) to use corresponding drum patterns from the eight available options.

**OPERATING INSTRUCTIONS P- 4**

**8 SOUND EFFECT**

Press the SOUND EFFECT button (12) to select three different sound effects.

**9 PROG/RECORD**

- Press the RECORD button (13) to enter into recording mode and play the keyboard to record.
- Press the PLAY button (12) to playback the recording.
- Press the PROG button (14) to enter into programming mode, and press the DRUM button (4) to record.
- Press the PLAY button (12) to playback the recording.
- Press the STOP button (9) to exit recording or programming mode.

**10 DEMO**

- Press the DEMO button (15) to play the demo music.
- Press the STOP button (9) to stop the play.

**11 LEARN MODE**

- There are two learning mode options.
- Press the FOLLOW button (16) or OKON button (17) to enter into learning mode.
  - Press the white keys on the keyboard to start playing.
  - Press the STOP button (9) to exit the function.