
 



 








# DINING CHAIR

MODEL: DCH-RATSPA-WH-2PC


# ASSEMBLY INSTRUCTIONS

A  x1	B  x1
C  x1	D  x1
E  M6x13mm x4	F  M6 x1
G  x1	H  x1
I  M6x50mm x1	J  M6xΦ16x1 5mm x4
K  M6x20mm x4	L  x4


## ASSEMBLY TIPS

- Do not fully tighten the screws until all of them are aligned properly with the holes.
- If the legs are uneven on the ground during assembly, loosen some screws and add some pressure on the chair to ensure the legs are even. Then tighten the screws diagonally.


### STEP 1

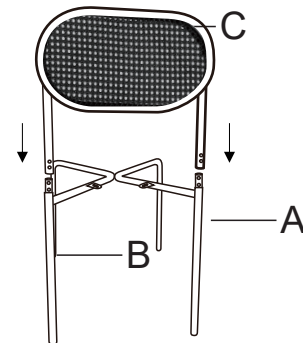


### STEP 2

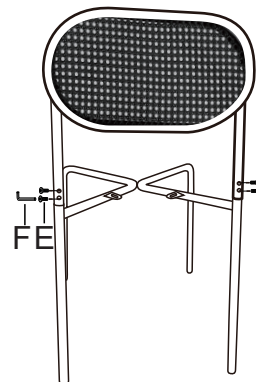


### STEP 3

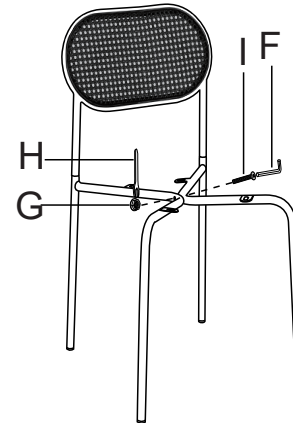


### STEP 4

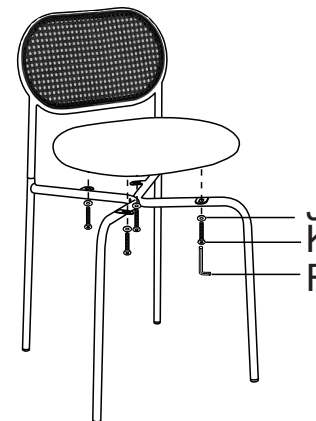

### STEP 5

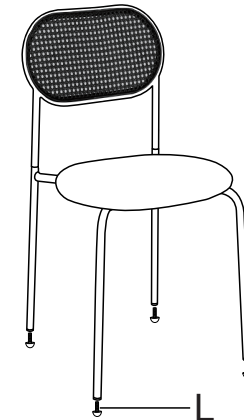

### COMPLETED

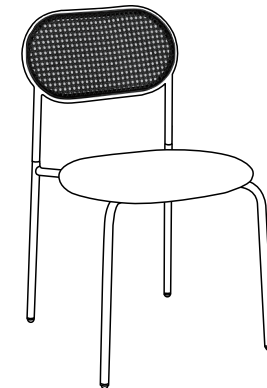

## WARNING

1. Do not stand on the chair. Do not use it as a step ladder.
2. Do not use this product until all screws are securely fastened.
3. Do not use a knife to open any packaging.