 


DINING TABLE

MODEL: DTB-EX160-WHWD

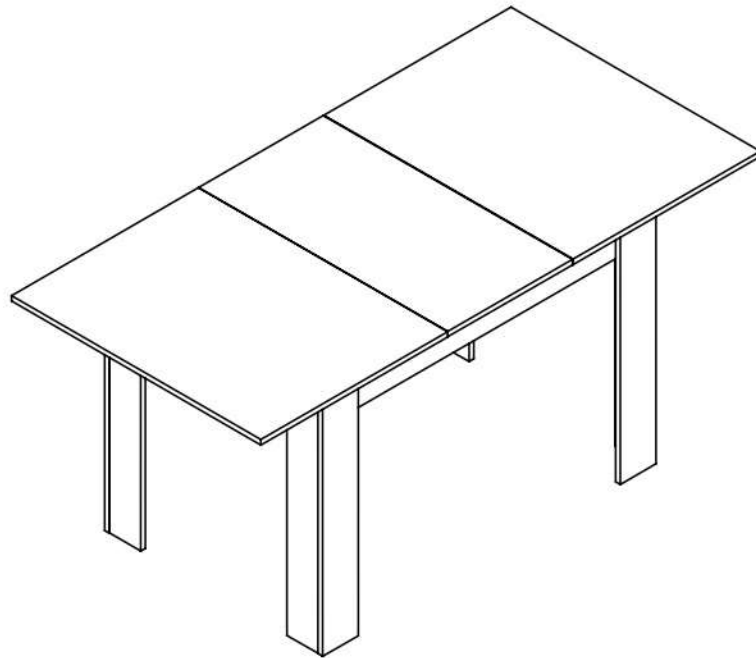











ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.



 
Two persons and tools required for assembly

HARDWARE

A	x12	B	x12	C	x8	D	x32	E	x12	F	x32	G	x8
													
7x35mm		15x12mm		Ø6x30mm		M4x25mm				M4x14mm			
H	x2	I	x6	J	x8								
													
		Ø8x50mm		M4x40mm									

 
PARTS

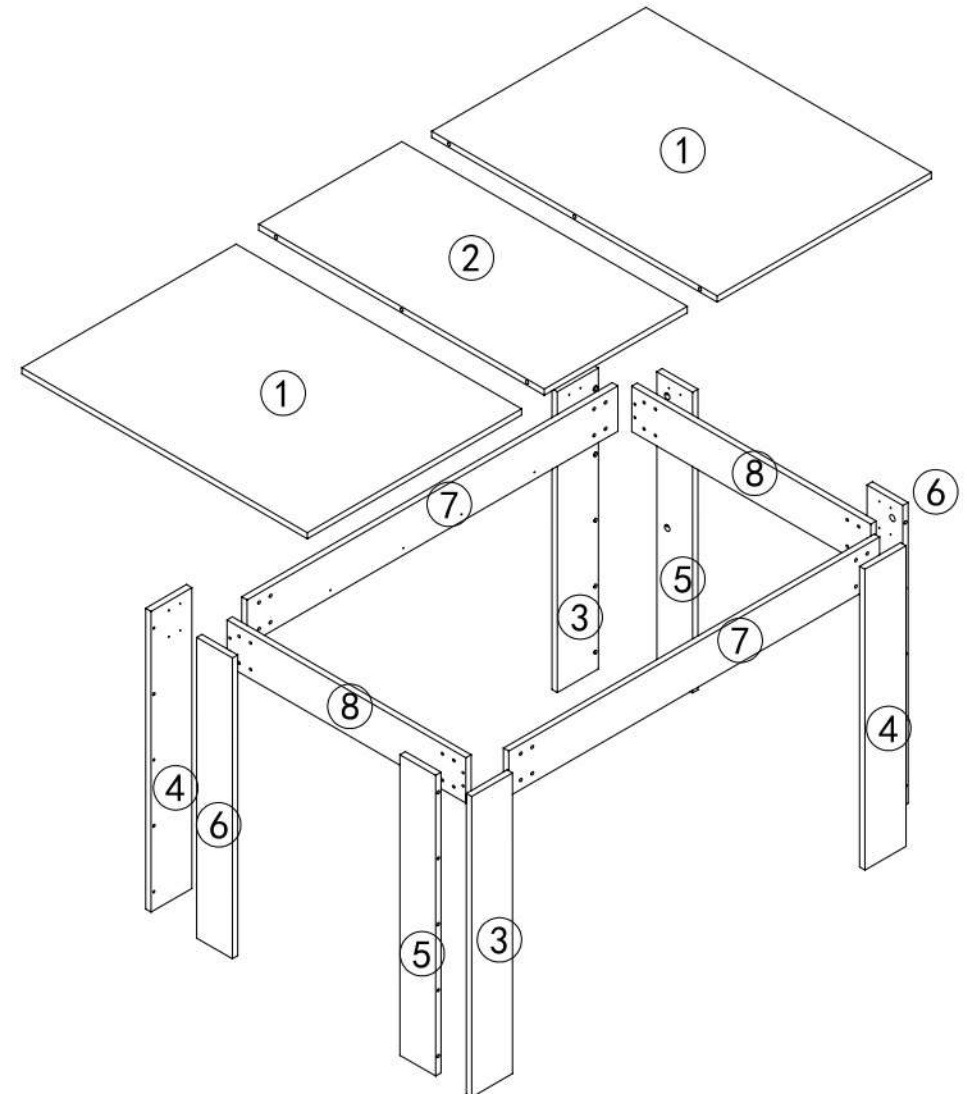

Wipe with dry cloths



 
1

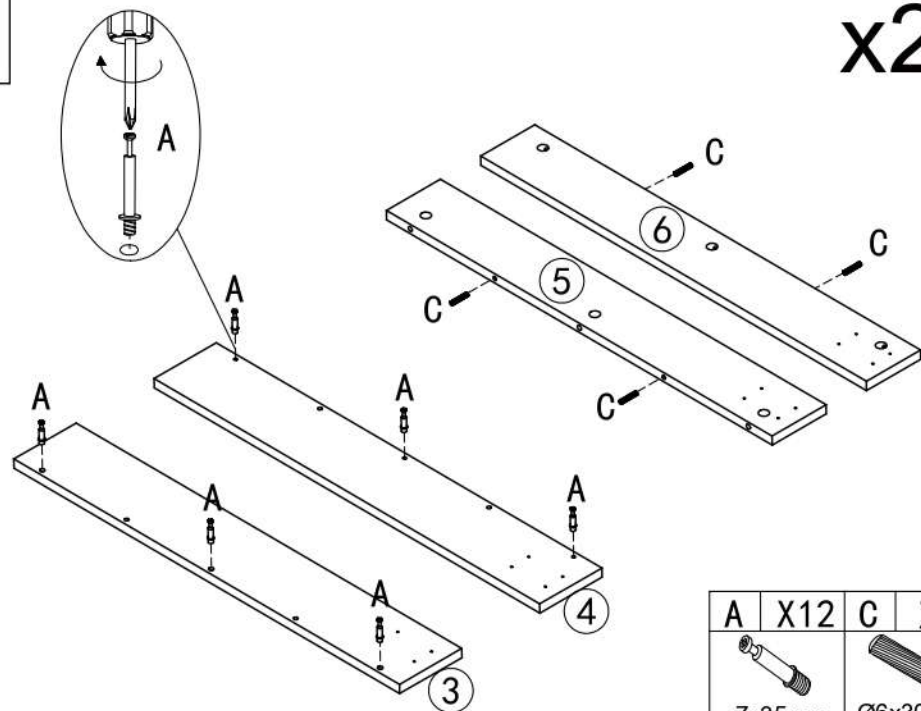
x2



A	X12	C	X8
			
7x35mm		Ø6x30mm	

 
 
2

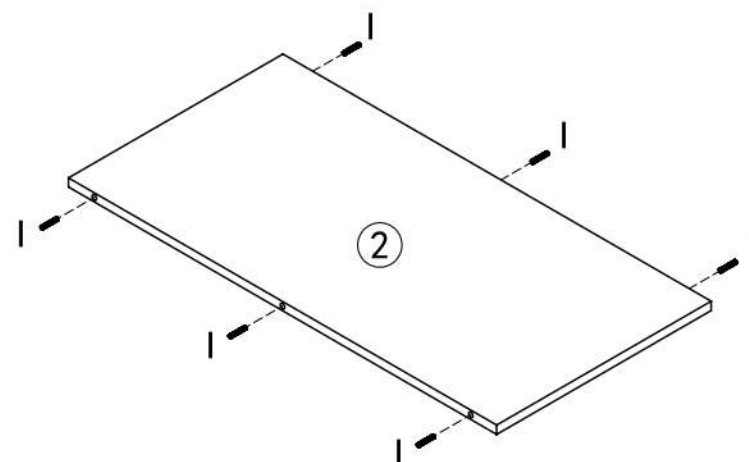



I	X6
	
Ø8x50mm	

3

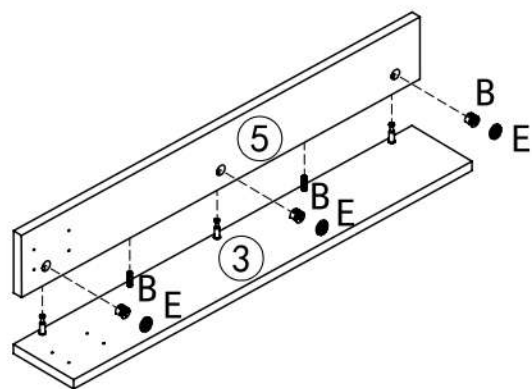 
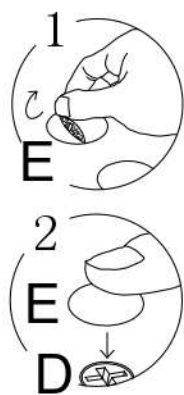 
x2





E	X6	B	X6
			
		15x12mm	

4

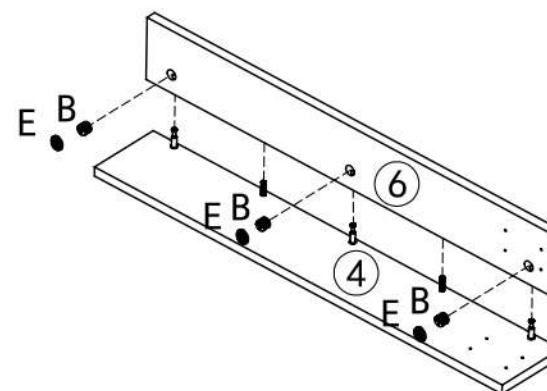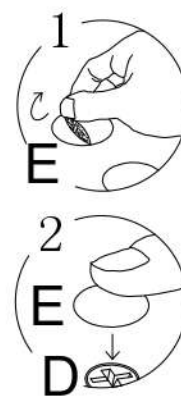 
x2





E	X6	B	X6
			
		15x12mm	

5

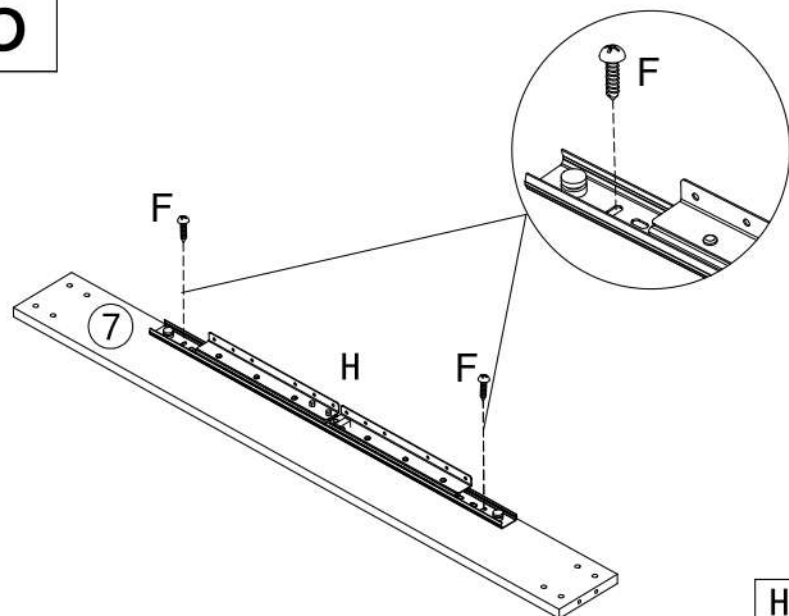x2

 



H	X2	F	X4
			
		M4x14mm	

6

 
Raise up the black plastic buckle to open the rail and fix the screws (F) properly.

x2

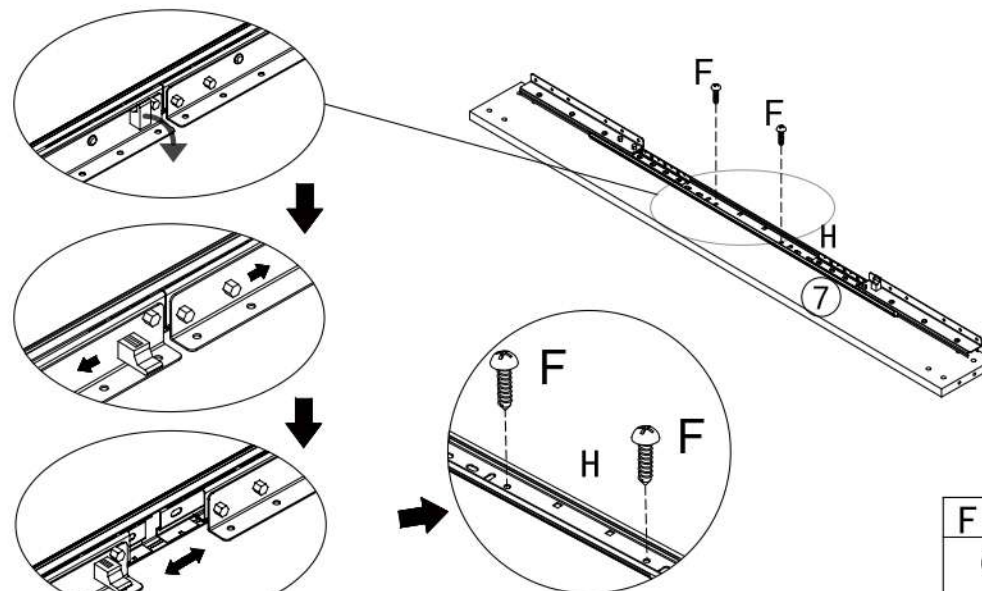

F	X4
	
M4x14mm	

 
7

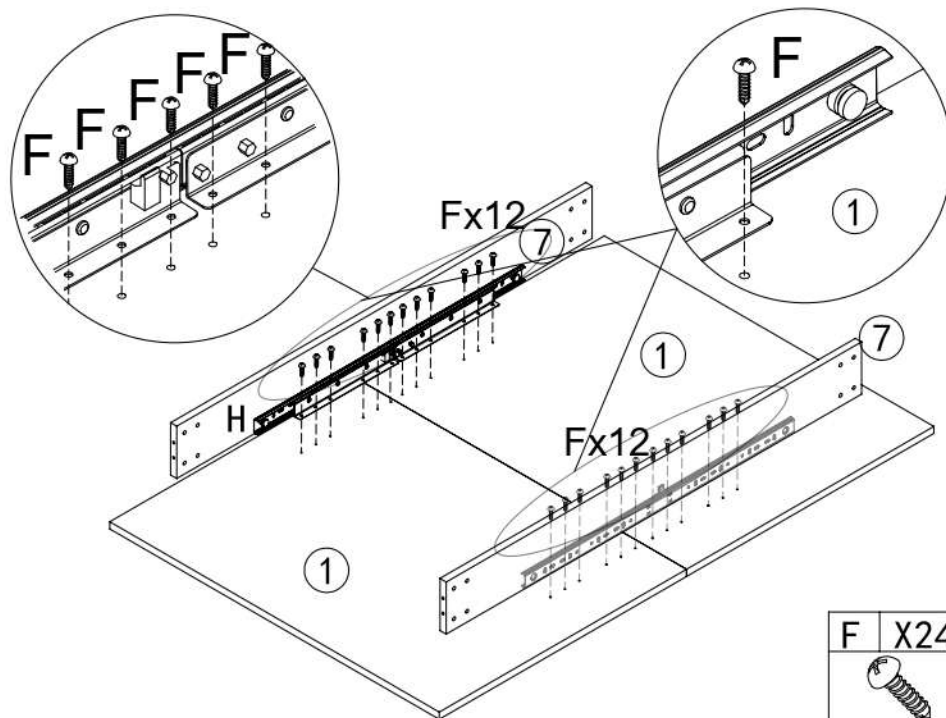


F	X24
	
M4x14mm	

 
8

Press the black plastic buckle to lock the slider and the table.

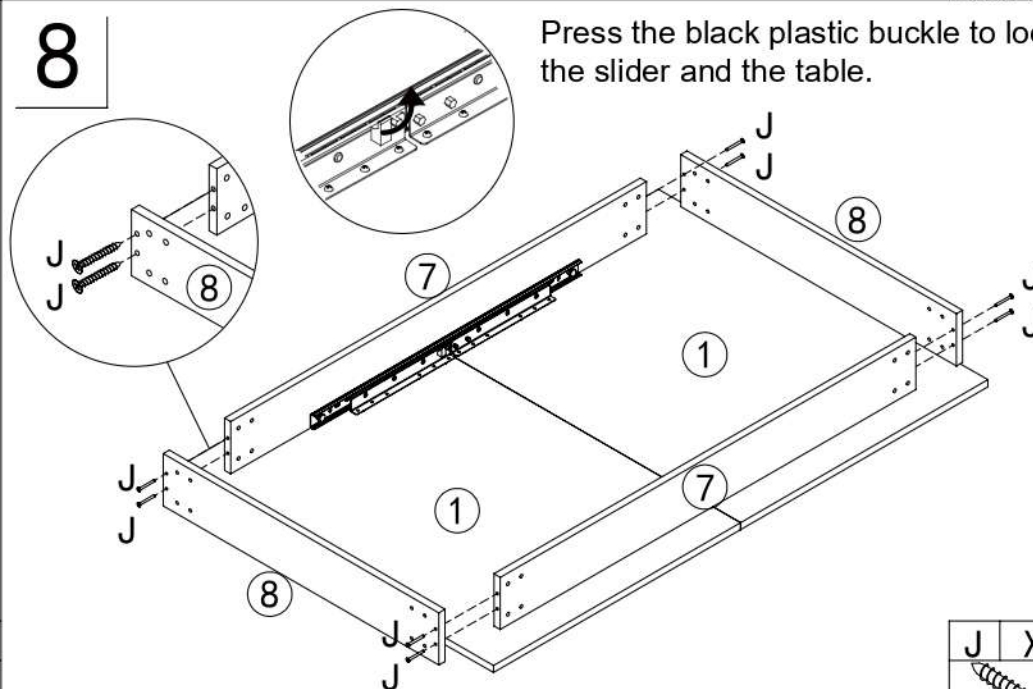

J	X8
	
M4x40mm	

 
9

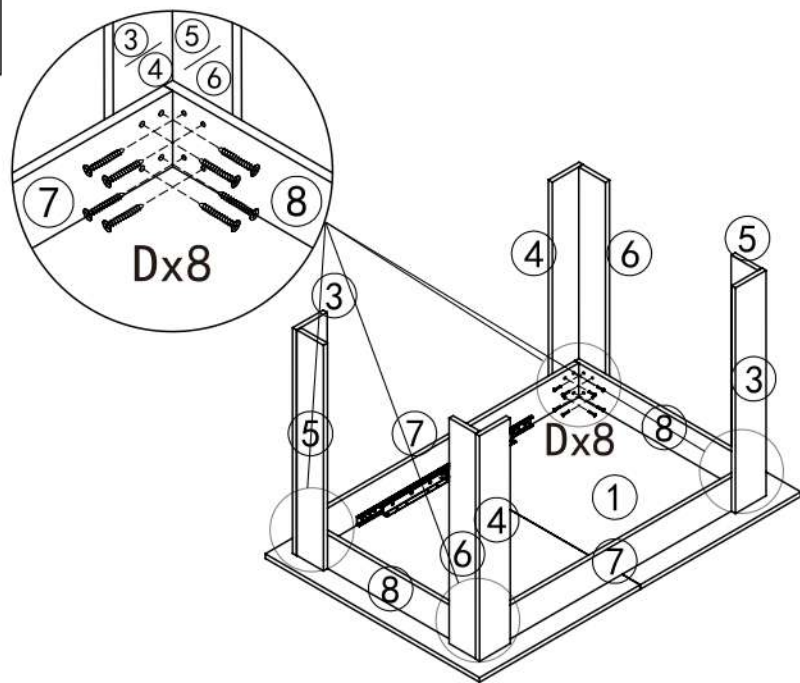

D X32



10

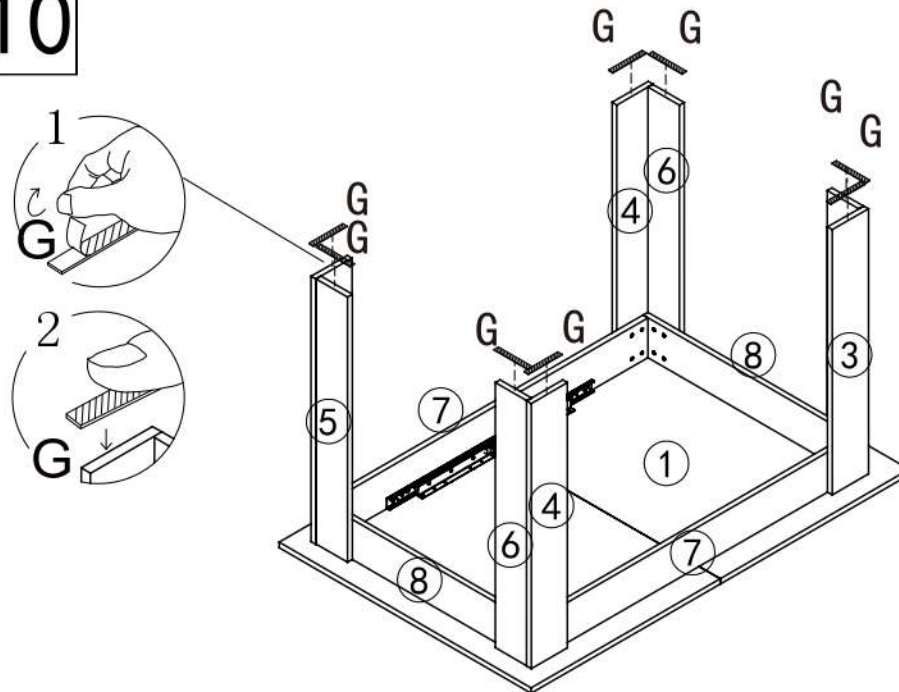 


G X8



11

Pull the black plastic buckle and extend two part 1.

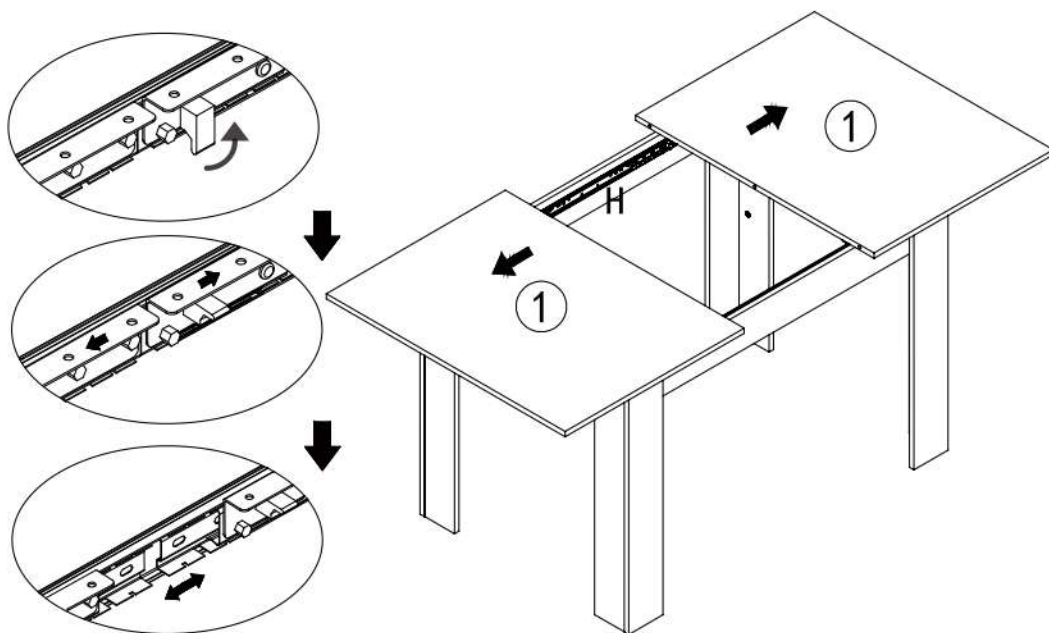

12

Place part 2 and lock the black plastic buckle as a extended.

