



# DINING CHAIR


MODEL: DCH-SURA

# ASSEMBLY INSTRUCTIONS


A		1pc
B		1pc
C		1pc
D		8pcs
E		8pcs
F		8pcs
G		1pc
H		1pc

- ASSEMBLY TIPS**
- Do not fully tighten the screws until all of them are aligned properly with the holes.
  - If the legs are uneven on the ground during assembly, loosen some screws and add some pressure on the chair to ensure the legs are even. Then tighten the screws diagonally.

## ASSEMBLY STEPS

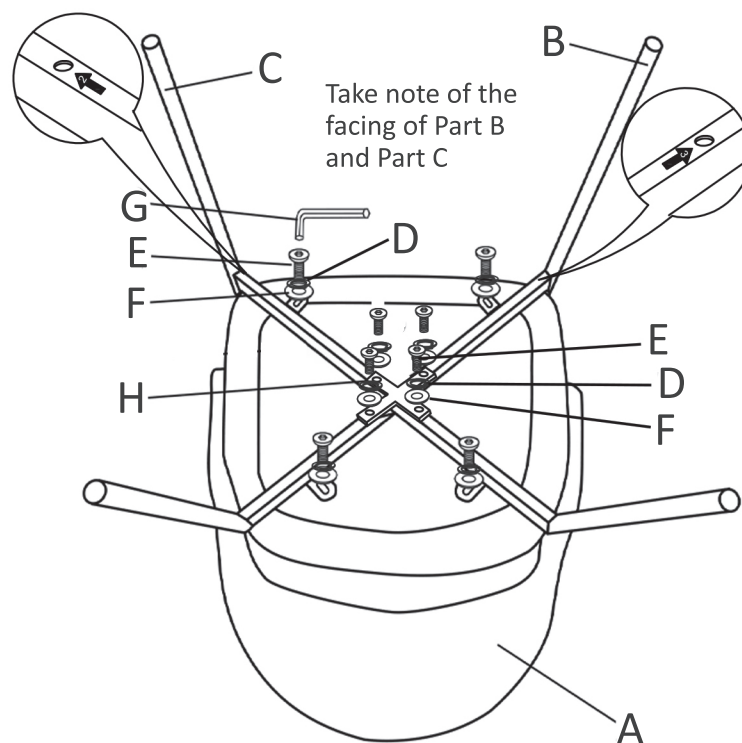

## COMPLETED ASSEMBLY

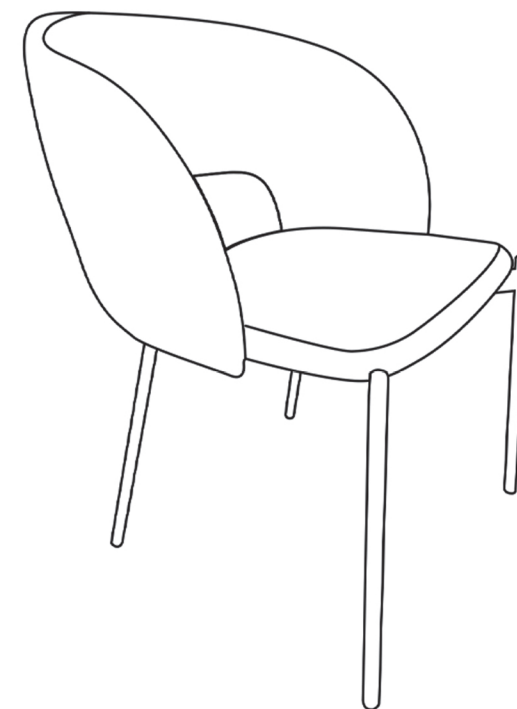

## WARNING

- Do not stand on the chair or use it as stepping stool.
- Do not use this product until all screws are securely fastened.
- Do not use any sharp tool to open any packaging.