


 







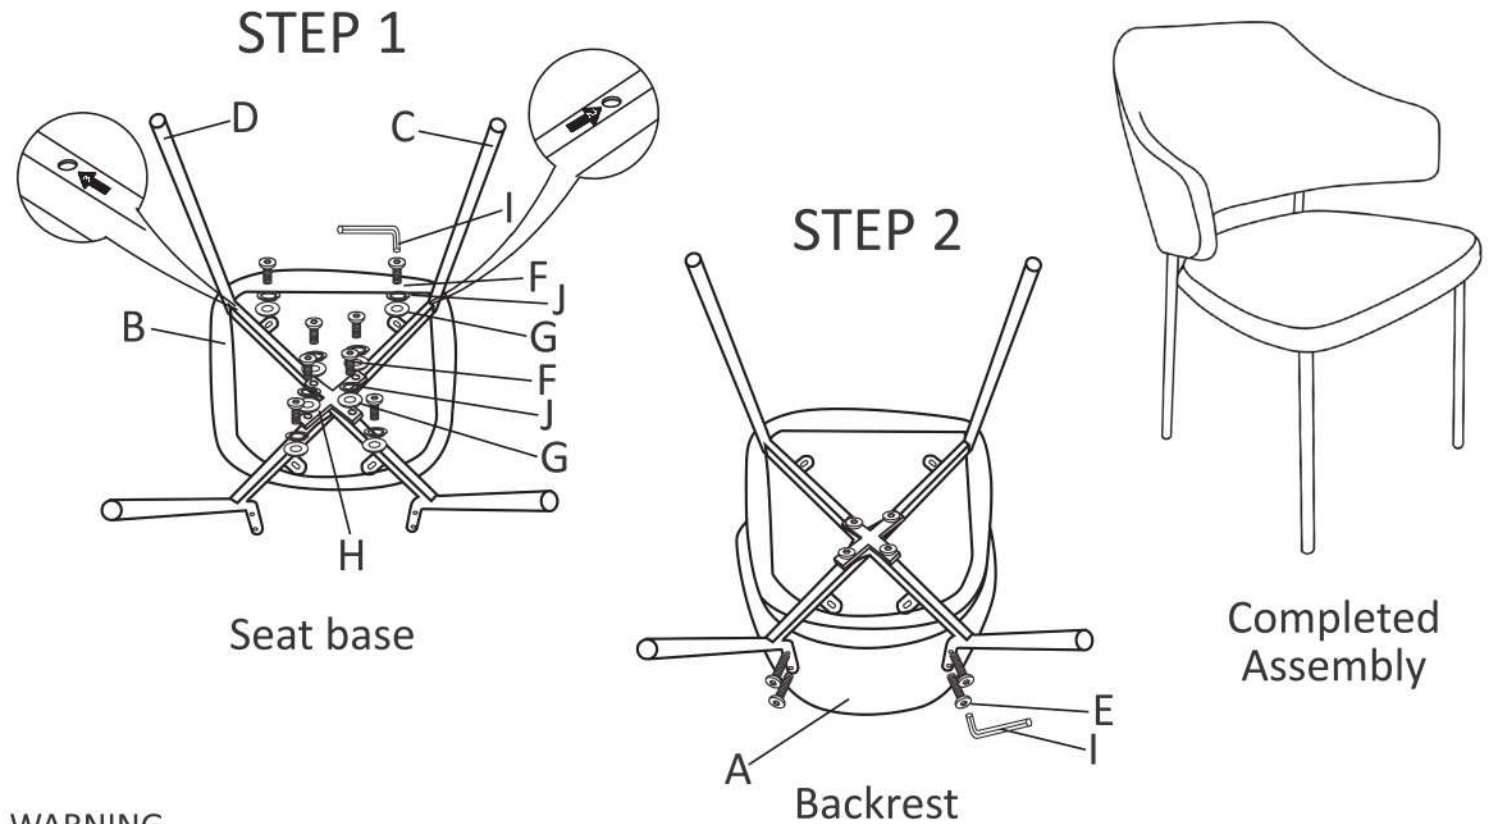
# ASSEMBLY INSTRUCTIONS

## DINING CHAIR

MODEL: DCH-WELS

A		1pc
B		1pc
C		1pc
D		1pc
E	 M6x30	4pcs
F	 M6x20	8pcs
G	 M6x16	8pcs
H		1pc
I	 M5	1pc
J		8pcs

- ASSEMBLY TIPS**
- Do not fully tighten the screws until all of them are aligned properly with the holes.
  - If the legs are uneven on the ground during assembly, loosen some screws and add some pressure on the chair to ensure the legs are even. Then tighten the screws diagonally.



### WARNING

- Do not stand on the chair or use it as stepping stool.
- Do not use this product until all screws securely fastened.
- Do not use any sharp tool to open any packaging.