


# COMPUTER DESK


MODEL: DK-K11-120-BKWH/BK/WHWD

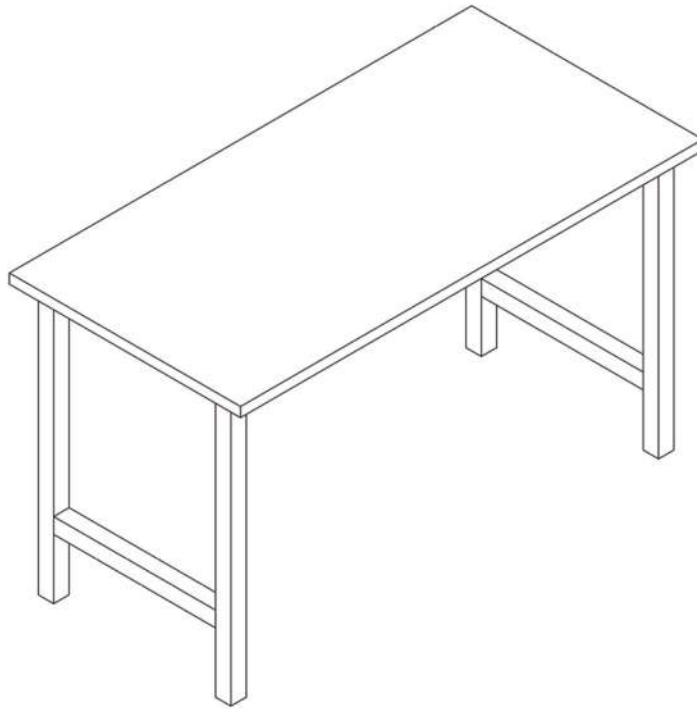


## ASSEMBLY INSTRUCTIONS

Please read these instructions carefully before assembling the product.


### HARDWARE

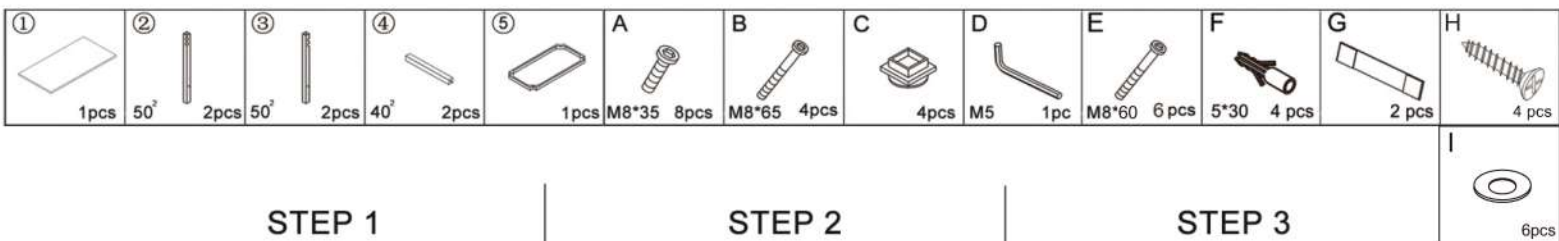


#### STEP 1

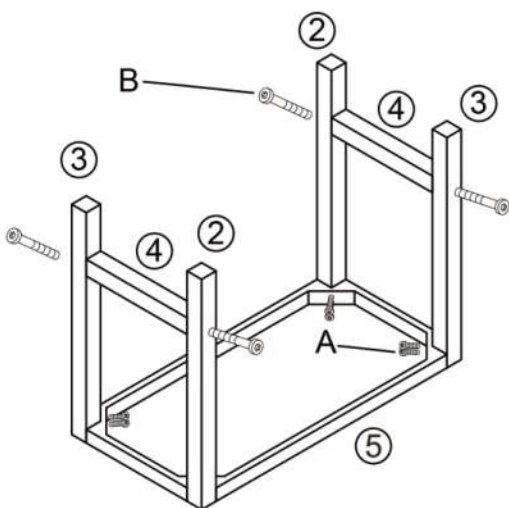


#### STEP 2

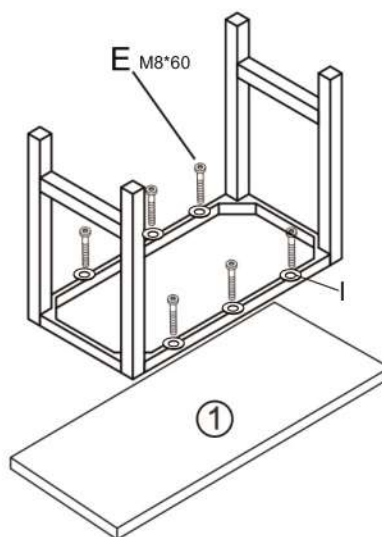

#### STEP 3

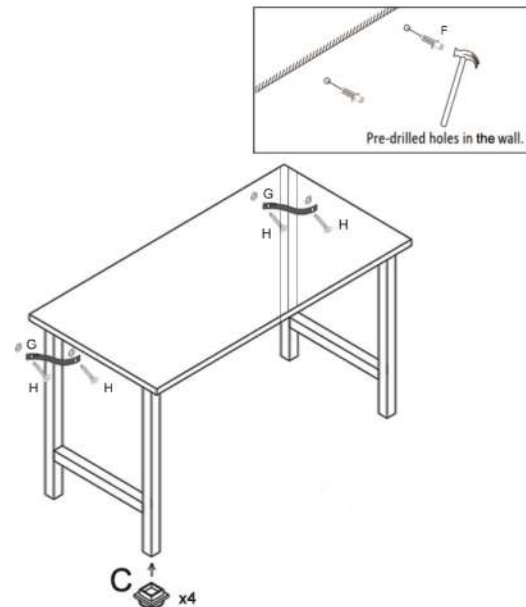

# **WARNING**

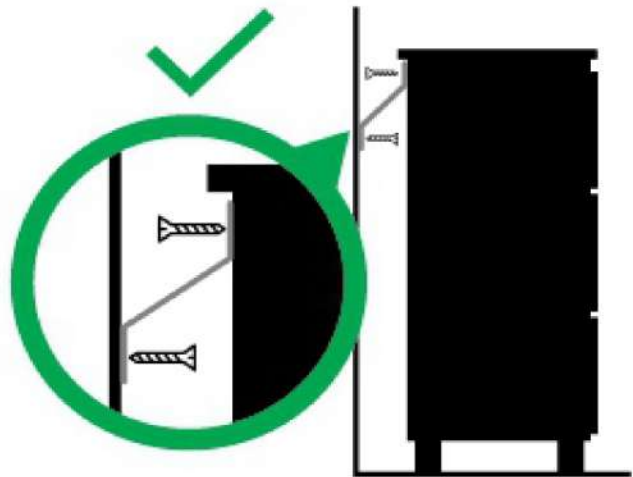

**Children have died from furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.