














ASSEMBLY INSTRUCTIONS

DINING CHAIR

MODEL: DCH-WELS

A		1pc
B		1pc
C		1pc
D		1pc
E	 M6x30	4pcs
F	 M6x16	8pcs
G	 M6x16	8pcs
H		1pc
I	 M5	1pc
J		8pcs

- ASSEMBLY TIPS**
- Do not fully tighten the screws until all of them are aligned properly with the holes.
 - If the legs are uneven on the ground during assembly, loosen some screws and add some pressure on the chair to ensure the legs are even. Then tighten the screws diagonally.

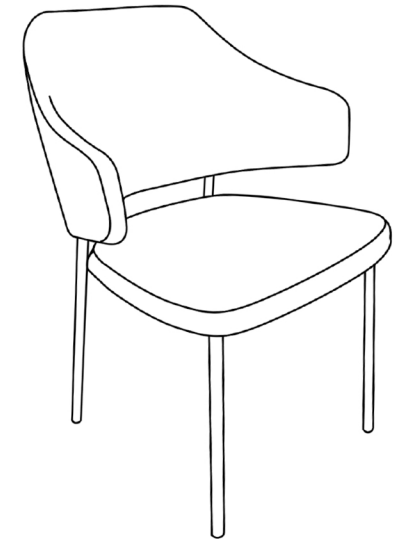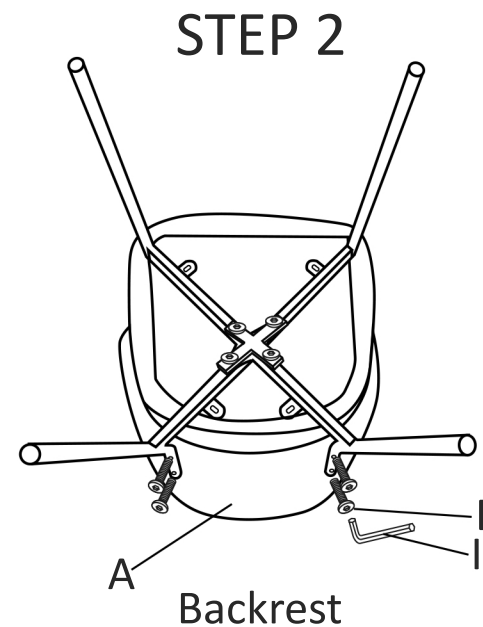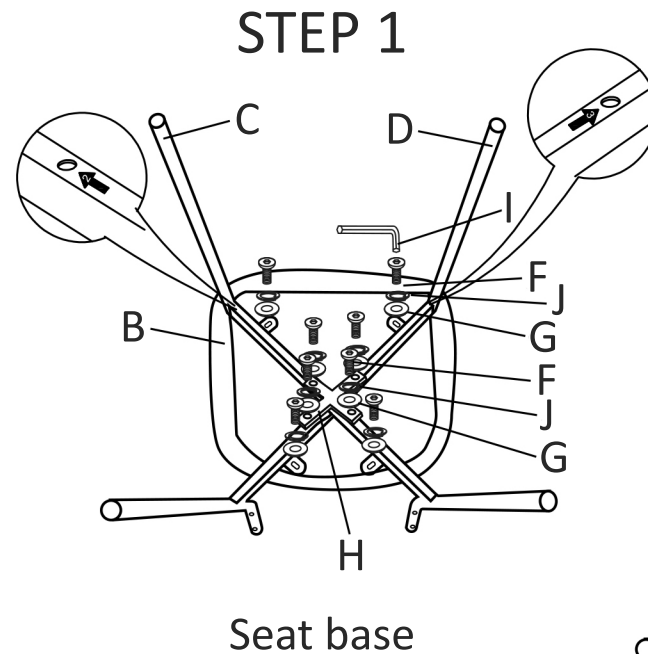

Completed Assembly

WARNING

- Do not stand on the chair or use it as stepping stool.
- Do not use this product until all screws securely fastened.
- Do not use any sharp tool to open any packaging.