


# DINING CHAIR

DCH-LORA-%-2PC


# ASSEMBLY INSTRUCTIONS

Please read these instructions carefully before assembly.

|         |         |         |         |         |         |         |         |         |
|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| Ax1<br> | Bx1<br> | Cx2<br> | Dx1<br> | Ex1<br> | Fx8<br> | Gx9<br> | Hx9<br> | Ix1<br> |
|---------|---------|---------|---------|---------|---------|---------|---------|---------|

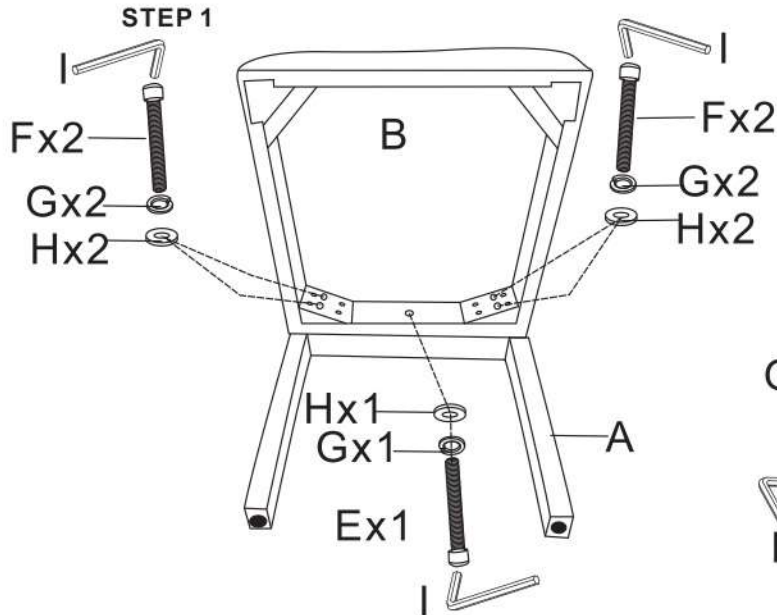


1. First have all legs with bolts and washers 80% tightened.

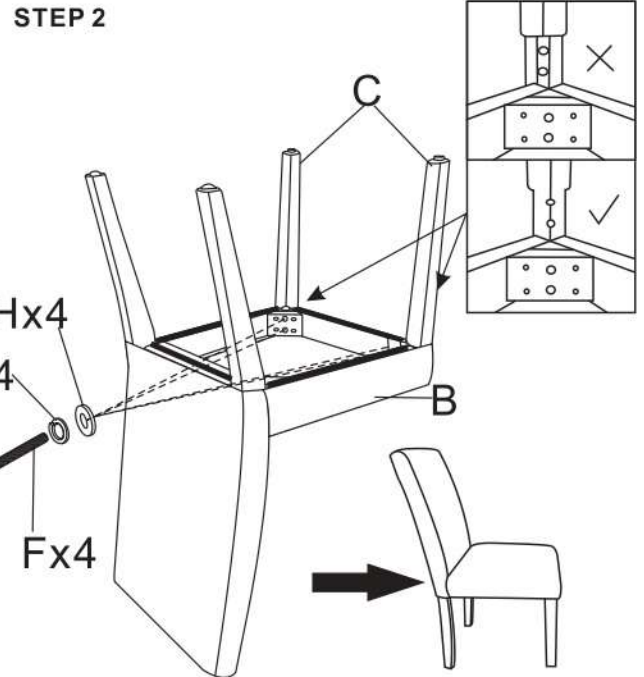


2. Secondly place the chair upright and sit on to level leg positions.

**STEP 3**

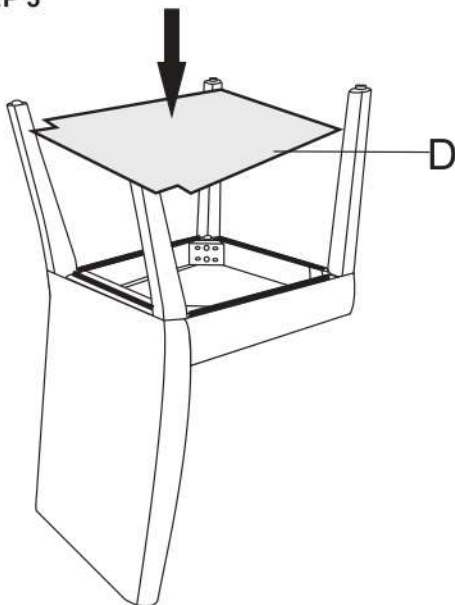

3. Proceed to tighten all bolts securely if the chair is leveled.

**STEP 4**

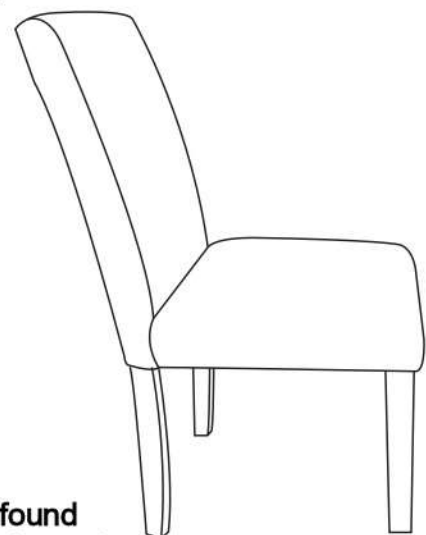

if the chairs found uneven/unbalanced to the floor.

4. please loosen all screws E(80% fixed), and repeat step 2 to check if the chair is aligned to the floor, press the seater if found uneven, then 100% tighten gain



## WARNINGS

- Do not stand on the product. Do not use it as a step ladder.
- Do not use the product until all screws are securely fastened.
- Do not use a knife to open any parts of the packaging.