



ADJUSTMENT RANGE

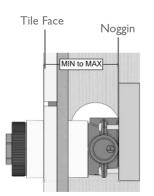

MIN: 68mm MAX: 80mm 1

Mount the Mixer Body in place using the screws provided.

Ensure that Mixer Body is level.

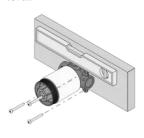

2

Remove Plastic Locknut. Apply Grease to Cartridge O-Rings and install Cartridge.




Reinstall Plastic Locknut.



3

Connect water supply and water outlet.
Test and check for leaks.

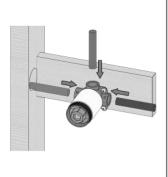


3


Seal waterproofing membrane up to waterproofing sleeve.




4

  Use knife to trim Waterproofing Sleeves until flush with tile face.






HOLE DIMENSIONS

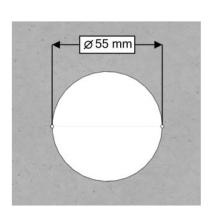

 Unscrew protective cover locknut from Rough In Body.



Unscrew Cartridge proctective cover.



Screw Wall Mixer Flange onto Rough In Body.







Using supplied Adjustment Spanner tighten Wall Mixer Flange.



Apply supplied grease to Rubber O-Rings. Slide Cartridge into position.

Tighten Cartridge Locknut into Wall Mixer Flange.

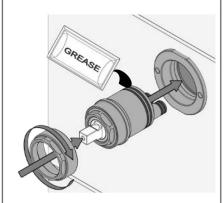

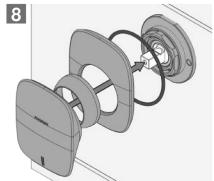

Push Dress plate onto Cartridge and tighten Mixer Dome into place.

Fix Handle into position.

Tighten Grub Screw.



recommended working pressure 150-500KPa

maximum hot water temperature 75 degrees

NOTE

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements.
- Showers may not be suitable for use within:
- Gravity-fed water systems
 Some instantaneous hot water systems; or
- Pressure supply less than 150kPa;
 NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

Failure to comply with the above may void all warranties.