


PARTS LIST

1. O-RING
2. WALL SPOUT PLATE
3. O-RING
4. CURVED WALL SPOUT BEND
5. GRUB SCREW M5X4
6. AERATOR
7. AERATOR FLOW STRAIGHTENER
8. AERATOR KEY
9. CROSS HANDLE
10. O-RING
11. C CLIP
12. ANTI VANDAL COLLET
13. ANTI VANDAL SPANNER
14. WALL FLANGE
15. O-RING
16. WALL TOP BONNET
17. O-RING
18. CARTRIDGE ASSEMBLY
19. ALLEN KEY
20. CROSS HANDLE

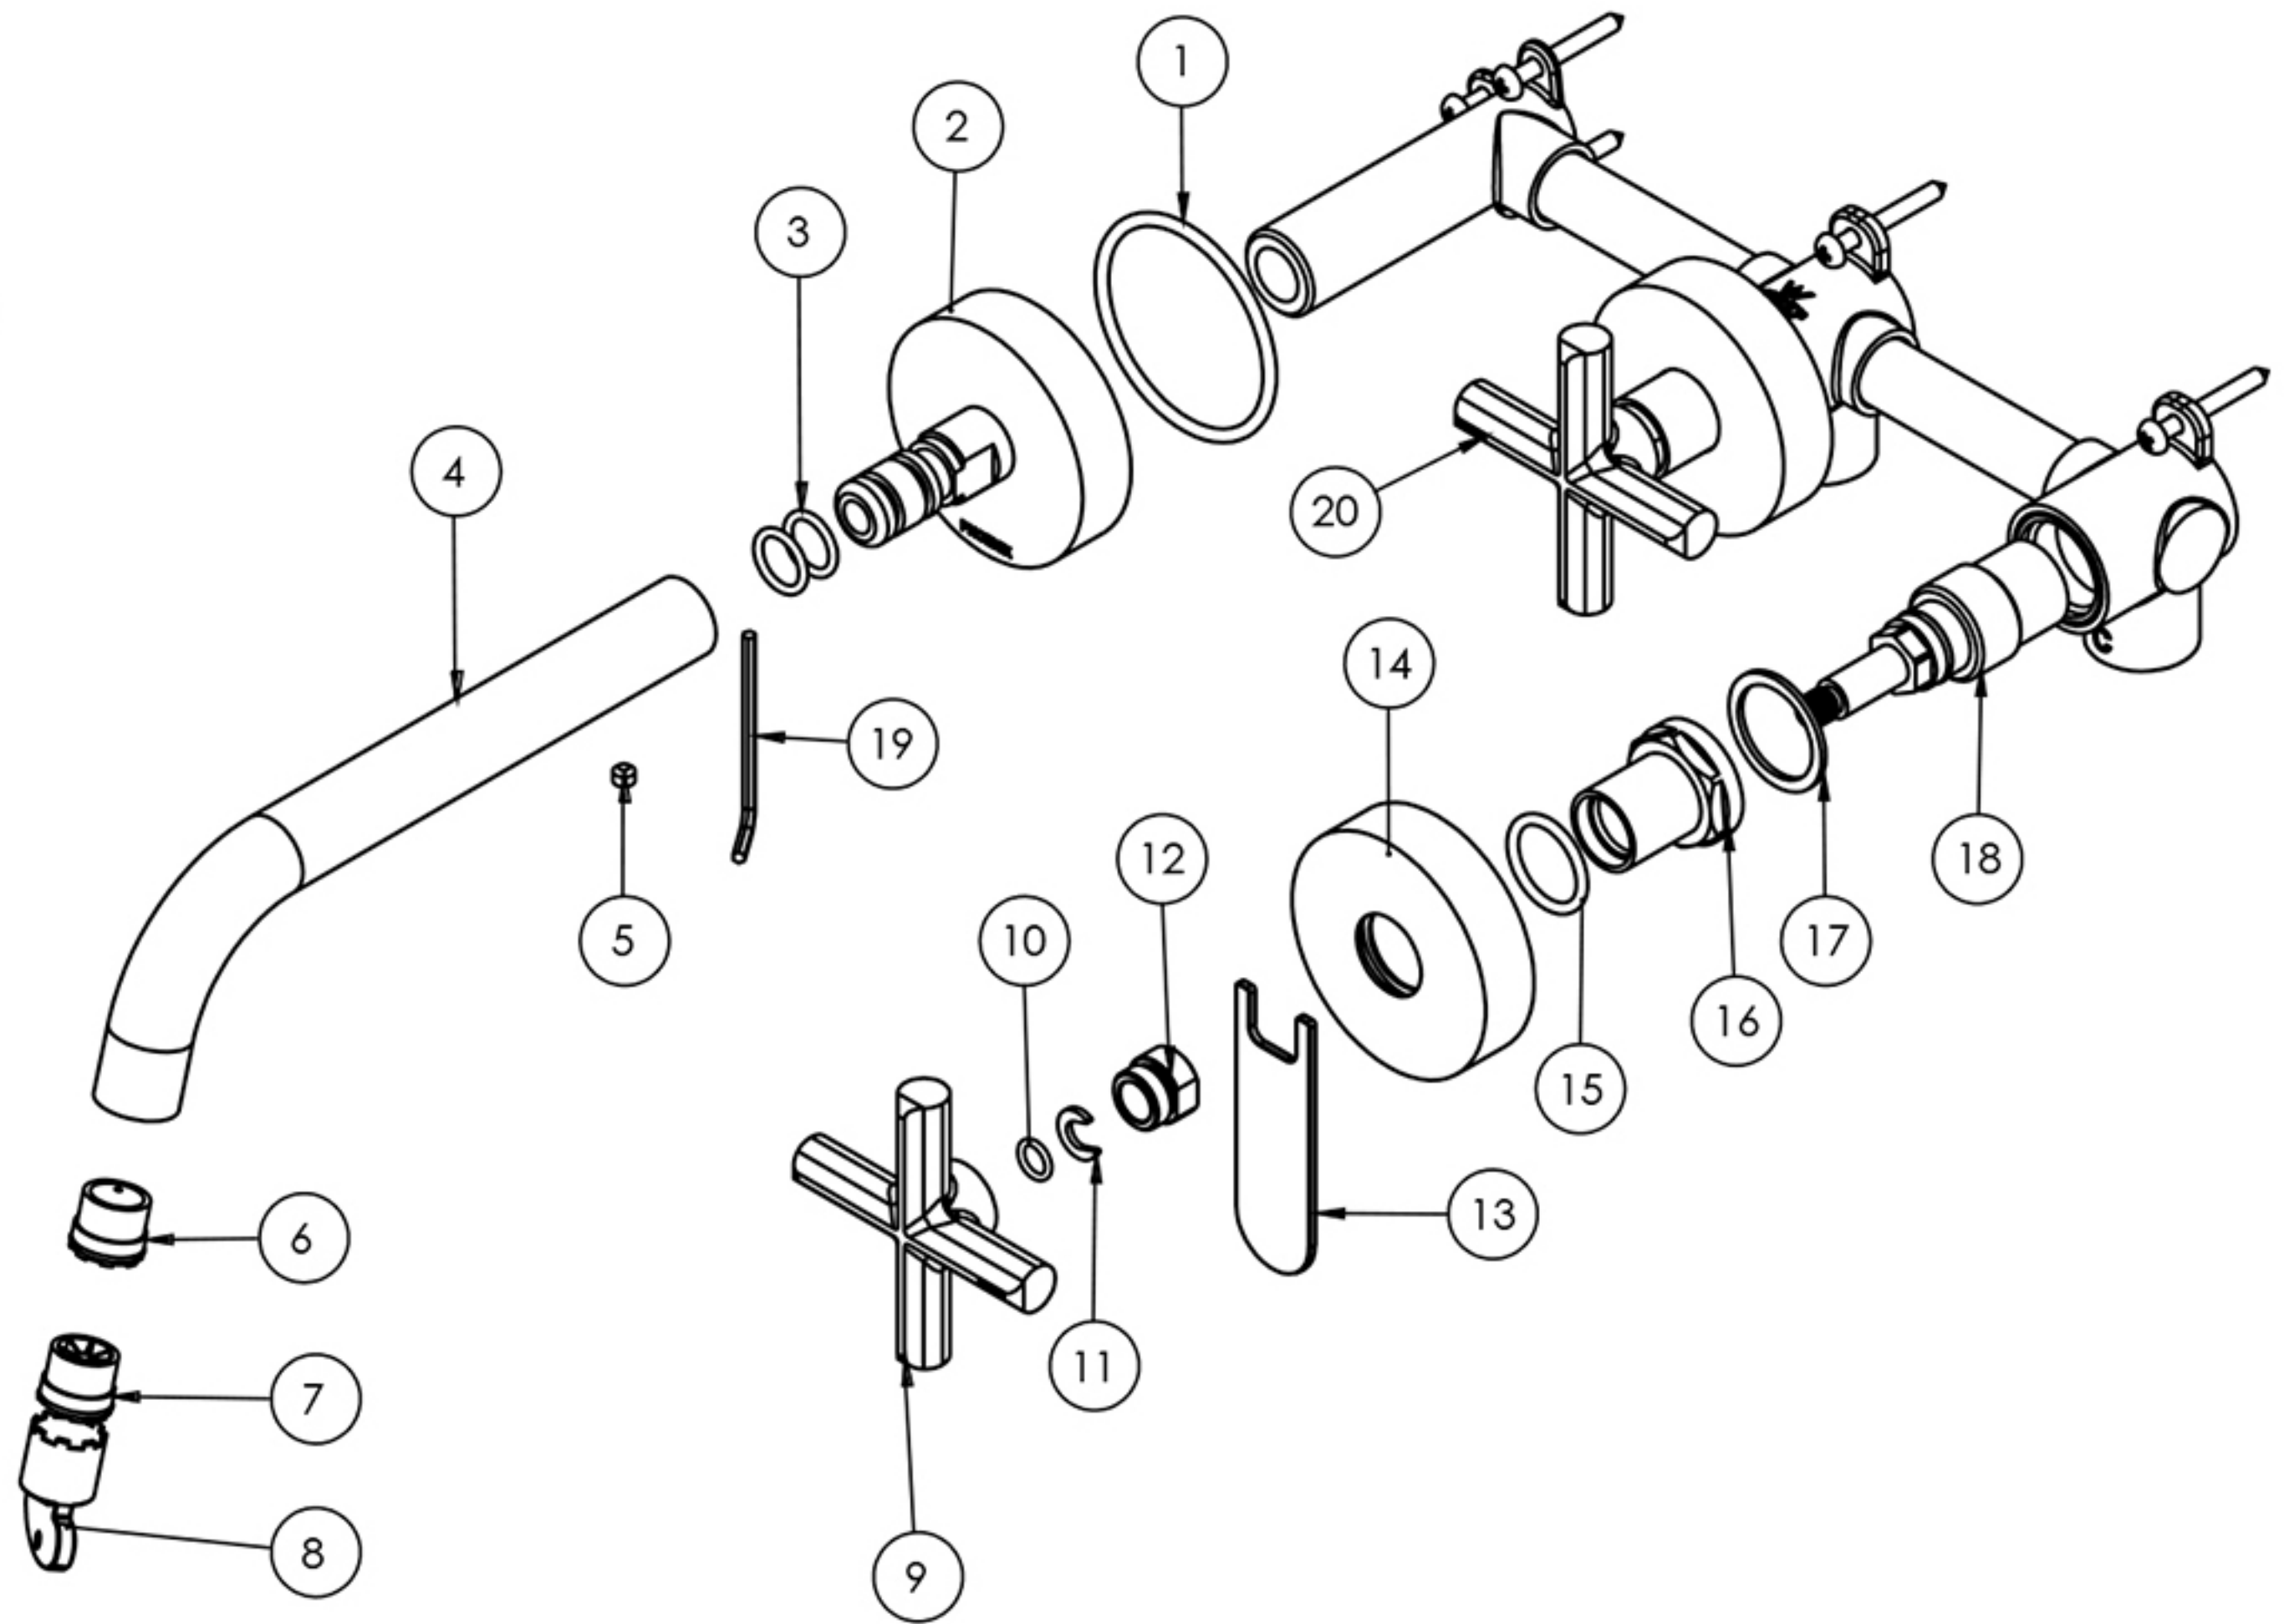

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.