

PARTS LIST

1. SIDE LEVER BODY
2. 35MM CARTRIDGE
3. LOCKNUT
4. SPOUT GOOSENECK
5. SPRAY HEAD
6. MIXER TAIL
7. SWIVEL SPACER
8. DOUBLE ENDED SWIVEL HOSE
9. PIN LEVER
10. MIXER DOME
11. DRESS PLATE
12. O-RING 39X3.5MM
13. LOCKING NUT
14. HOSE EXTENSION 8MM
15. GRUB SCREW M5X5
16. FLEXIBLE HOSE 450MM COLD
17. FLEXIBLE HOSE 450MM HOT
18. SIDE LEVER HANDLE
19. HOSE EXTENSION
20. HOSE EXTENSION
21. VALVE ADAPTOR
22. AERATOR
23. SWIVEL HOSE WASHER
24. SPOUT BASE
25. SPOUT BASE TOP BEARING
26. BASE BEARING
27. TOP FLANGE
28. O-RING 25X2.0MM
29. SCREW

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

