
PARTS LIST

- I. BASINT PIECE
- 2. O-RING 10X2.75MM
- 3. BASIN FLANGE
- 4. DRESS RING
- 5. SPOUT
- 6. O-RING 13X2MM
- 7. NOZZLE RETAINER
- 8. AERATOR
- 9. GASKET
- 10. SPOUT BEARING LARGE
- II. SPOUT BEARING SMALL
- 12. SWIVEL SPOUT RETAINER
- 13. SWIVEL SPOUT RETAINER SCREW
- 14. OUTLET TAIL
- 15. O-RING 16X2
- **16.** LOCKNUT PLASTIC
- 17. OUTLET NYLON WASHER
- 18. BASIN TAP FLANGE
- 19. SPLINE
- 20. BONNET
- 21. FIBER WASHER
- 22. HANDLE BODY
- 23. PIN LEVER
- 24. GRUB SCREW M5X5
- 25. BASIN BODY WASHER
- 26. BASIN NUT
- 27. TAP BODY ASSEMBLY
- 28. CONNECTOR
- 29. T-PIECE LOCKNUT
- 30. O-RING 6.5X1.0

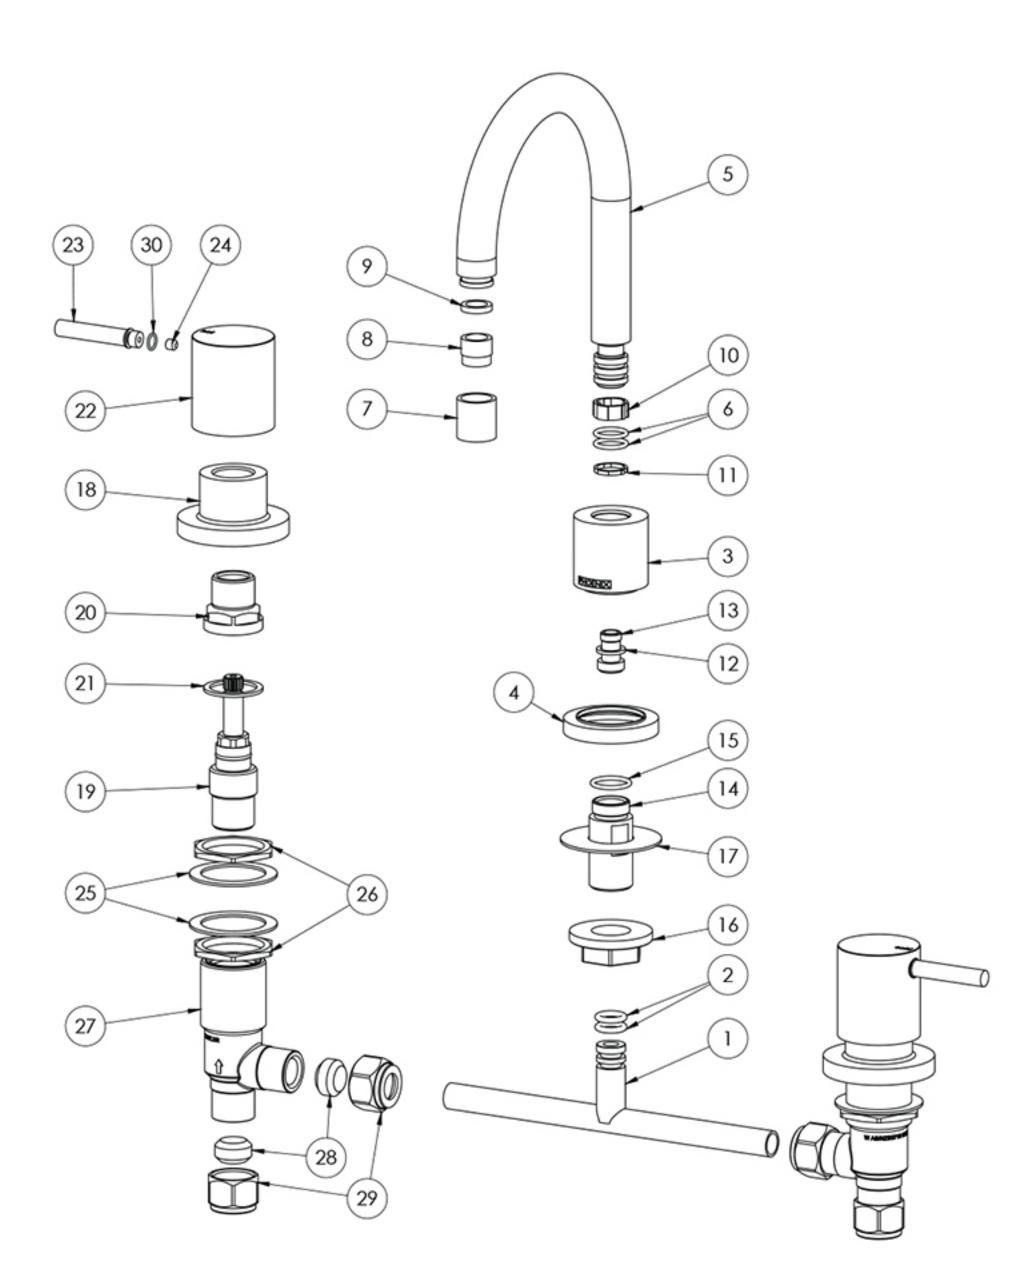

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface.
 Any damage caused in this way will not be covered by warranty.