


PARTS LIST

1. WALL FLANGE
2. SPINDLE
3. BONNET
4. FIBER WASHER
5. O-RING 50X3.0
6. HANDLE BODY
7. PIN LEVER
8. GRUB SCREW M5X5
9. O-RING 6X1.0
10. WALL FLANGE ELBOW
11. SPOUT
12. AERATOR GASKET
13. AERATOR RETAINER
14. AERATOR
15. GRUB SCREW M5 FLAT END
16. O-RING 13X2
17. SPOUT BEARING LARGE
18. SPOUT BEARING SMALL

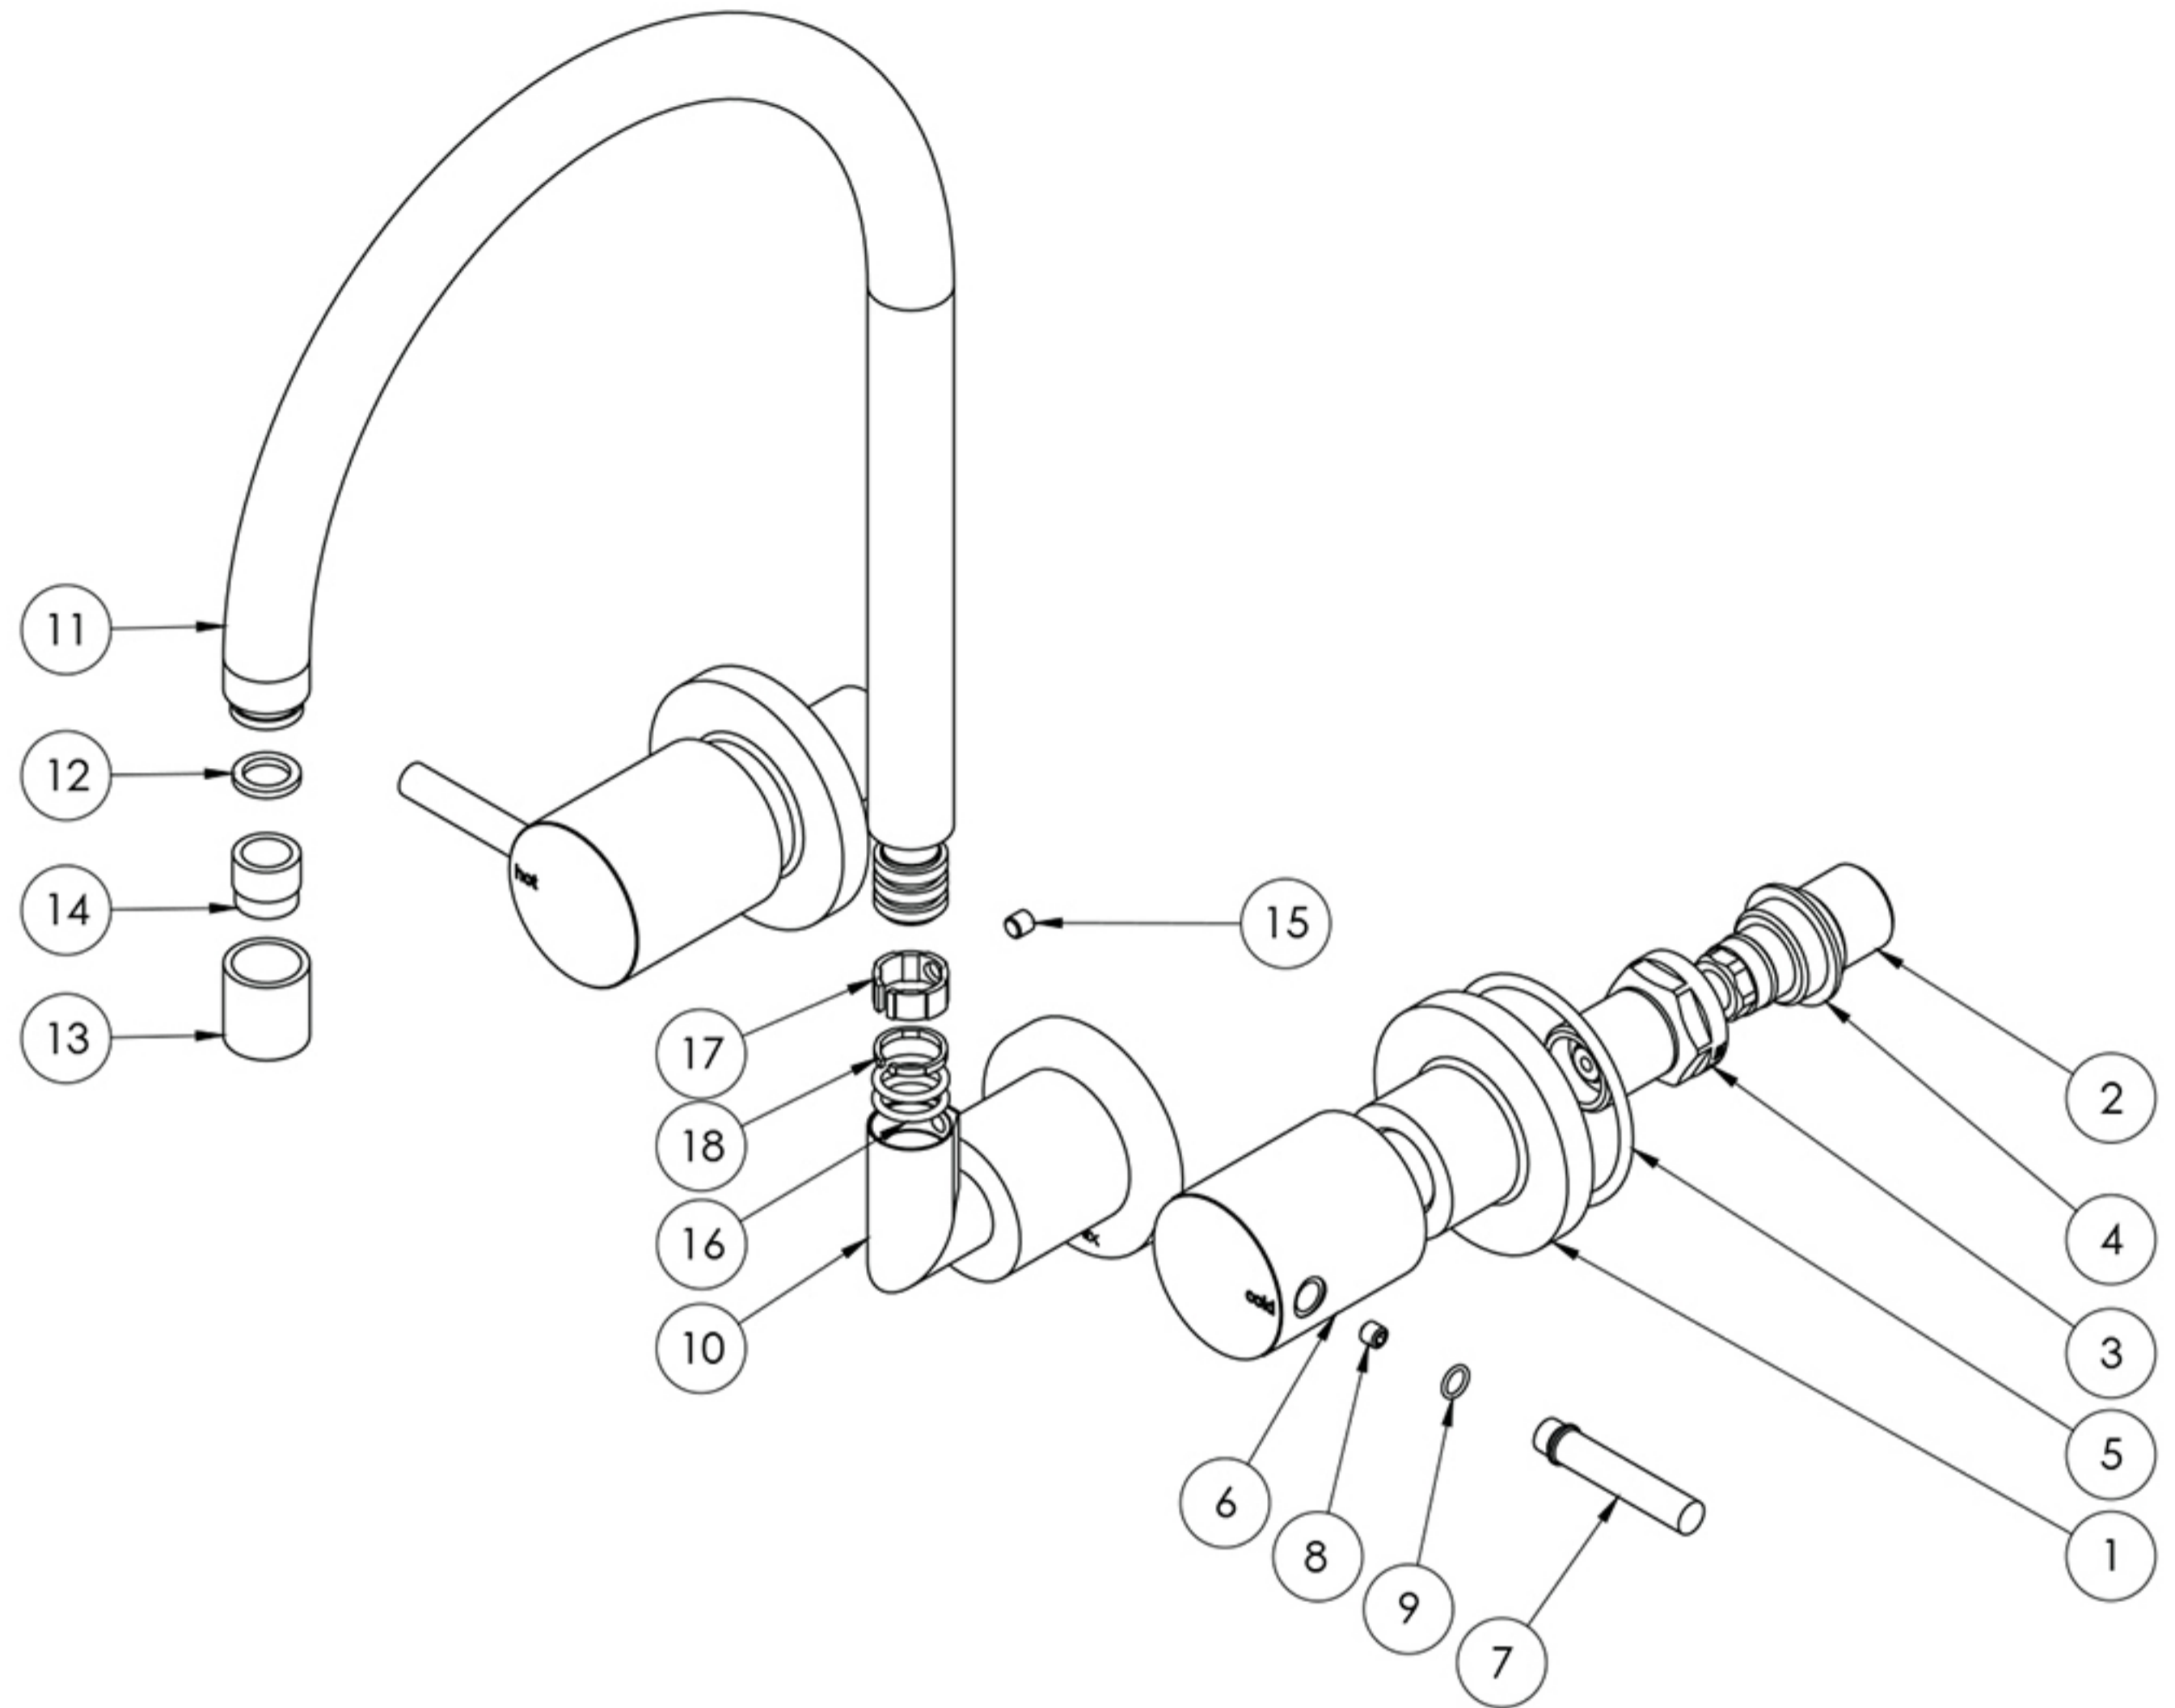

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.