


PARTS LIST

1. WALL FLANGE ELBOW
2. SPOUT GOOSENECK
3. GASKET
4. NOZZLE RETAINER
5. AERATOR
6. GRUB SCREW M5X5
7. O-RING 13X2.0MM
8. SPOUT BEARING LARGE
9. SPOUT BEARING SMALL

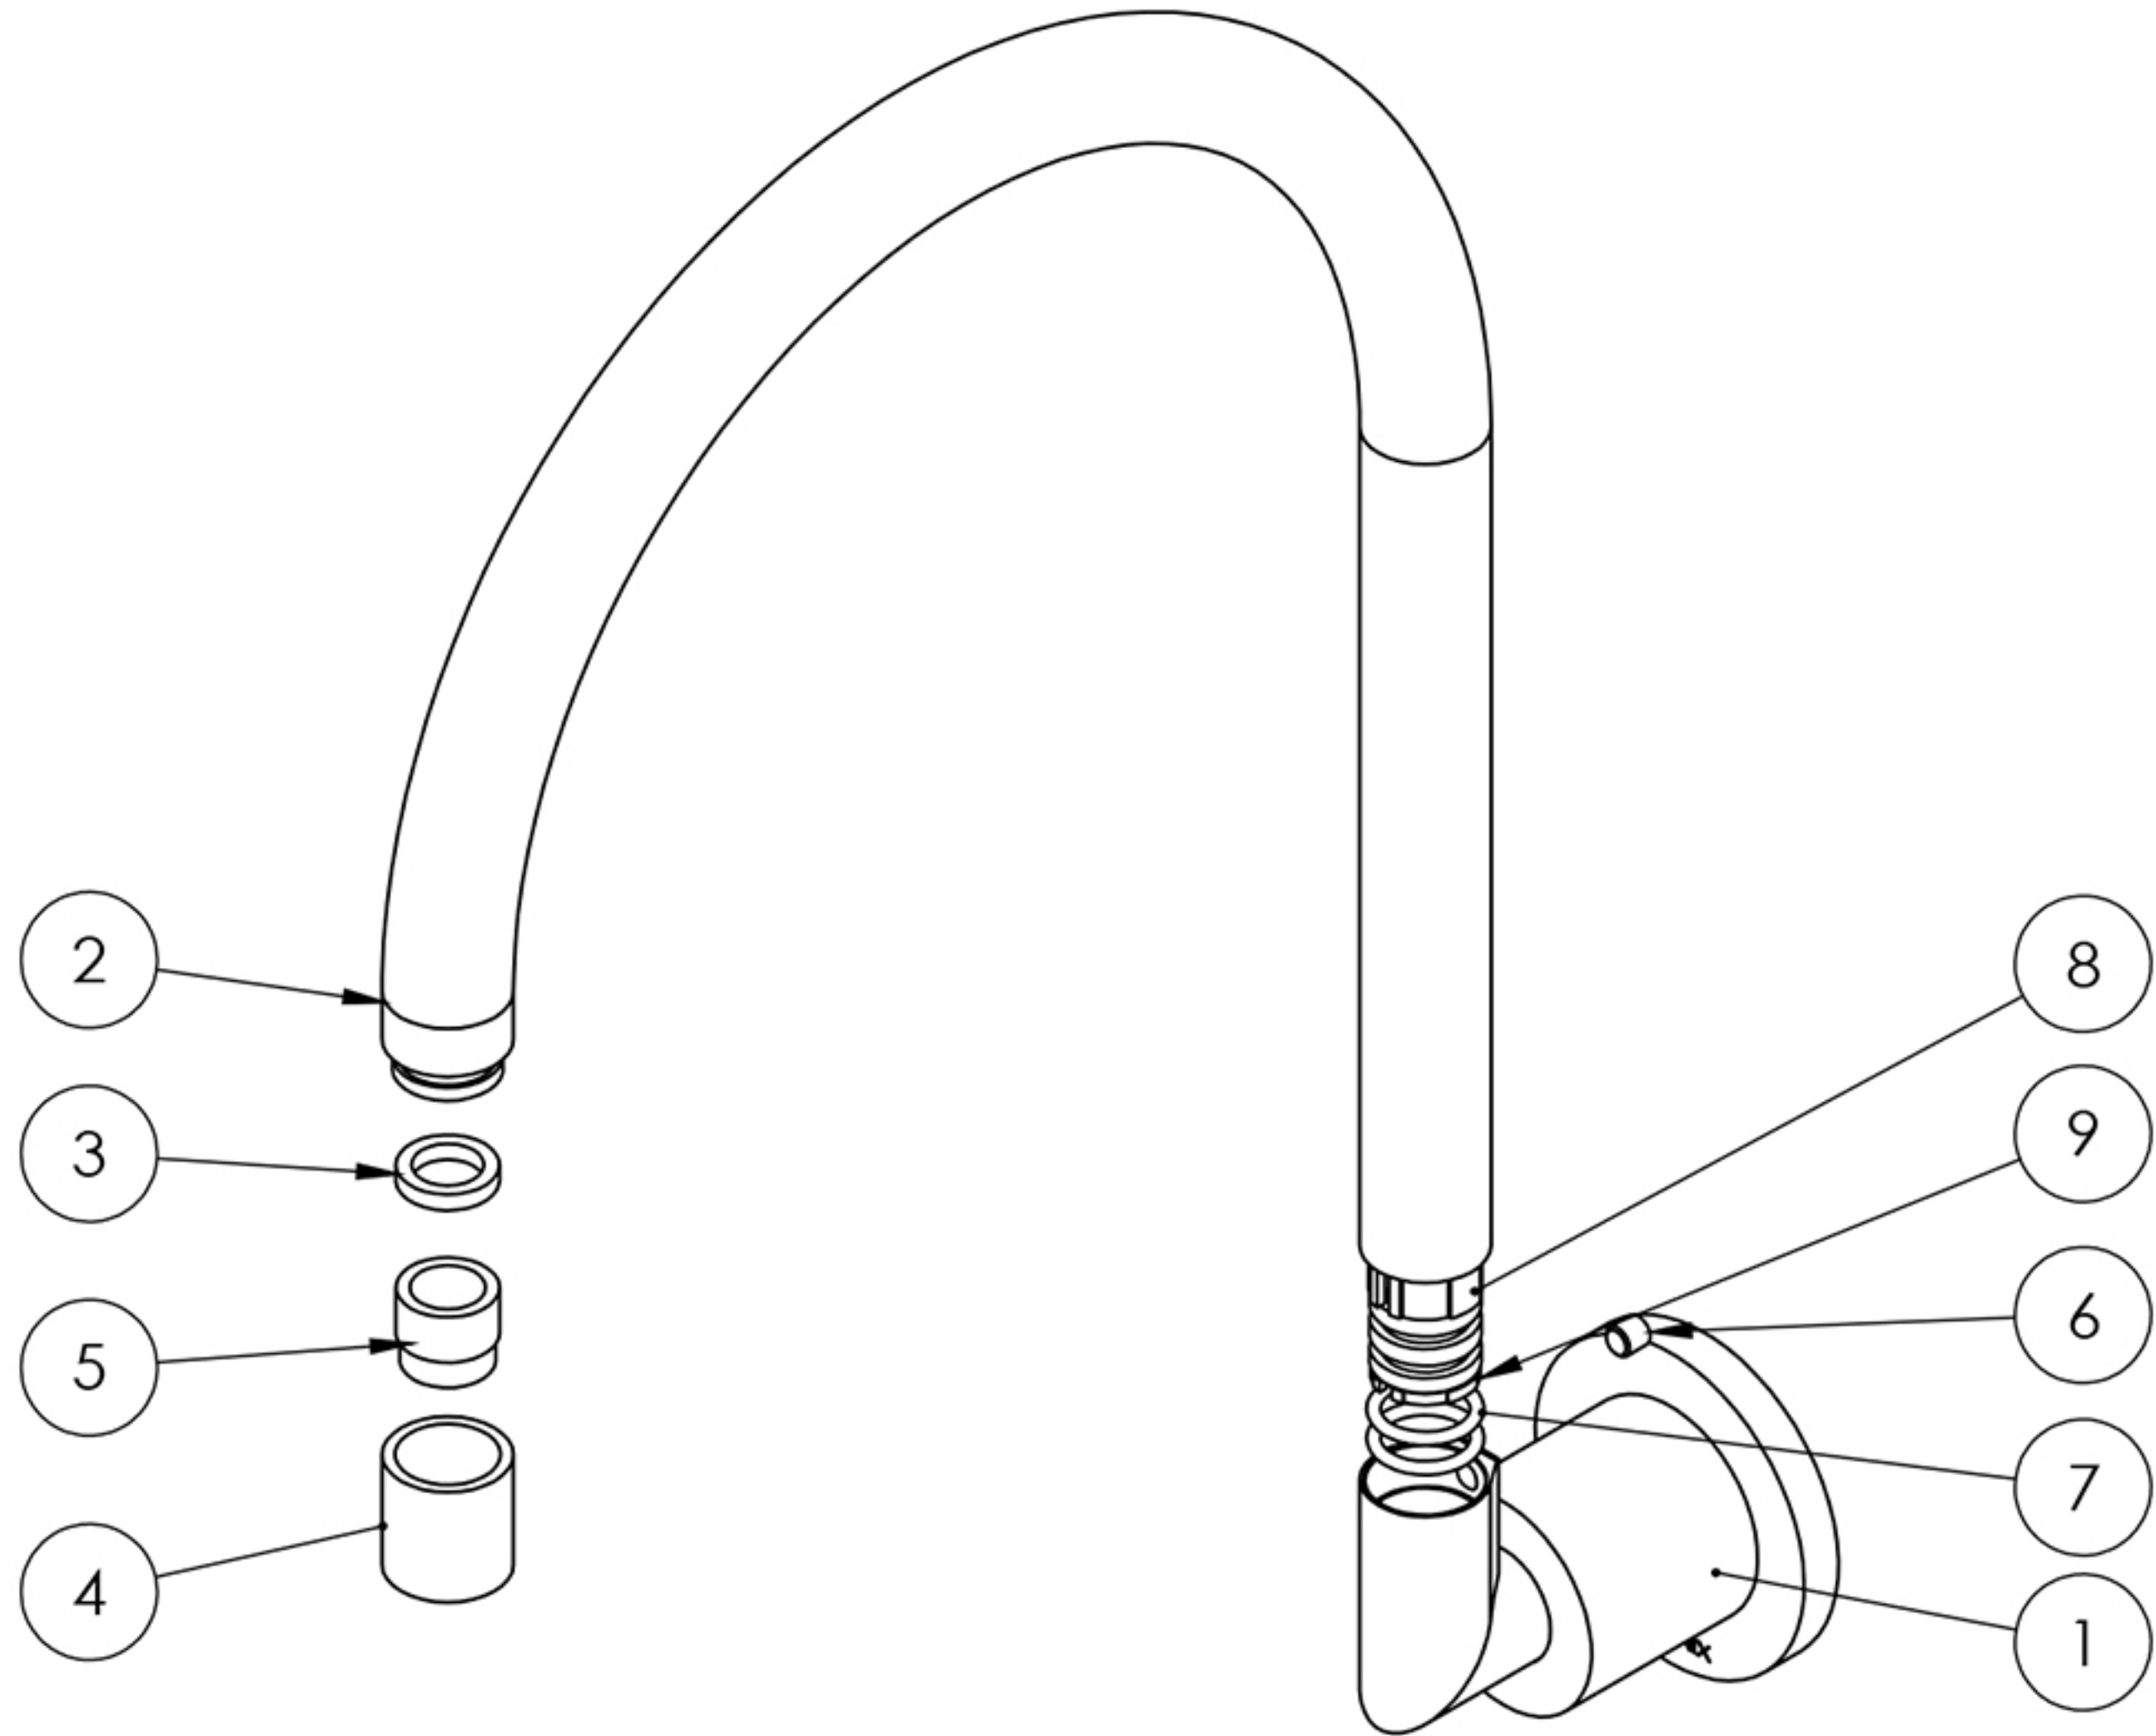

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.