


## PARTS LIST

---

1. MIXER HANDLE
2. WASHER
3. SCREW CAP
4. GRUB SCREW M5X5
5. DRESS PLATE

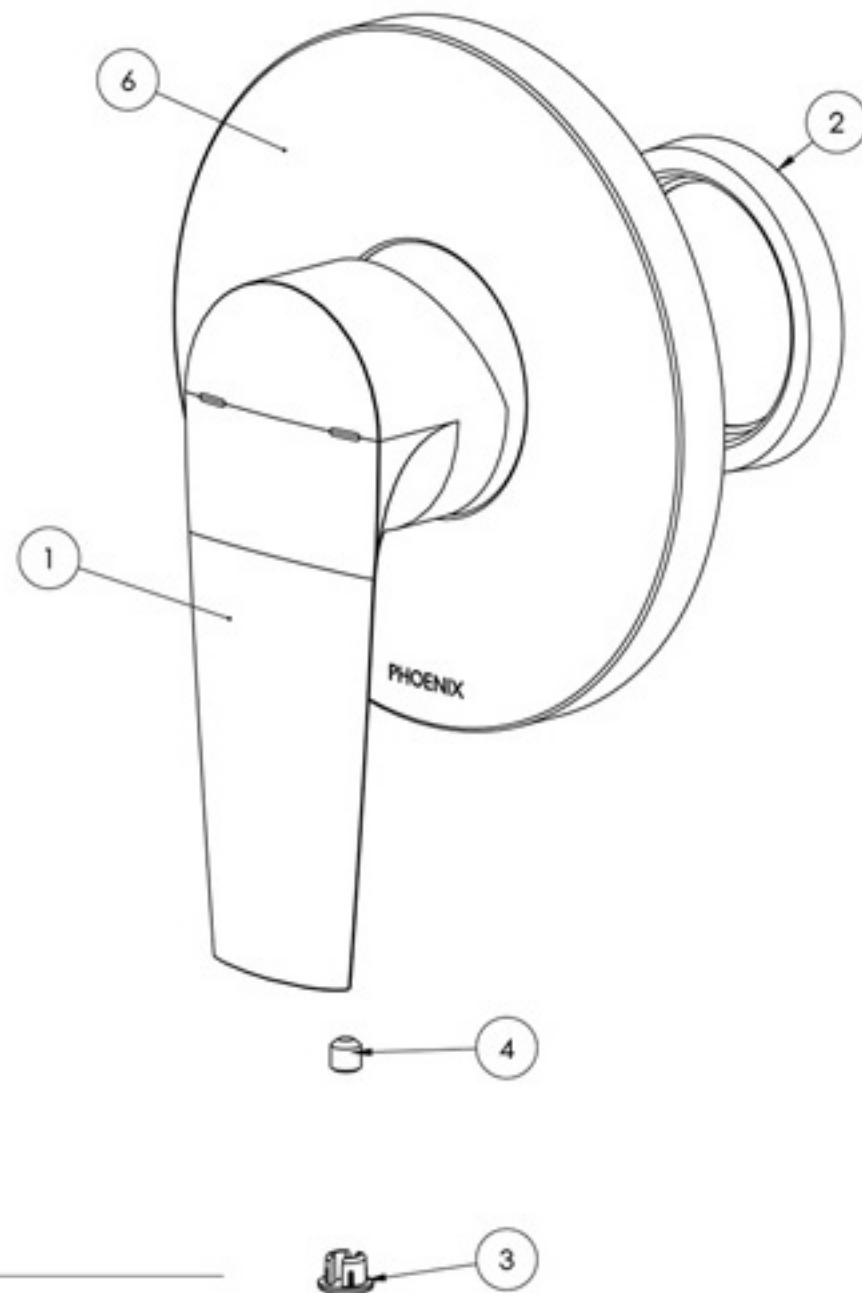

## MAINTENANCE AND CARE:

---

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.