


PARTS LIST

1. DRESS PLATE
2. MIXER HANDLE
3. 20MM WASHER
4. 44MM WASHER
5. SCREW CAP
6. GRUB SCREW M5X5
7. MIXER HANDLE
8. RUBBER PLUG

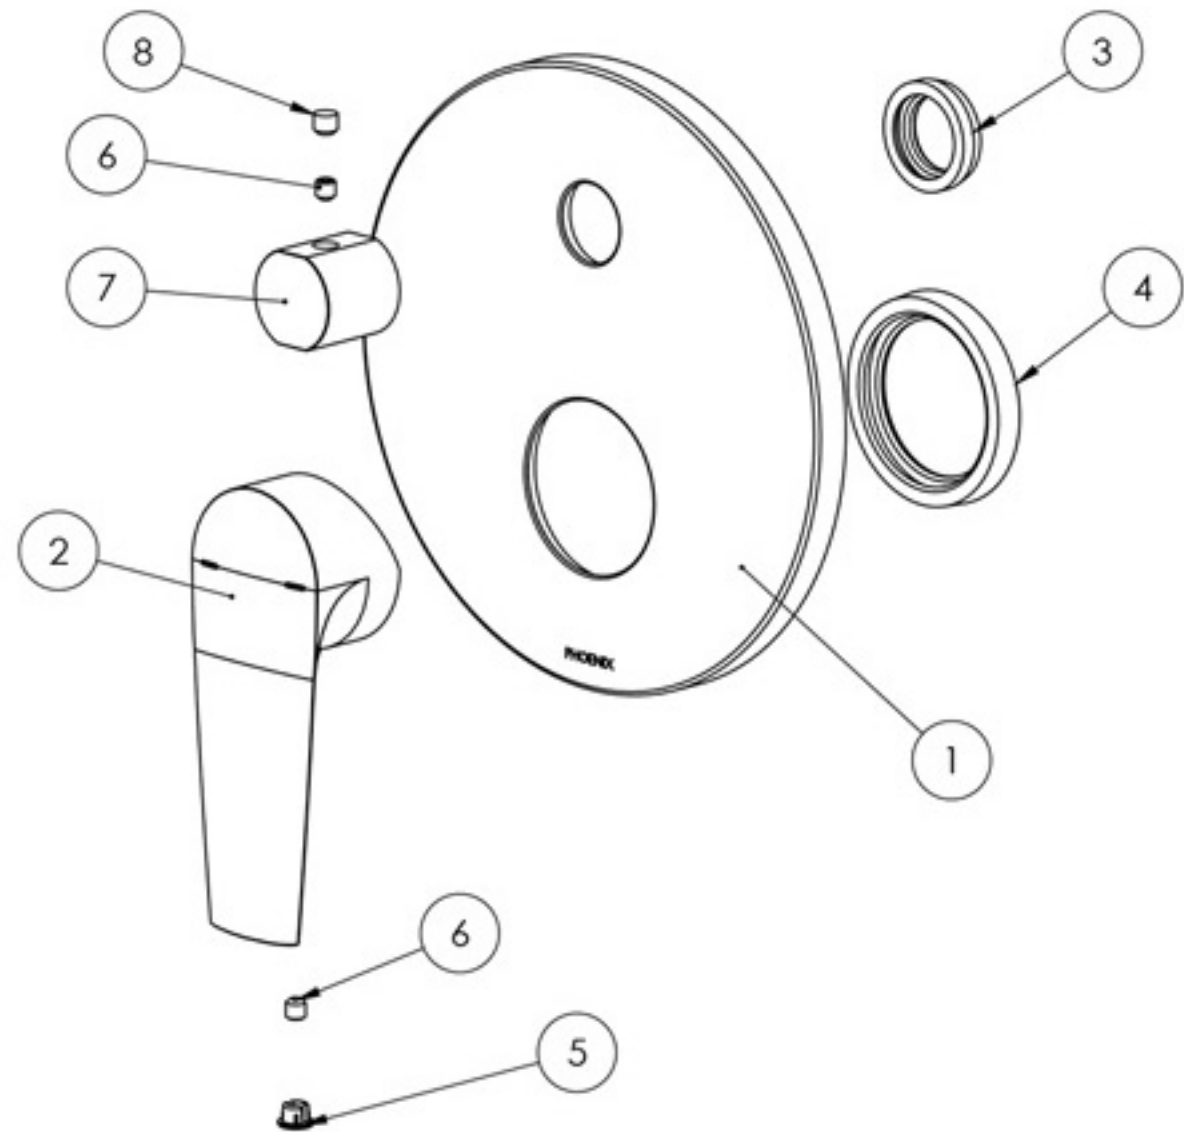

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.