


PARTS LIST

1. SCREW CAP
2. GRUB SCREW M5X5
3. ALLEN KEY
4. MIXER EXTENDED HANDLE
5. MIXER DRESS PLATE
6. DRESS PLATE WASHER

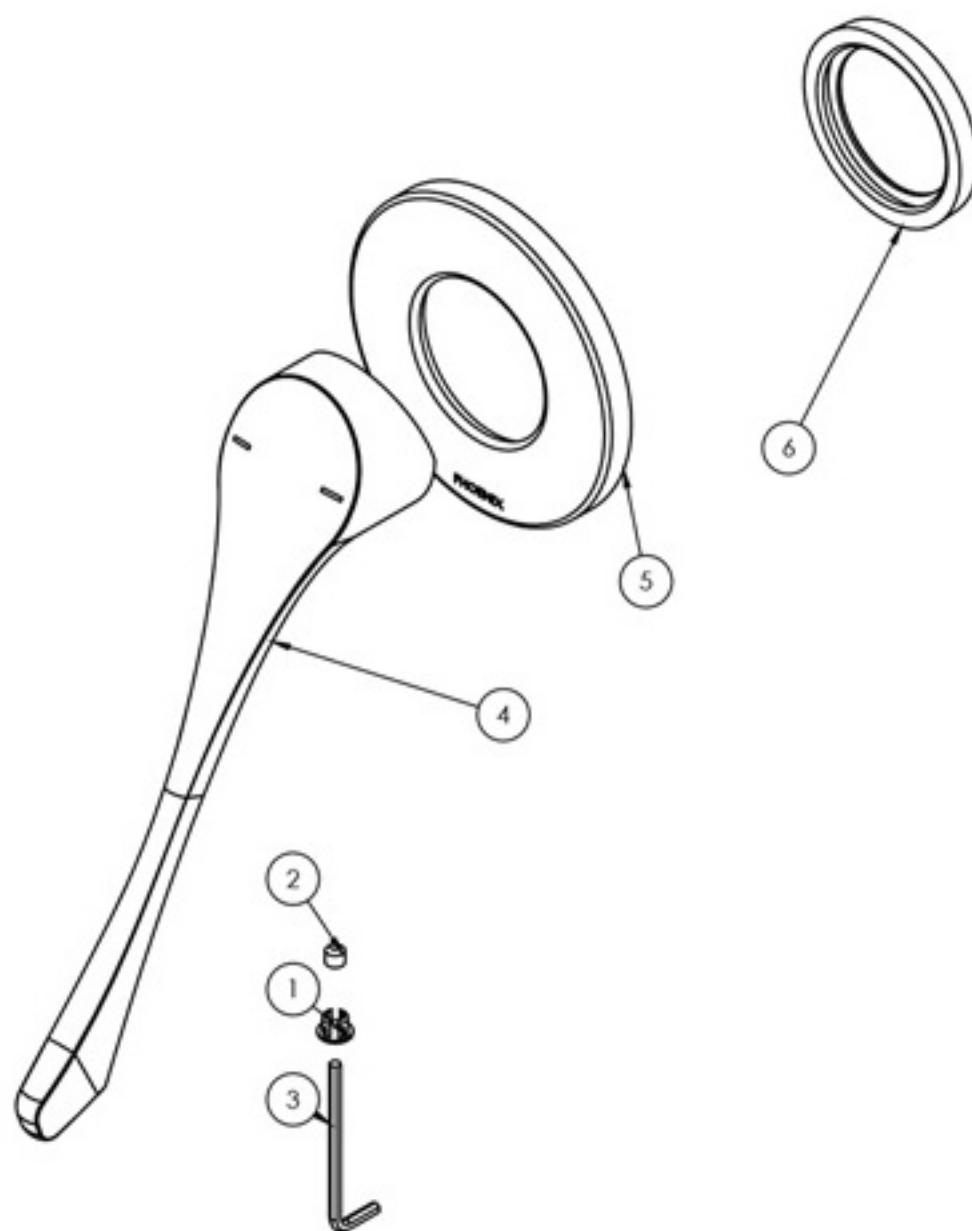

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.