

PARTS LIST

1. SINK MIXER BODY
2. L SQUARE SPOUT
3. 25MM CARTRIDGE
4. 25MM MIXER LOCKNUT
5. MIXER DOME
6. SINK MIXER HANDLE
7. AERATOR
8. AERATOR RETAINER
9. BODY EXTENSION
10. O-RING
11. SPOUT BEARING 19MM
12. SHORT SPOUT BEARING 19MM
13. O-RING
14. O-RING
15. GRUB SCREW M4X5
16. GRUB SCREW M4X6
17. RUBBER SCREW CAP M4
18. NYLON RING
19. M3X10 SCREW
20. DRESS PLATE
21. O-RING
22. LOCKNUT GASKET
23. PLASTIC LOCKNUT
24. HOSE EXTENSION 250MM
25. FLEXIBLE HOSE
26. THREADED TAIL
27. M8X75MM THREADED ROD
28. SPACER
29. EXTENSION PIN
30. M8 SERRATED FLANGE LOCKNUT

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface.
Any damage caused in this way will not be covered by warranty.

