


PARTS LIST

1. DRESS PLATE
2. 20MM WASHER
3. 44MM WASHER
4. SCREW CAP
5. GRUB SCREW M5X5
6. DIVERTER HANDLE
7. RUBBER PLUG
8. MIXER HANDLE

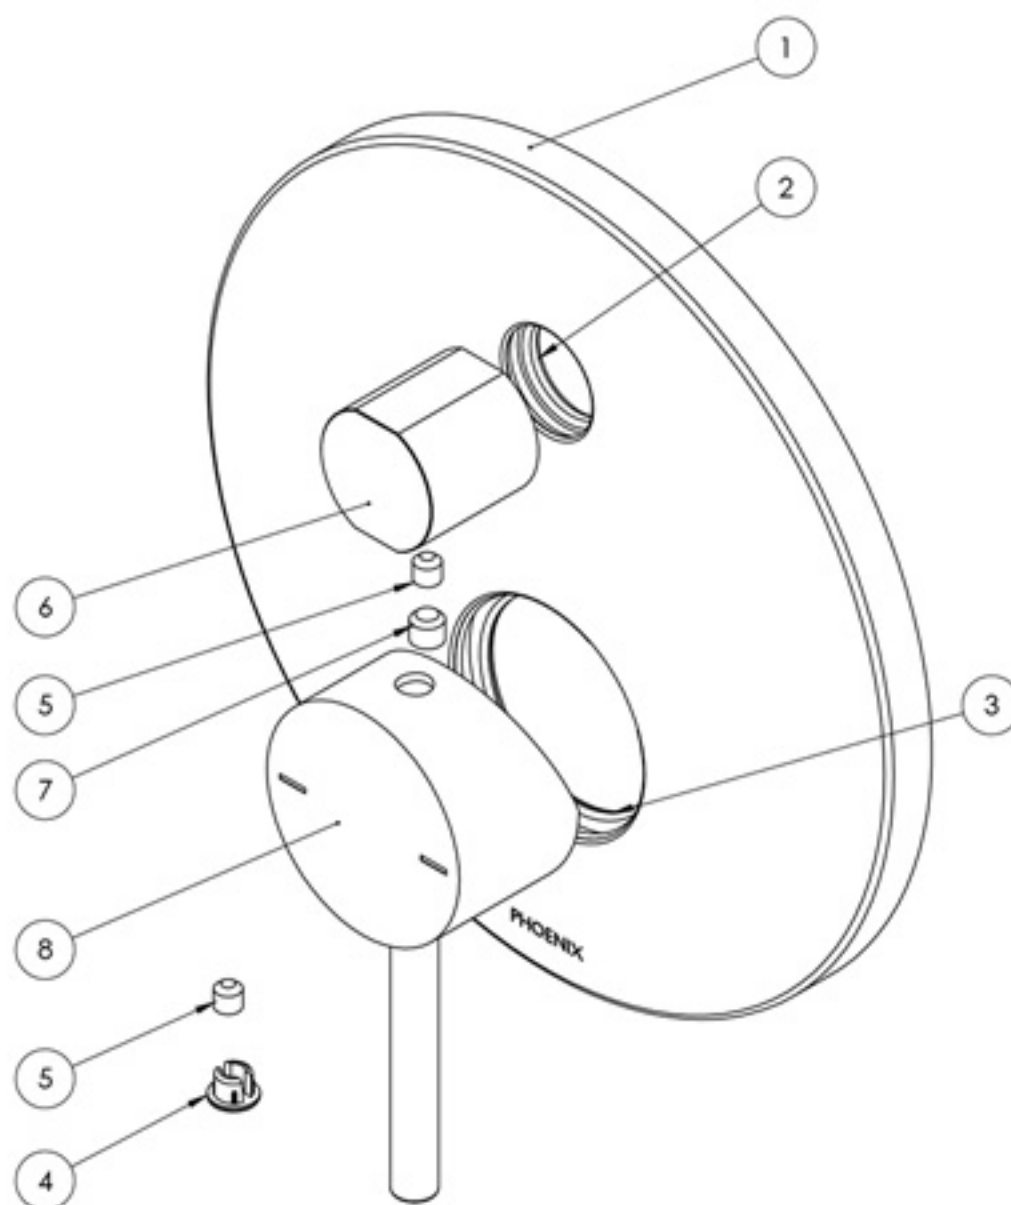

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.