 


THREE-DRAWER SIDEBOARD

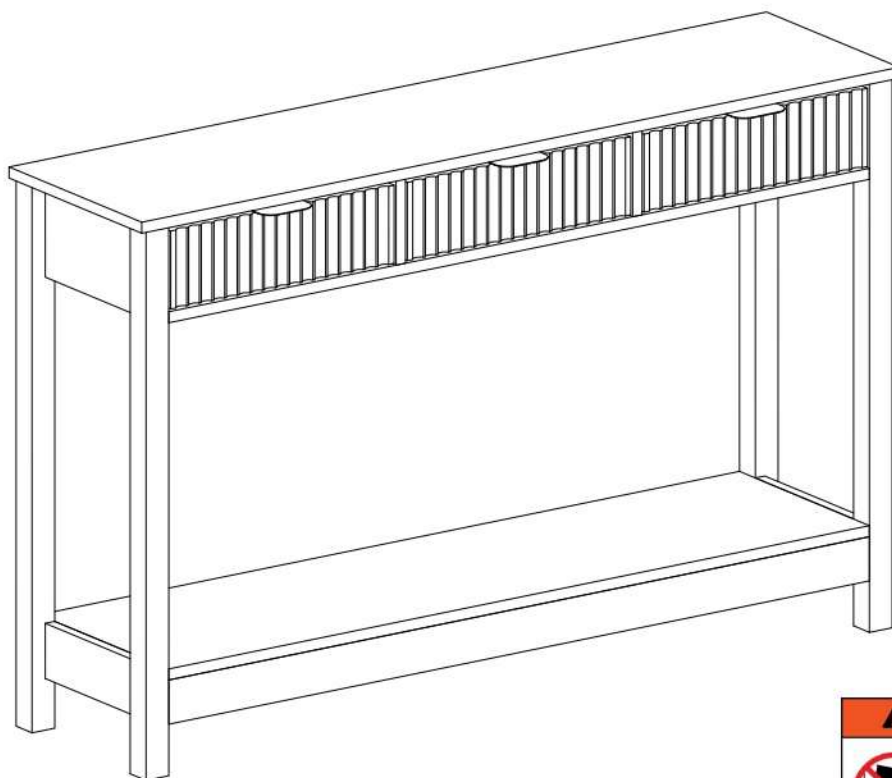



⚠ WARNING	
	
Children have died from furniture tipover. • ALWAYS secure this furniture with an anchor device. • NEVER allow children to stand, climb or hang on drawers, or shelves. • ALWAYS secure your television with an anchor device. This is a permanent label. Do not remove!	

Before Assembly




IMPORTANT NOTE:


1. Make sure all parts and hardware are included and free of obvious defect before disposing of any packaging.
2. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
3. Do not tighten all screws and bolts until completely assembled.
4. Assembly will require two people.

  Part List



				
① x1PC	② x1PC	③ x1PC	④ x1PC	⑤ x1PC
				
⑥ x1PC	⑦ x2PCS	⑧ x3PCS	⑨ x2PCS	⑩ x3PCS
				
⑪ x3PCS	⑫ x3PCS	⑬ x3PCS		

   Hardware

					
M4				M3*16mm	M4*35mm
A x1PC	B x1PC	C x49PCS	D x49PCS	E x30PCS	F x12PCS
					
Ø8*30mm	M7*50mm				M4*35mm
G x14PCS	H x4PCS	I x4PCS	J x3PCS	K x2PCS	L x2PCS
					
M x2PCS	CLx3PCS	CR x3PCS	DLx3PCS	DR x3PCS	






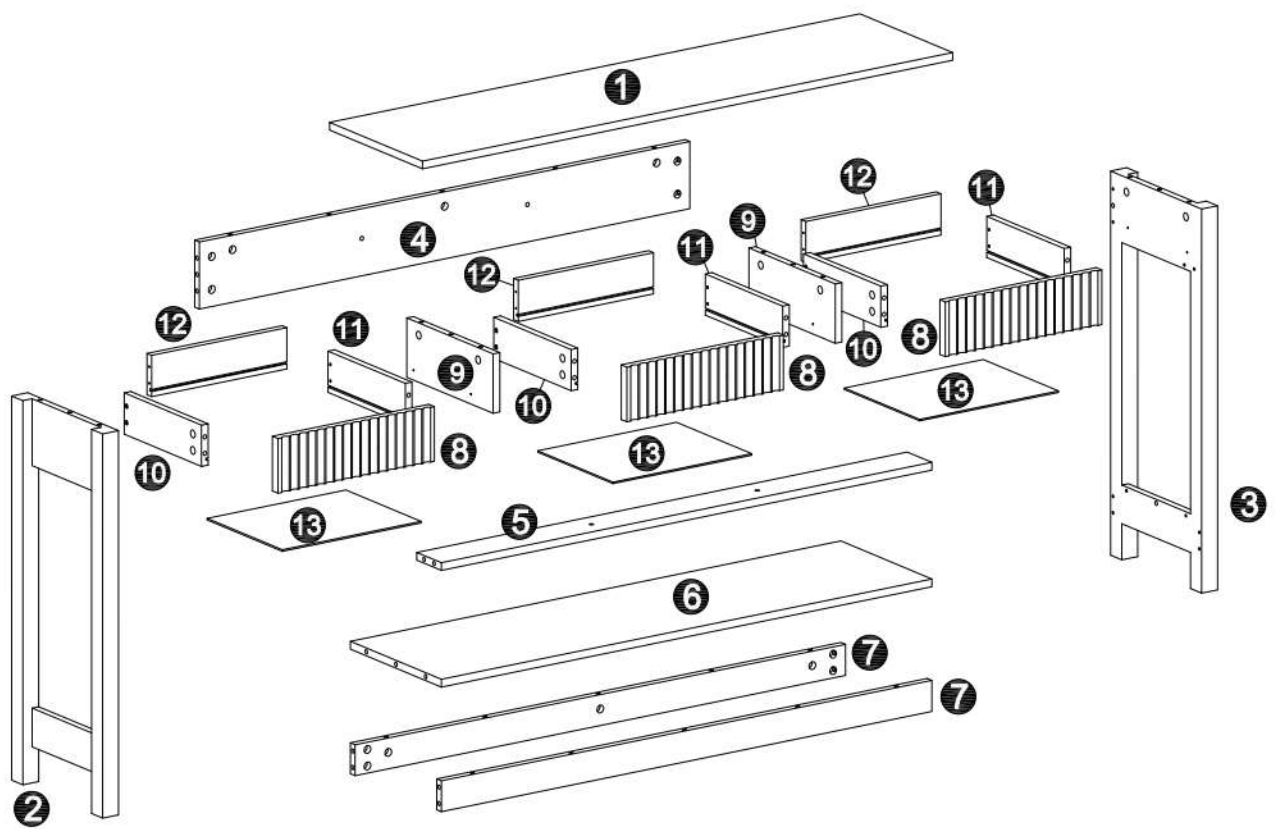 


  Step 1

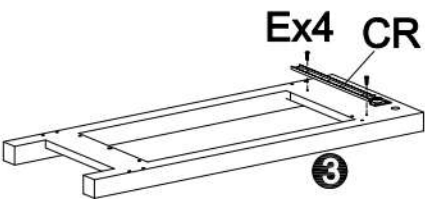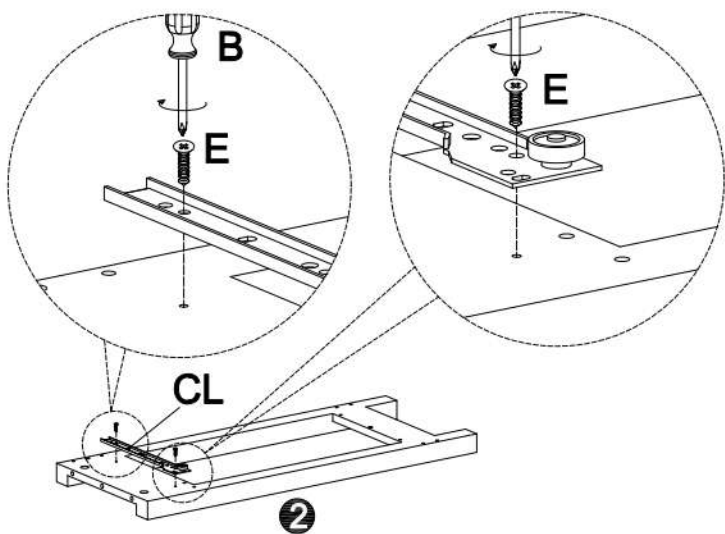


B		1PC
E		4PCS
CL		1PC
CR		1PC

      Step 2

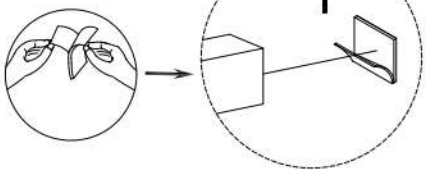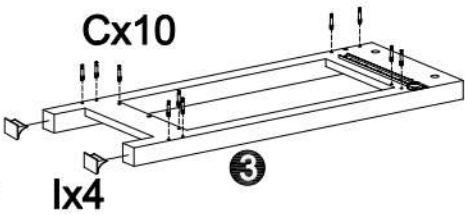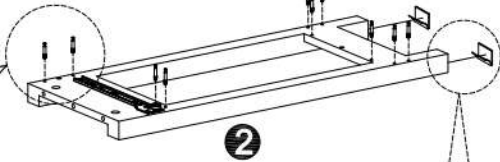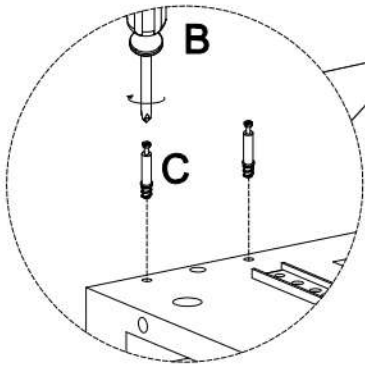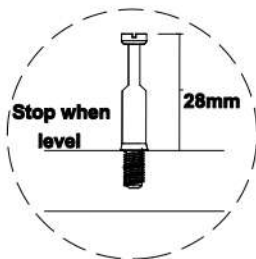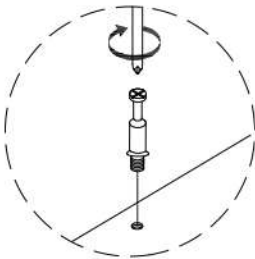


B		1PC
C		20PCS
I		4PCS

 
Step 3

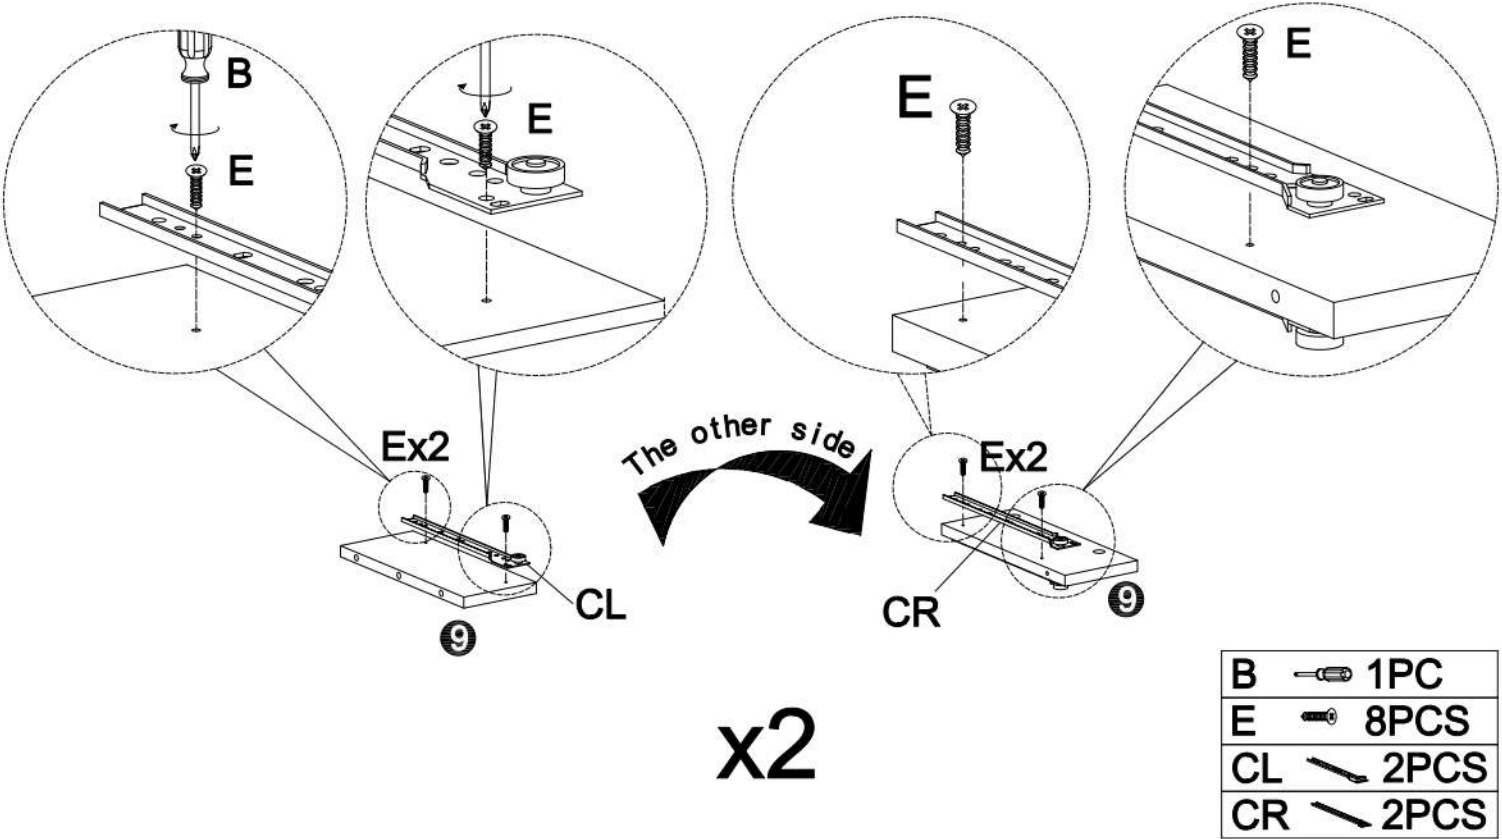

 Step 4

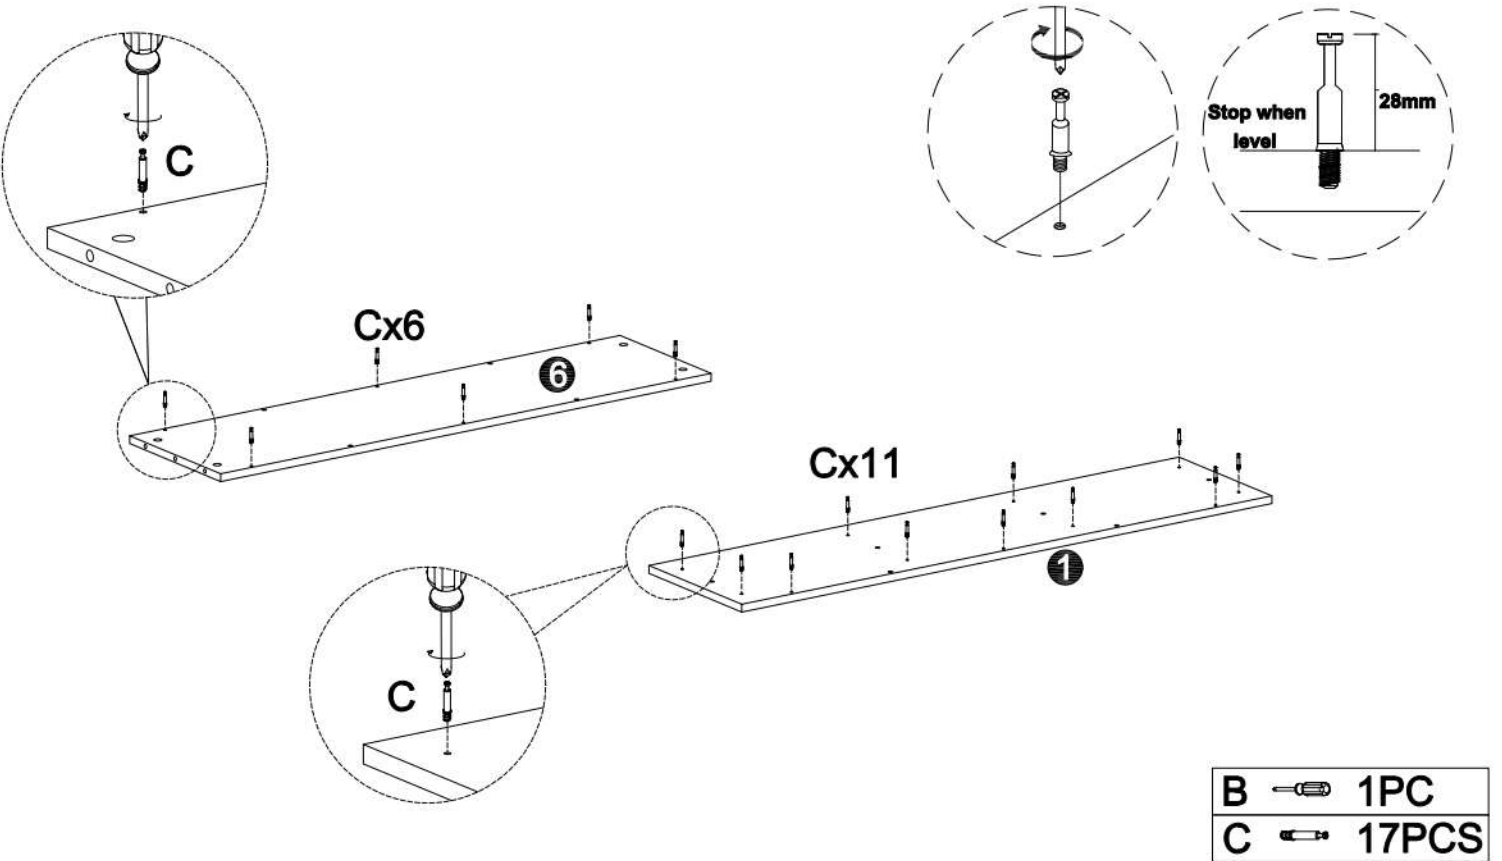


 Step 5

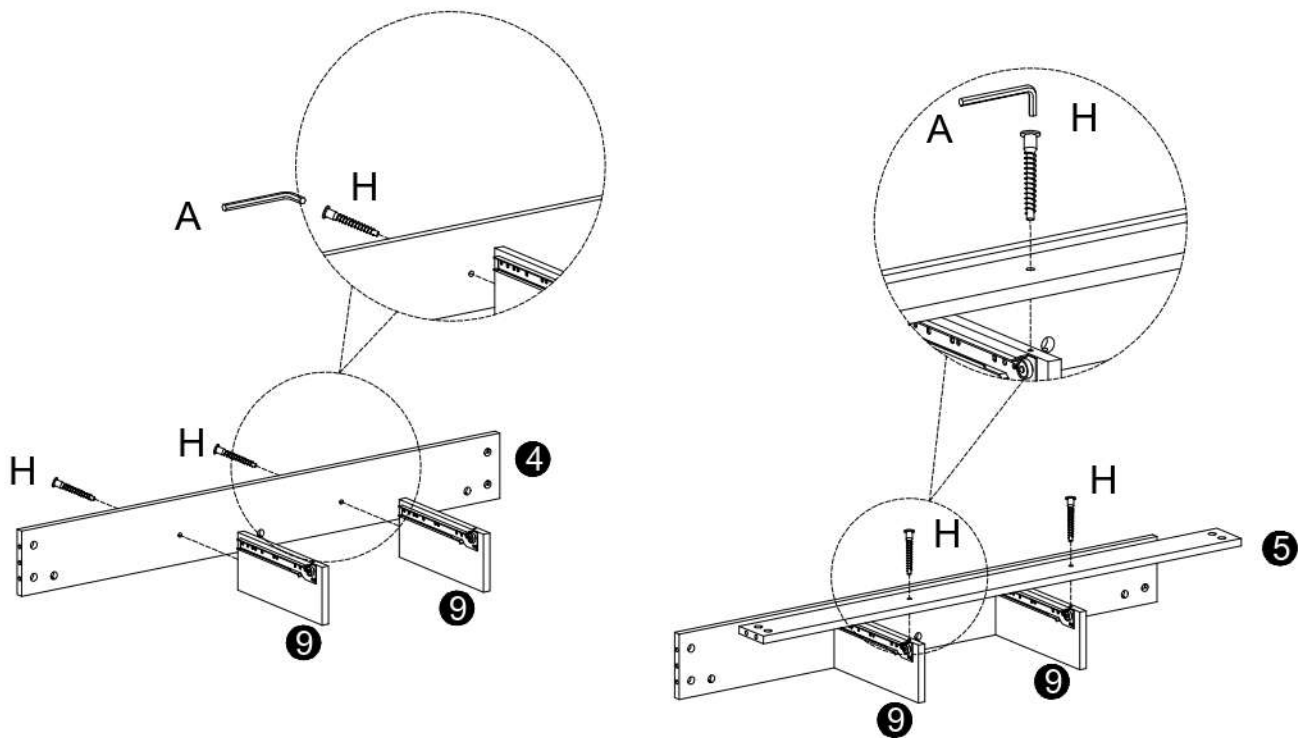


A		1PC
H		4PCS

 Step 6

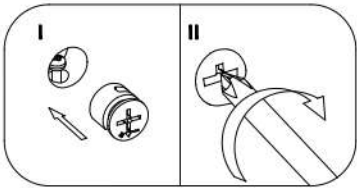


B		1PC
D		6PCS
G		4PCS

 Step 7

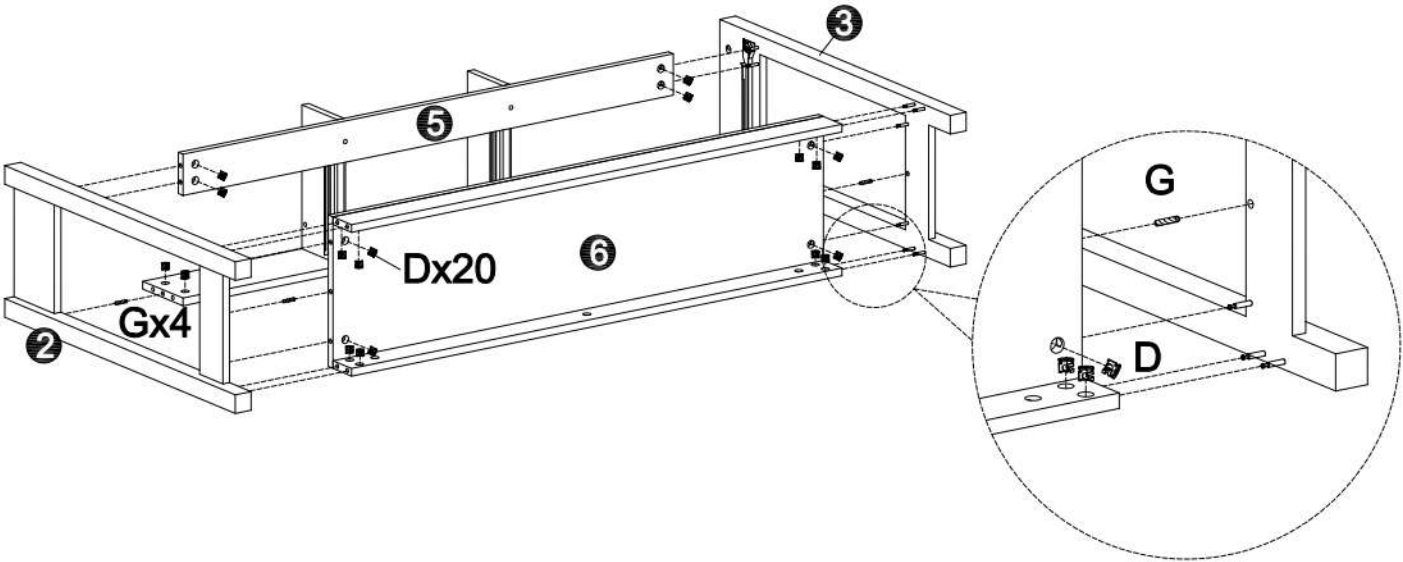




B		1PC
D		20PCS
G		4PCS

 Step 8

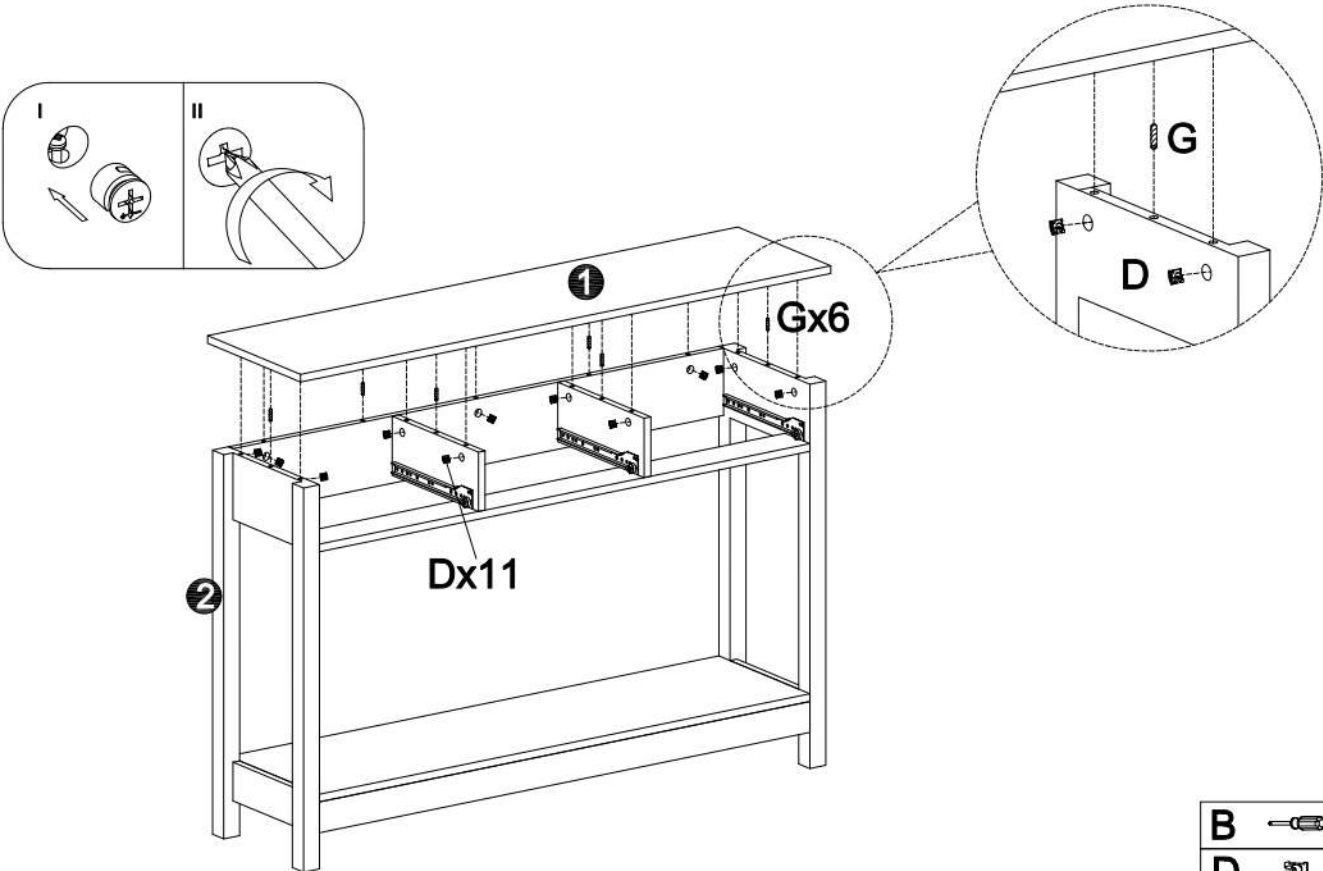




B		1PC
D		11PCS
G		6PCS

   Step 9

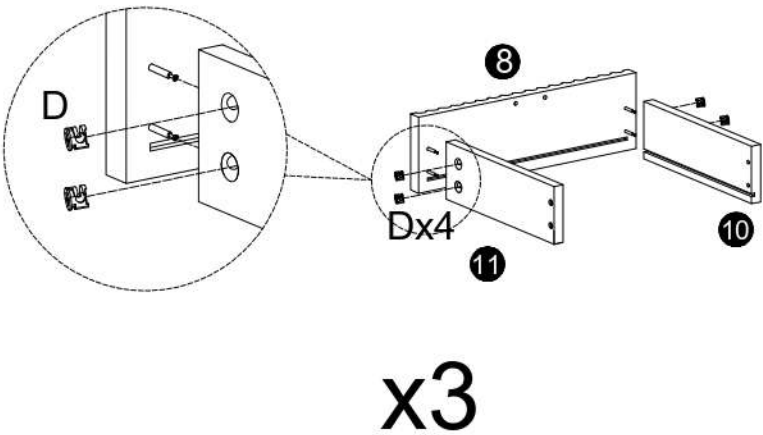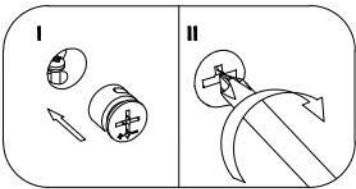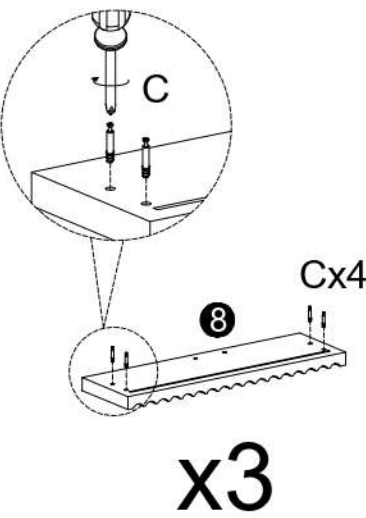


B		1PC
C		12PCS
D		12PCS

   Step 10

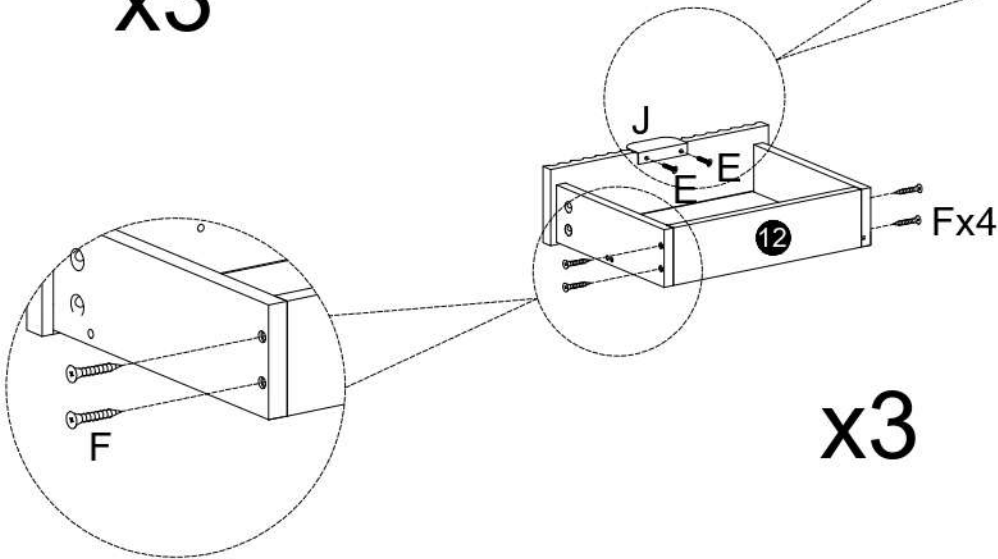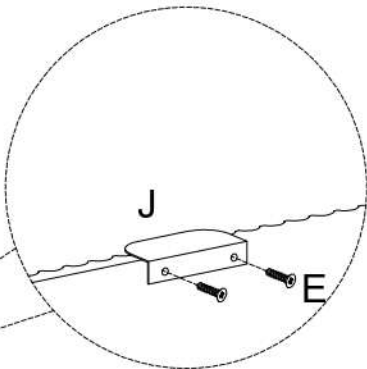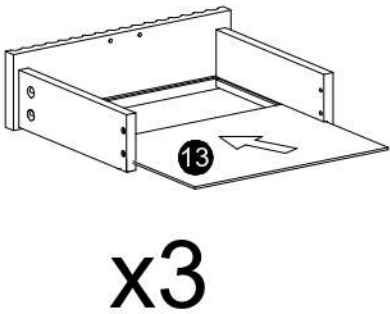


B		1PC
E		6PCS
F		12PCS
J		3PCS




 
Step 11

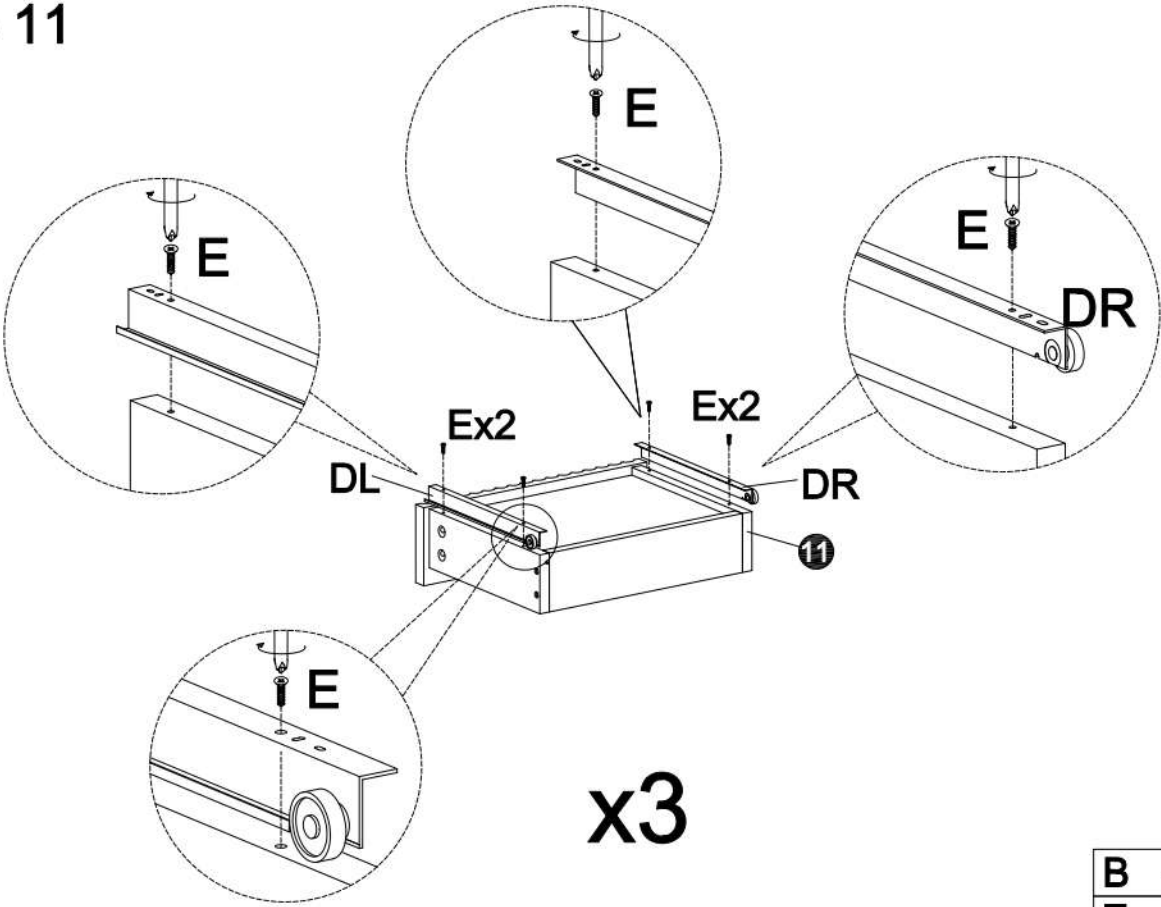

B		1PC
E		12PCS
DL		3PCS
DR		3PCS

     Step 12

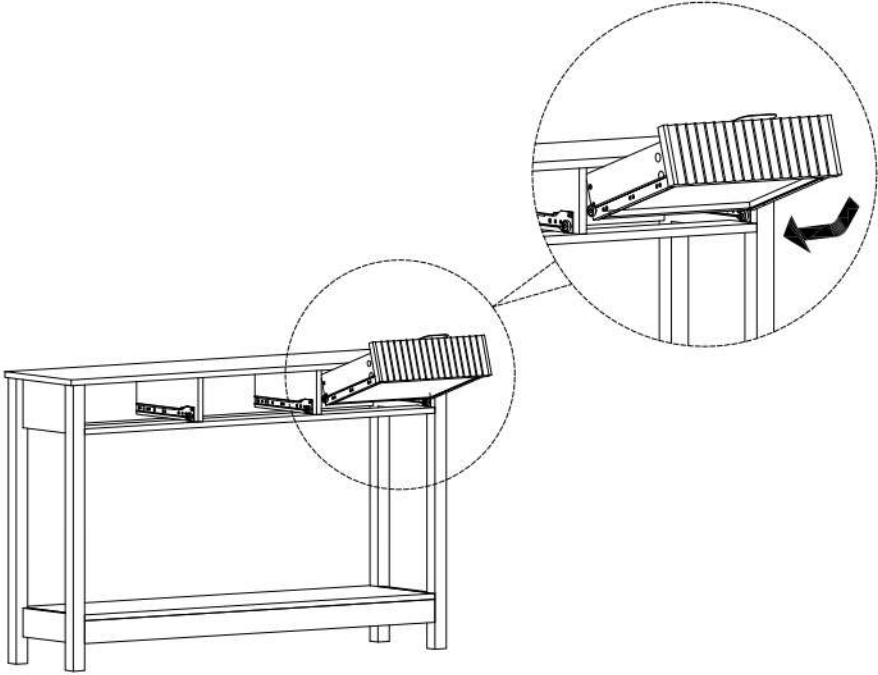

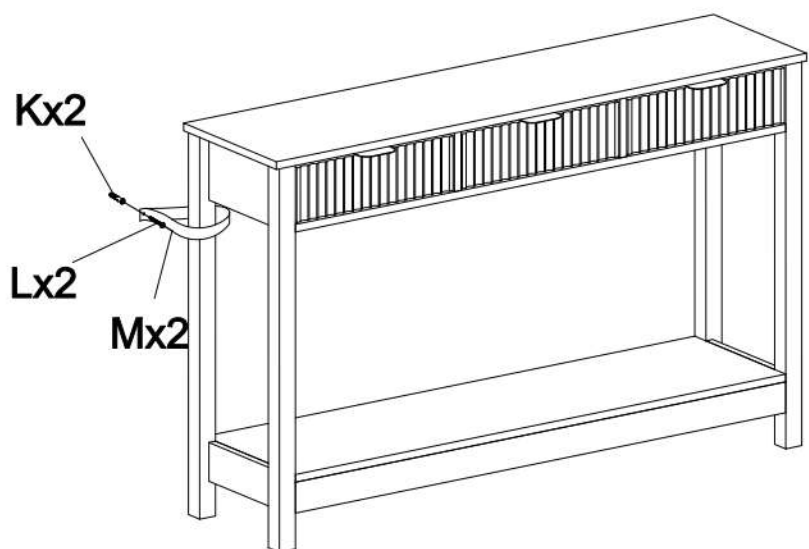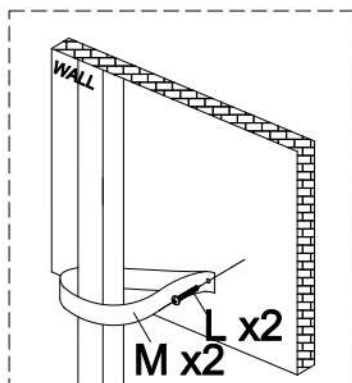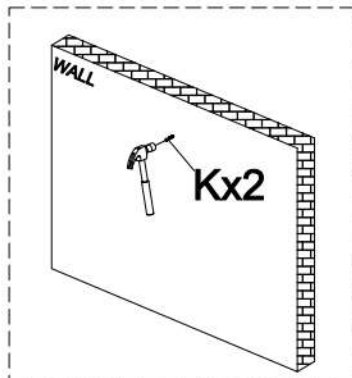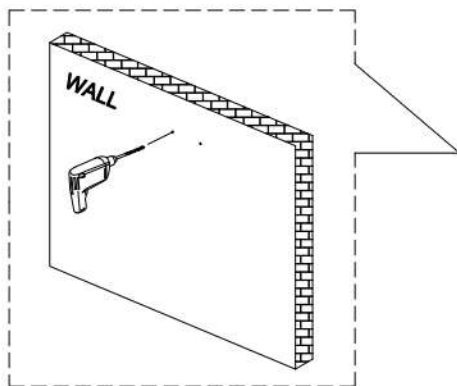

K		2PCS
L		2PCS
M		2PCS