




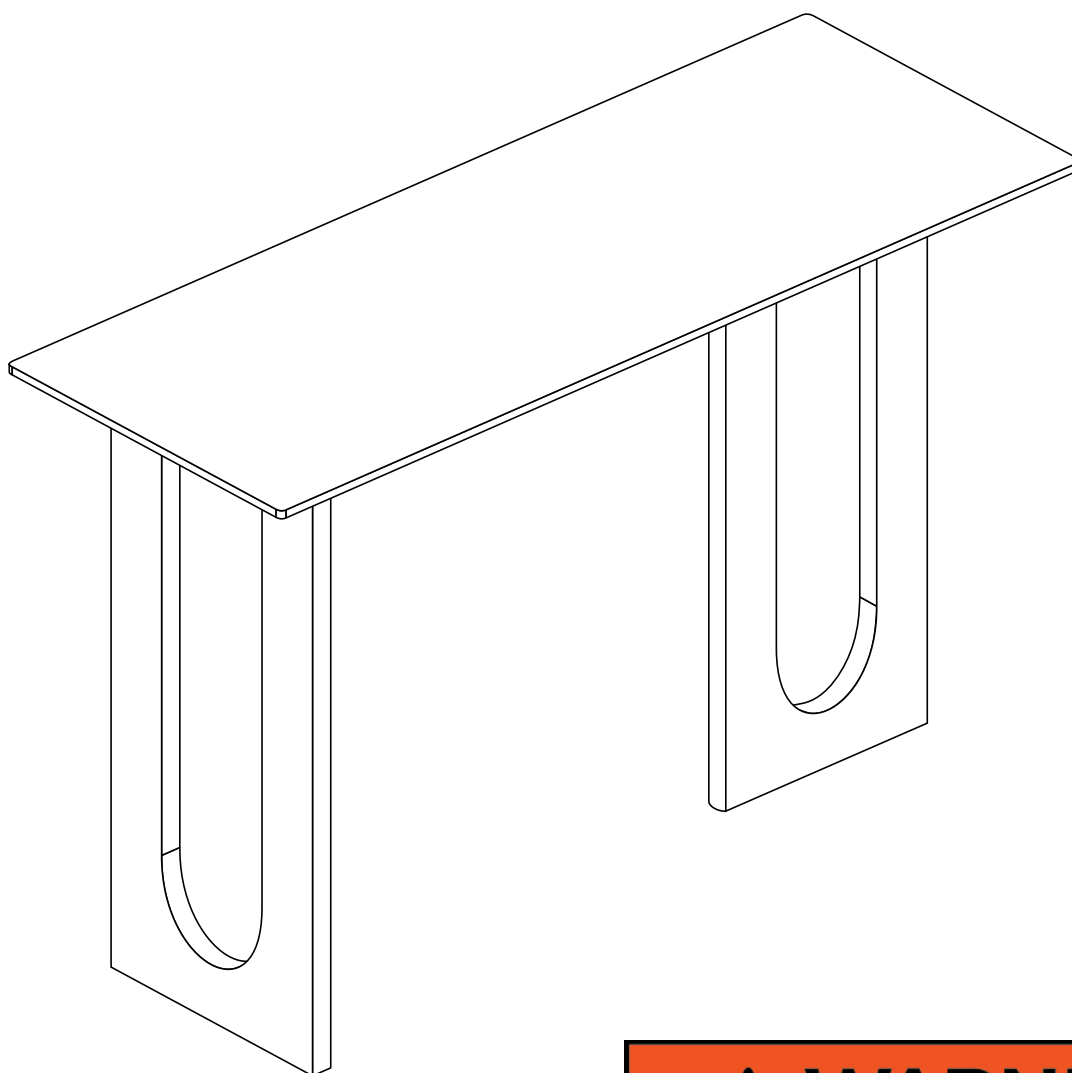


WARNING

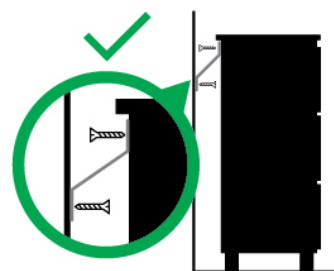

Children have died from furniture tipover.

 
- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

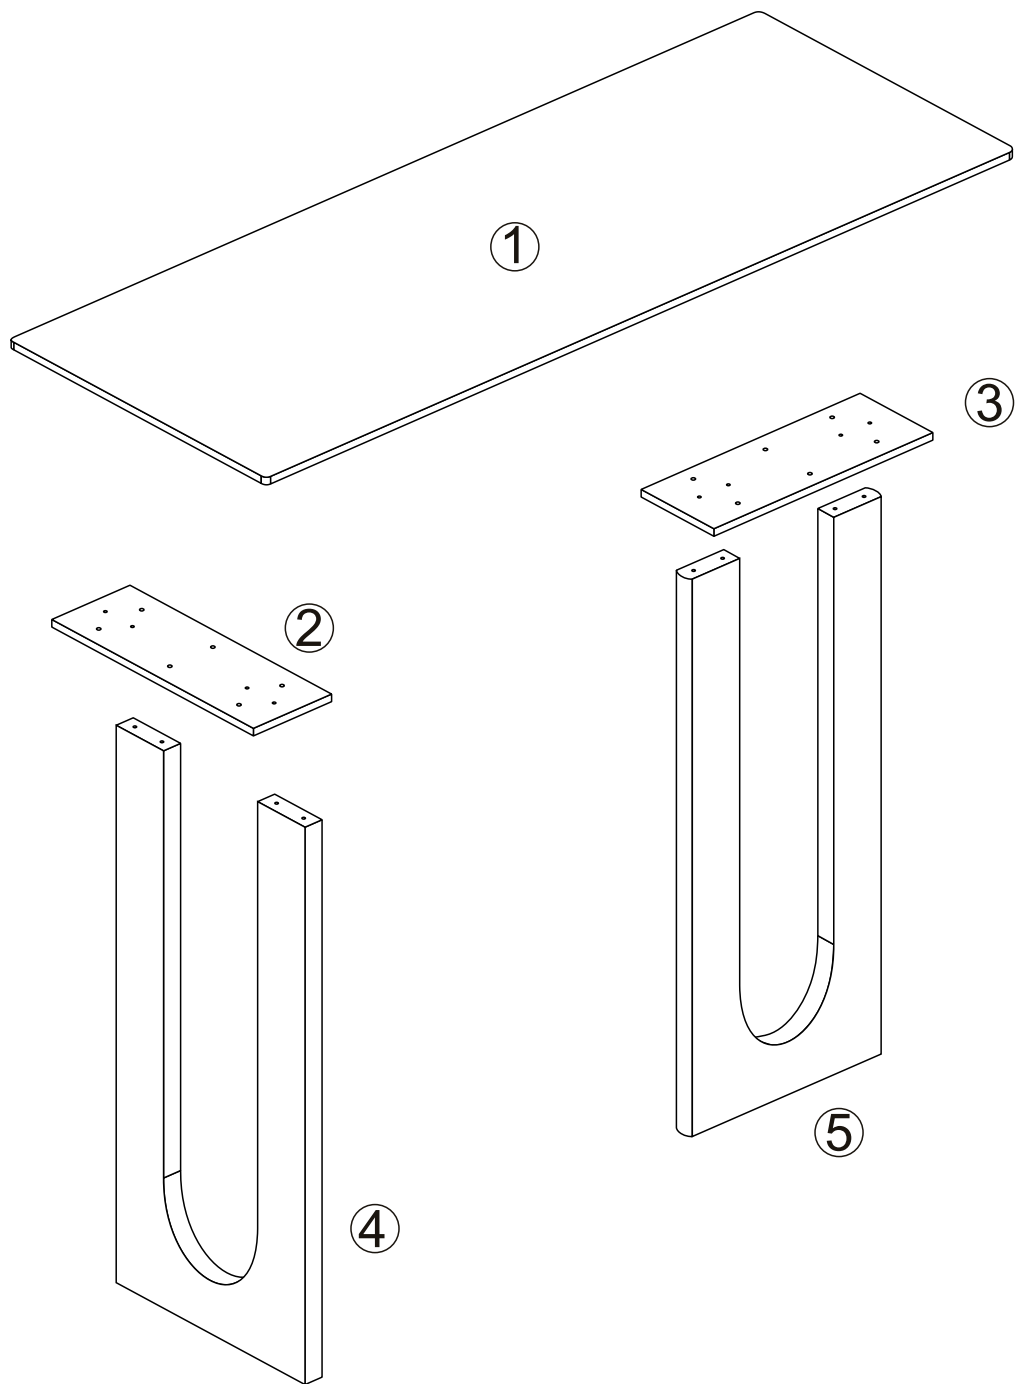

Ax8



 Bx12



Cx1



Dx4




Ex2




Fx2


1

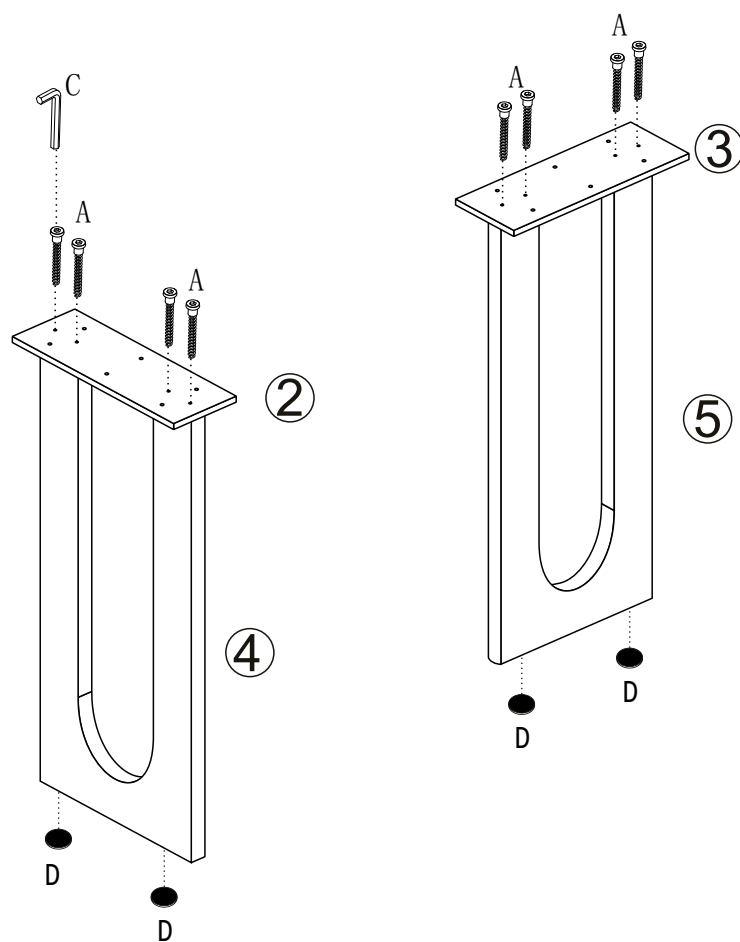

2

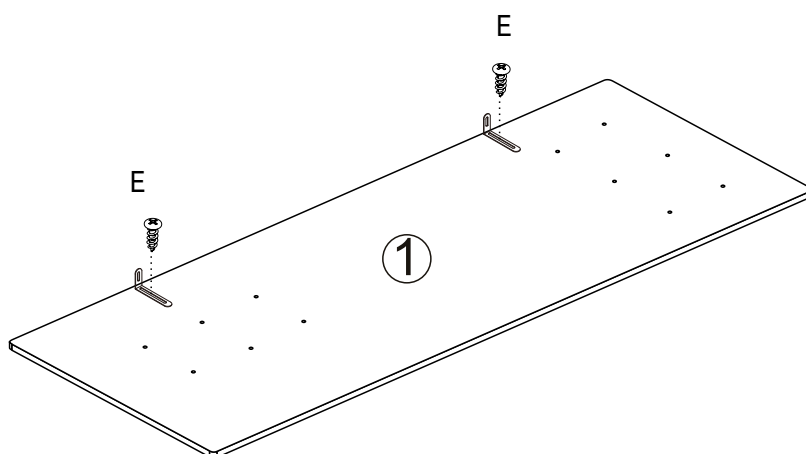

3

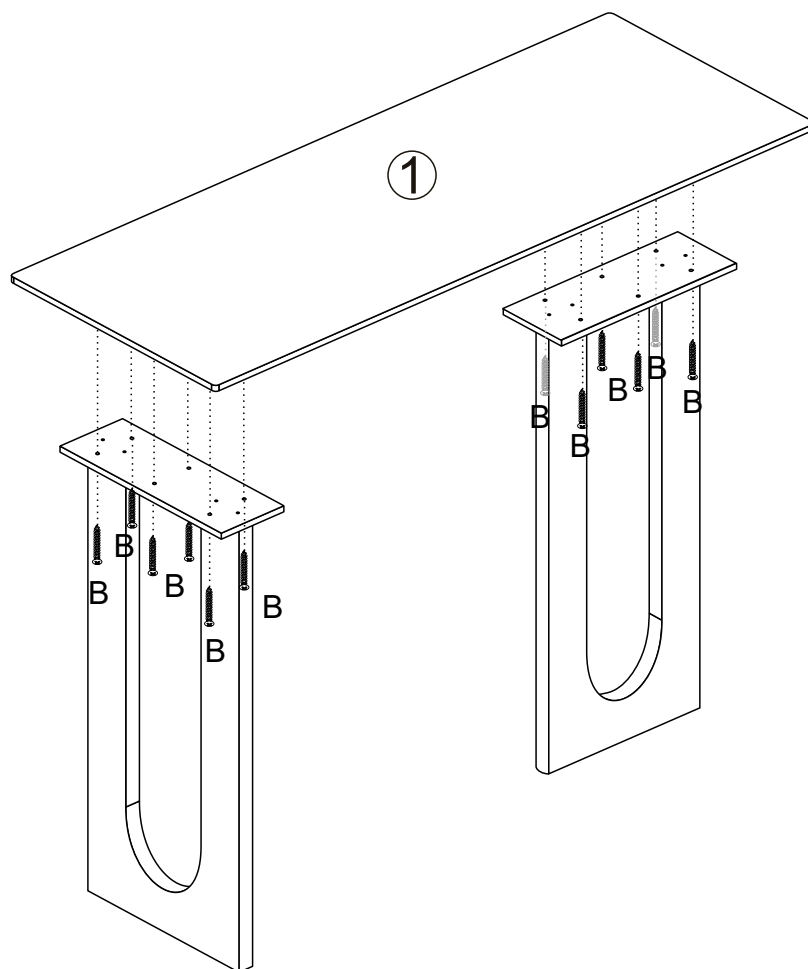

4

Drill a hole in the wall with an impact drill, embed this fitting into the hole, then fasten the screws.

