 
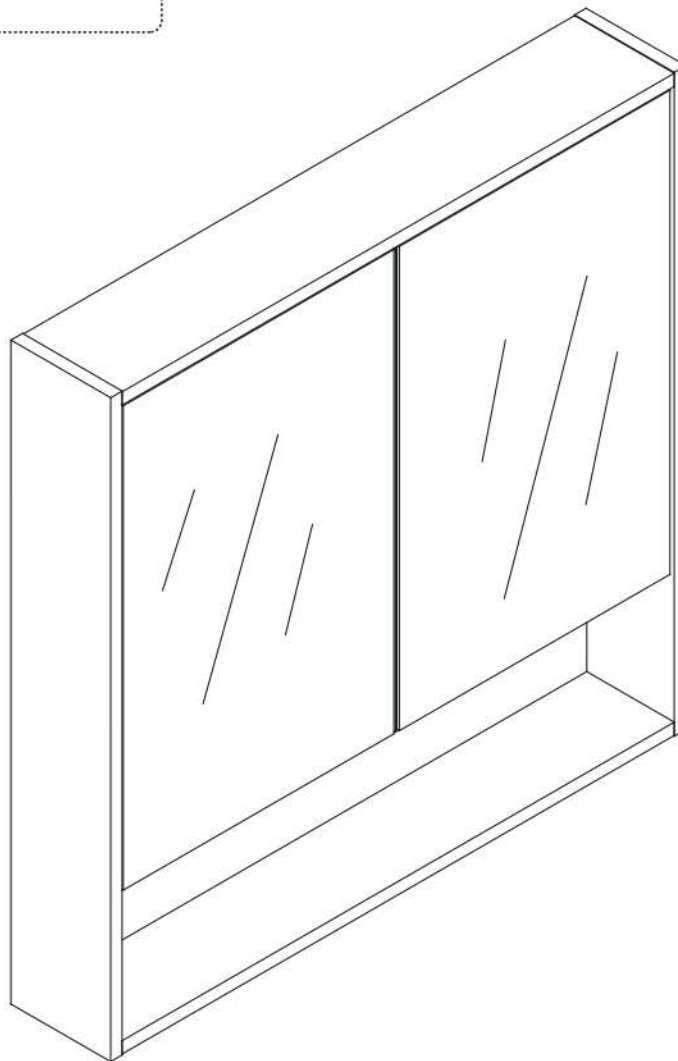 


ASSEMBLY INSTRUCTIONS

Please read the instructions carefully before assembly and keep it for future reference.

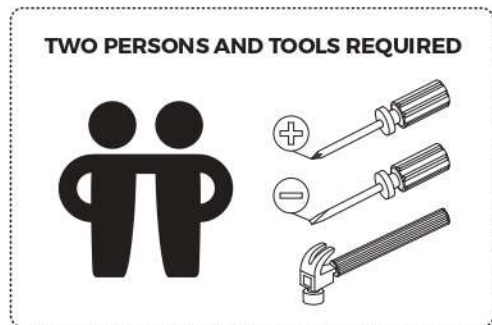

MIRROR CABINET


Model : ST-B24-MR75-LED

Version 1.0


Assembly and Maintenance Tips



 
1. Keep children and pets away from the working area as small parts may cause choking if swallowed.

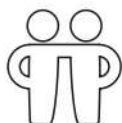

 2. Some furniture may require two persons to assemble for safety reasons.



 3. To protect the surfaces of the furniture, lay the parts and perform the assembly on top of a soft mat (such as a carpet or cardboard).

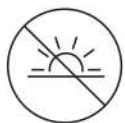

4. Keep the furniture away from direct sunlight to avoid fading.



5. Use a soft, damp cloth to clean or wipe surfaces.



 
6. Never use ammonia-based or abrasive cleaning products to clean as they may damage the finish.



7. Do not place liquids or wet items on furniture as they may leave water marks/stains. Always use a coaster or runner to protect the furniture surface.


Assembly Checklist

Read

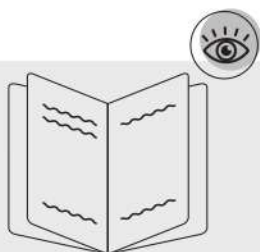


Read through the instructions carefully before you begin.

 Prepare

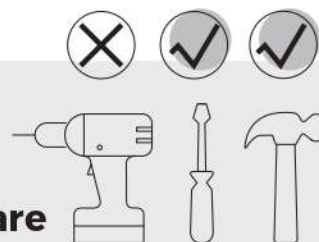


Make sure you have all the required tools.
Never use power tools unless instructed.

 Identify

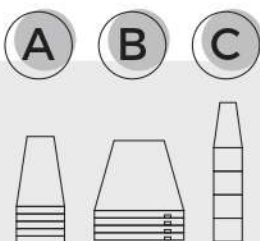

Identify and lay out all of the components before you begin assembly.

 Assemble

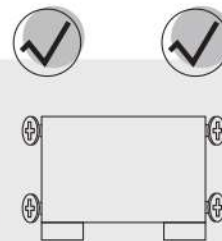

Please fully tighten all screws during the assembly process unless instructed not to do so.

Helpful Information

 
- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! When assembling the product, it is recommended to do so on top of a soft surface such as a carpet or cardboard to avoid scratches and damages to the furniture surfaces.
- ! Bulky items such as wardrobes should be assembled in the location when the assembled piece will be used to avoid moving them through doors or tight passages.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check that all connections are secured and follow all care and maintenance instructions stated.
- ! If you encounter any assembly difficulties or missing components and/or hardware, please contact our Customer Support for further assistance.

Hardware List

Please ensure that all parts and hardware are in the packaging contents. If there are any missing parts and/or hardware, please contact our Customer Service as soon as possible.

Part A

49pcs

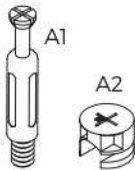

Part B

24pcs
M3.5x14mm



 
Part C

4pcs




Part D

2 sets



Part E

 1 set

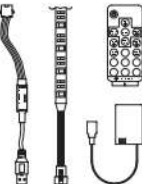


Part F

6pcs




Part J

 3 sets

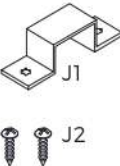

Parts List

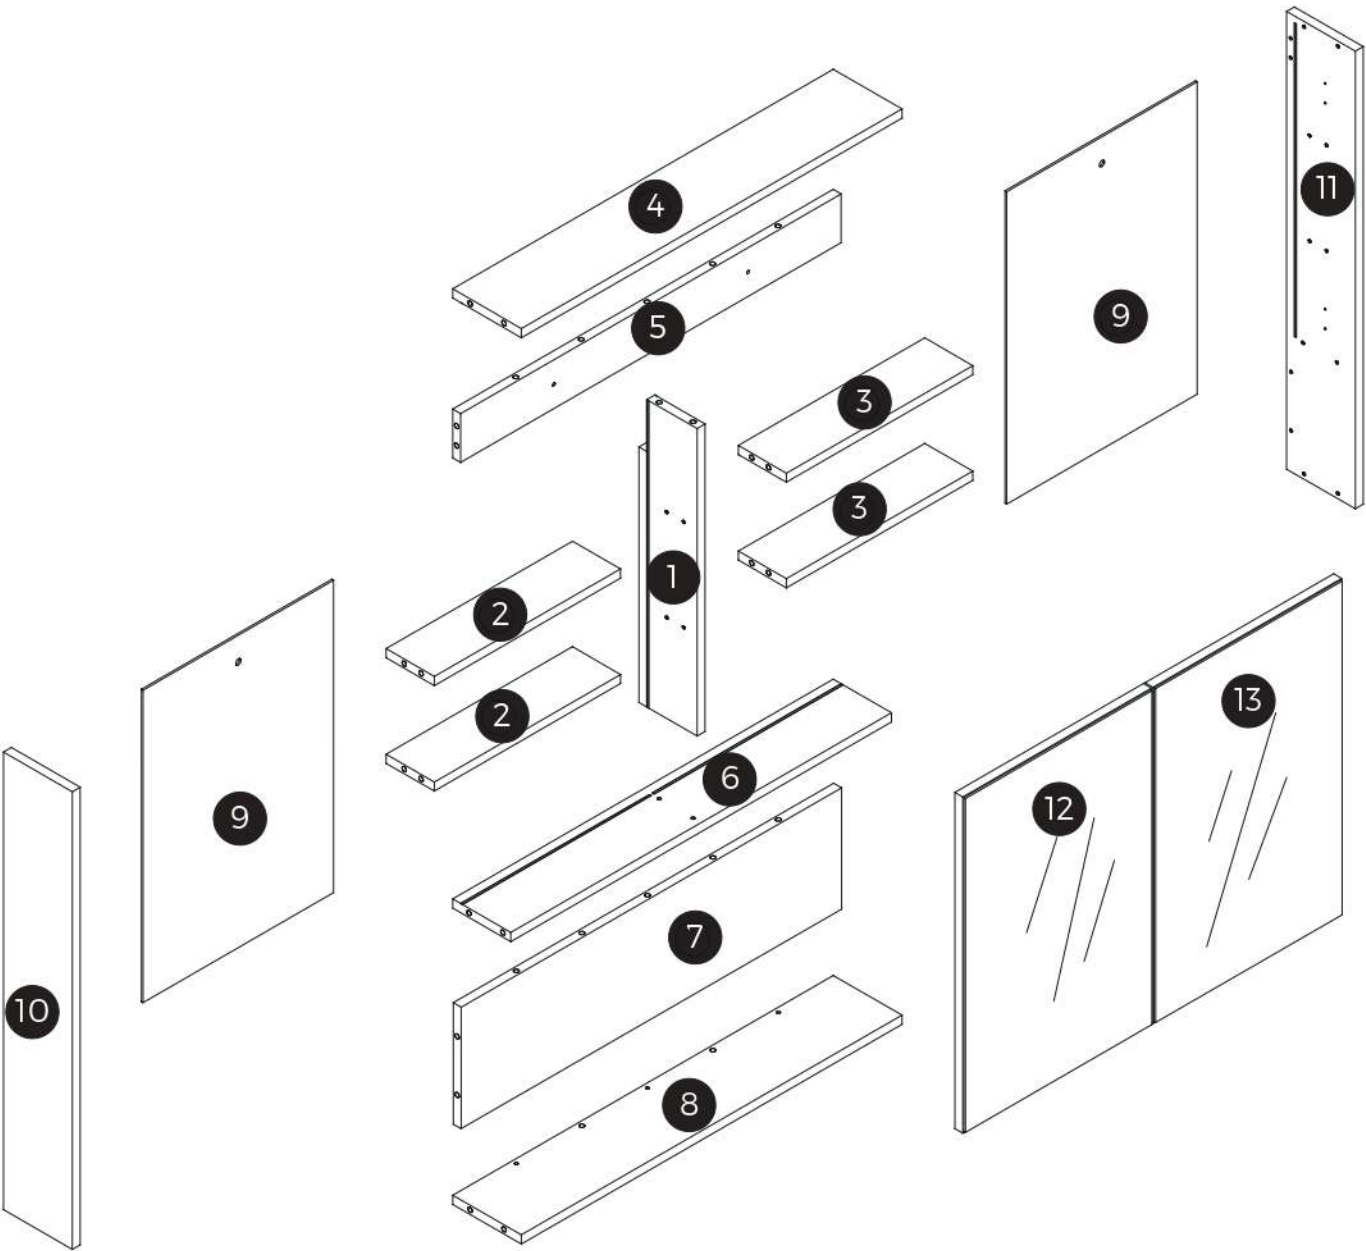 

STEP 1

 
Part A1

49pcs



Part F

6pcs

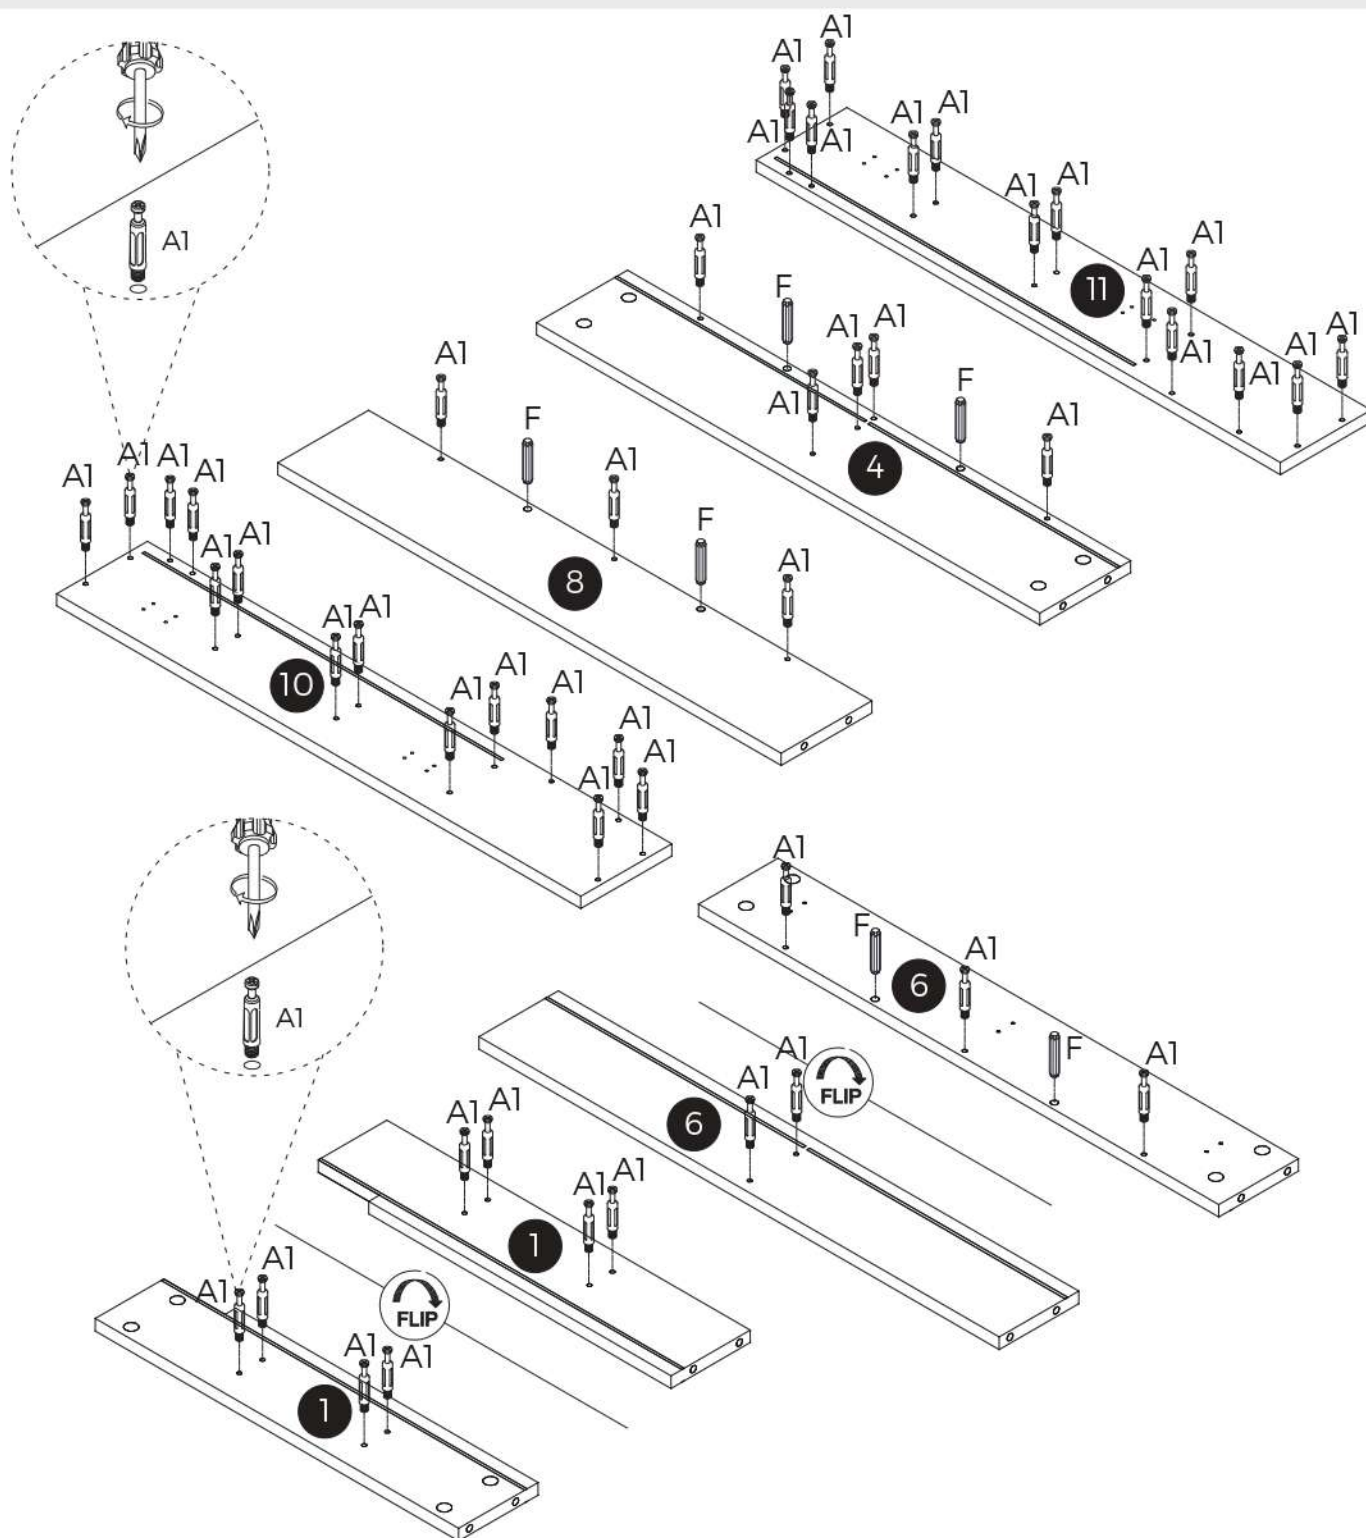

STEP 2

 
 
Part B

8pcs
M3.5x14mm



Part C



4pcs

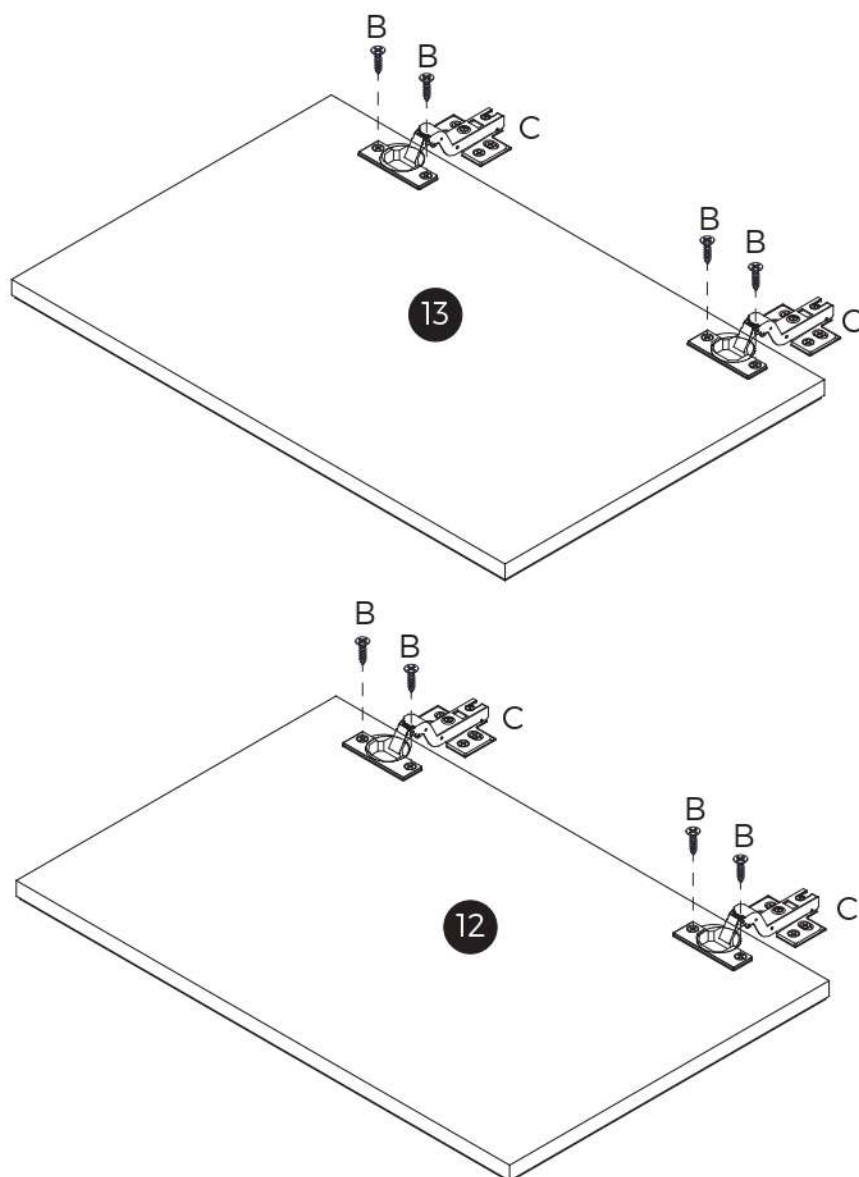

STEP 3

Part A2

 
 
11pcs

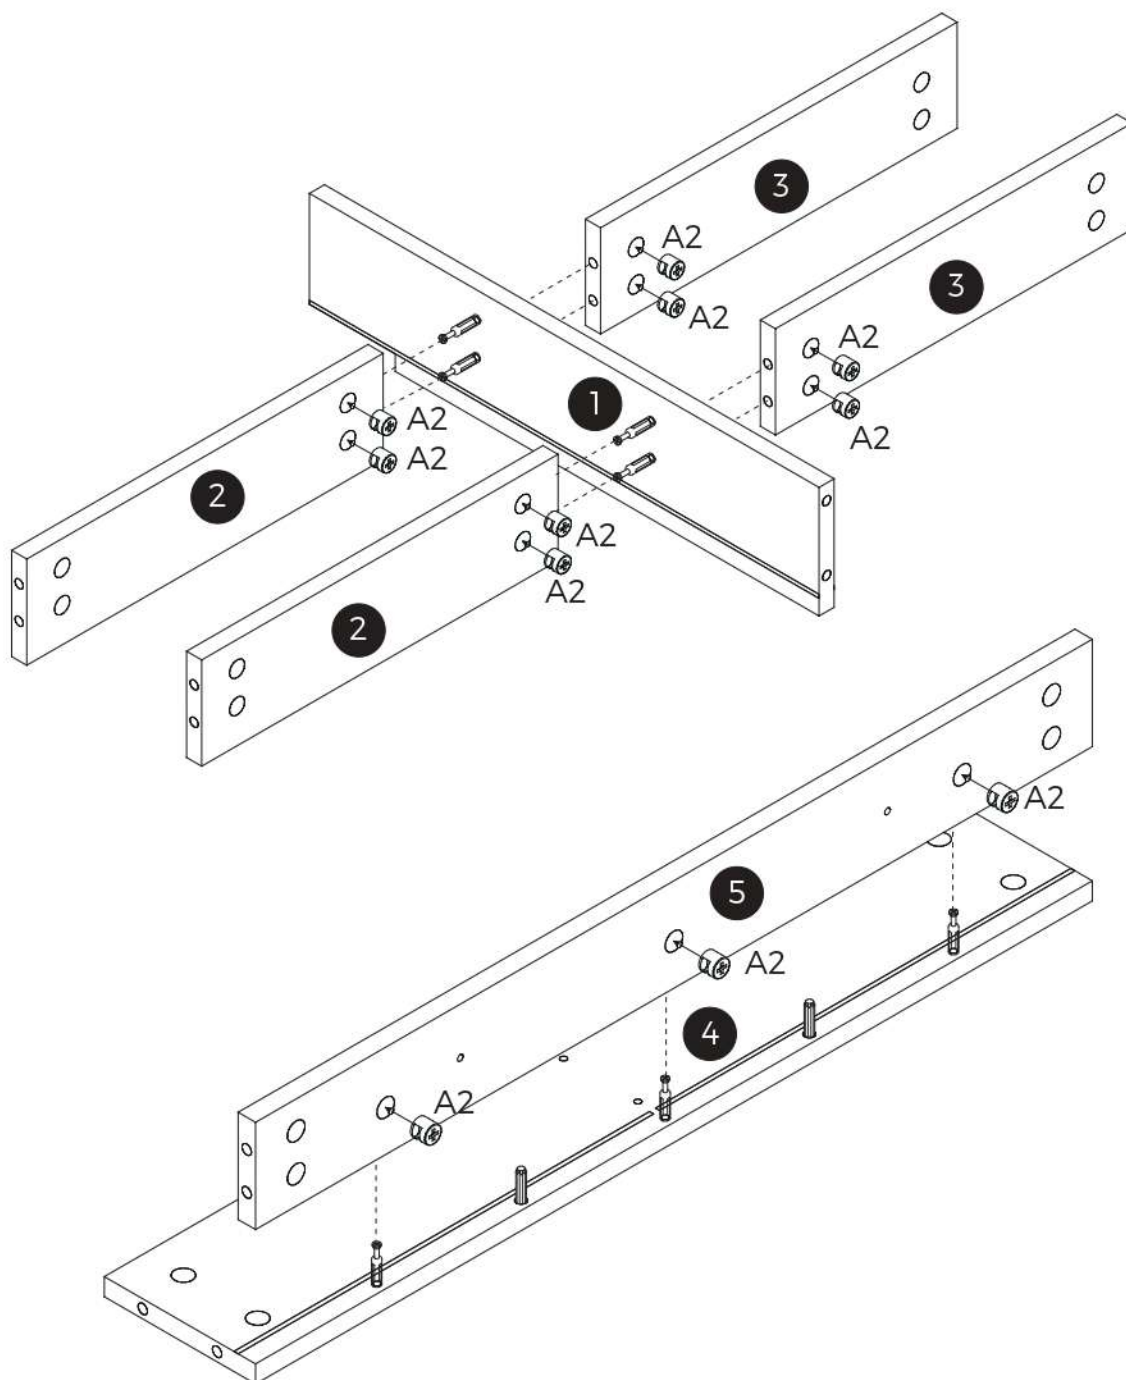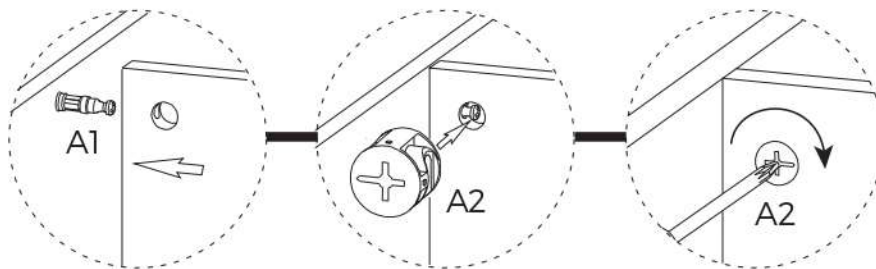

STEP 4

Part A2

  
4pcs

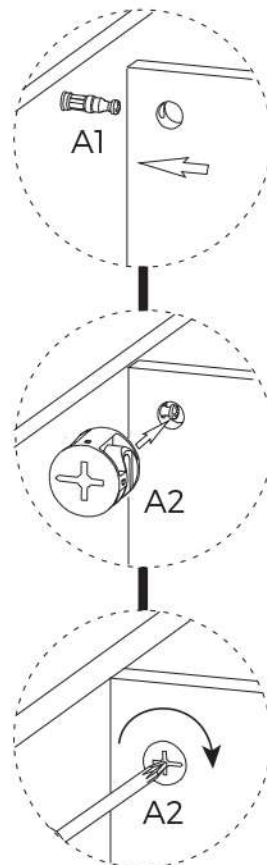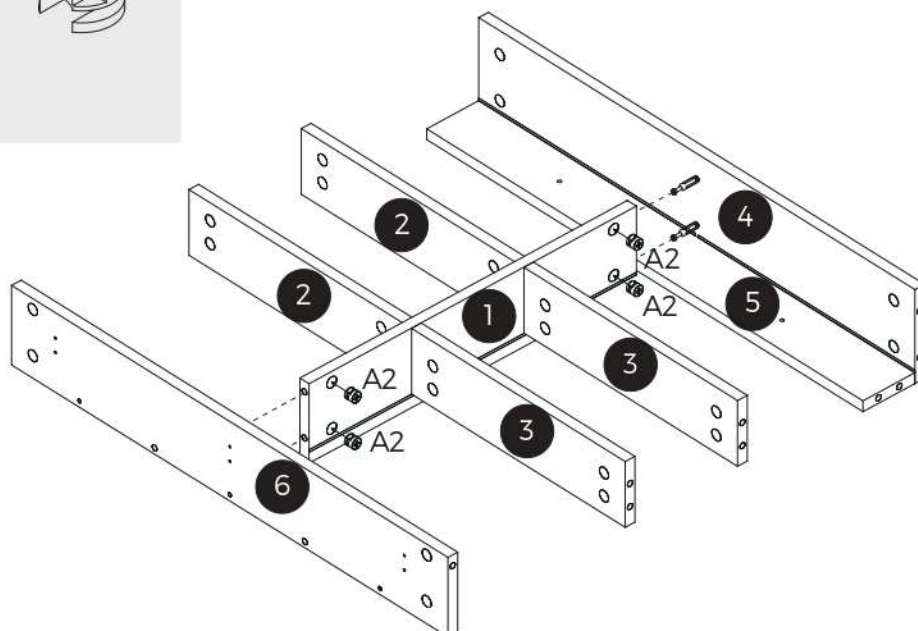

STEP 5

Part A2


 
6pcs

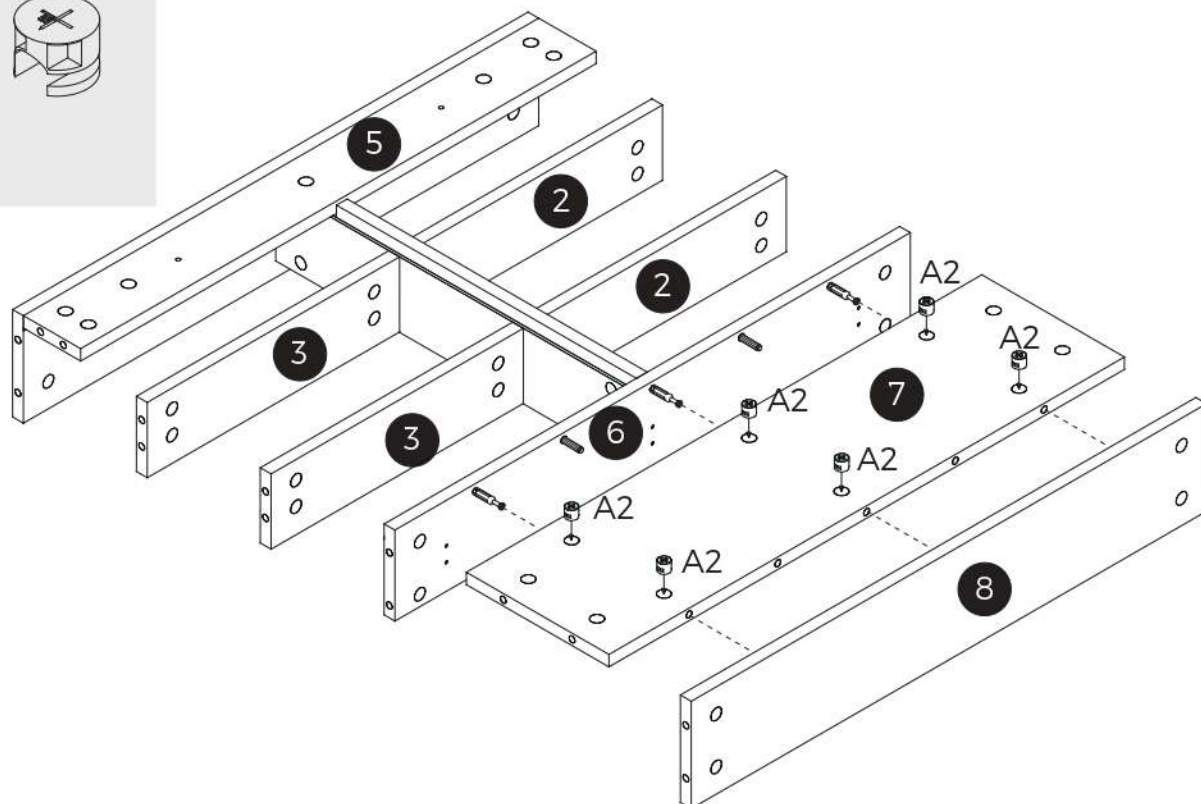

STEP 6

Part A2

  28pcs

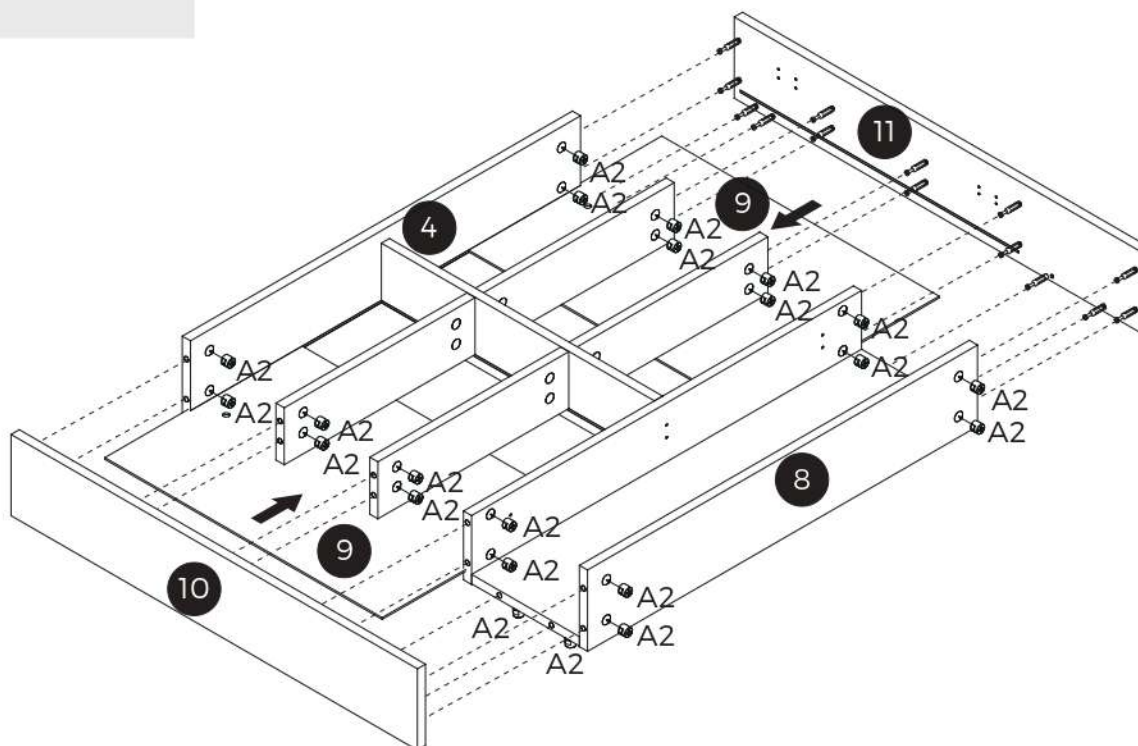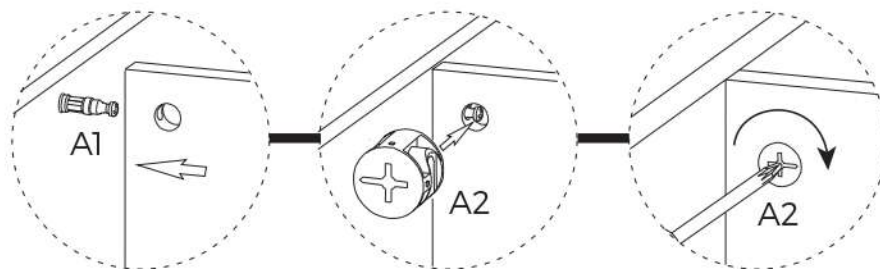

STEP 7

 
 
 
Part J

3 sets



Part E

1 set

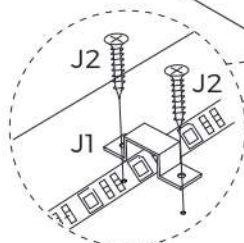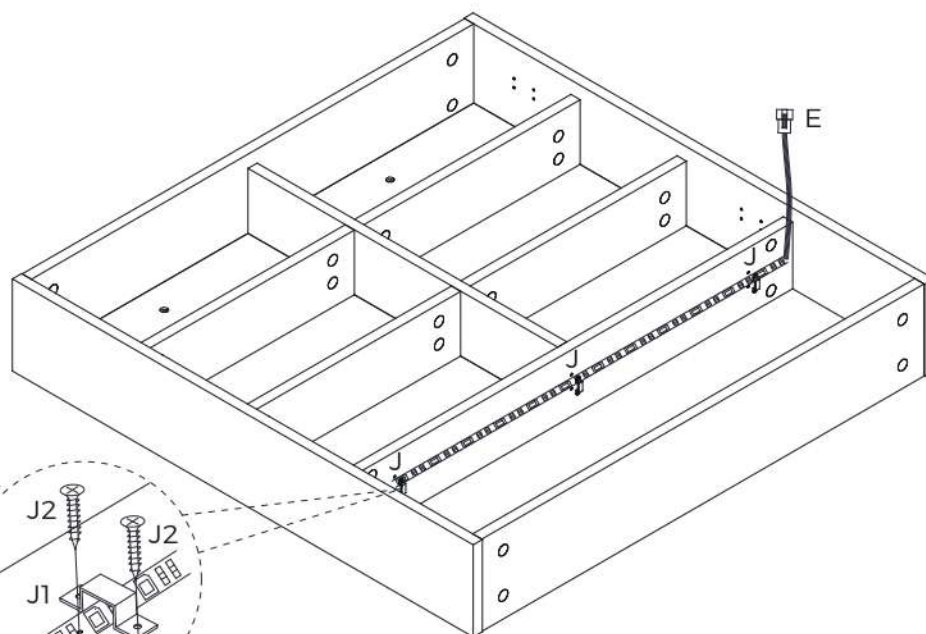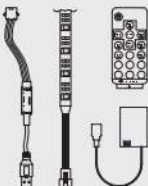

STEP 8

 
Part D

2 sets





OPTIONAL •

Do this step only if you wish to secure the product to a wall. It is highly recommended that you do so for safety reasons.

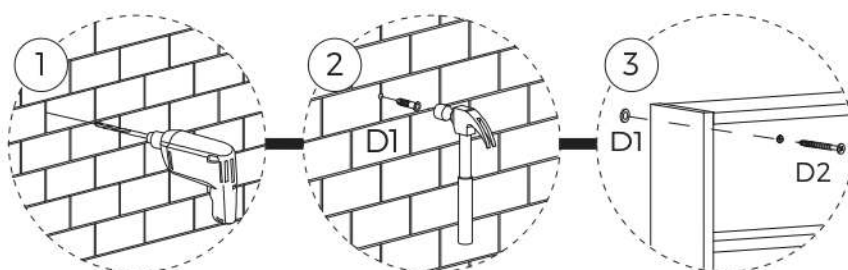

Pre-drill holes in the wall

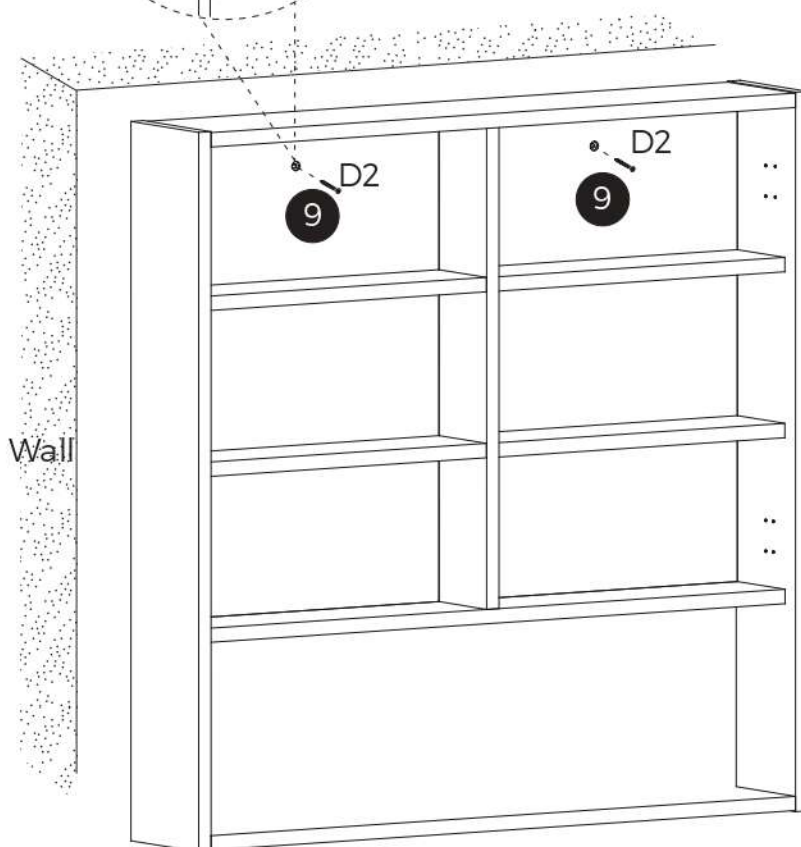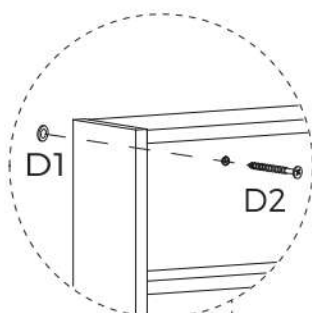  


STEP 9

Part B


16pcs

 M3.5x14mm

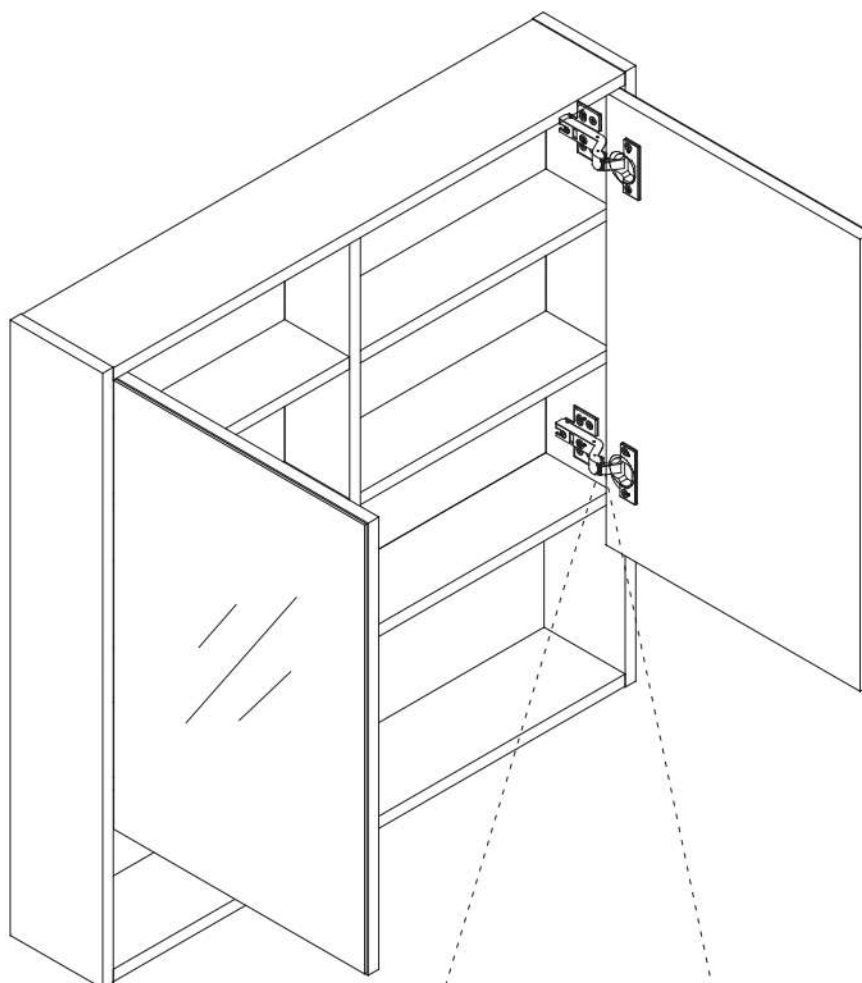

x4

 Assemble 4 sets

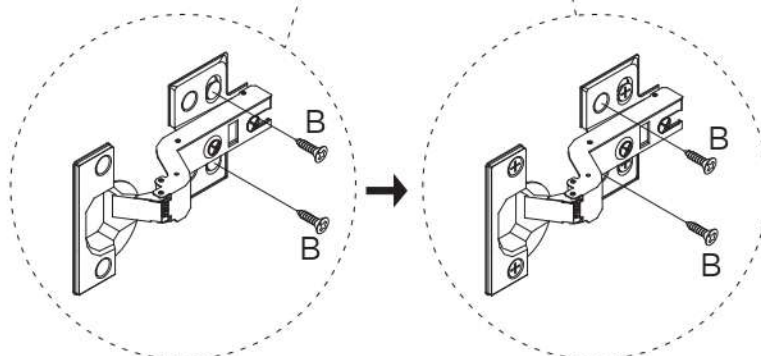


Firstly, use two screws B to secure the hinge to the unit and adjust the angle accordingly.

Once the angle is set, use two other screws B to secure the hinge properly.


LED Lights Troubleshooting

If the LED lights are not working properly, please check the following:

 1. Check the connectors and ensure that they are correctly connected.
2. Check the remote control and make sure the plastic film is removed before use.
3. Ensure that the remote control is within working range of the receiver and that the transmission signal is not obstructed.

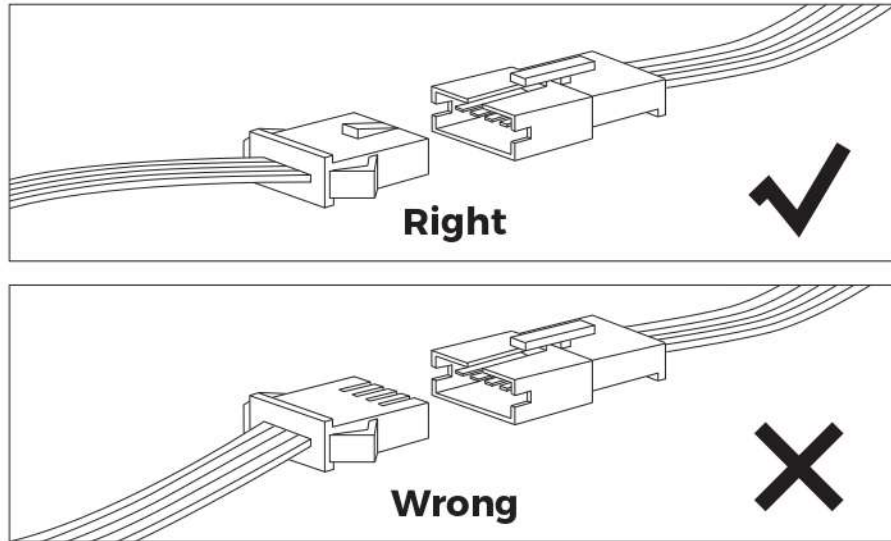

 Ensure the facing of the connectors are correct before connecting them.

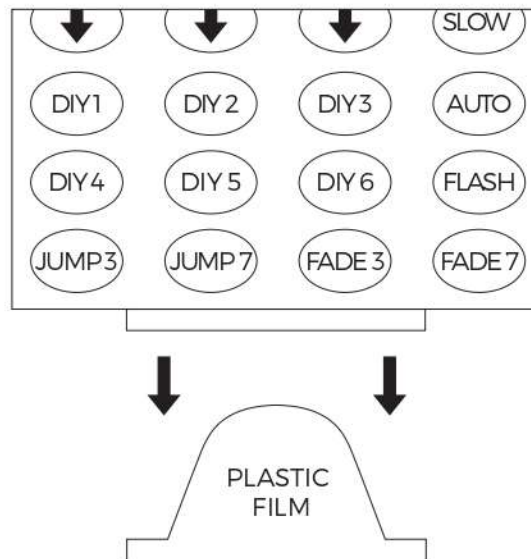

Remove the plastic film from the remote control.

Remote Control Operating Instructions

SPECIFICATIONS

Working temperature: -20°C to 60°C

Product dimensions: 62mm(L) x 35mm(w) x 23mm(H)

Net weight: 50g

Output: Three CMOS drain-open output

Maximum load current: 2A per colour

Supply voltage: DC 12V

REMOTE CONTROL FUNCTIONS

The function of each button on the remote control are as shown in the table below:

Brightness + (speed up)	Brightness + (speed down)	Off	On
Static red	Static green	Static blue	Static white
Static orange	Static pea green	Static dark blue	7-colour jump change
Static dark yellow	Static cyan	Static brown	All fade out and fade in
Static yellow	Static light blue	Static pink	7-colour fade change
Static straw yellow	Static sky blue	Static purple	3-base colour jump

 
CIRCUIT DIAGRAM



WARNINGS

1. The supply voltage of the product is DC 12V. Never connect to DC 24V or AC 220V.
2. Never connect two wires directly to prevent a short circuit.
3. Ensure that the wire connections are connected correctly as per the circuit diagram above.
4. This product has a one-year warranty against manufacturing defects but not for damages due to incorrect use or current overload.

WARNING

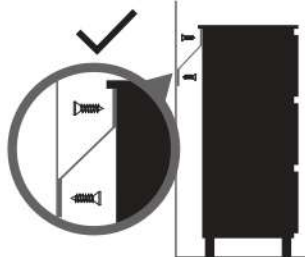

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

**NEVER put a TV
on this furniture**

