


# 7 DRAWER CHEST

## ASSEMBLY INSTRUCTIONS

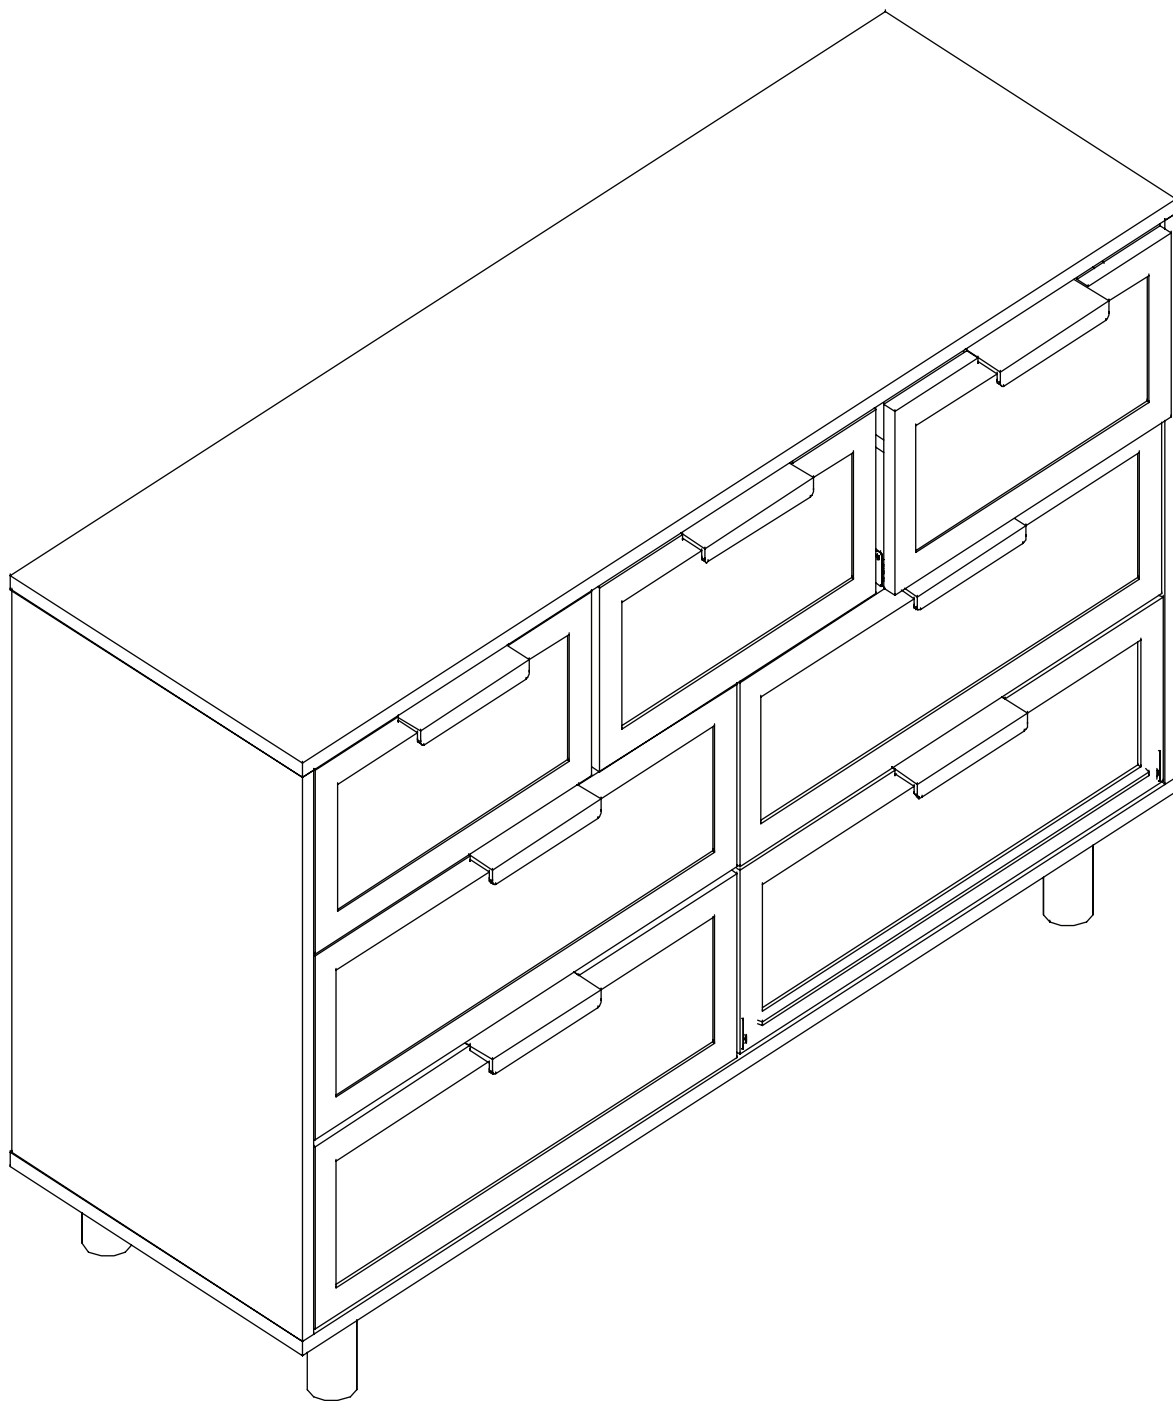

# TIPS BEFORE YOU START

---



1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

## CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

## ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 2 x adult required
- ✓ 2m x 2m assembly space required
- ✓ 1.5 hour assembly time approx.

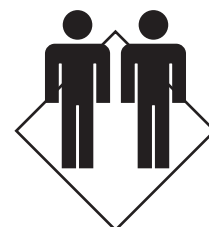

# USING CAM LOCK AND QUICKFIT


## QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

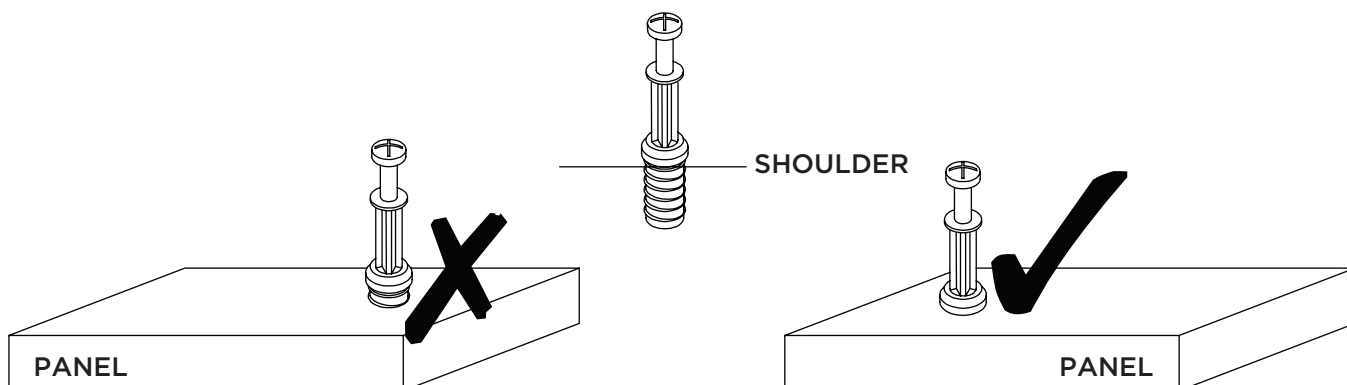


## CAM LOCK


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

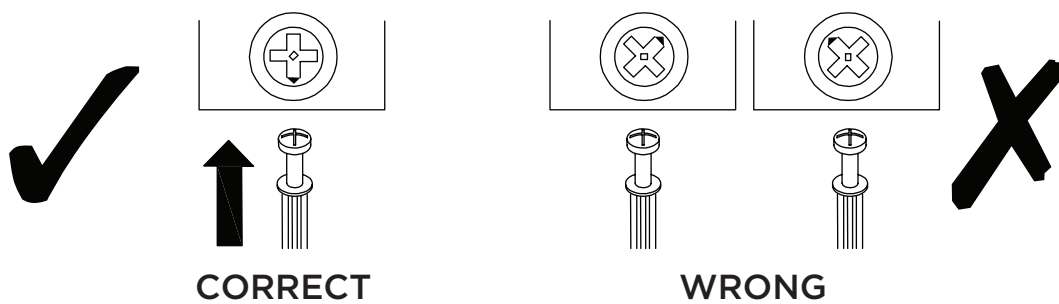

Quickfit head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.

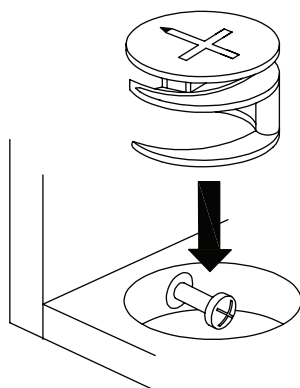


Turn cam lock clockwise to tighten.

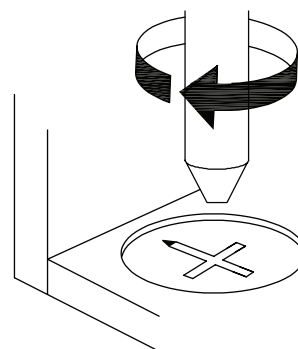

# HARDWARE LIST

---

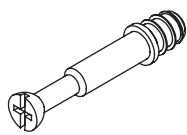


52 x A  
Quickfit Screw



52 x B  
Cam Lock




14 x C  
Wooden Dowel



7 x D  
Handle



14 x E  
Screw

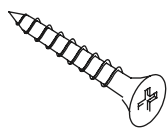

50 x F  
Screw




8 x G  
Wedge




8 x H  
Screw



2 x I  
Screw




2 x J  
Wall Bracket




2 x K  
Wall Plug




52 x L  
Screw

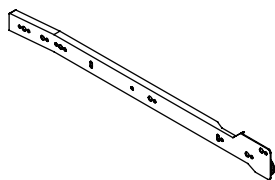


7 x M  
Outer Drawer Runner

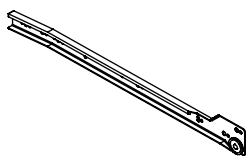

7 x N  
Outer Drawer Runner

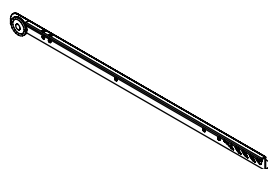


7 x O  
Inner Drawer Runner

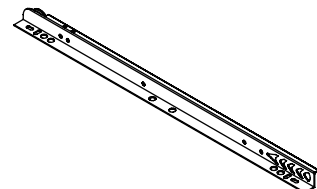


7 x P  
Inner Drawer Runner

# PARTS LIST


---

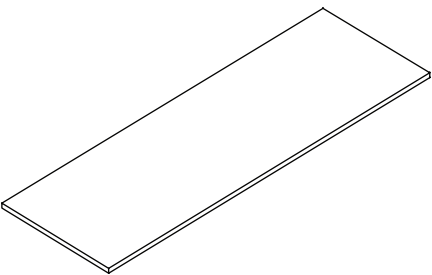


**1**  
1 PC

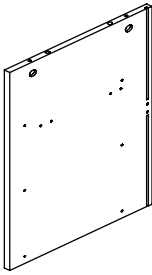


**2**  
1 PC

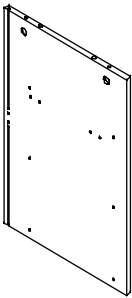


**3**  
1 PC




**4**  
2 PCS




**5**  
1 PC

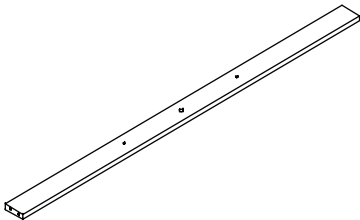


**6**  
2 PCS

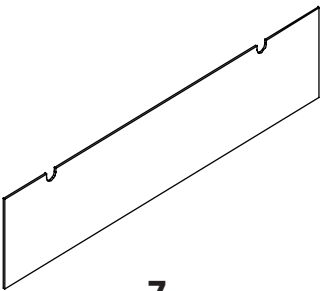


**7**  
1 PC

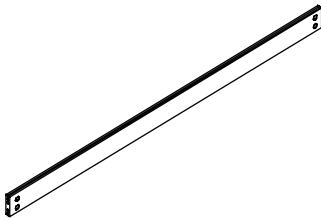

**8**  
1 PC

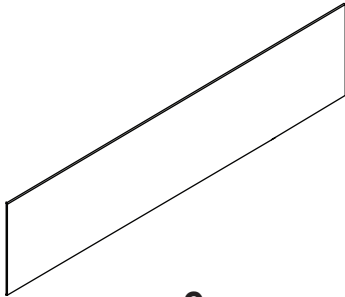


**9**  
1 PC

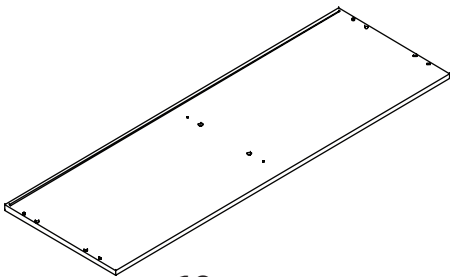

**10**  
1 PC




**11**  
4 PCS

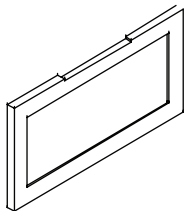


**12**  
3 PCS

# PARTS LIST


---

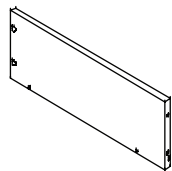


**13**  
7 PCS

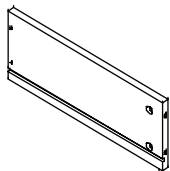


**14**  
7 PCS

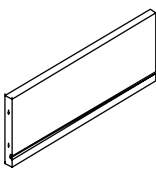


**15**  
3 PCS

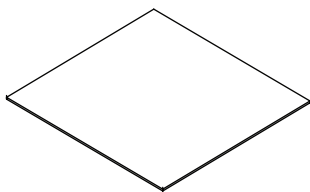


**16**  
3 PCS

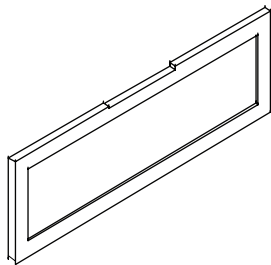


**17**  
4 PCS

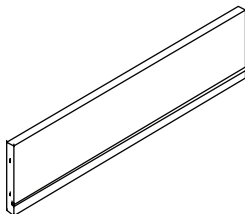

**18**  
4 PCS

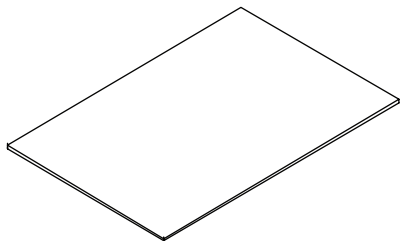

**19**  
4 PCS

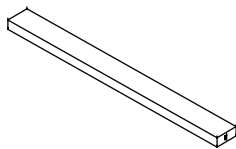

**20**  
4 PCS

# ASSEMBLY INSTRUCTIONS

## STEP 1


Fix outer drawer runners (M) to part 2 using screws (L), as shown.



L x 6



M x 3

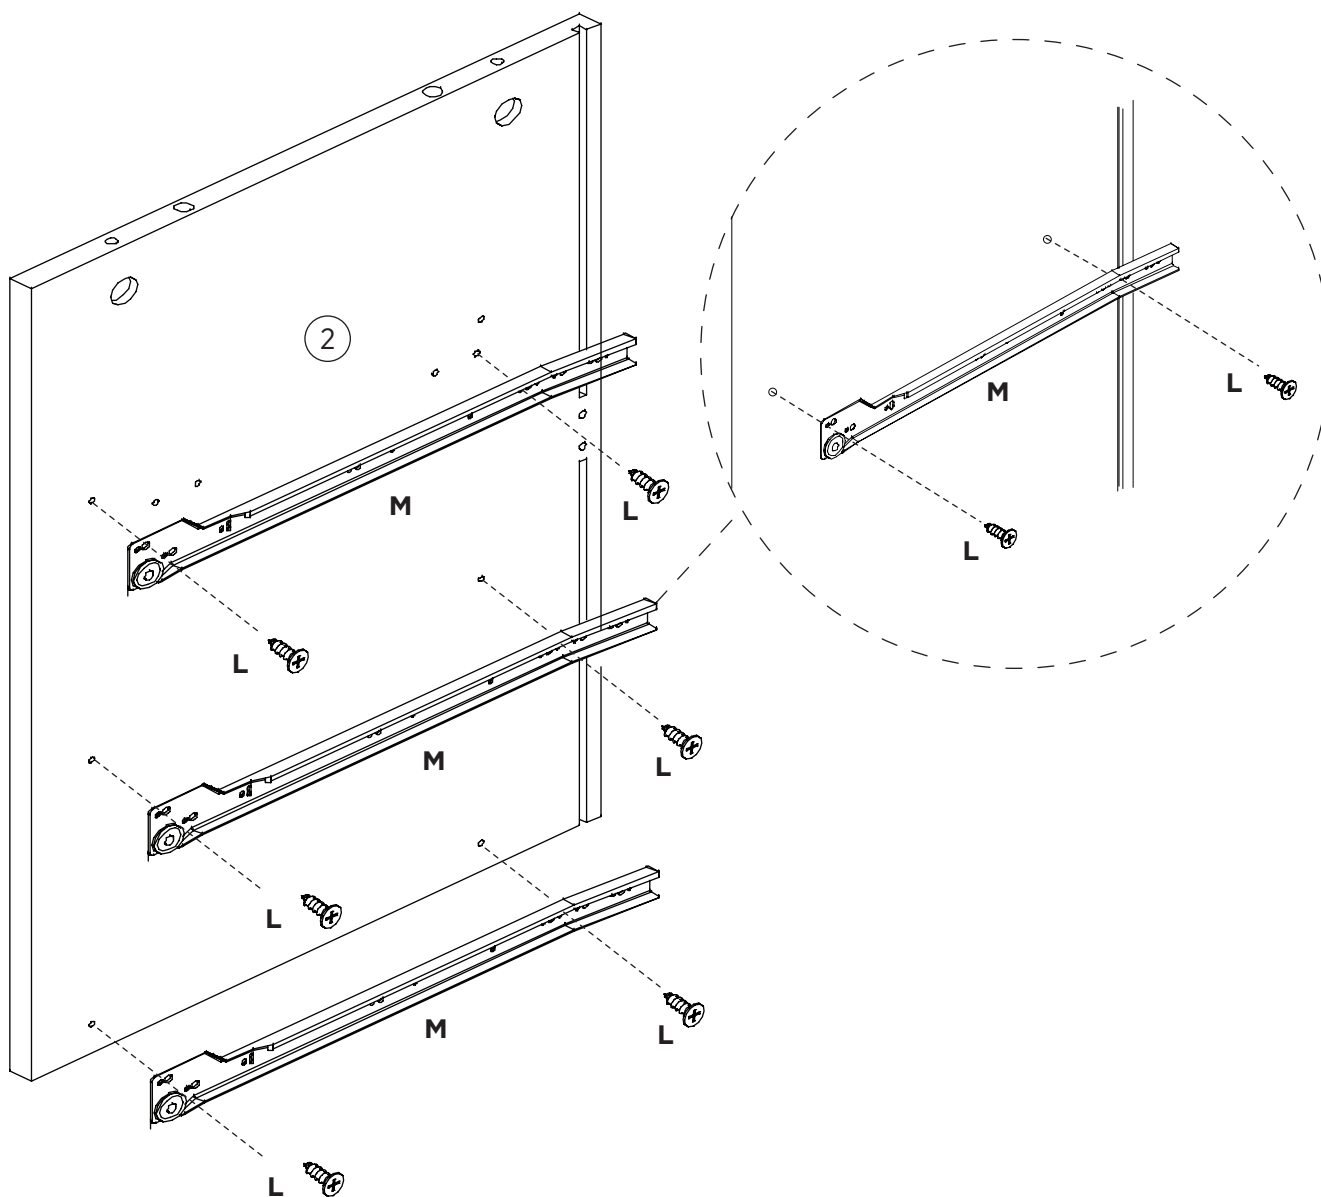

# ASSEMBLY INSTRUCTIONS

## STEP 2


Fix outer drawer runners (N) to part 3 using screws (L), as shown.



L x 6



N x 3

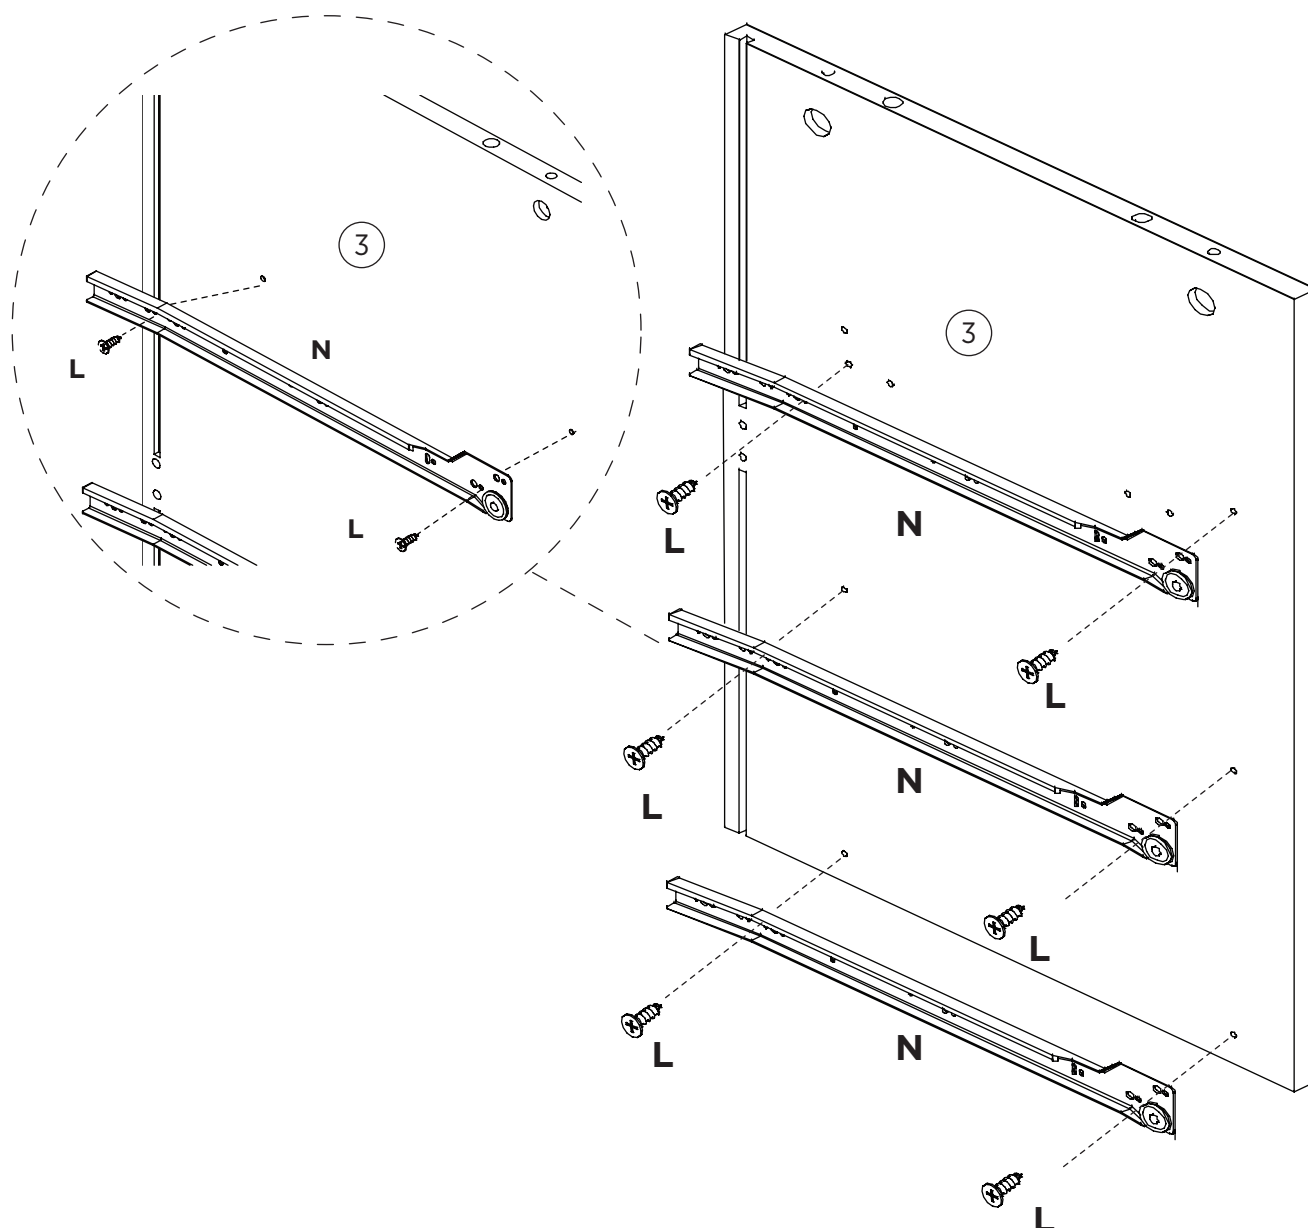



# ASSEMBLY INSTRUCTIONS

## STEP 3

Fix outer drawer runners (N and M) to part 5 using screws (L), as shown.




L x 8



M x 2



N x 2

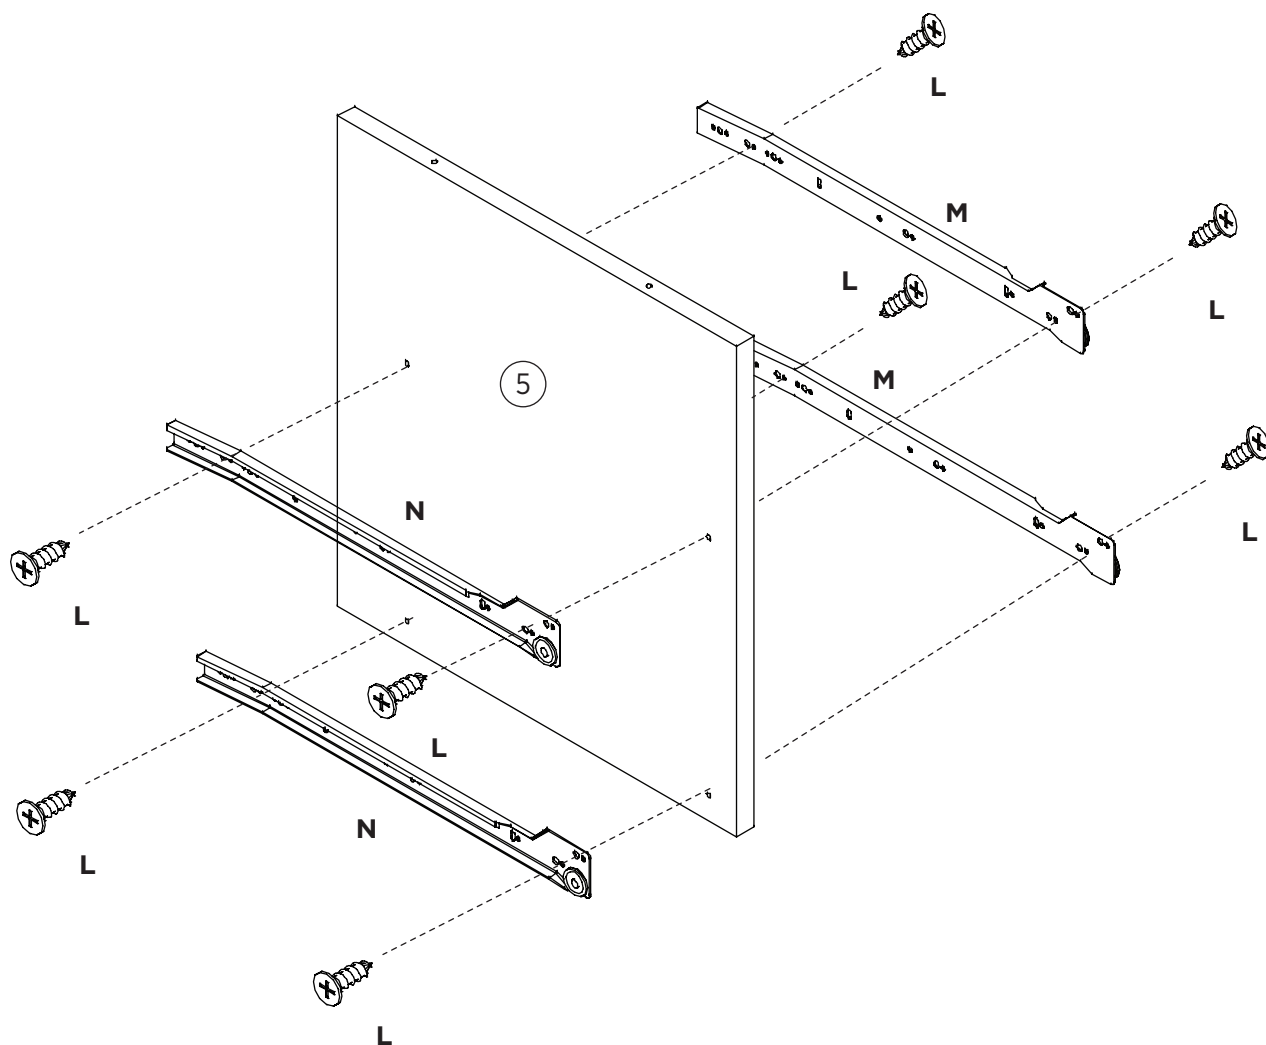

# ASSEMBLY INSTRUCTIONS

## STEP 4

Fix outer drawer runners (N and M) to part 4 using screws (L), as shown.




L x 8



M x 2



N x 2


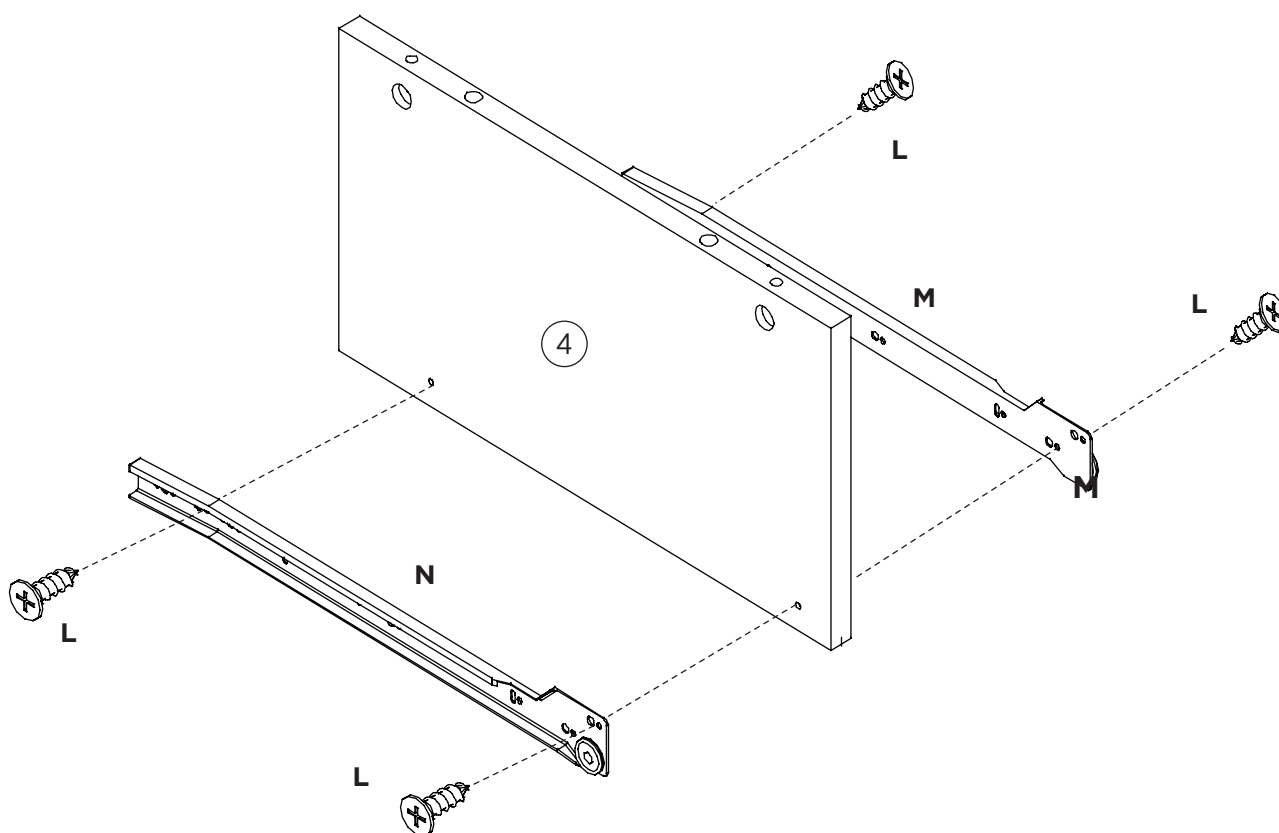


# x2

# ASSEMBLY INSTRUCTIONS

## STEP 5

Attach parts 4 and 5 to parts 6 using screws (F), as shown.

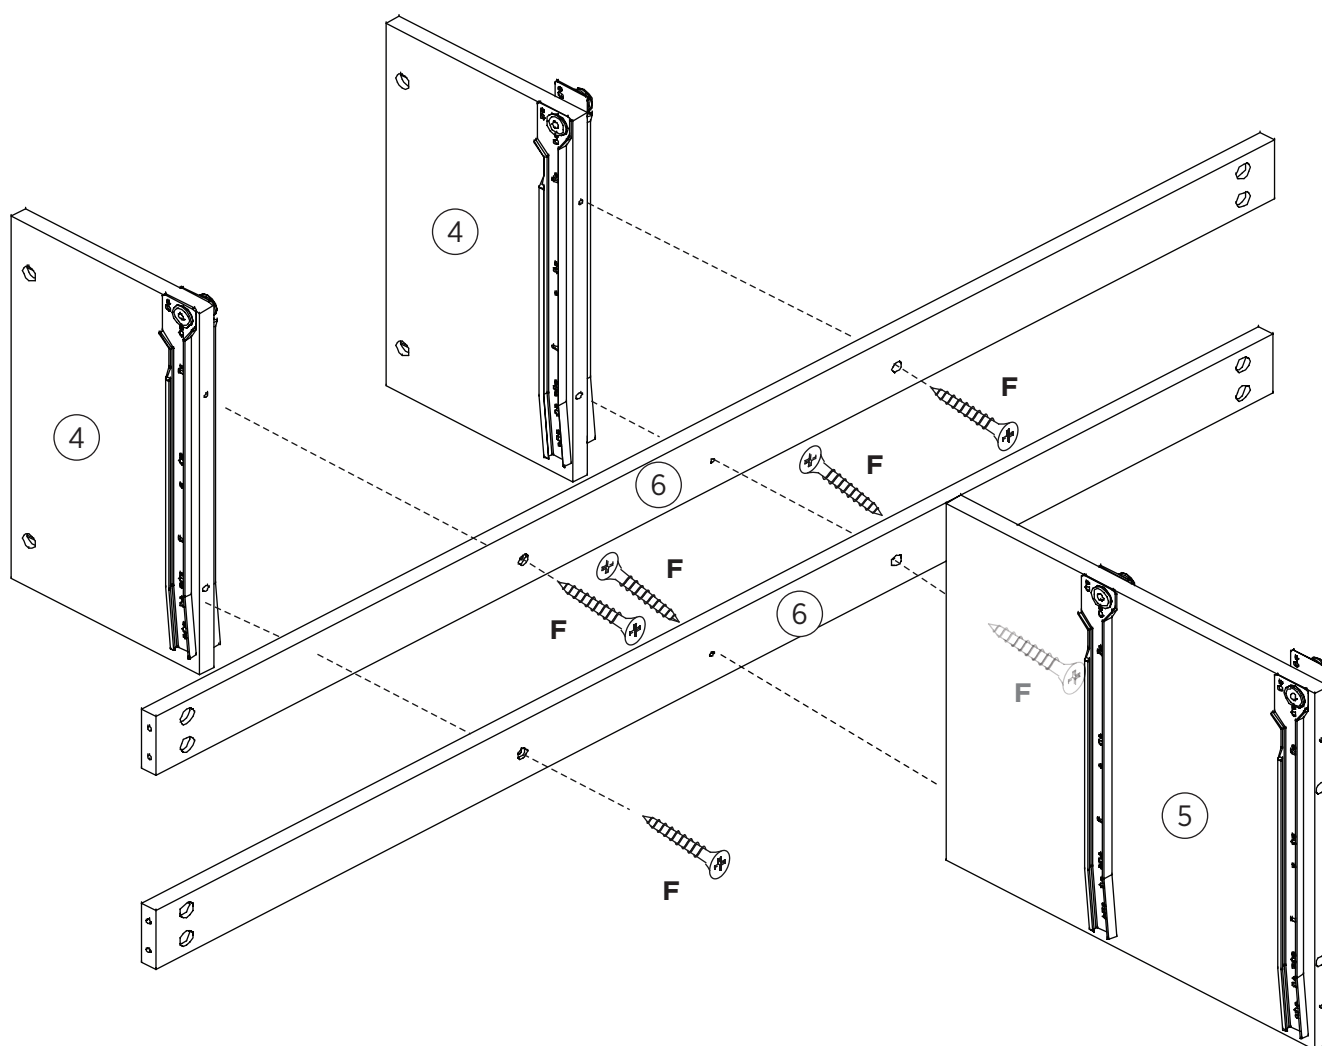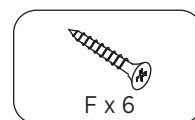



# ASSEMBLY INSTRUCTIONS

## STEP 6

Insert quickfit screws (A) and camlocks (B) to parts 6.

Attach parts 6 to parts 2 and 3, as shown.

Turn cam locks clockwise to tighten.

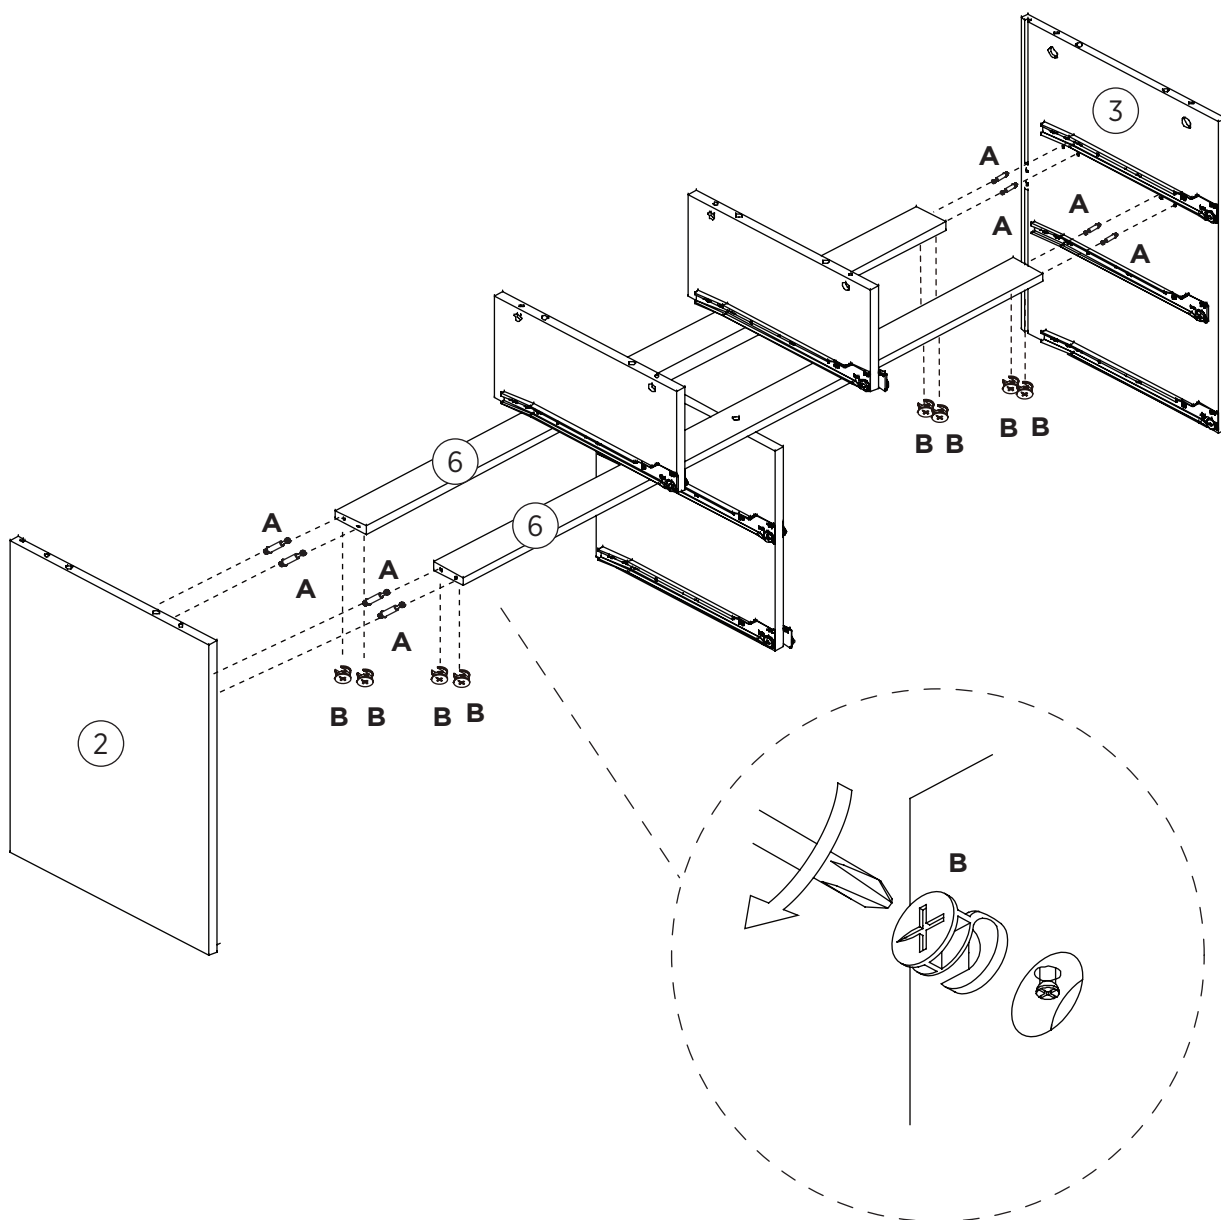



# ASSEMBLY INSTRUCTIONS

## STEP 7

Insert quickfit screws (A) and camlocks (B) to part 8.

Attach part 8 to parts 2 and 3, as shown.

Turn cam locks clockwise to tighten.

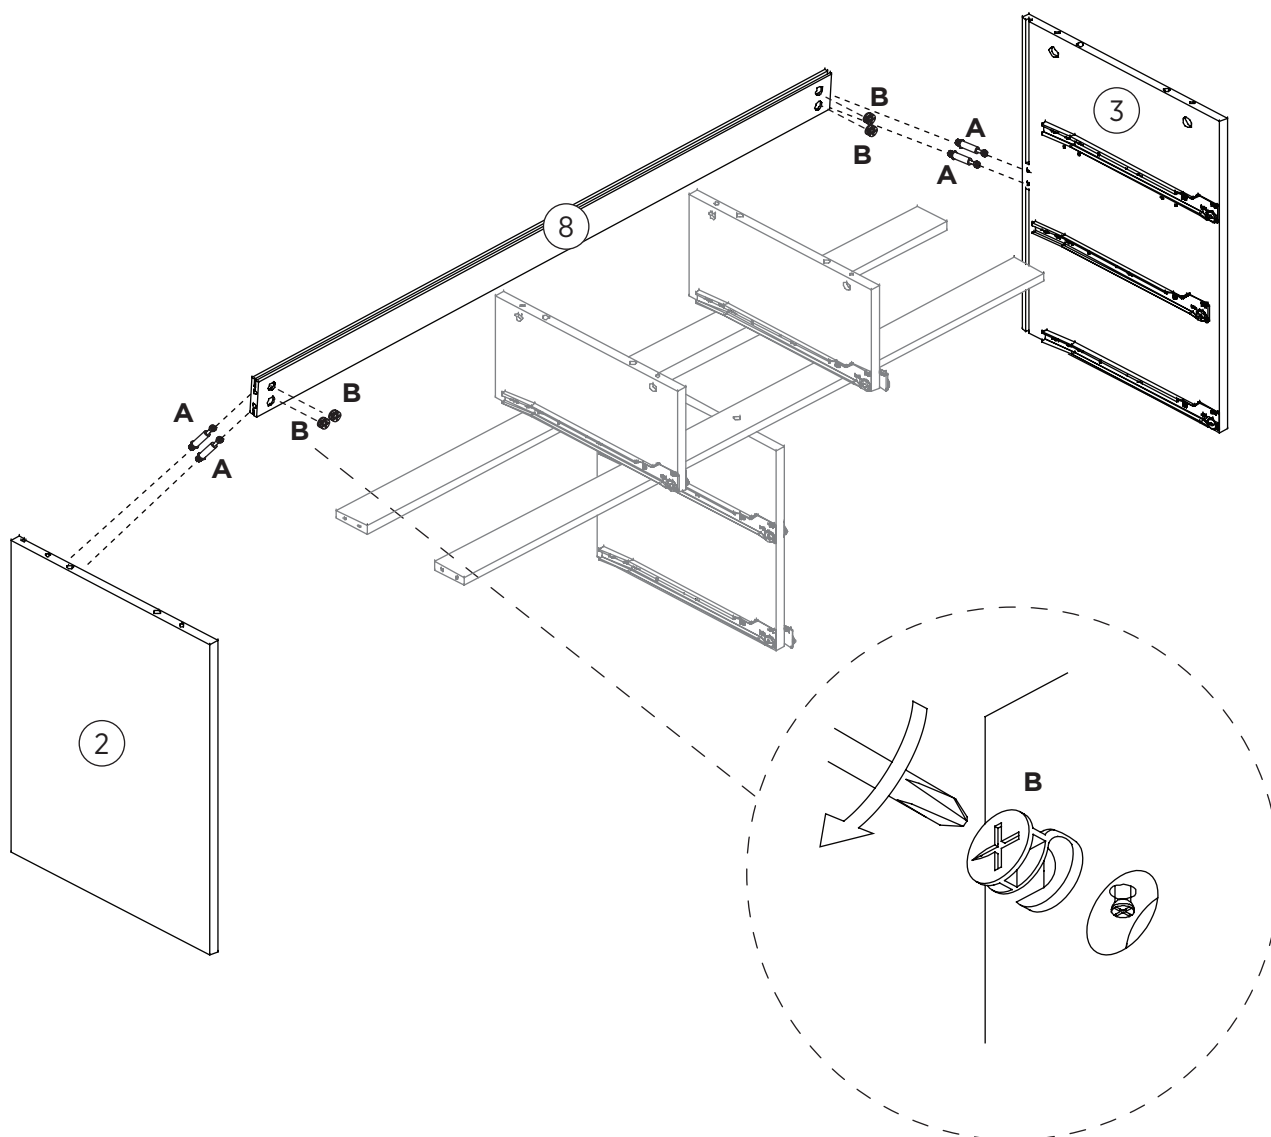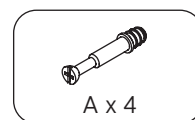

# ASSEMBLY INSTRUCTIONS

## STEP 8

Insert part 9 into grooves between parts 2, 3 and 8.

Insert wooden dowels (C) on parts 2 and 3


Attach part 10 to parts 2 and 3 using screws (F), as shown.



C x 6



F x 6

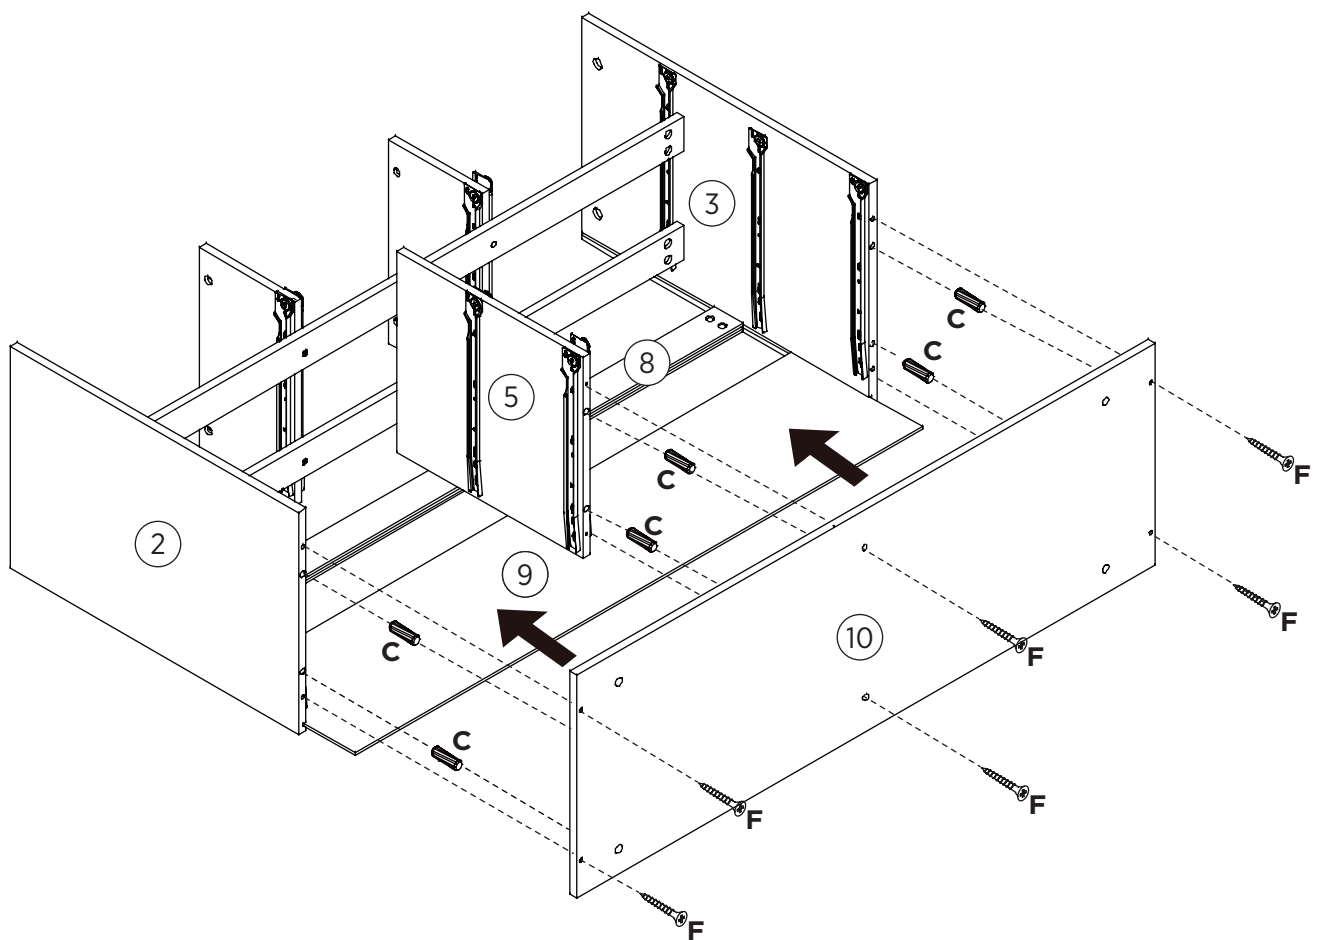

# ASSEMBLY INSTRUCTIONS

## STEP 9

Insert quickfit screws (A) and wooden dowels (C) to part 1.

Fix the wall bracket (J) to part 1 using screws (I), as shown.



A x 8




C x 8



I x 2



J x 2

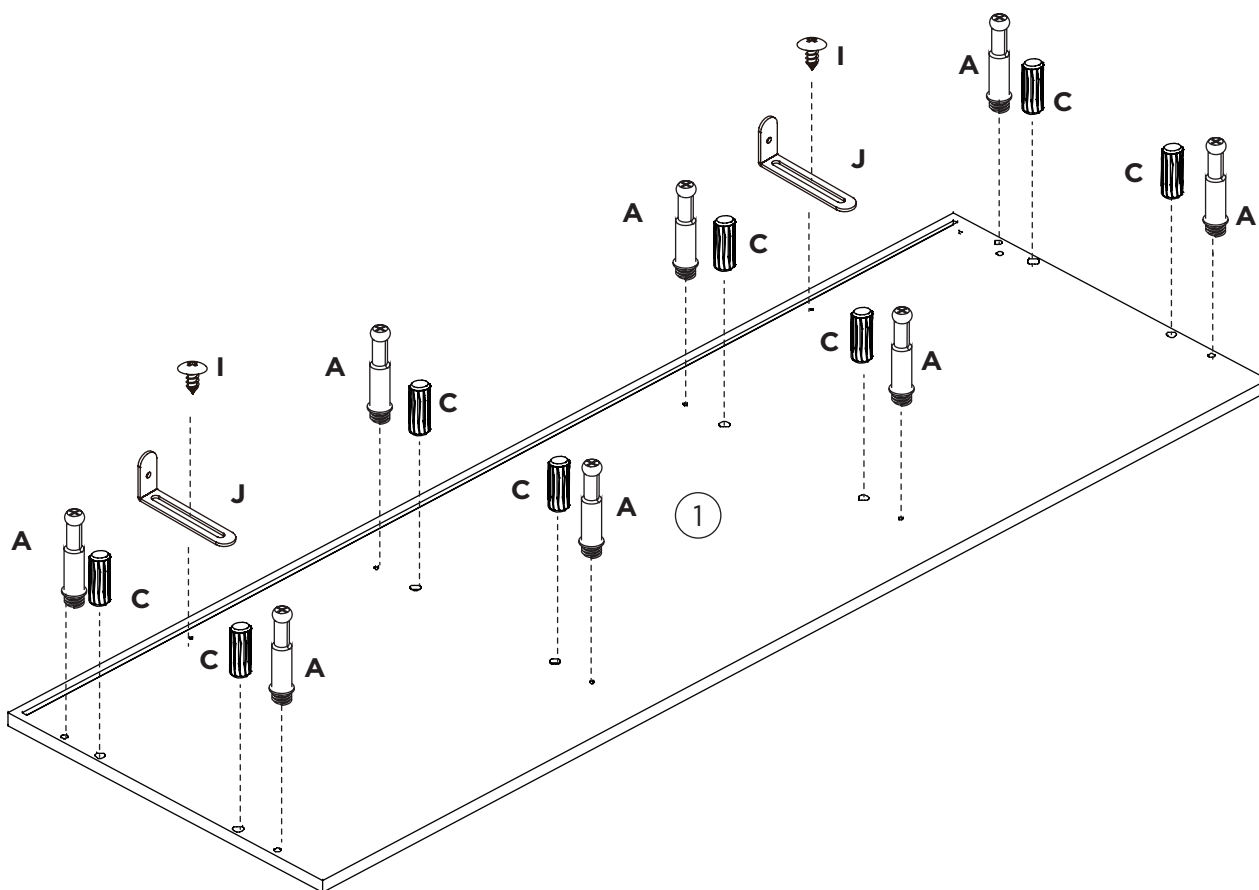


# ASSEMBLY INSTRUCTIONS

---

## STEP 10

Insert part 7 into grooves between parts 2, 3 and 8, as shown.

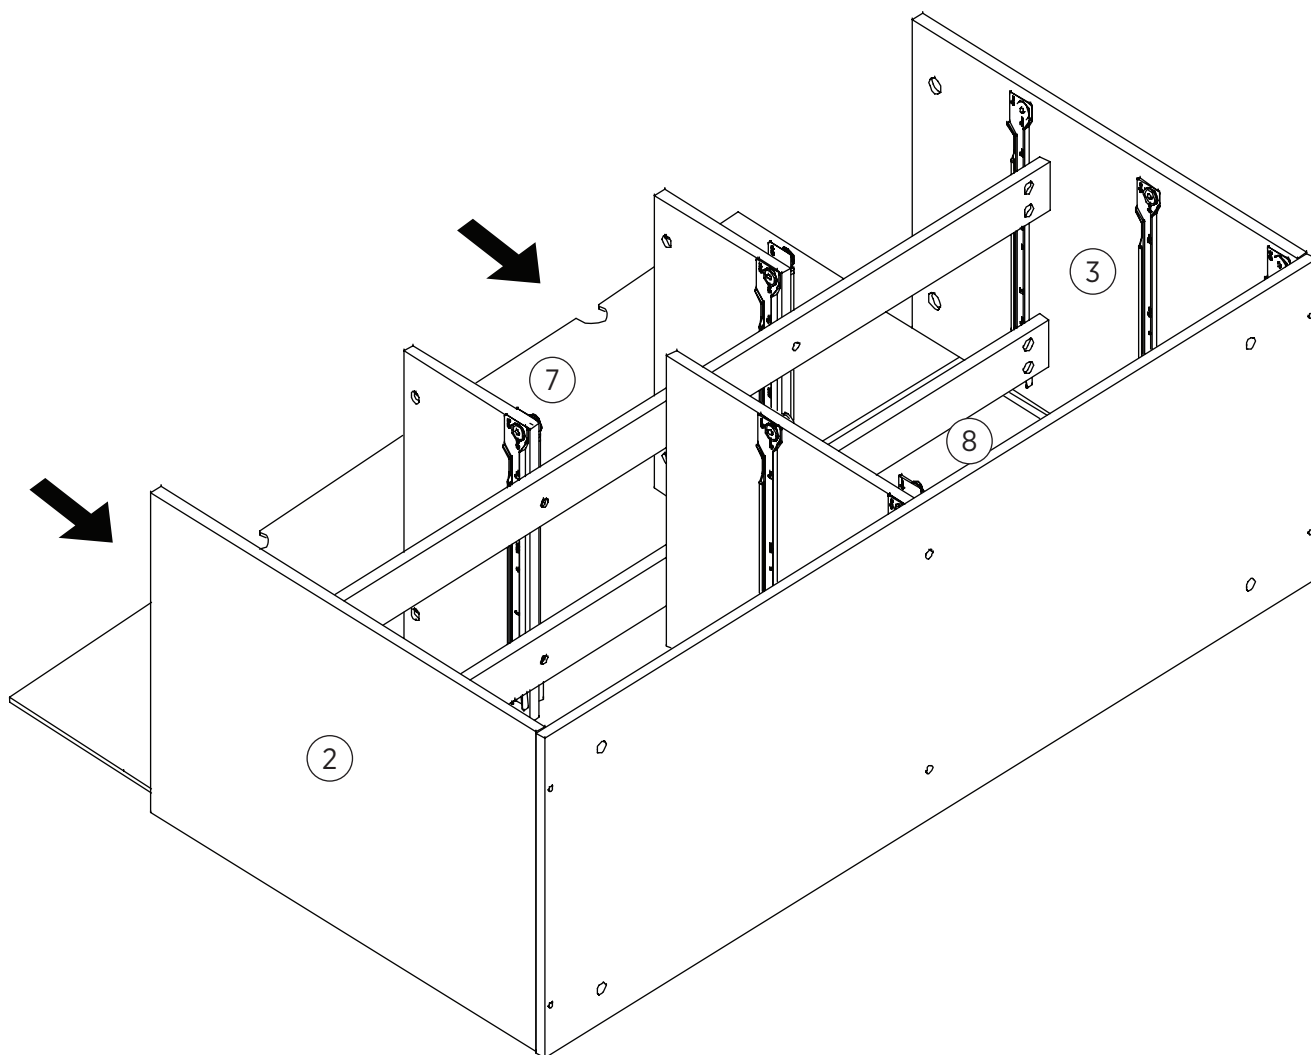



# ASSEMBLY INSTRUCTIONS


## STEP 11

Insert camlocks (B) to parts 2, 3 and 4.

Attach part 1 to parts 2, 3 and 4.

Screw parts 11 to part 10, as shown.



Turn cam locks clockwise to tighten.

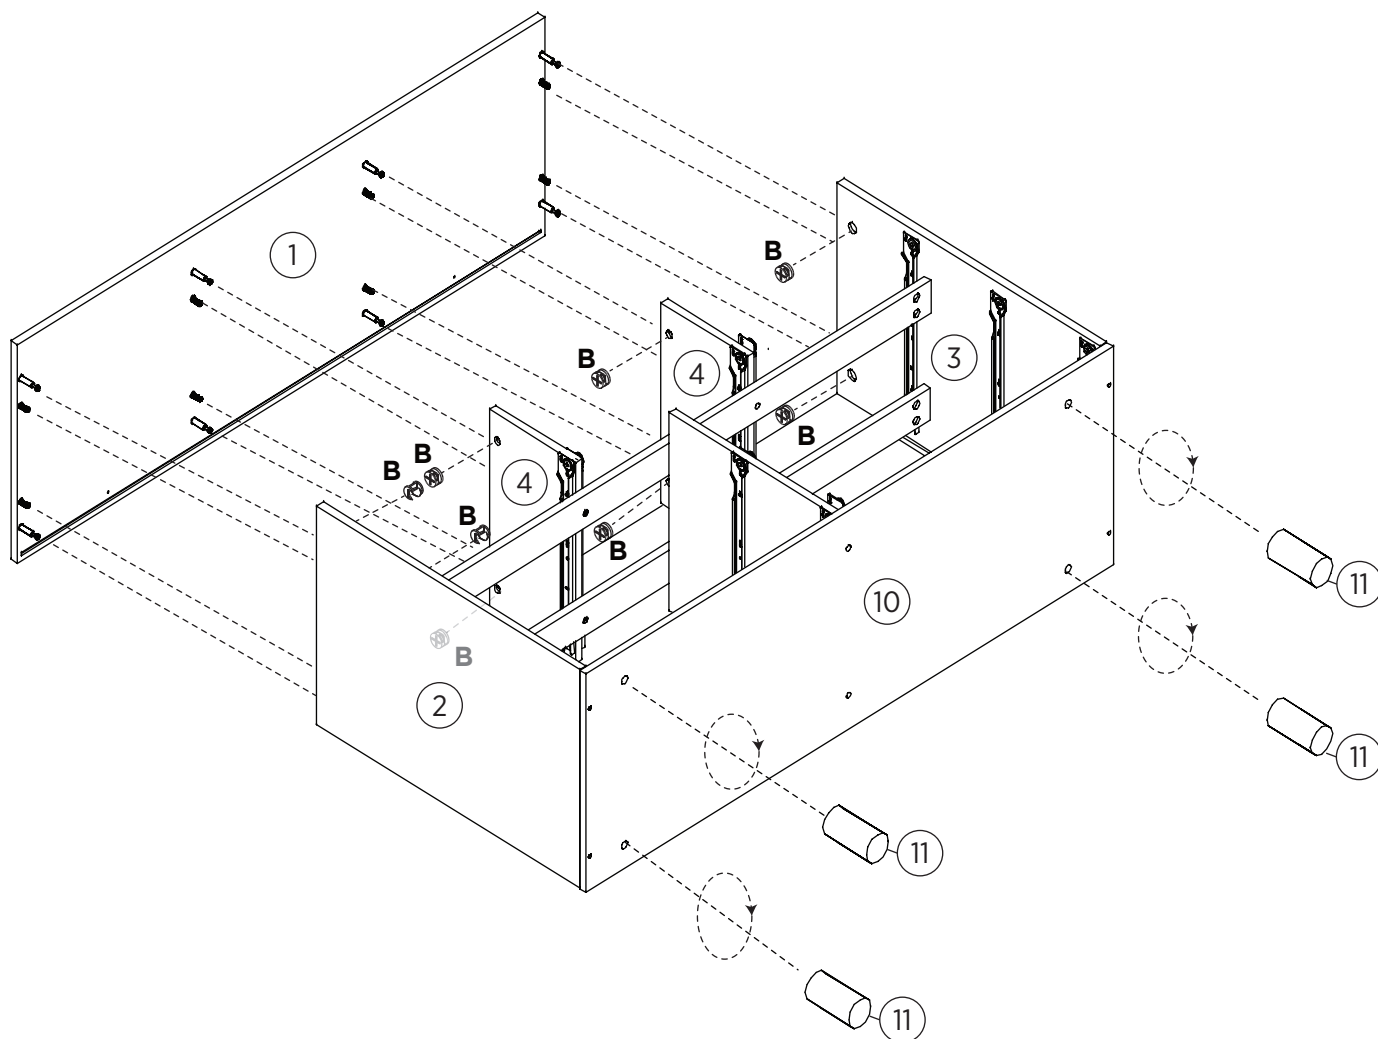

# ASSEMBLY INSTRUCTIONS

## STEP 12

Secure part 7 and 9 using wedges (G) and screws (H), as shown.

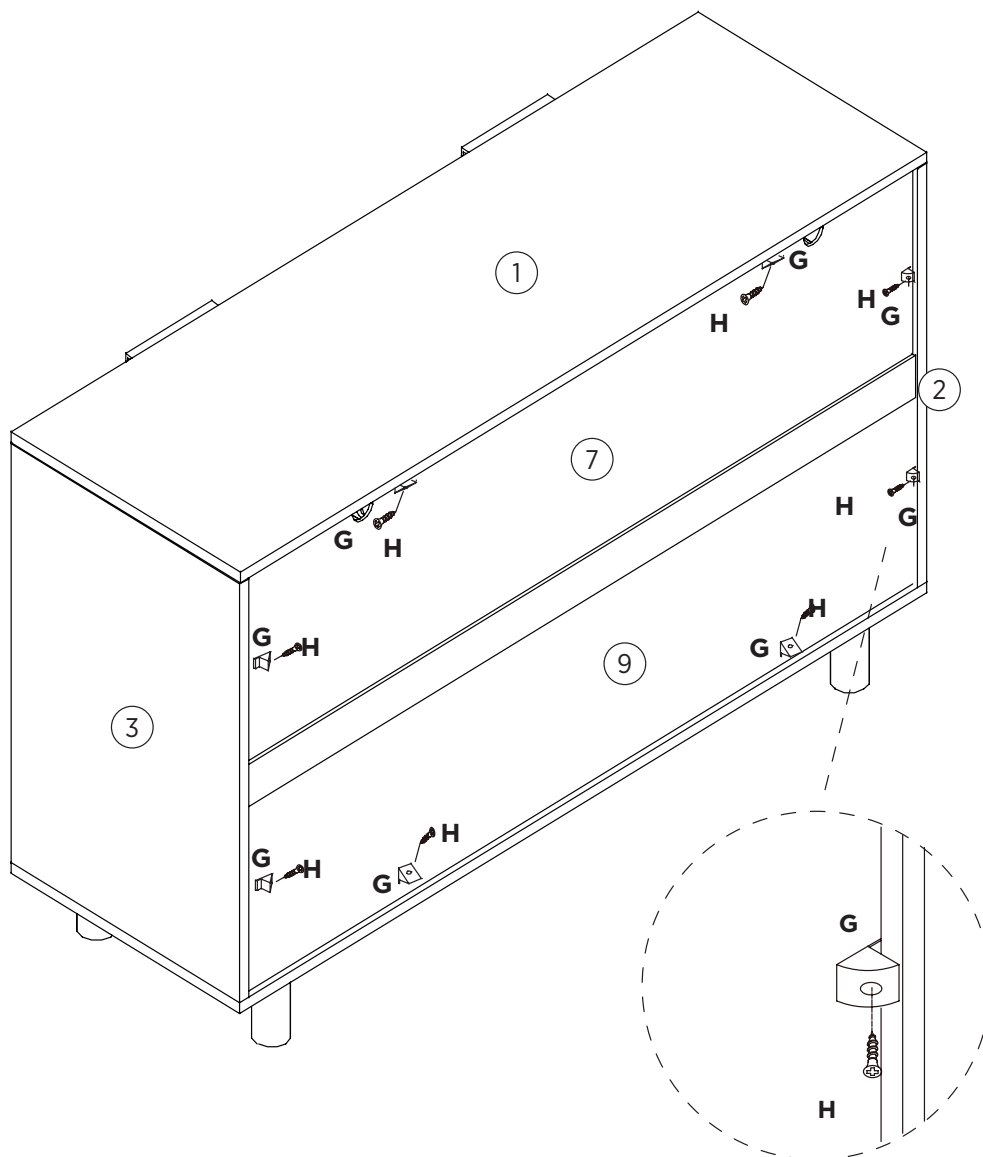

# ASSEMBLY INSTRUCTIONS




## STEP 13

**For extra stability, you must fix your chest to the wall using the additional hardware (K) and (F), as shown.**

**Screw (F) is fixed through the wall bracket (J) and into the wall plug (K).**

**Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.**

**Please consider the wall mounting & fixing guide when securing your chest.**

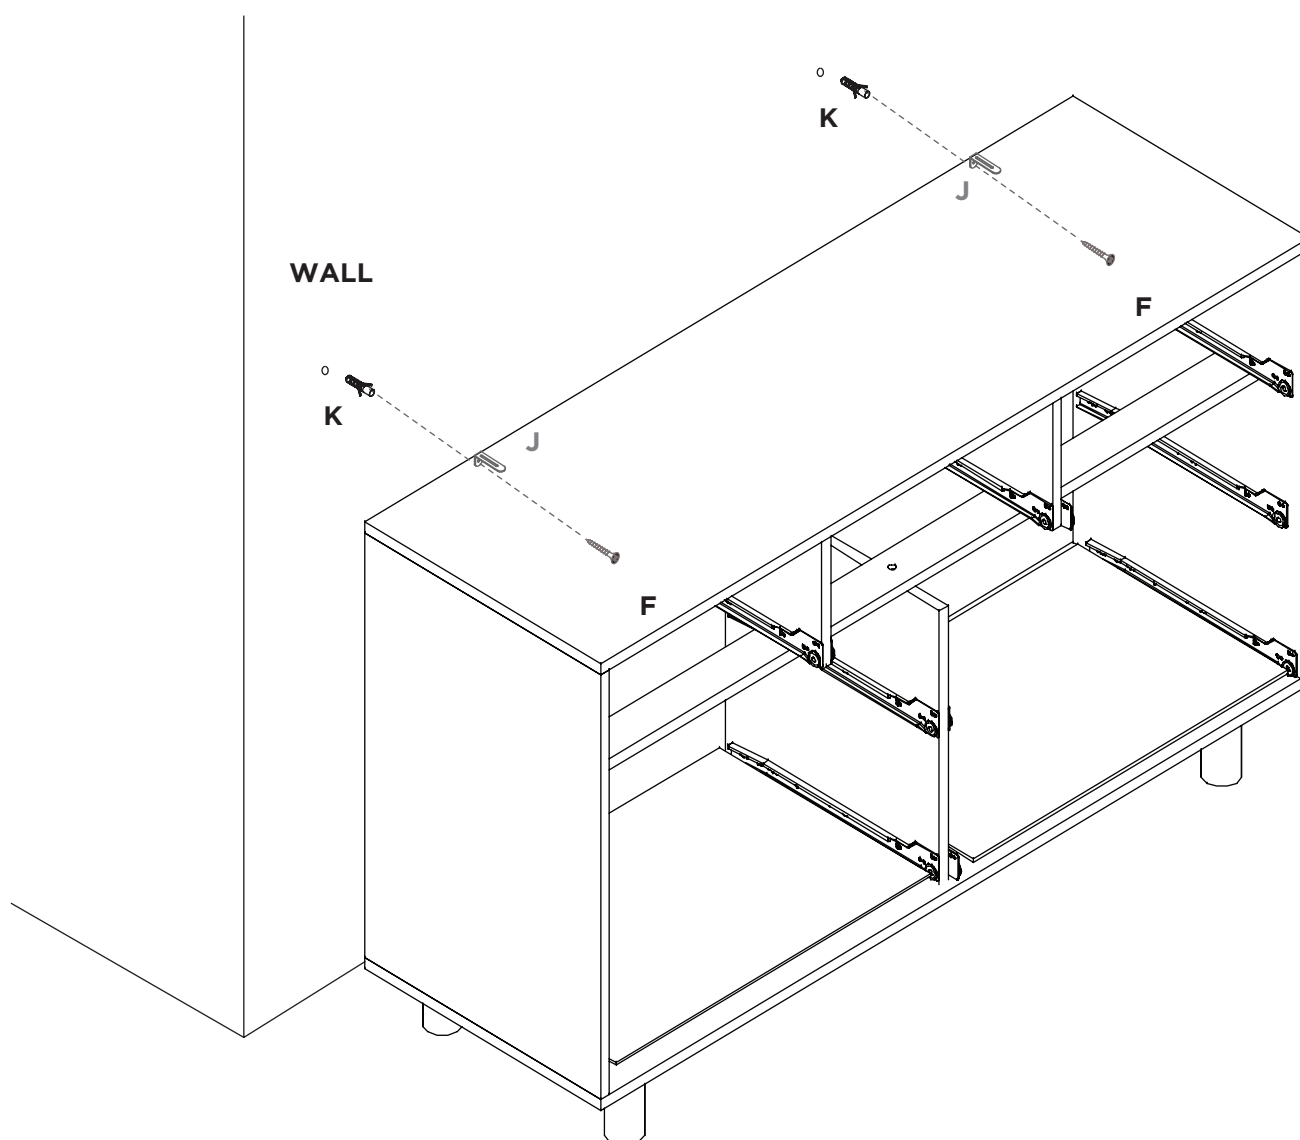

# ASSEMBLY INSTRUCTIONS

## STEP 14

Insert quickfit screws (A) to part 12.

Fix handle (D) to part 12 using screws (E), as shown.




A x 12



D x 3



E x 6


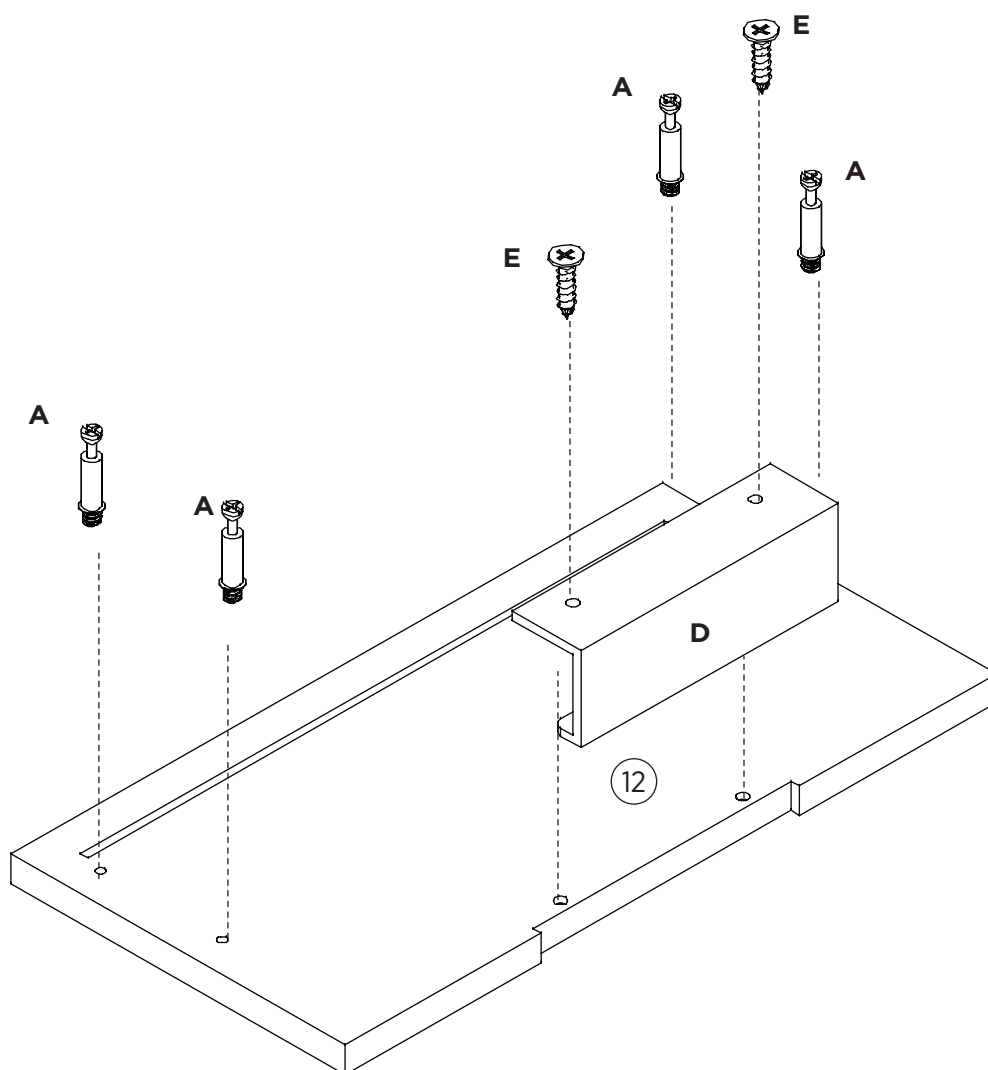


# x3

# ASSEMBLY INSTRUCTIONS

## STEP 15

Fix part 15 to parts 13 and 14 using screws (F), as shown.

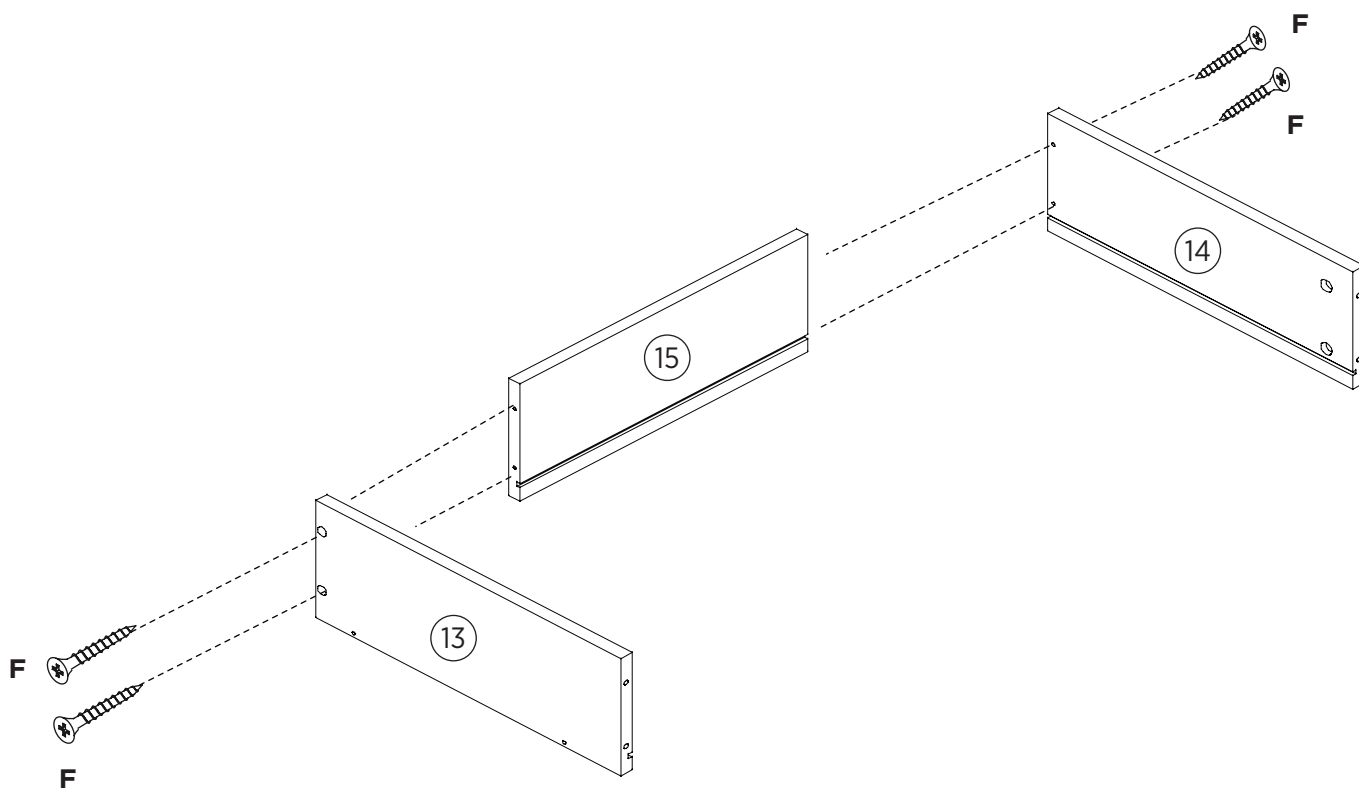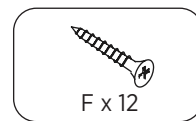

# x3

# ASSEMBLY INSTRUCTIONS


## STEP 16

Insert part 16 into grooves between parts 13, 14 and 15.

Insert camlocks (B) to parts 13 and 14.

Attach part 12 to parts 13 and 14, as shown.

Turn cam locks clockwise to tighten.

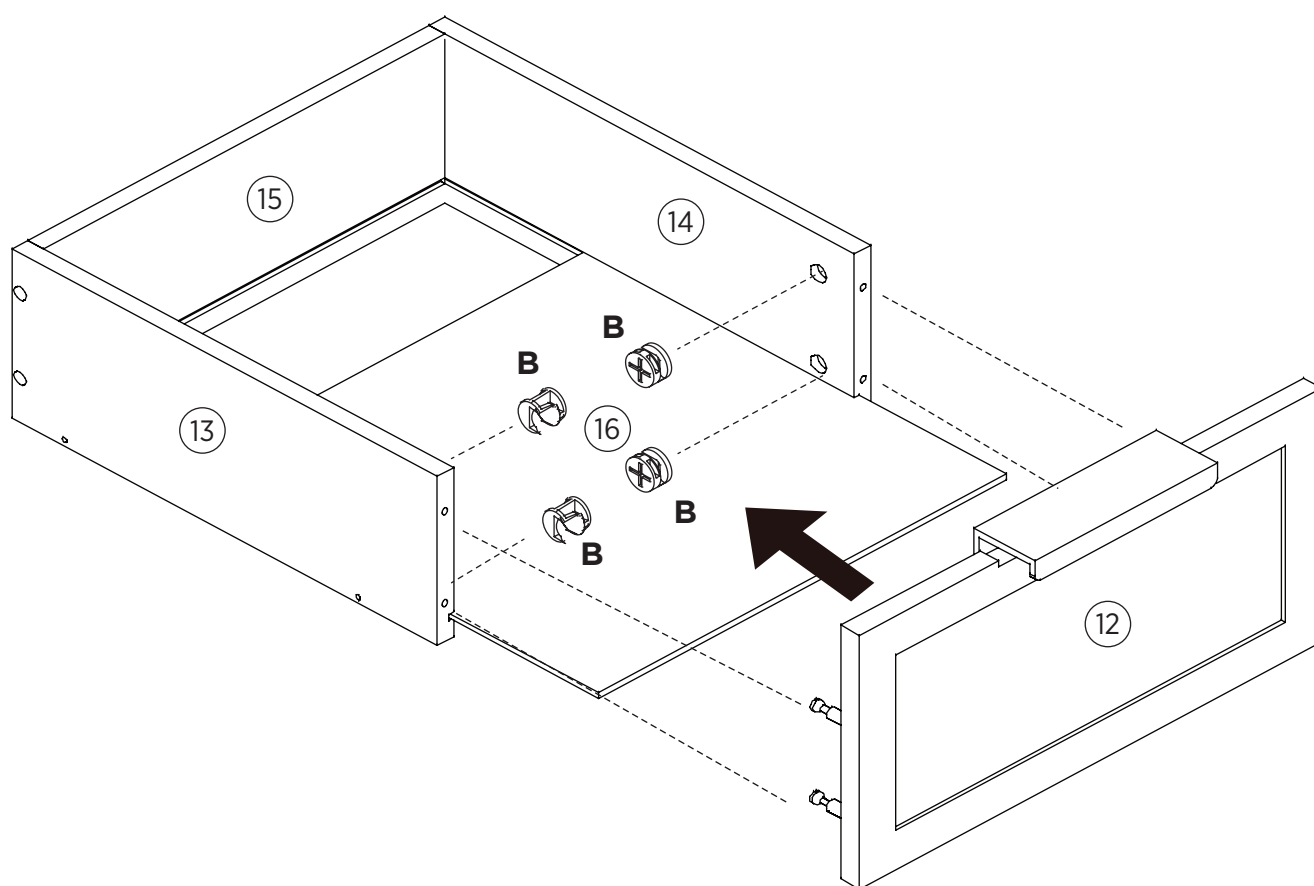





# x3

# ASSEMBLY INSTRUCTIONS

## STEP 17

Fix inner drawer runners (P) to part 14 using screws (L).

Fix inner drawer runners (O) to part 13 using screws (L), as shown.

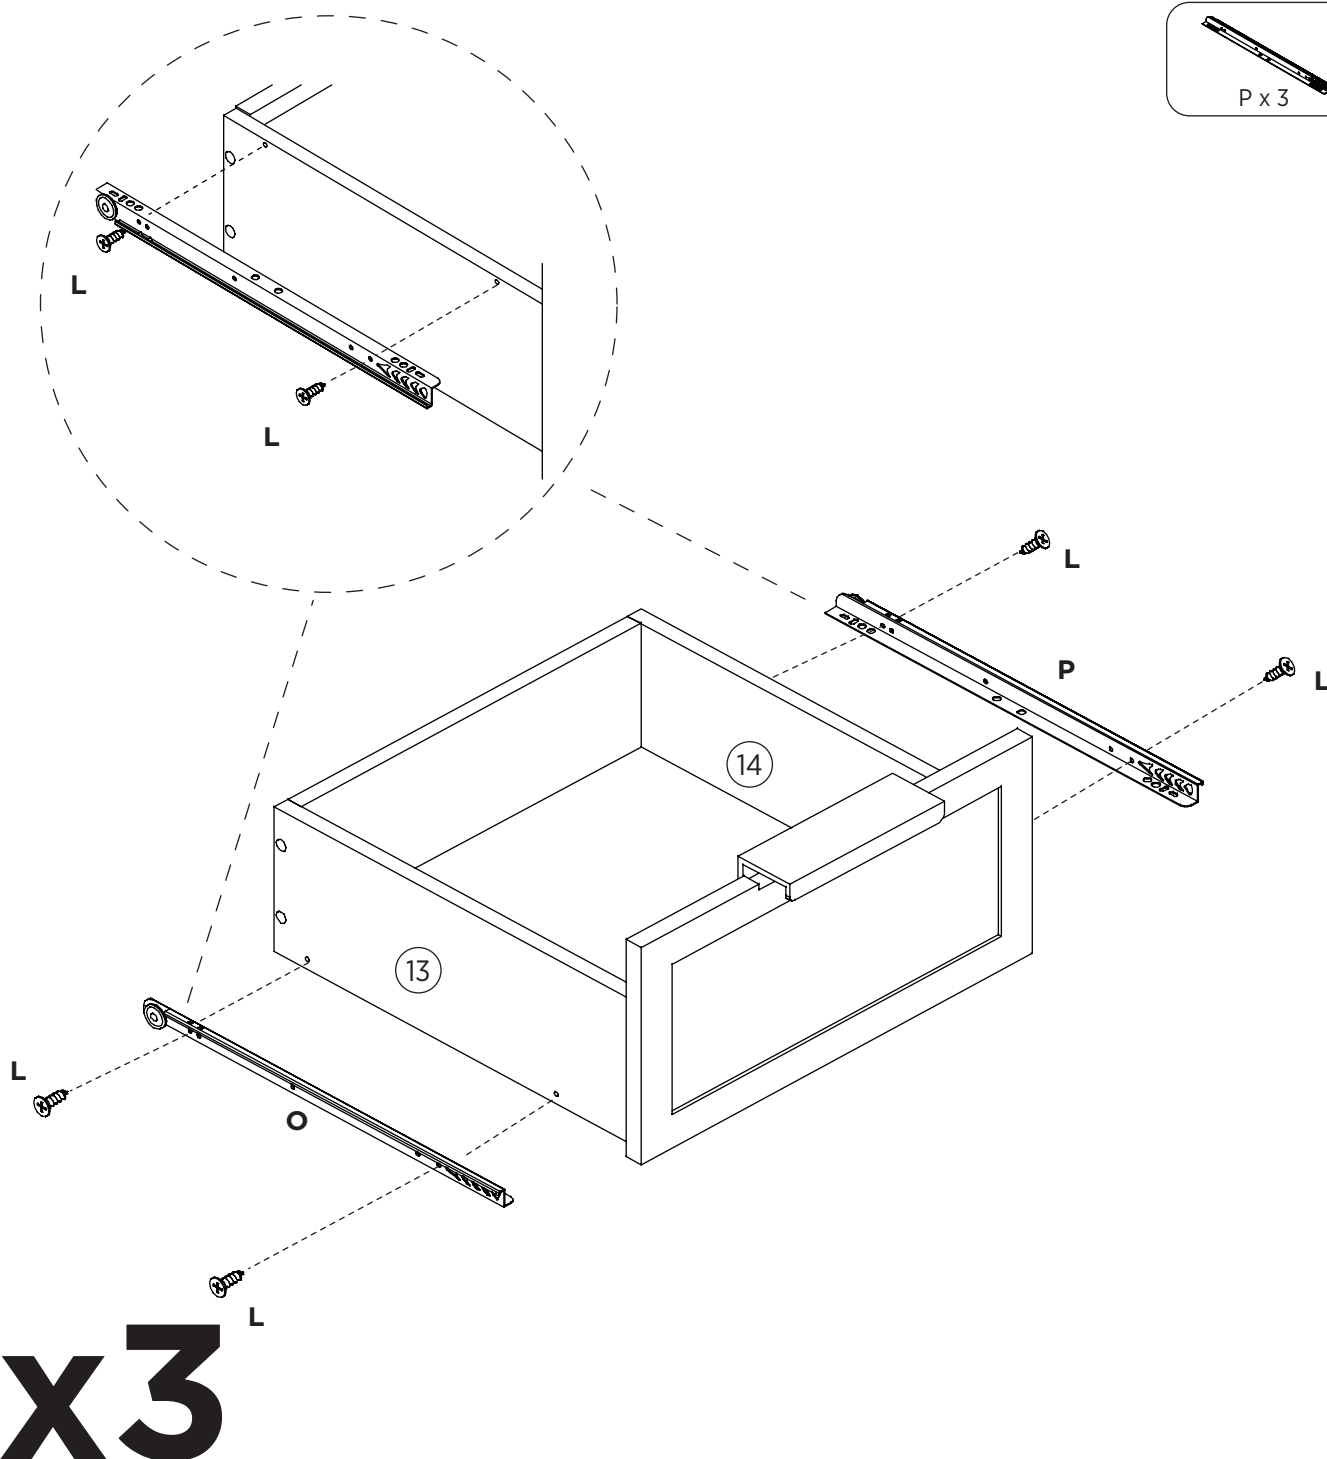
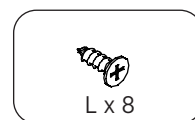


# ASSEMBLY INSTRUCTIONS

## STEP 18

Insert quickfit screws (A) to part 17.

Fix the handle (D) to part 17 using screws (E), as shown.

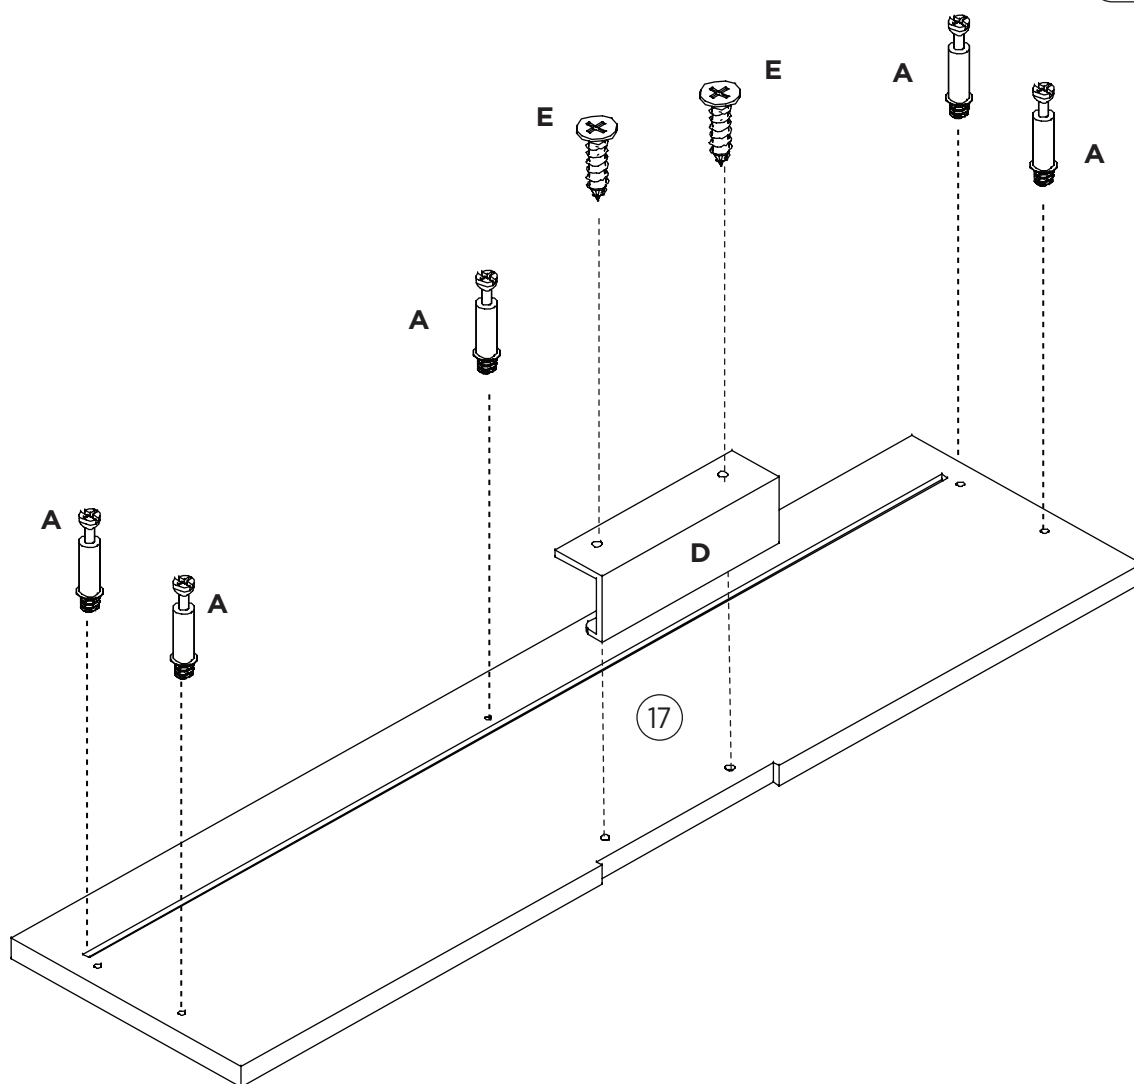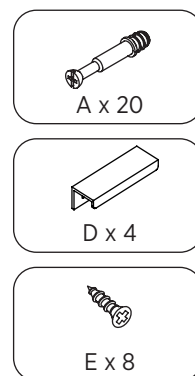



# x4



# ASSEMBLY INSTRUCTIONS

## STEP 19

Fix part 18 to parts 13, 14 and 20 using screws (F), as shown.

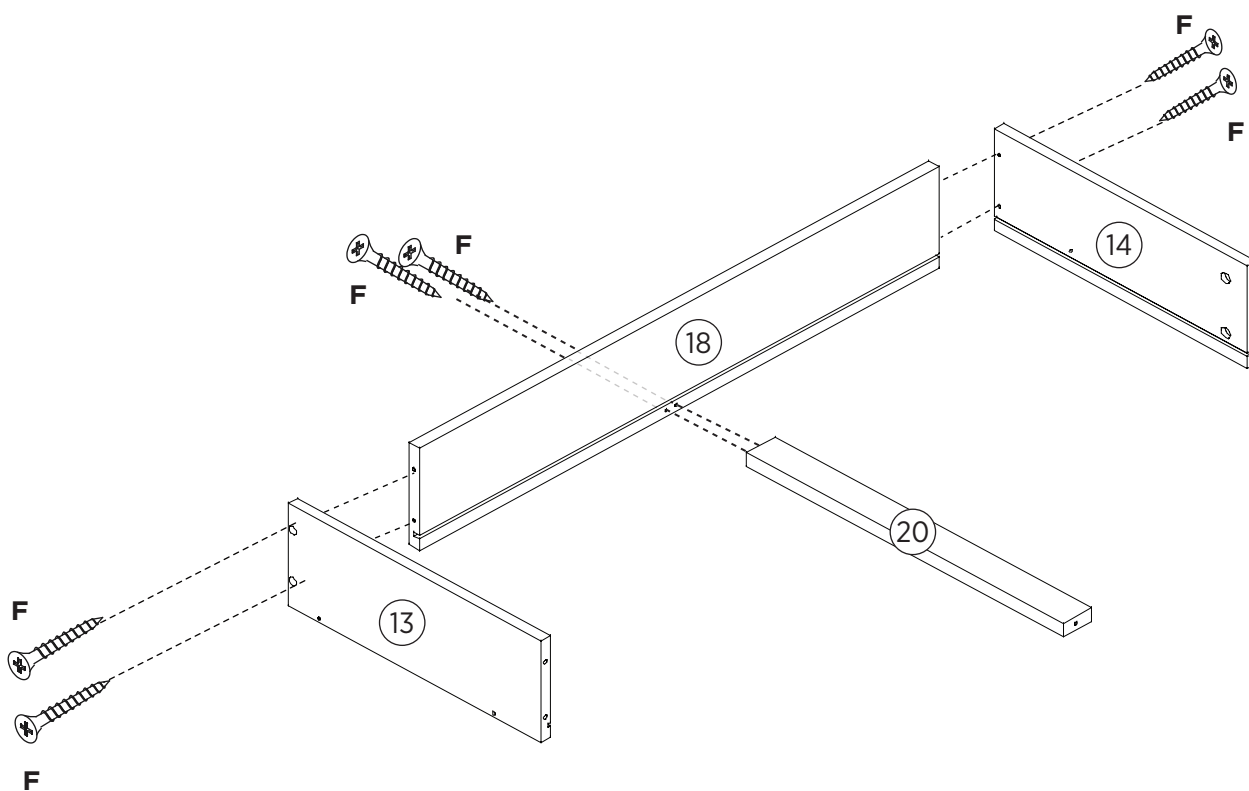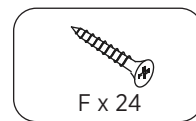

# x4

# ASSEMBLY INSTRUCTIONS



## STEP 20

Insert part 19 into grooves between parts 13, 14 and 18.

Insert camlocks (B) to parts 13 and 14.

Attach part 17 to parts 13 and 14, as shown.

Turn cam locks clockwise to tighten.

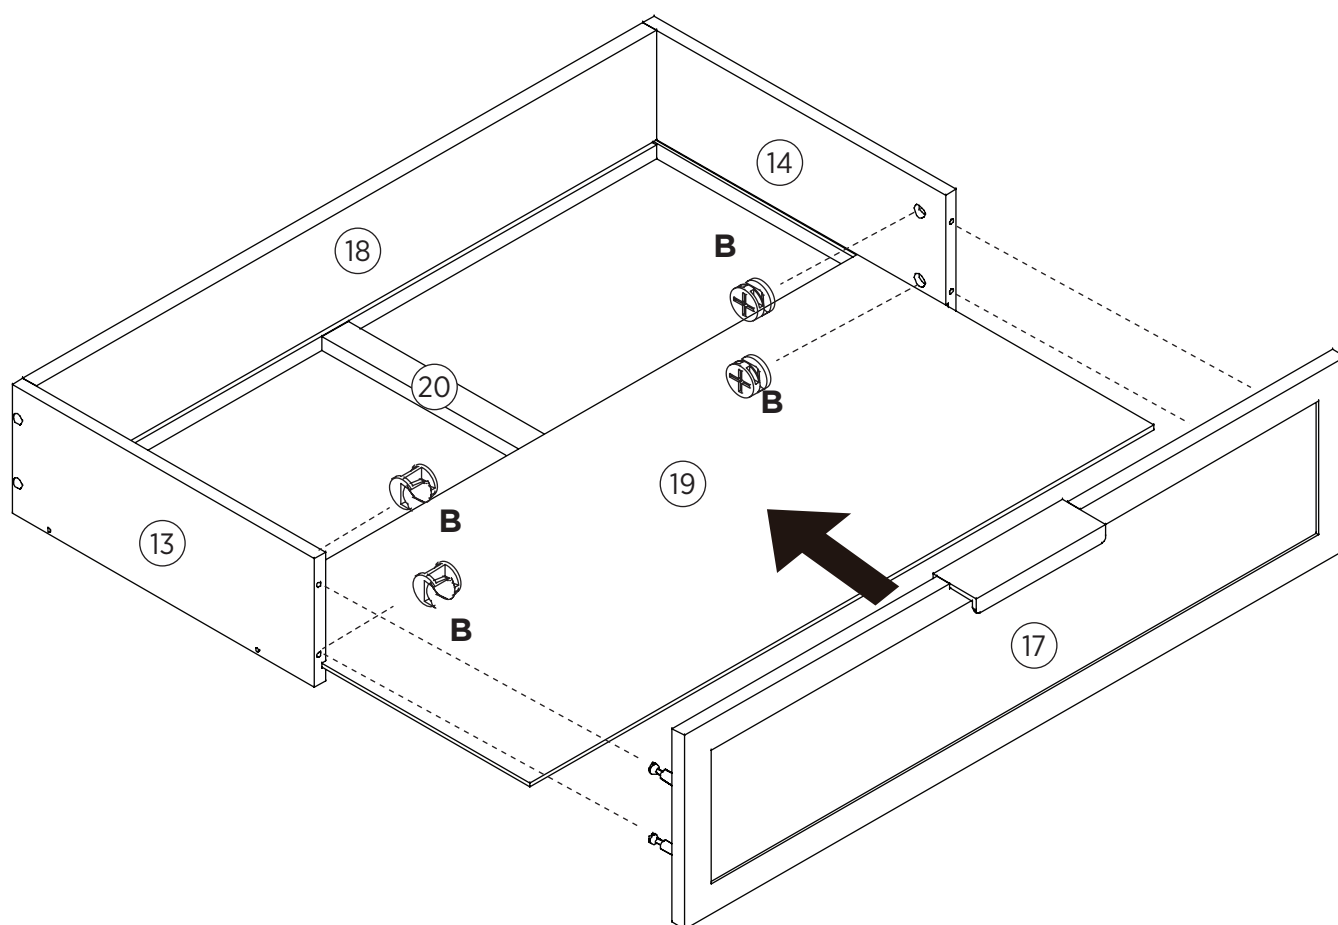

# x4

# ASSEMBLY INSTRUCTIONS





## STEP 21

Fix inner drawer runners (O) to part 14 using screws (L).

Fix inner drawer runners (P) to part 13 using screws (L).

Insert cam lock (B) to part 20, as shown.

Turn cam lock clockwise to tighten.

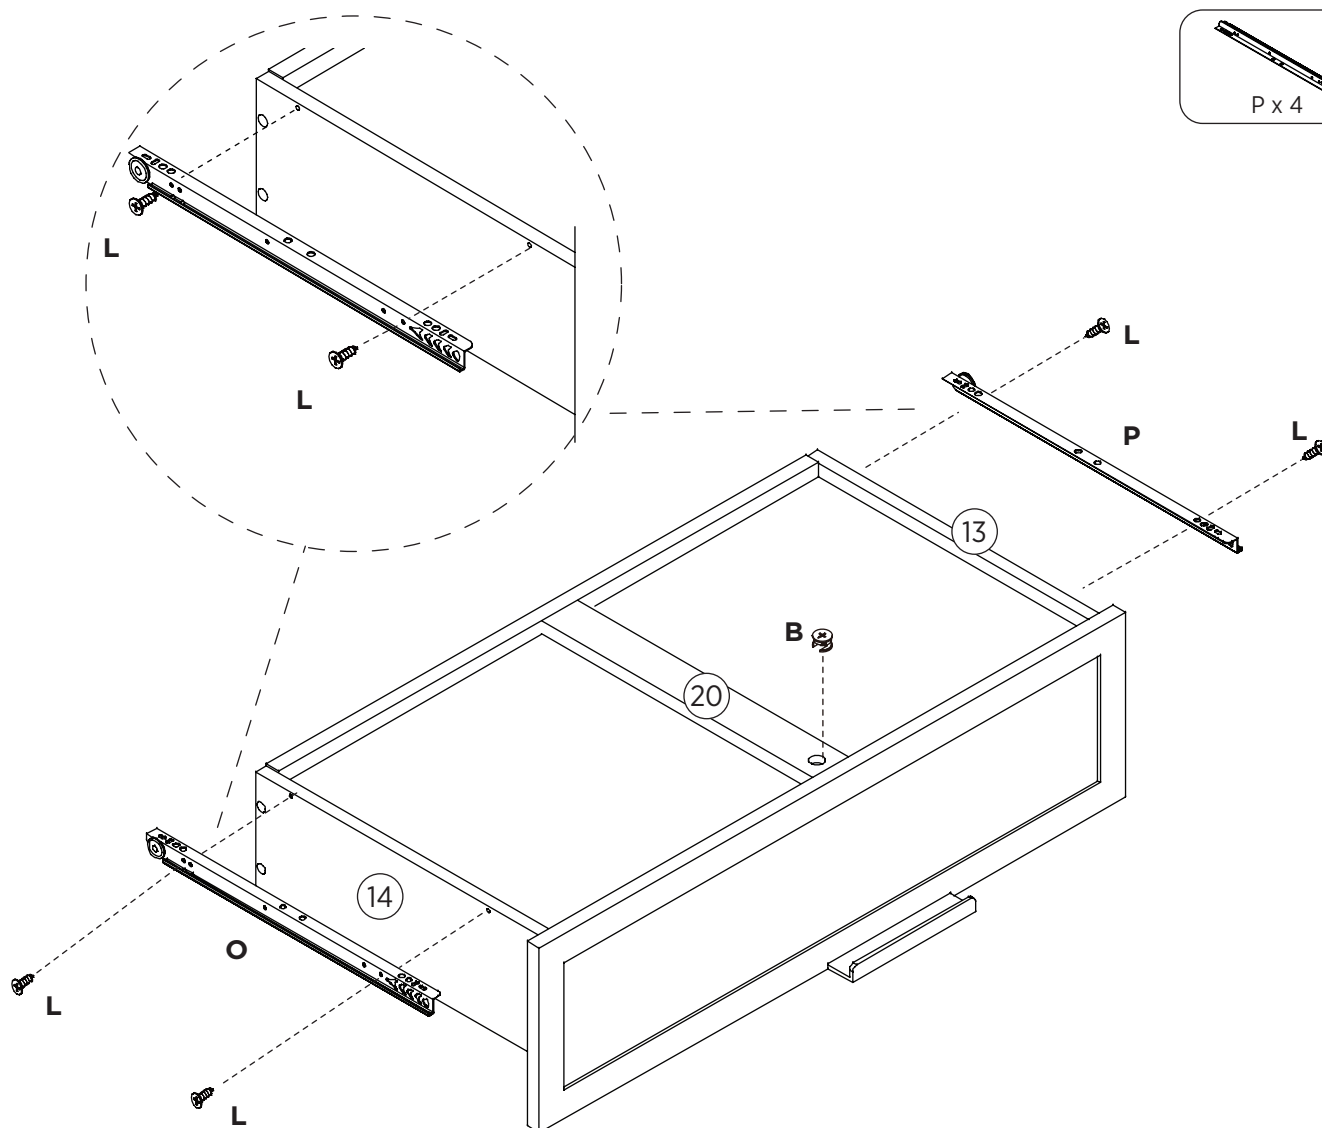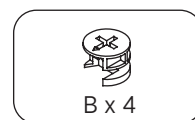


**x4**

# ASSEMBLY INSTRUCTIONS

---


## STEP 22

Insert drawer into assembled unit, as shown.

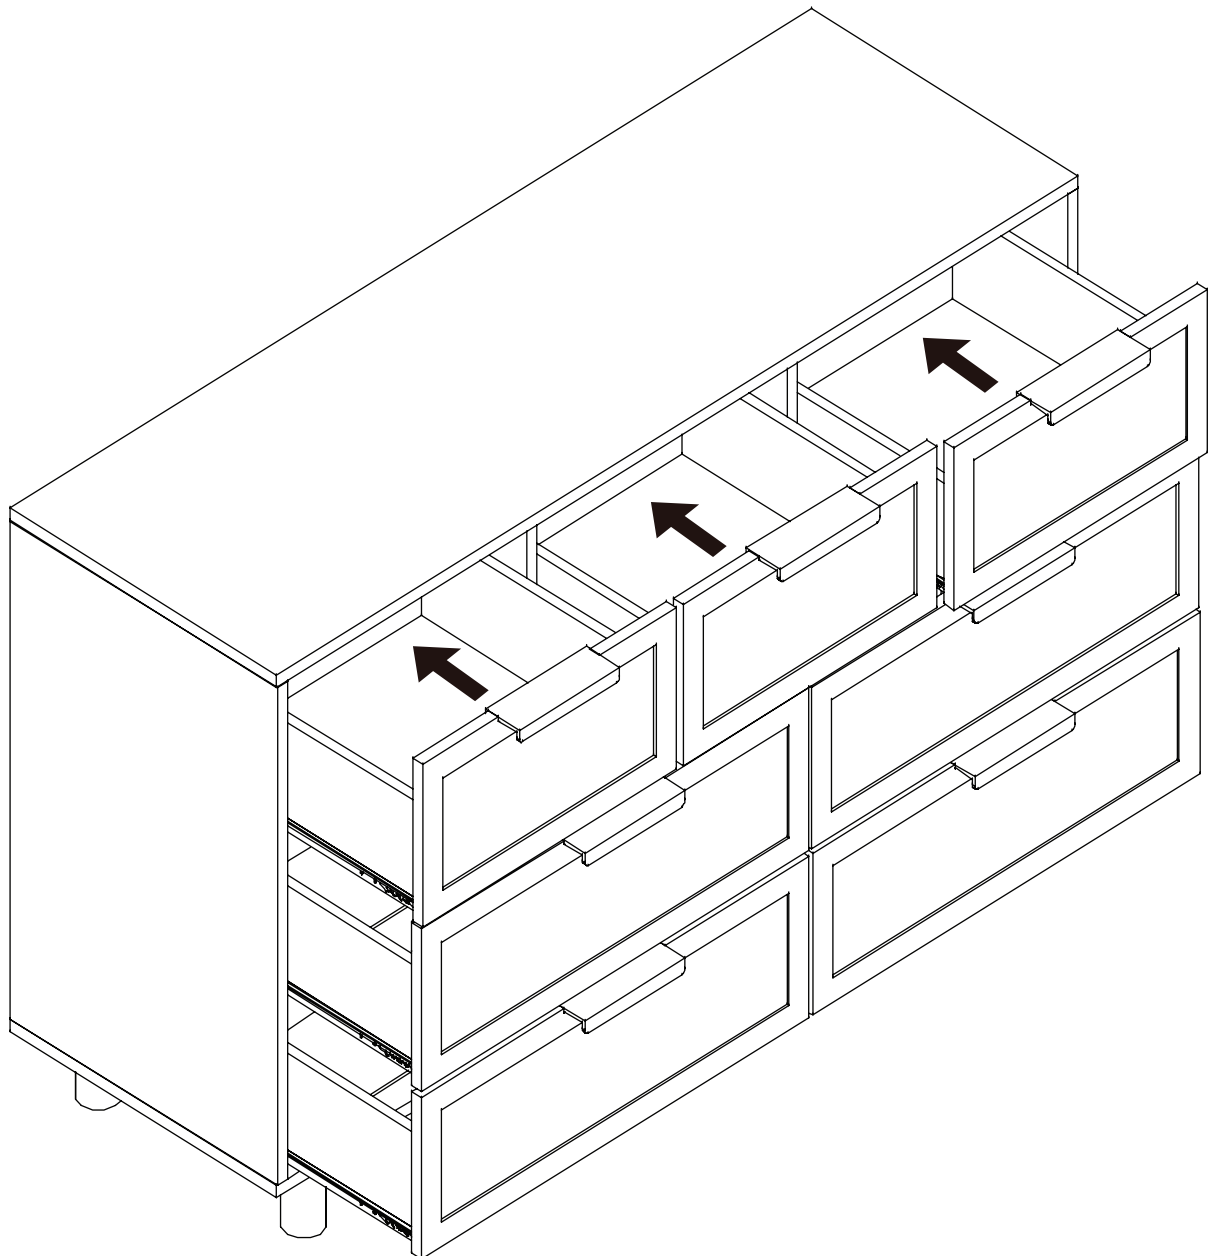

# ASSEMBLY INSTRUCTIONS

---

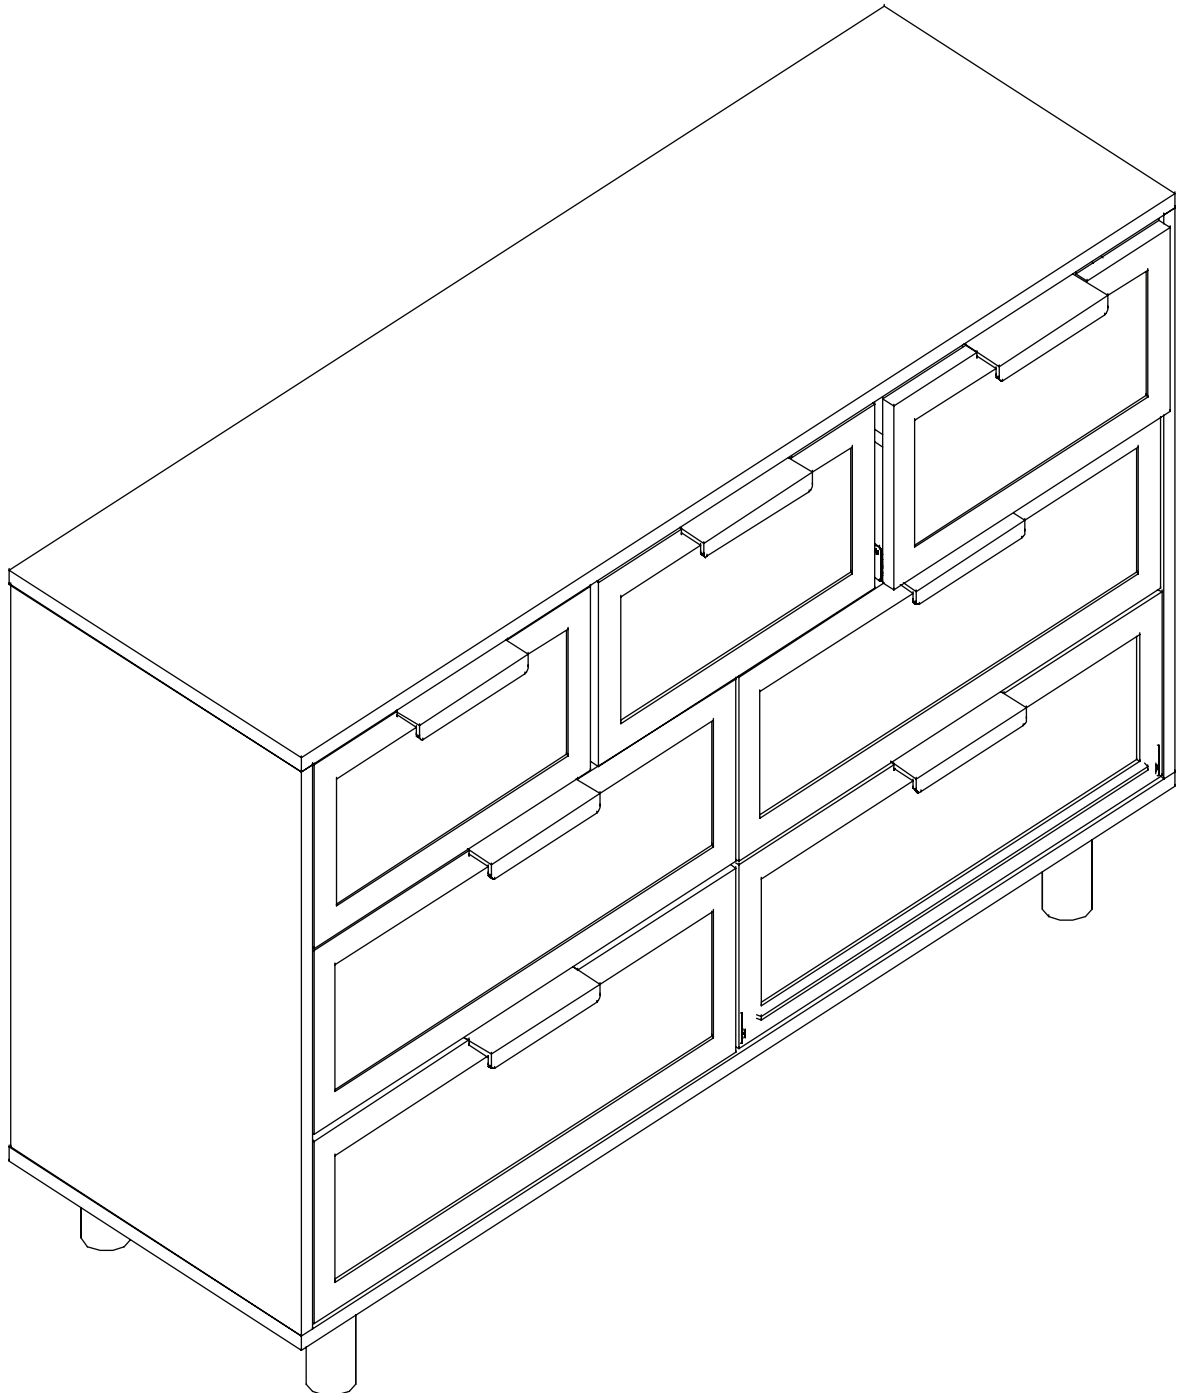

**Maximum recommended weight is Drawer 5kg | Top 10kg.**

Your drawer chest is ready for use.

# WALL FIXING GUIDE

**NOTE: Supplied wall plugs are only suitable for use in masonry walls.**

If you have any doubts about using the correct plug for your wall, please seek professional advice.  
Failure of the product due to using incorrect fixings is the responsibility of the installer.



## IMPORTANT:

**When drilling into walls, always check for hidden wires or pipes, etc.**



## Tips & Tricks


**Make sure that the hardware used is suitable for supporting your unit.**

**Please consult a qualified tradesperson if unsure.**

- ☒ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☒ If you are unsure, please select a larger screw and wall plug.
- ☒ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☒ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


## Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

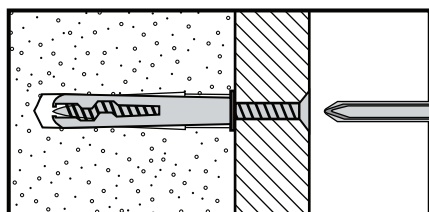


### 1. General Purpose Wall Plug

Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

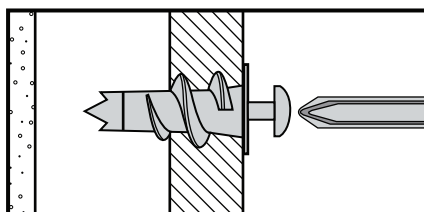


### 2. Plasterboard Wall Plug

For use when attaching light loads onto plasterboard partitions.

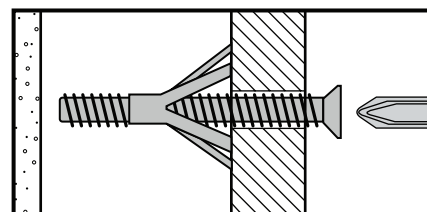


### 3. Cavity Fixing Wall Plug

For use with plasterboard partitions or hollow wooden doors.

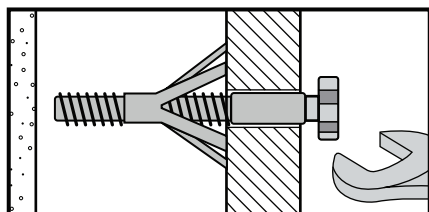


### 4. Cavity Fixing Heavy Duty Wall Plug

For use when fitting or supporting heavy loads such as shelving and wall cabinets.

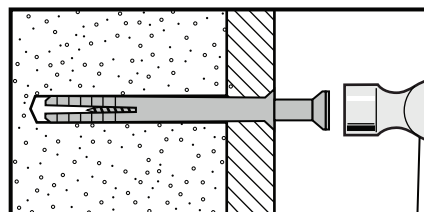

### 5. Hammer Fixing Wall Plug

For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

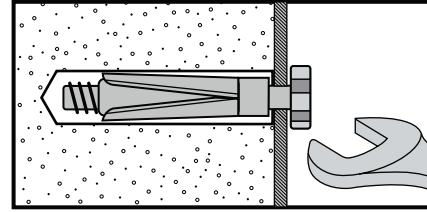

### 6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.