
Assembly Instructions
TIVOLI SIDEBOARD

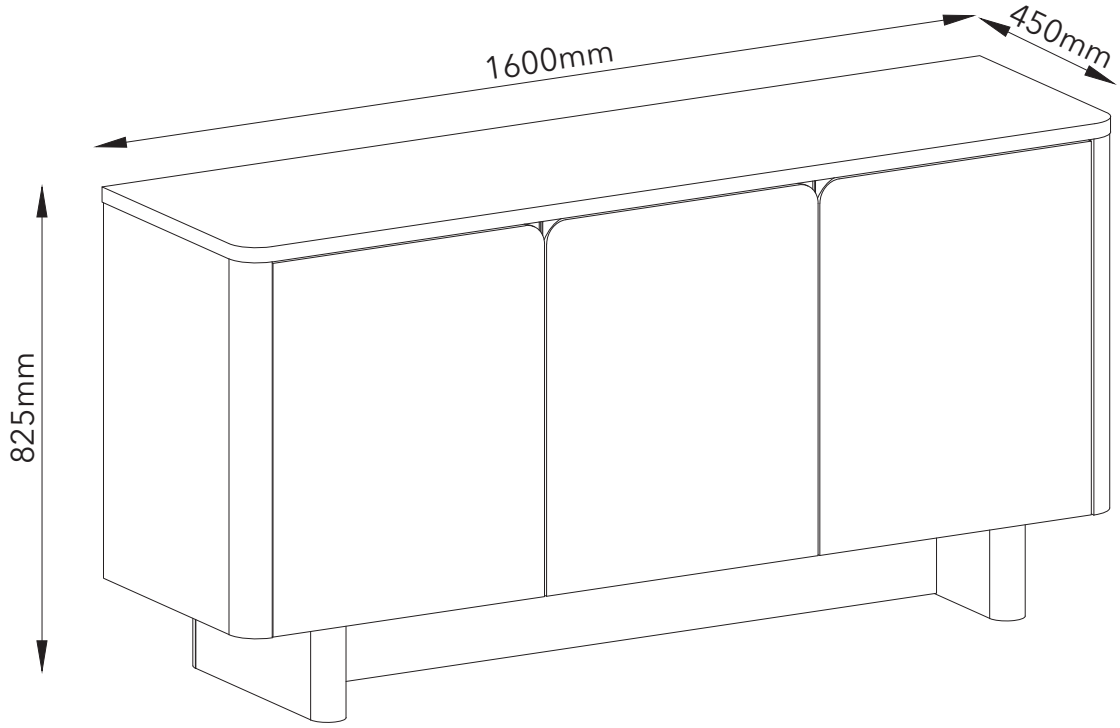

Please read the Assembly Instructions carefully before assmbling.

Thank you

Dear Customer

Thank you for purchasing your new piece of furniture from Prodesign. We put a lot of effort in the design and construction of our products to ensure they set the standard for quality, durability and ease of assembly.

The next step...

There is no need to feel daunted by the number of parts and fitting sin front of you, we have compiled this straight forward, step-by-step guide to make sure that assembling your furniture is as easy as 1, 2, 3. Before you begin, we advise that you check that you have everything you need to get started.

Top tip

Find a space to spread everything out across the floor before you begin assembling the item. Lay each panel down on a clean and level area, ideally in the room of intended use, ensuring there is enough room to manoeuvre around the item. Lay on a soft surface such as carpet to avoid scratches to panels. It is recommended that two people assemble this product together. The full list of furniture parts, fixtures and fittings, as well as the tools you will need for assembly can be found on page 2 and 3 of this manual.

Top tip

Identify all of the fittings, make sure that you have them all prepared and familiarise yourself with each component, to make things easier when you are putting it all together.

Safety and care advice

IMPORTANT - The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before assembling your furniture.

Please keep these instructions for future reference.

Keep children and animals away from the assembly area. This furniture contains small parts that could cause choking if swallowed.

Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.

Ensure that all packaging is disposed of carefully and responsibly.

From time to time check that there are no loose fittings on the unit, re-tighten when necessary.

Two people may be required for the assembly of this product.

Once items are part or fully assembled they are not returnable unless faulty.

This item is not for outdoor use – unless stated otherwise.

Some items will be supplied with a metal bracket, which we recommend is used to secure the item to the wall, to prevent a child from accidentally pulling furniture over. Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Secure it!

Preventing furniture tip-over accidents



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.


To avoid any serious or fatal injury, this product has been supplied with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Connecting attachments for your wall are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what wall connections to use.

⚠ WARNING

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device.



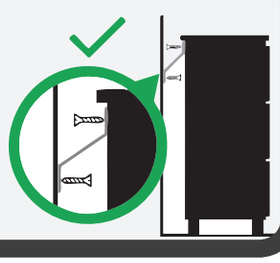


Wall anchoring guide




For plasterboard
(without available wood stud)

Securing method:
Self drilling plasterboard anchor.

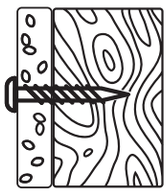

For plasterboard
(with available wood stud)

Securing method:
Screw inserted directly into stud.








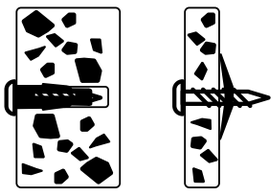









For masonry wall

Securing method:
Solid wall: Plug with screw
Hollow wall: Spring toggle









Please seek professional advise if you are in doubt of what fixing device to use.

Component parts supplied

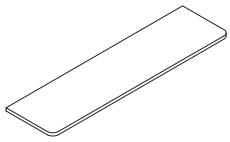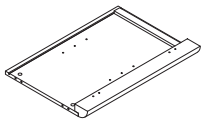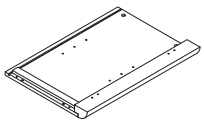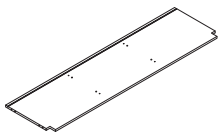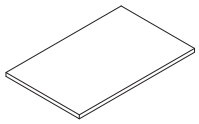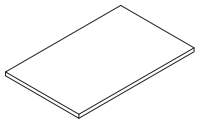
Ref	Dimensions	Visual	Qty
1	1600x450x25		**1**
2	640x480x50		**1**
3	640x480x50		**1**
4	625x404x15		**1**
5	625x404x15		**1**
6	1566x428x15		**1**
7	517x350x15		**2**
8	493x350x15		**1**

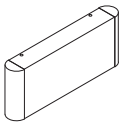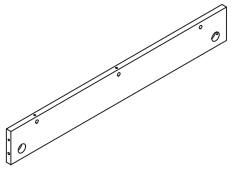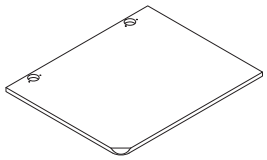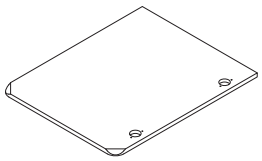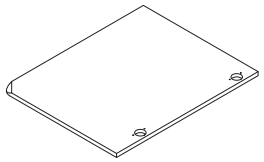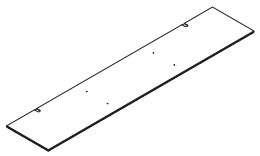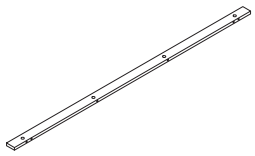Ref	Dimensions	Visual	Qty
9	160x424x60		**2**
10	1178x158x25		**1**
11	636x495x15		**1**
12	636x495x15		**1**
13	636x495x15		**1**
14	1575x317x5		**1**
15	1497x50x15		**1**


Parts and fittings

								
A	Ø7x33mm	27pcs	B	Ø15x12mm	27pcs	C	Ø8x30mm	20pcs
								
D	M8x80mm	2pcs	E	31x15x8mmm	2pcs	F	M8x6mm	2pcs
								
G	M13x90mm	1pc	H	Ø50x5mm	4pcs	J	Ø6.5x16mm	12pcs
								
K	Ø25x1mm	12pcs	L	14x13x10mm	6pcs	M	Ø3x19mm	14pcs
								
P	Ø4x14mmm	4pcs	Q	80x30x15mm	2pcs	R	Ø4x15mm	12pcs
								
S	Ø35mm	6pcs						


Exploded view

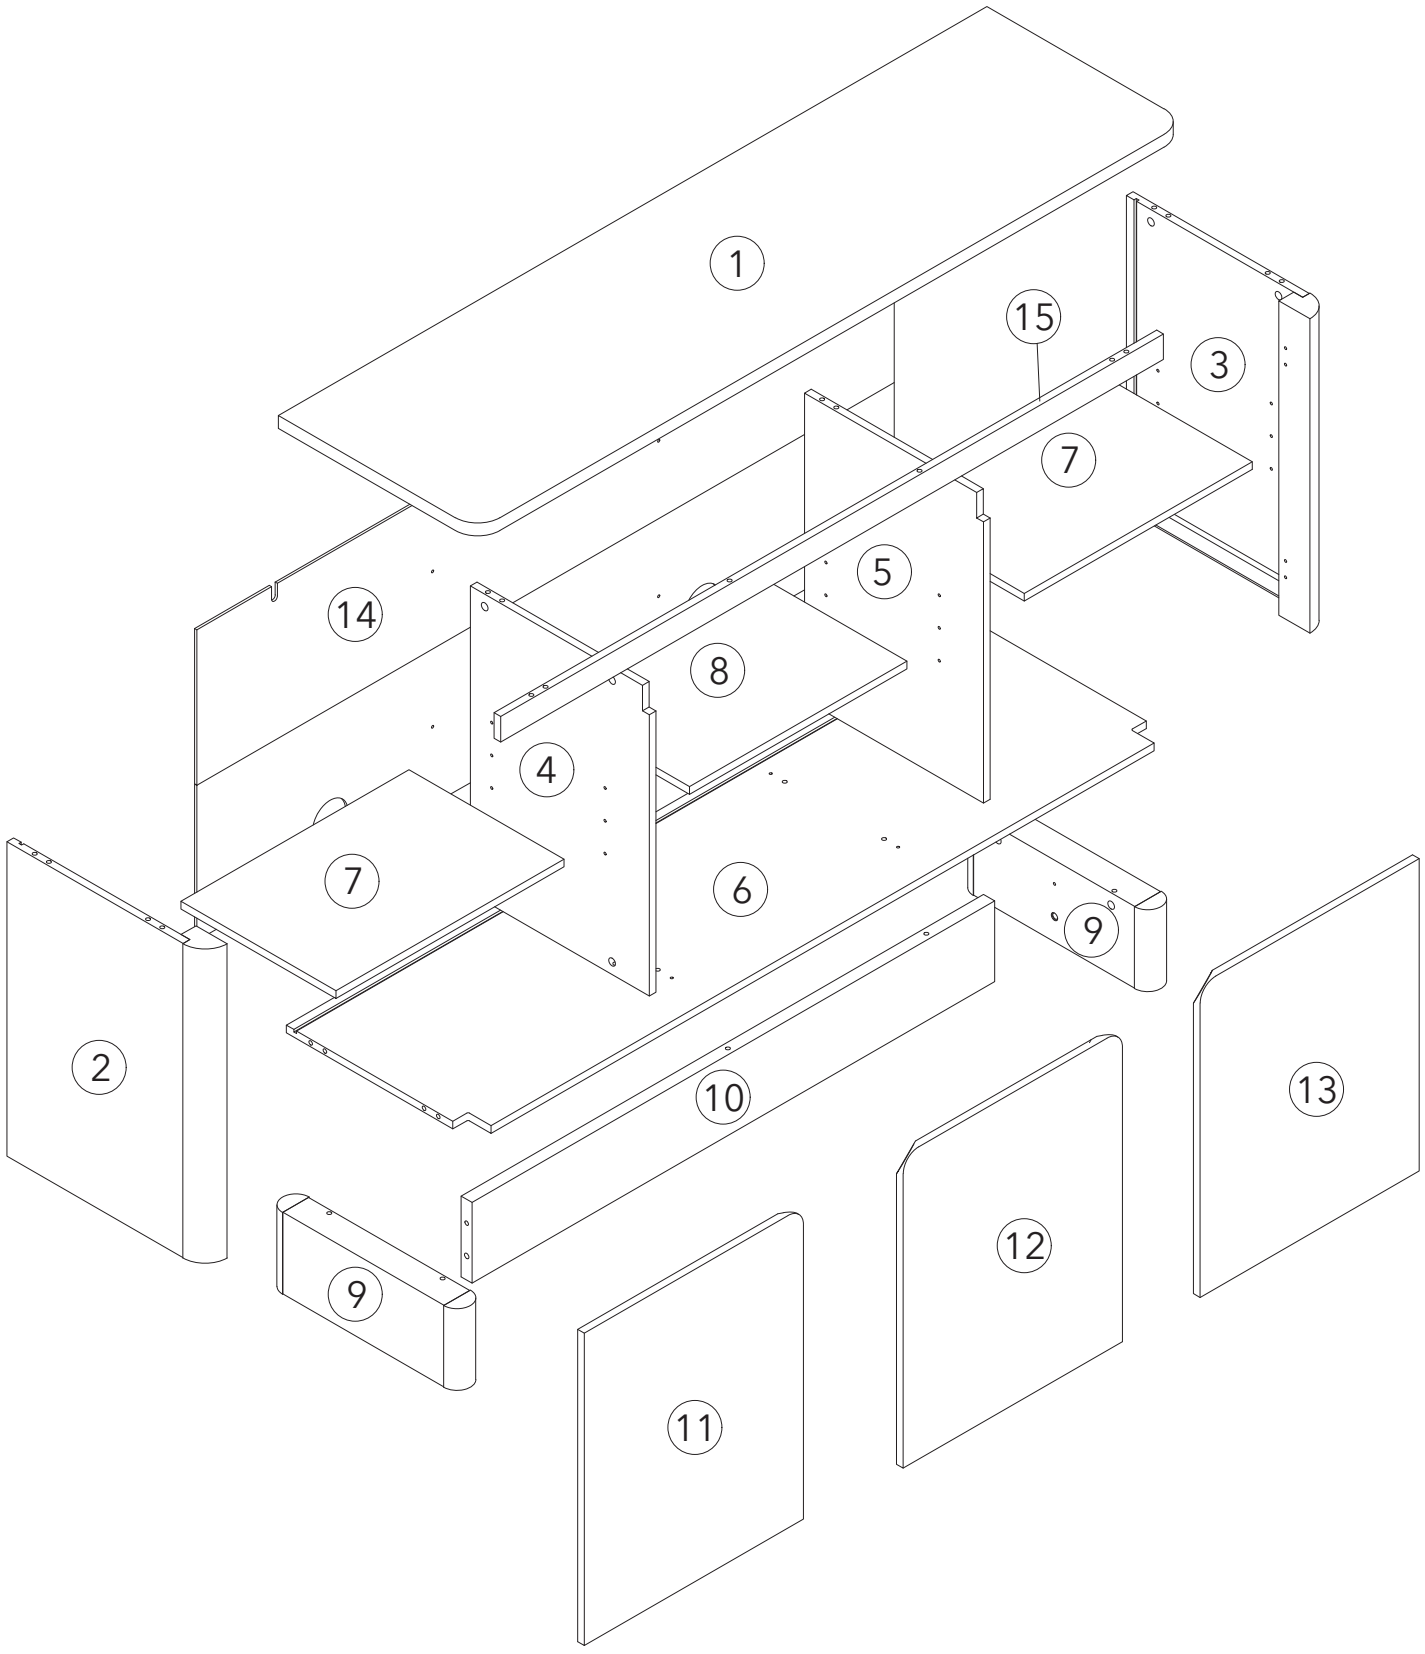


Step 1:

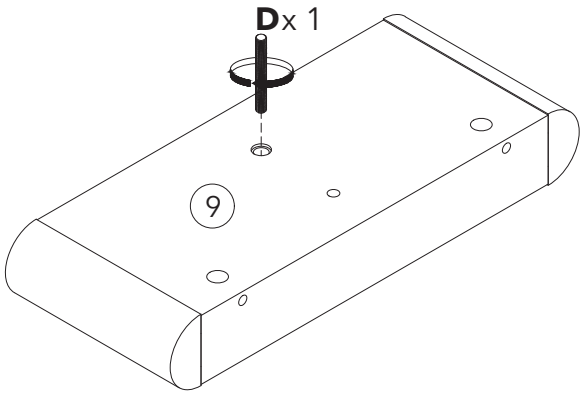


x2

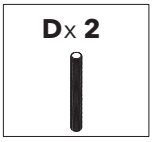


Step 2:

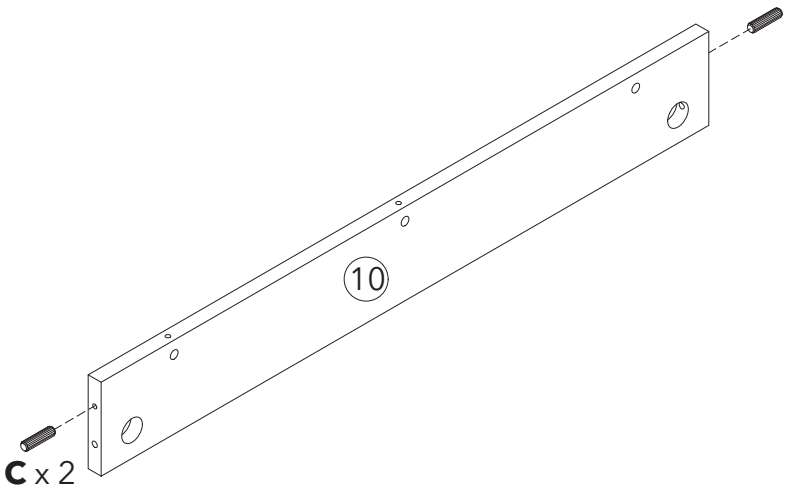

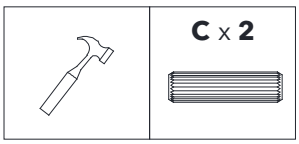



Step 3:

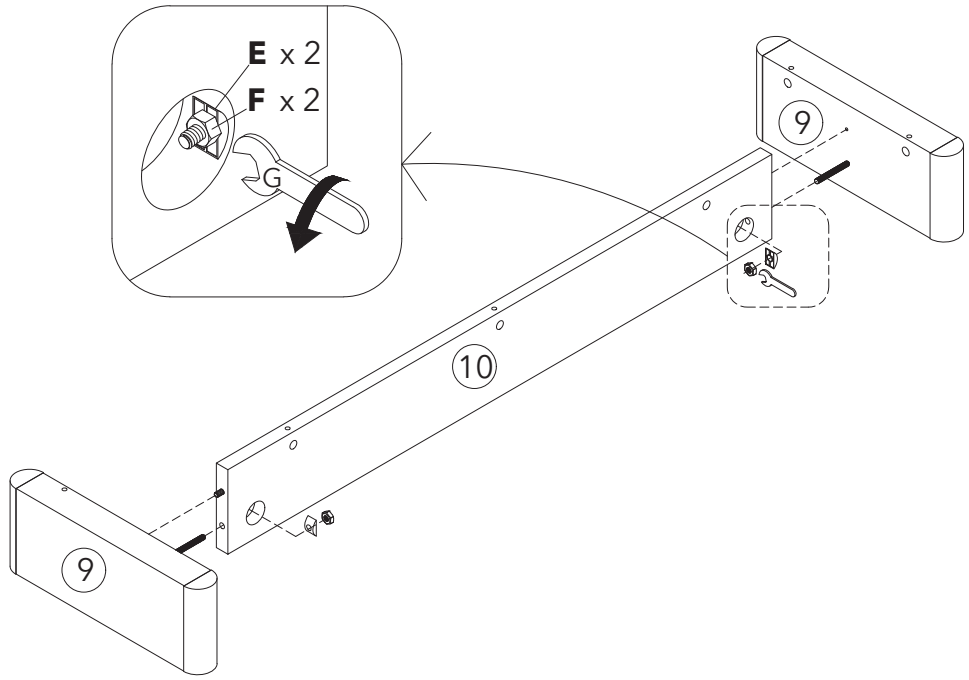


E x 2	F x 2	G x 1
		

Step 4:

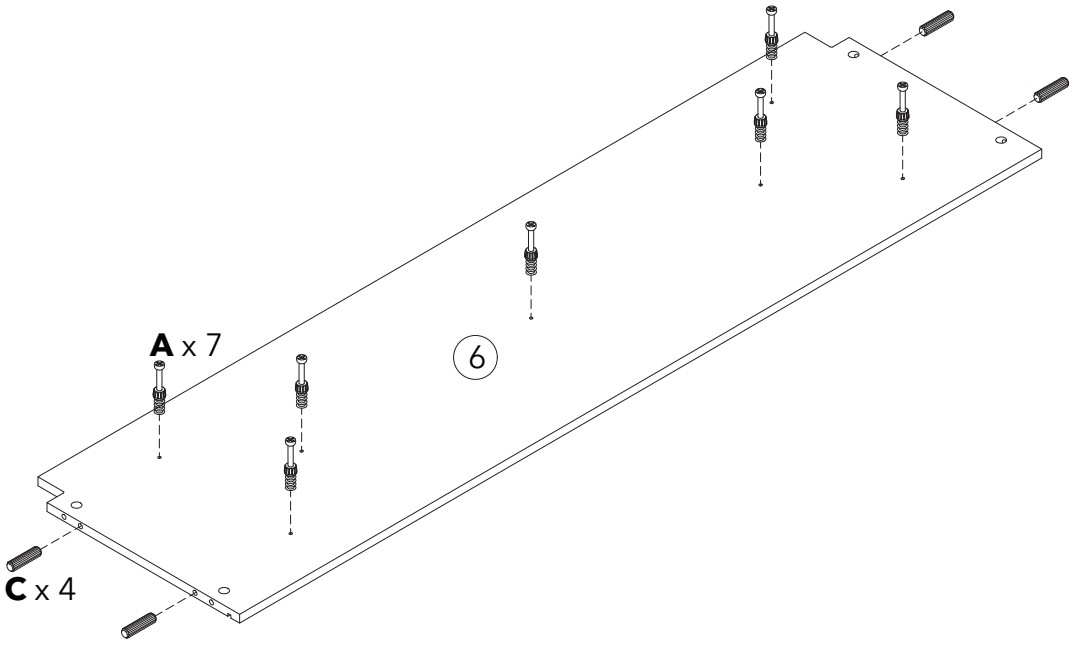



	C x 4		A x 7
			

Step 5:

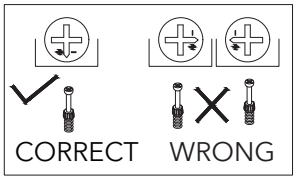



Please note that the locking cam faces outwards

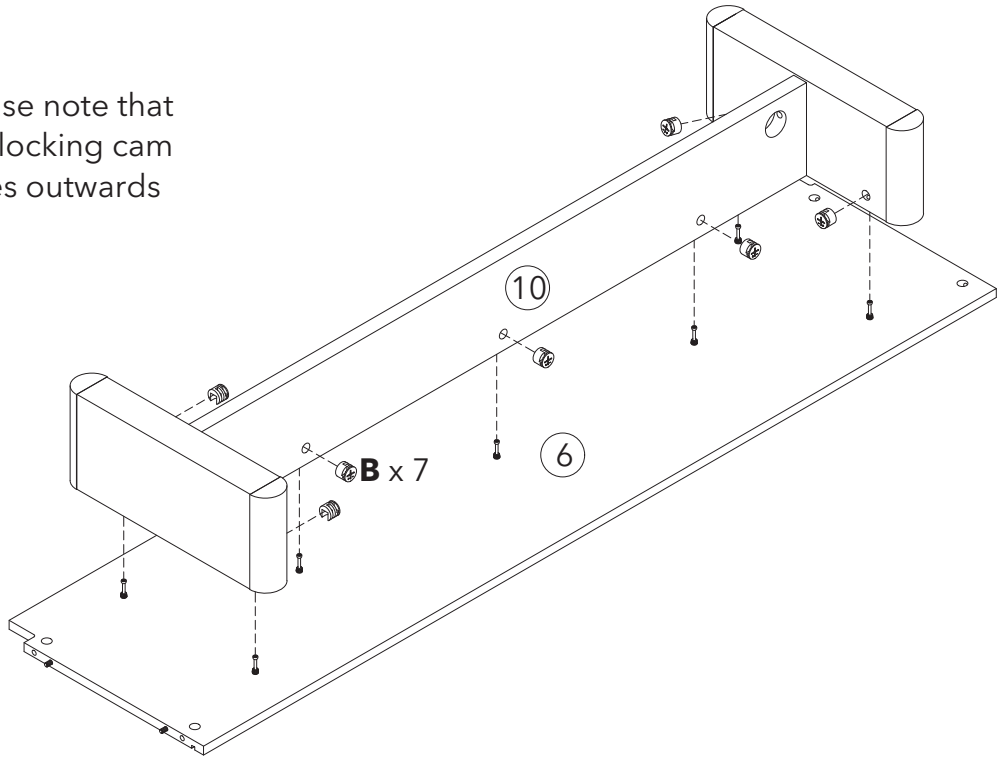

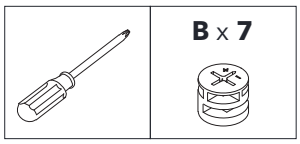



Step 6:

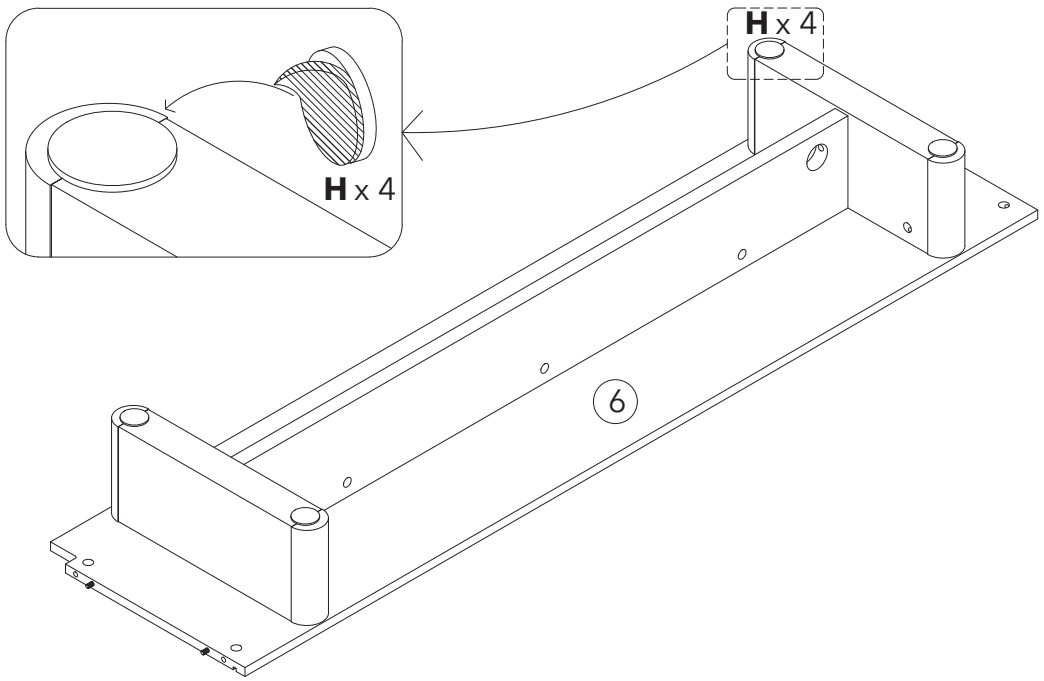

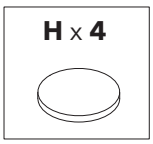



Step 7:

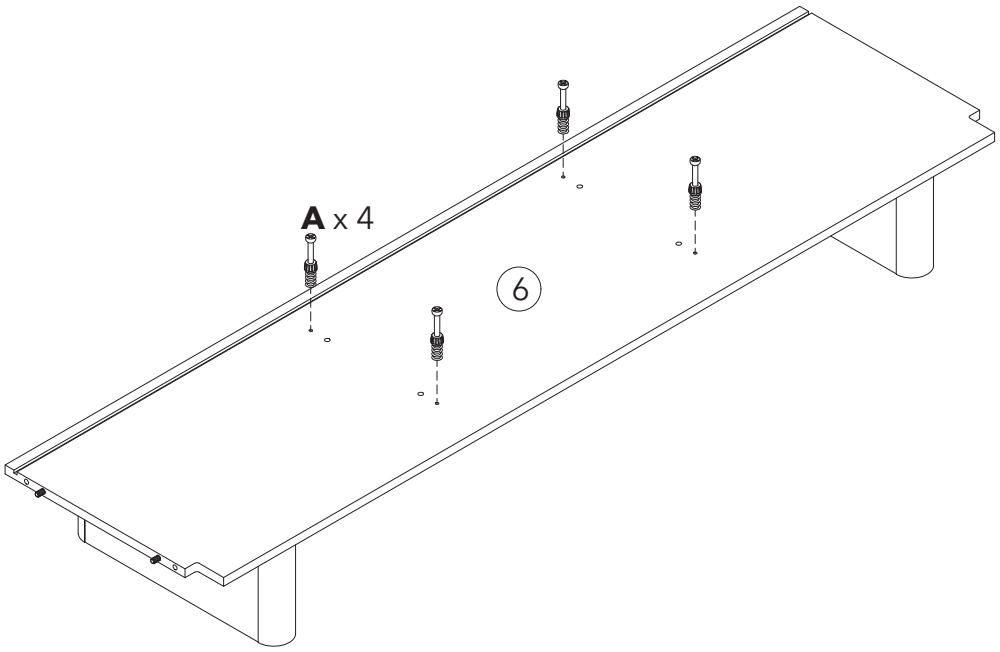


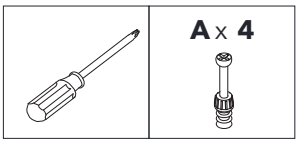


Step 8:

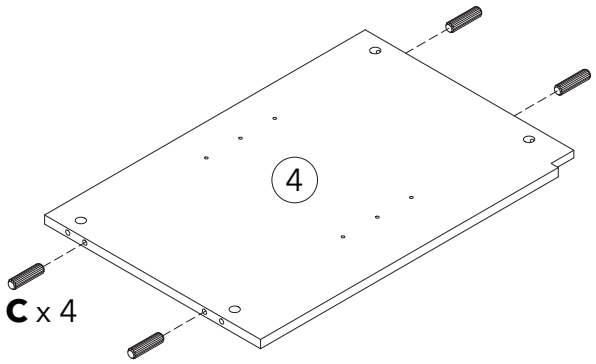


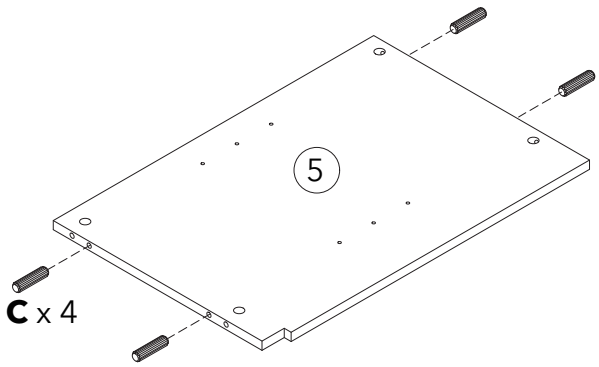

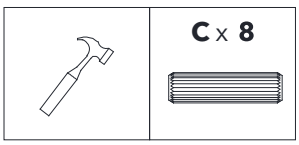


Step 9:

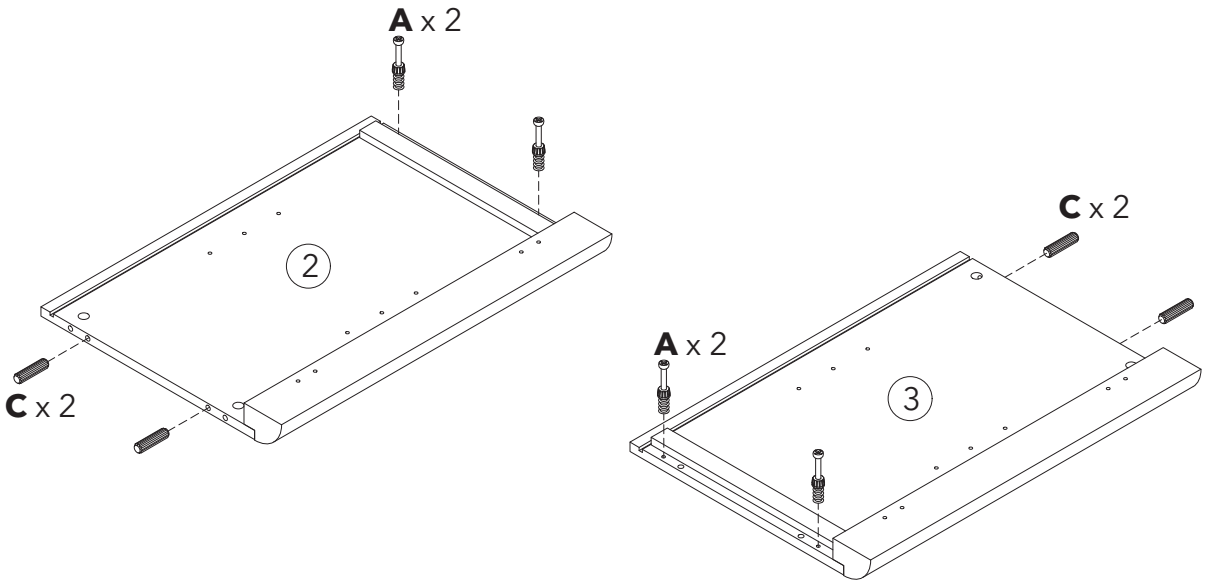


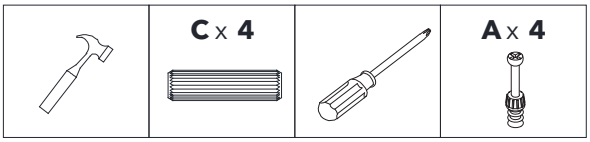


Step 10:

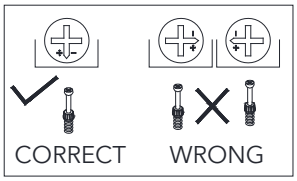



Please note that the locking cam faces outwards

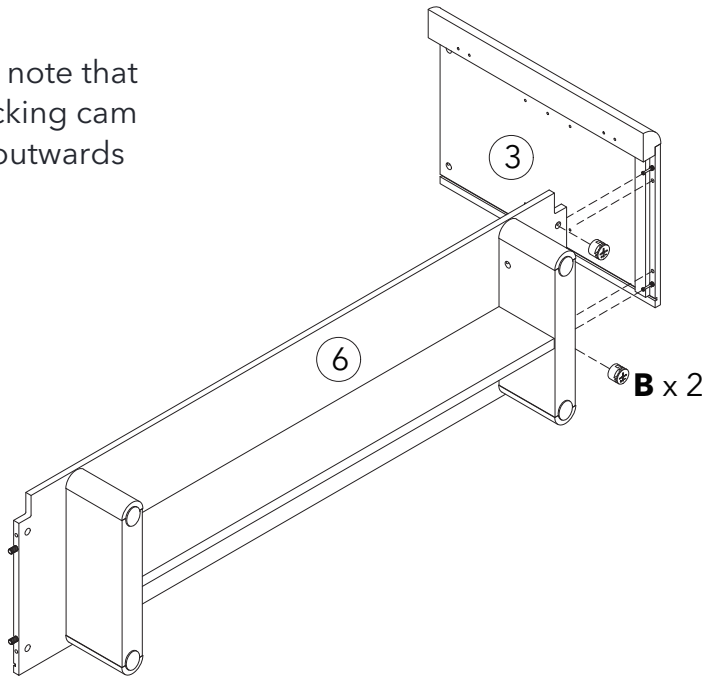

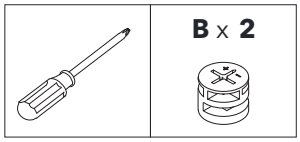



Step 11:

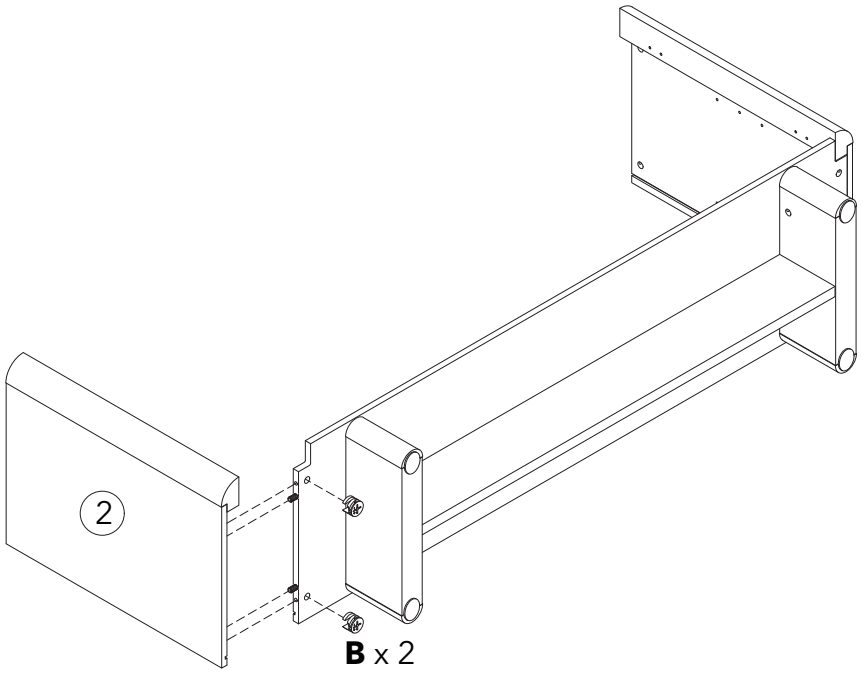


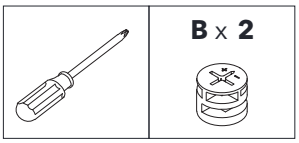

Step 12:

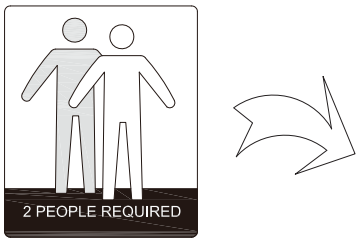


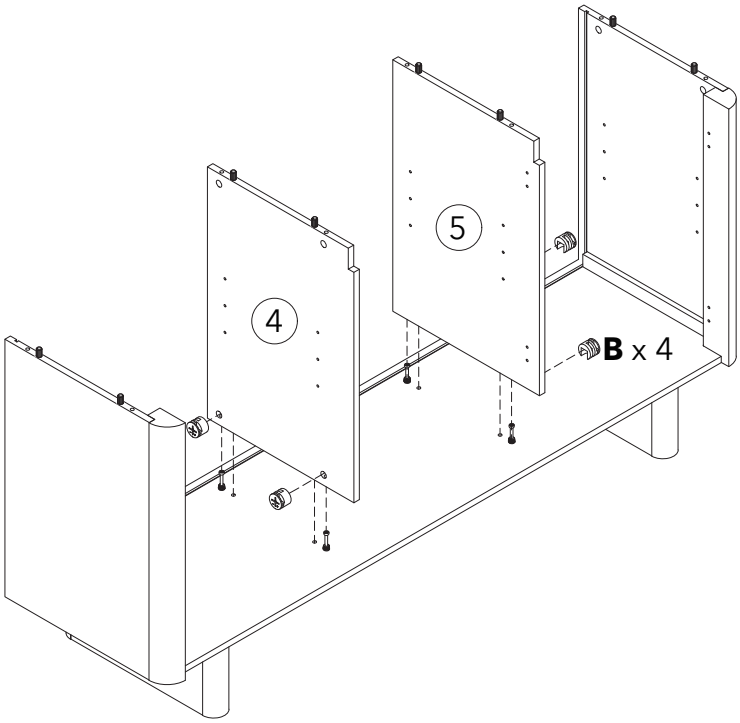

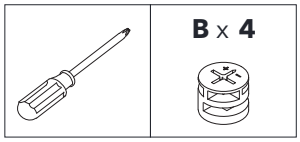



Step 13:



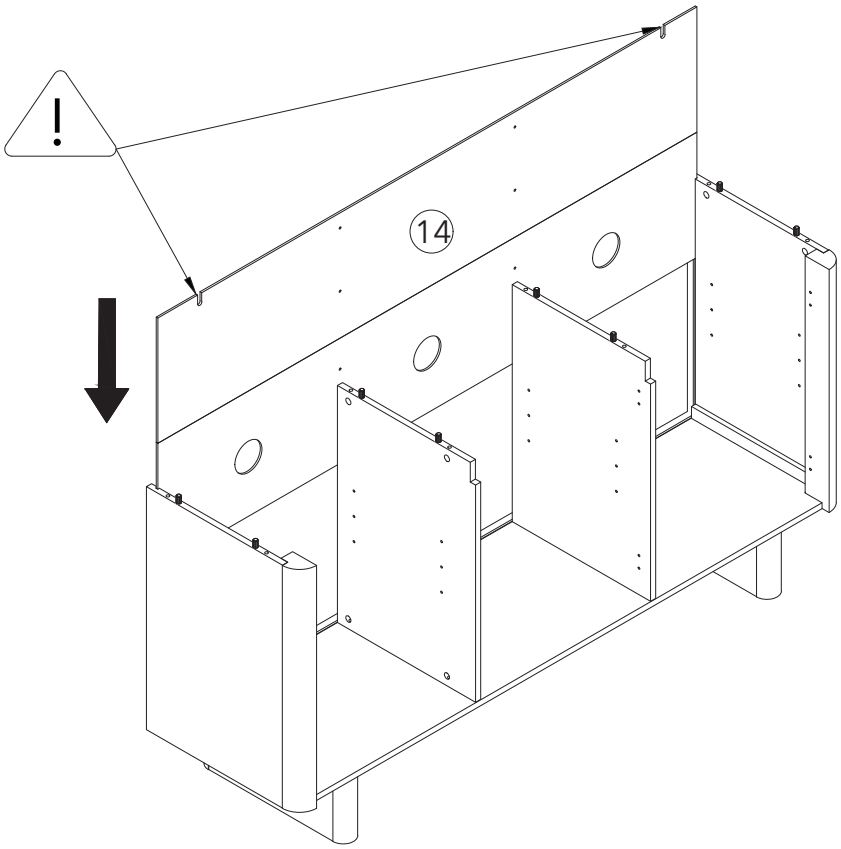



Step 14:

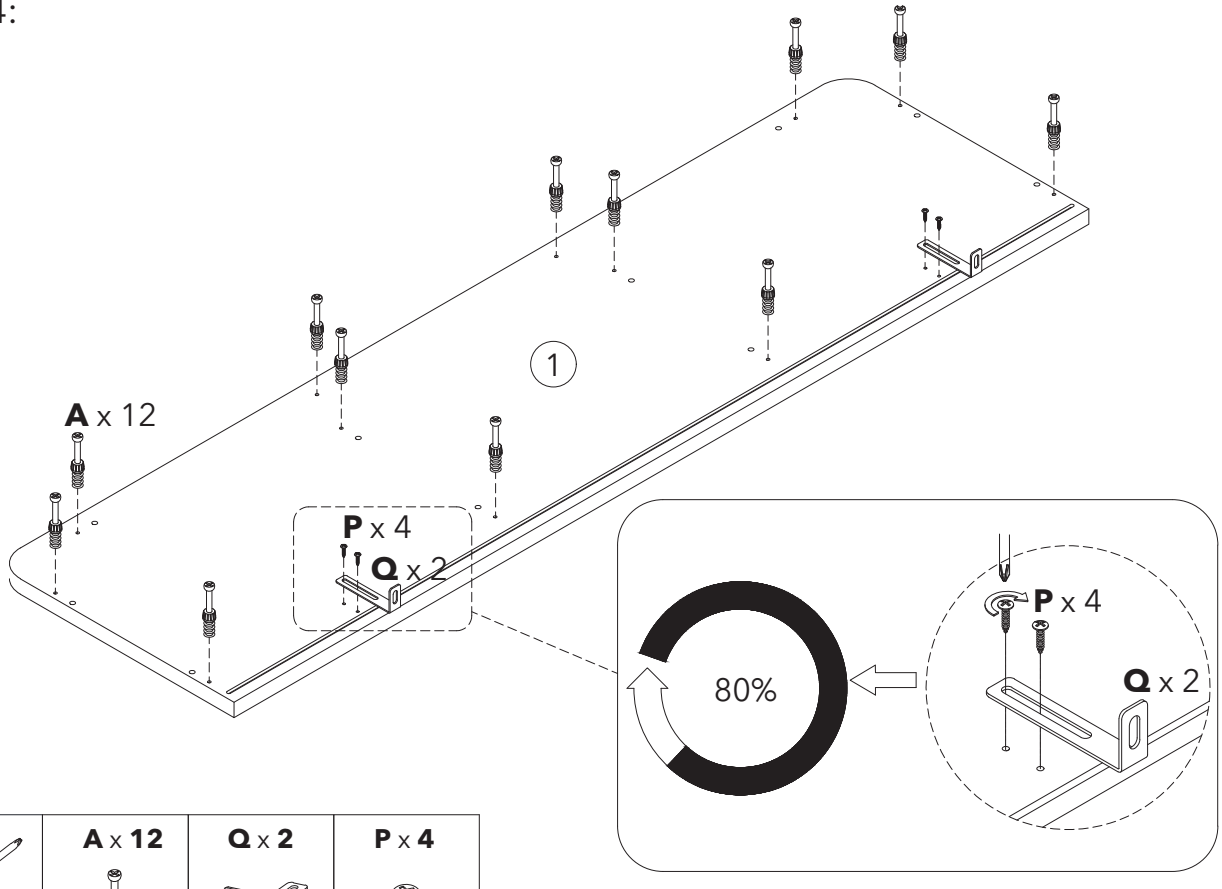

	A x 12	Q x 2	P x 4
			


Step 15:

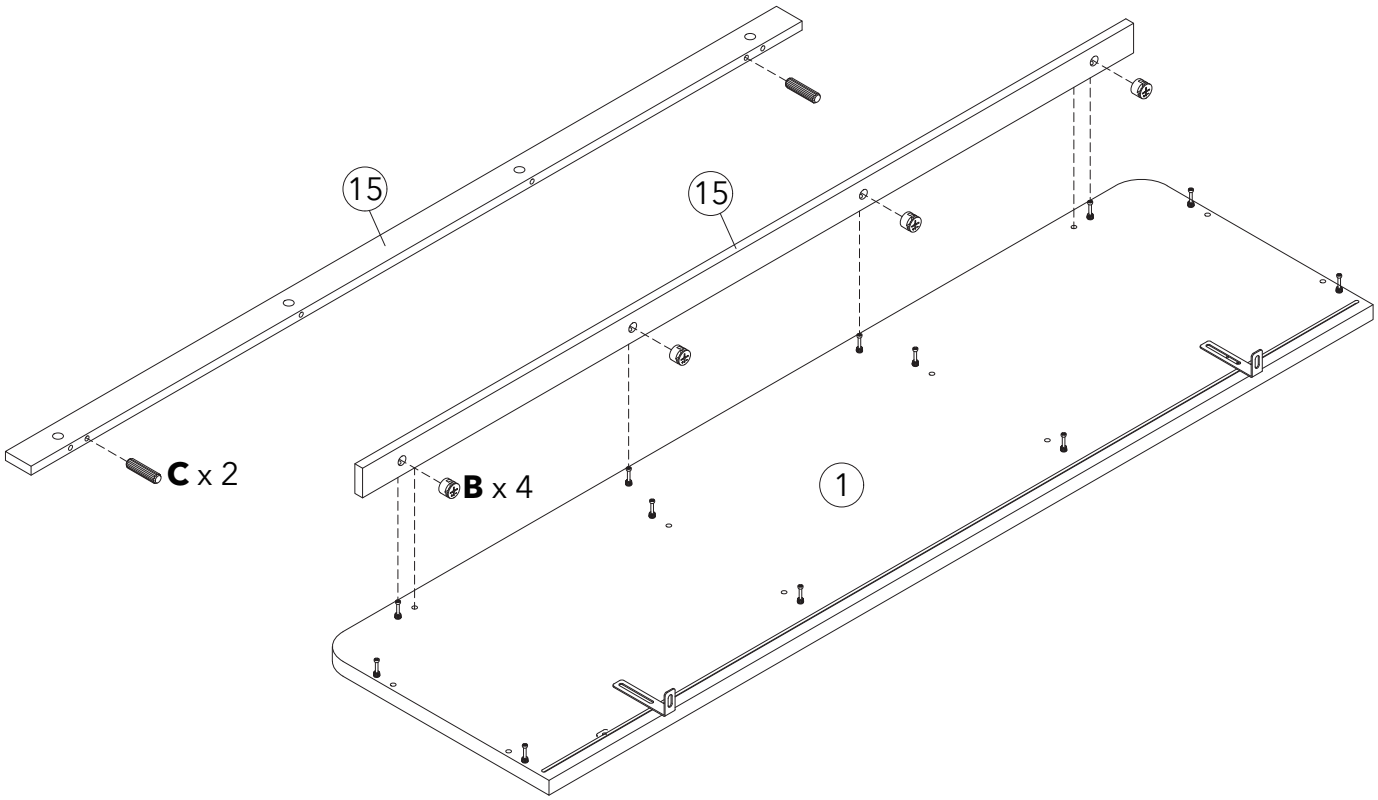


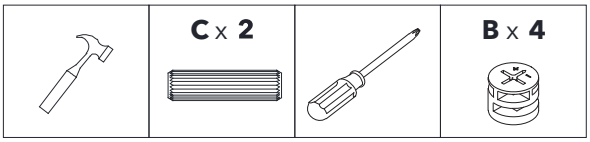


Step 16:



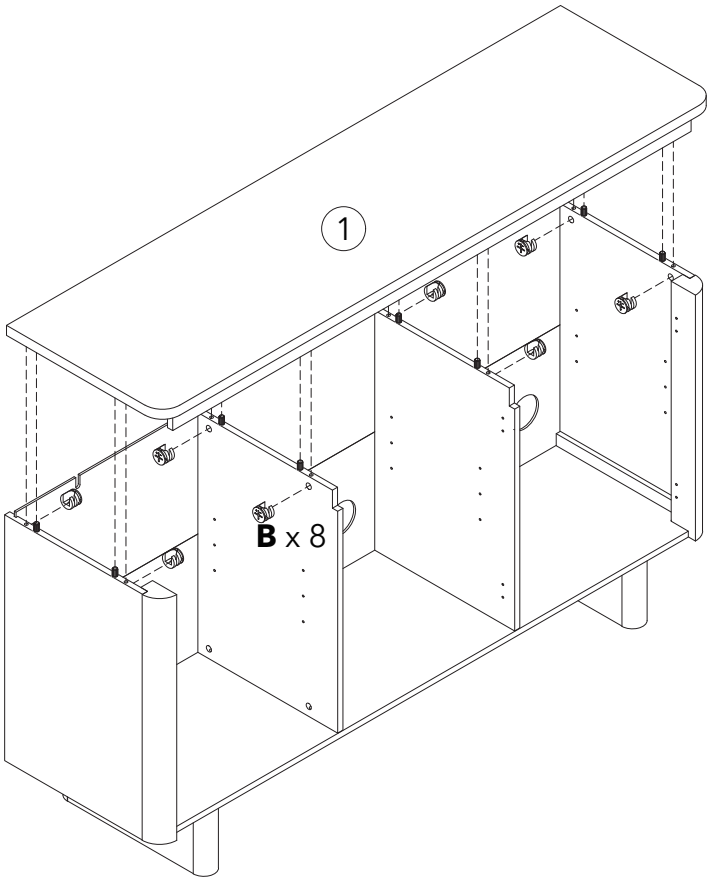


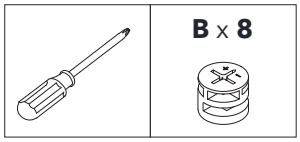


Step 17:

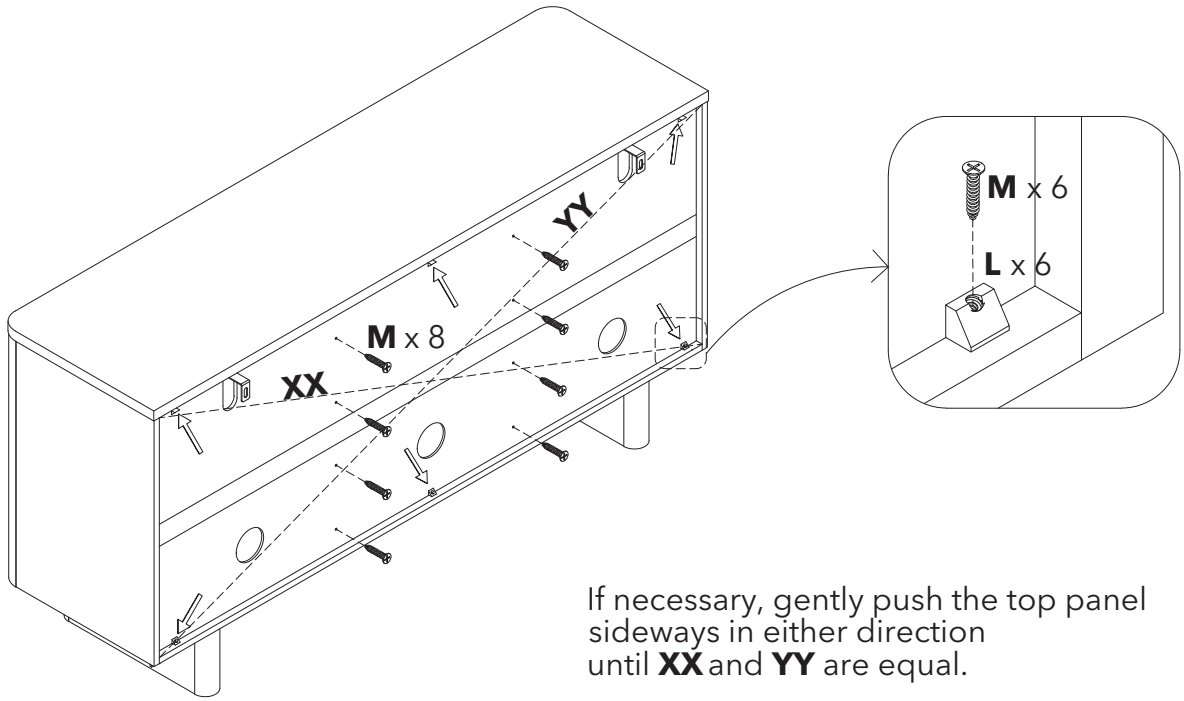


If necessary, gently push the top panel sideways in either direction until **XX** and **YY** are equal.

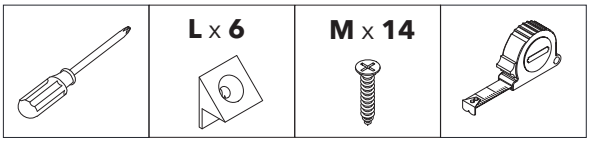



Step 18:

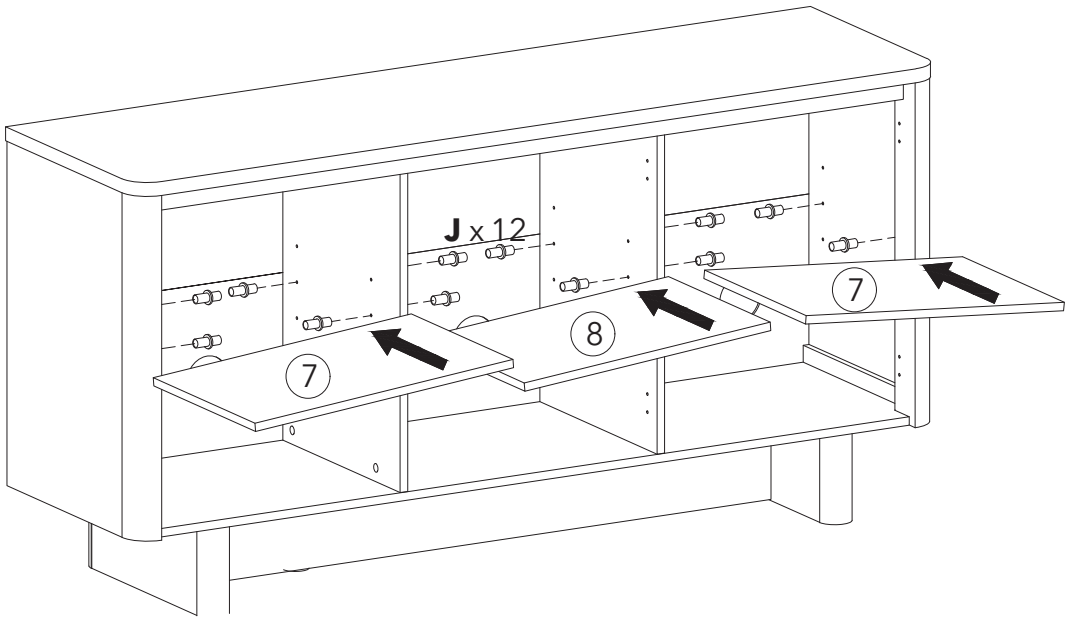

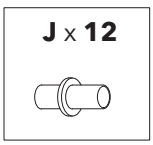



Step 19:

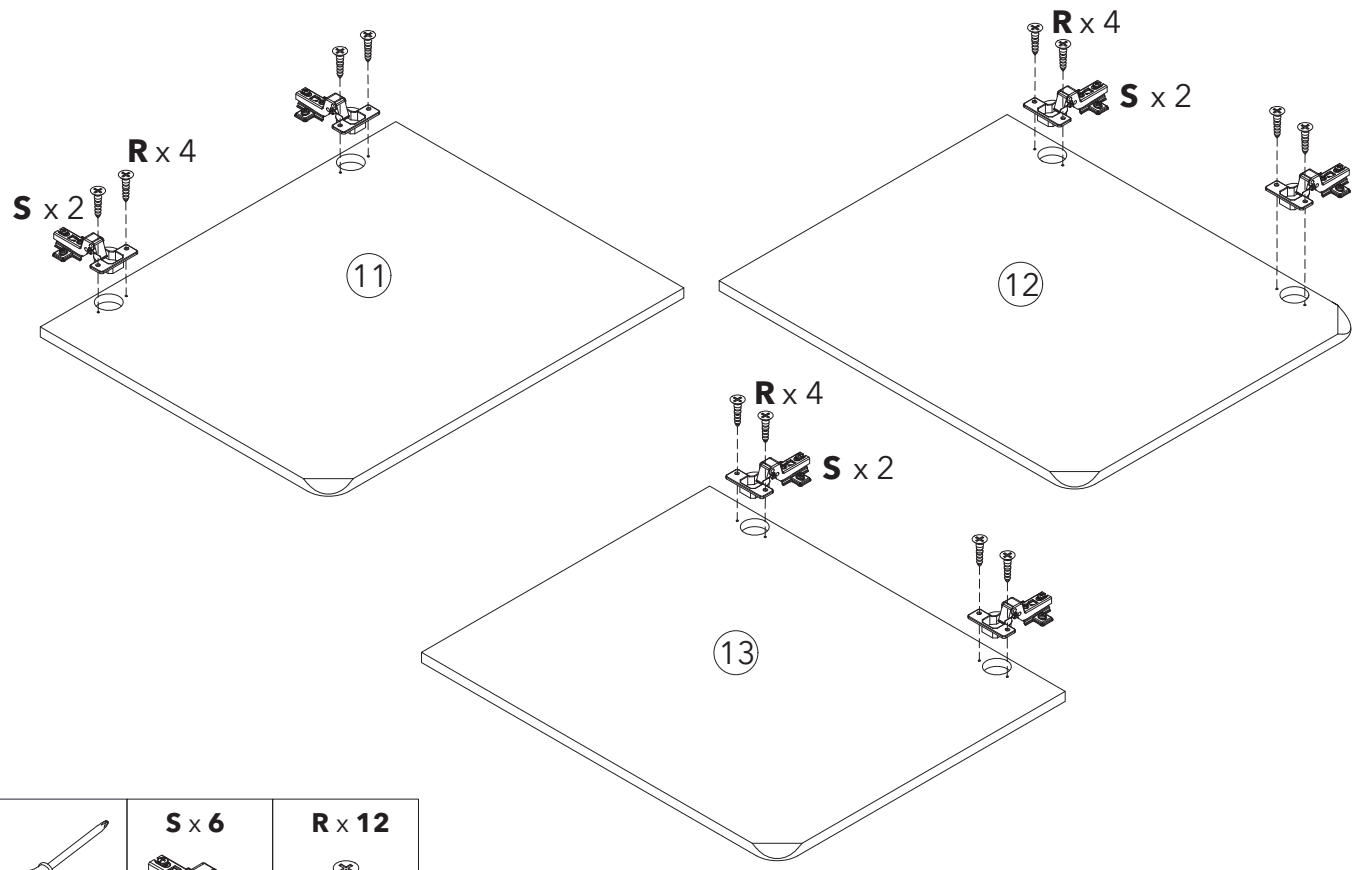

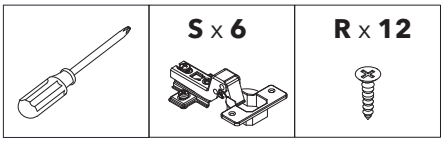


Step 20:

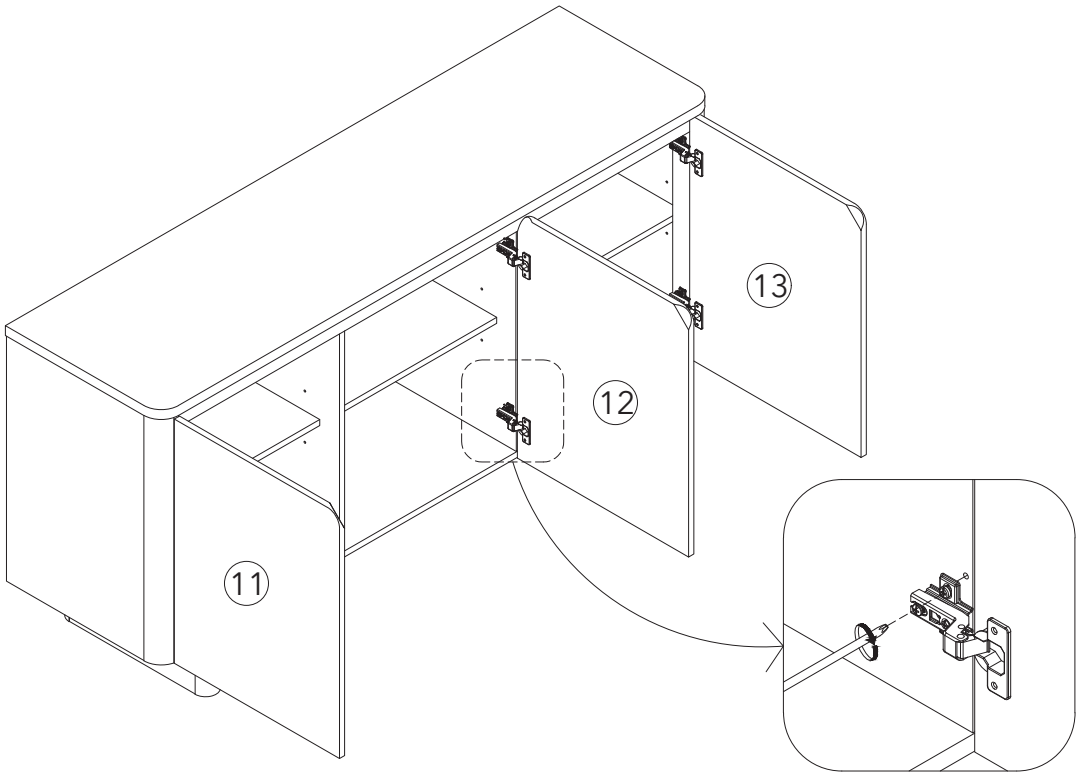

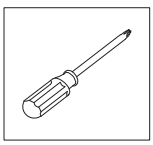


Step 21:

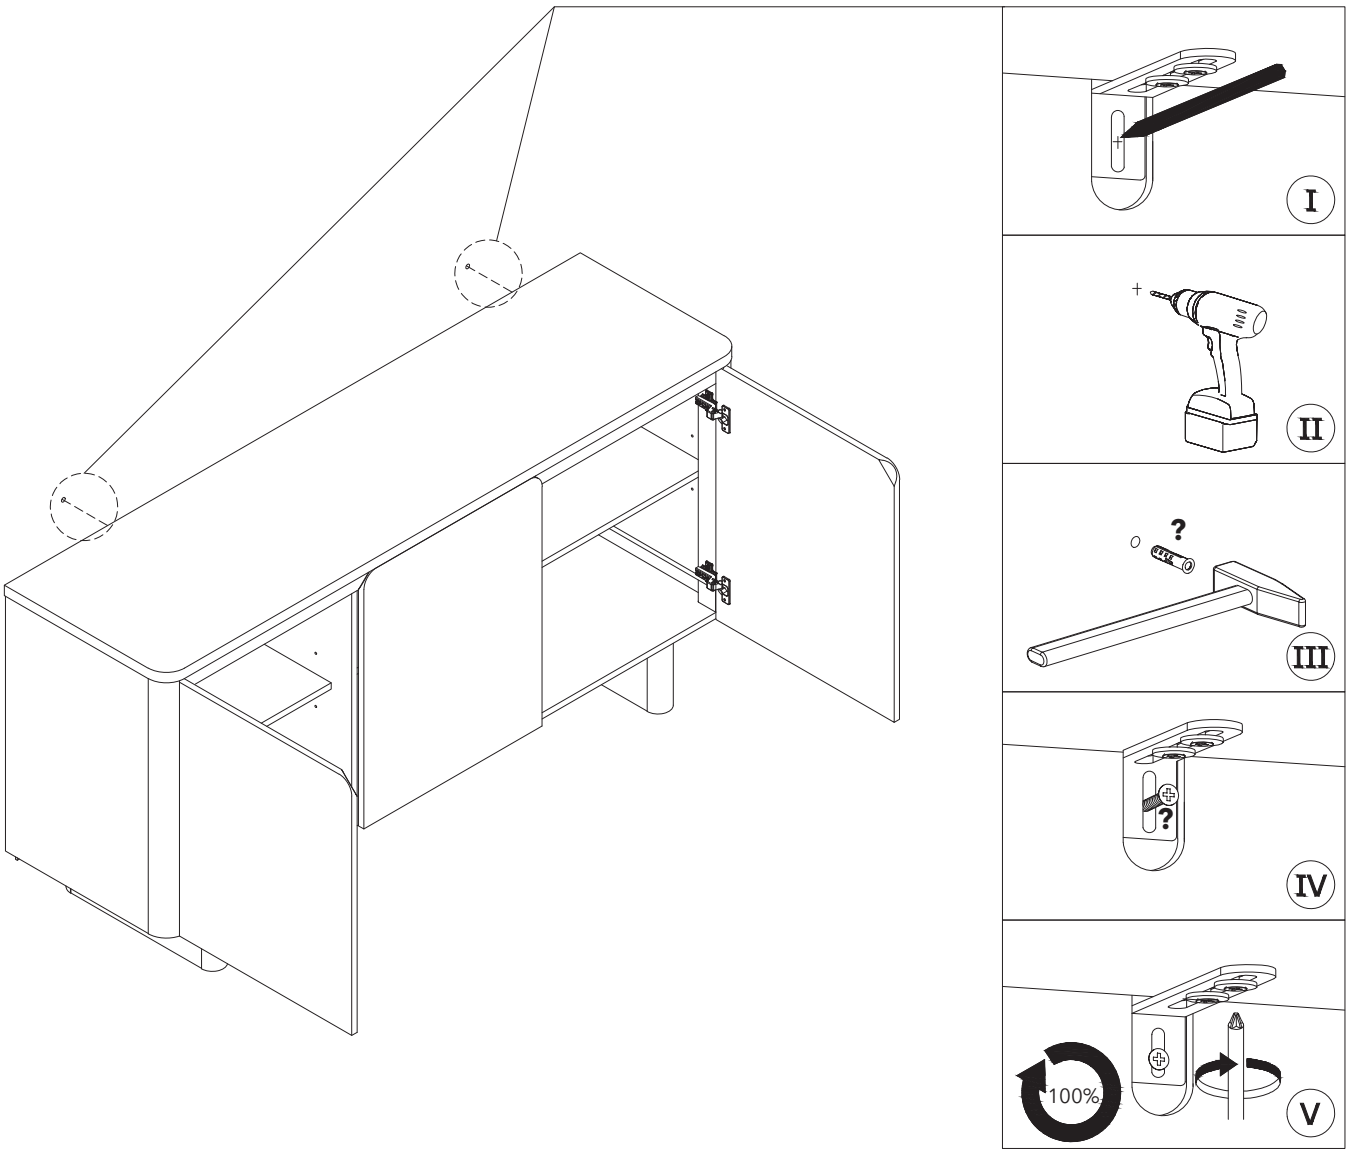


The screws required for the wall/fumiture junction, which depend on the type of wall, are not supplied. Ensure that the hardware is suited to your substrate.
If in doubt, consult a specialist.


Step 22:

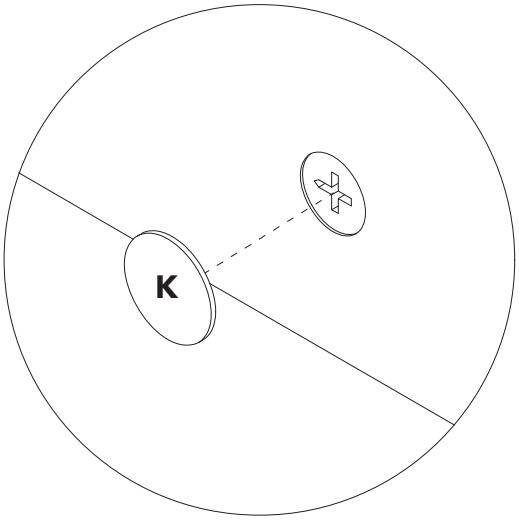


If needed, use caps to cover the visible holes.

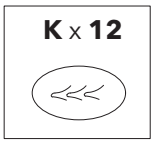


Step 23:

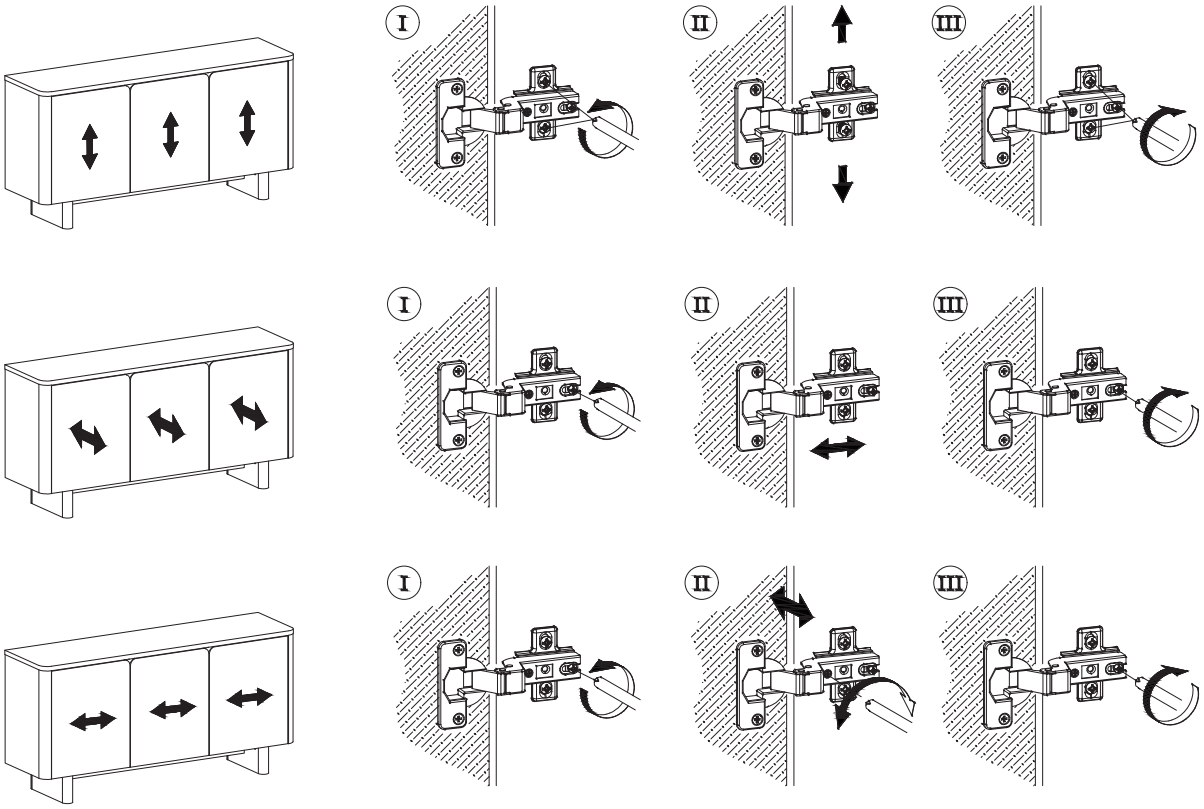

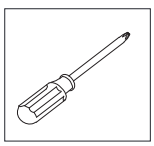

Wall fixings

Follow this step-by-step guide

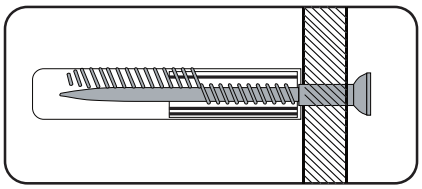


IMPORTANT:
When drilling into walls always check there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

HINTS

1. General Rule; Always use a larger screw and wall plug if you are not sure.
2. Ensure you use the recommended drill bit to match the wall plug and hole size.
3. Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic title to avoid splitting or cracking.
5. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls
You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plastic board.

1. STANDARD Wall Plug
General wall materials

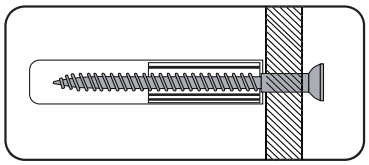


These come in various sizes and are made from plastic or sometimes wood fibre.

2. GENERAL PURPOSE Wall Plug
Aerated/Breeze block

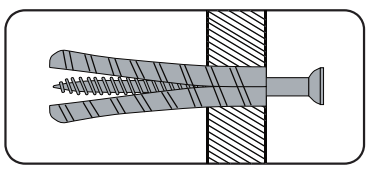


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, a General Purpose Plug can be used.

3. SHIELD ANCHOR Wall Plug
Heavy loads

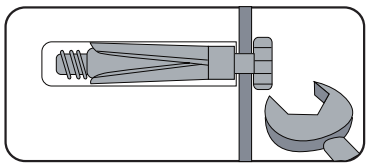


For use with heavier loads such as TV & Hi-fi Speakers and Satellite Dishes etc.

4. CAVITY FIXING Wall Plug

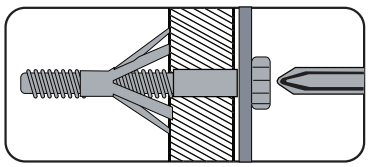


For use with plaster board partitions or hollow wooden doors.

5. CAVITY FIXING HEAVY DUTY Wall Plug

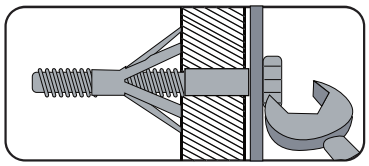

For use with plaster board partitions or hollow wooden doors.

6. HAMMER FIXING Wall Plug

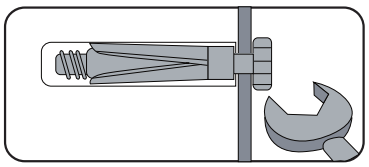

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **Safety**
Always check the fitting and location to ensure your safety in and around the home.

⚠ **Fitting**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Furniture care advice

Furniture care advice

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

From time to time check that there are no loose screws on this unit.

Strong direct sunlight can affect the colour dramatically, so try to avoid this as much as possible, we also recommend that any ornaments, coasters and items placed on the product are periodically moved around to allow the colour to mellow evenly.

Always use mats and coasters to protect the surface when placing items on the furniture. This will help to protect the finish from heat, liquids or items that might scratch your furniture.

If items are to be placed on the surface of your furniture and have rubber feet, it is advisable to use mats to prevent marking.

Always lift your furniture into place, avoid dragging it across the floor as this can cause damage to joints.

When placing furniture on a wooden or laminate floor, please ensure that the plastic or felt protectors are securely fitted and in place.

Remove any spills immediately to avoid staining.

Dust regularly with a soft lint free cloth or duster.

Uneven floors could give the impression that doors of wall units and wardrobes are out of alignment. Be aware of this and compensate if necessary by adjusting the hinges or packing a corner to level the item. Please refer to the instructions, included with your furniture, and adjust accordingly.

If your furniture becomes stained, scratched, chipped or suffers other damage, we recommend professional help is sought to restore it. Please contact our customer services line for recommended agents.

Always follow fitting instructions carefully and retain them for future use.