

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

90min		FLOOR AREA 2M x 2M
APPROXIMATE ASSEMBLY TIME	2 PERSON ASSEMBLY	REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS




PHILLIPS SCREWDRIVER

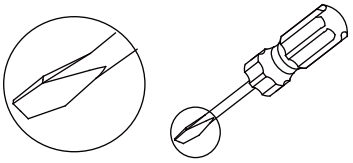

Flat Head screwdriver

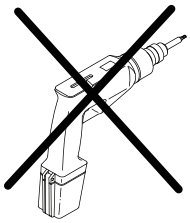

DO NOT USE POWER DRILL

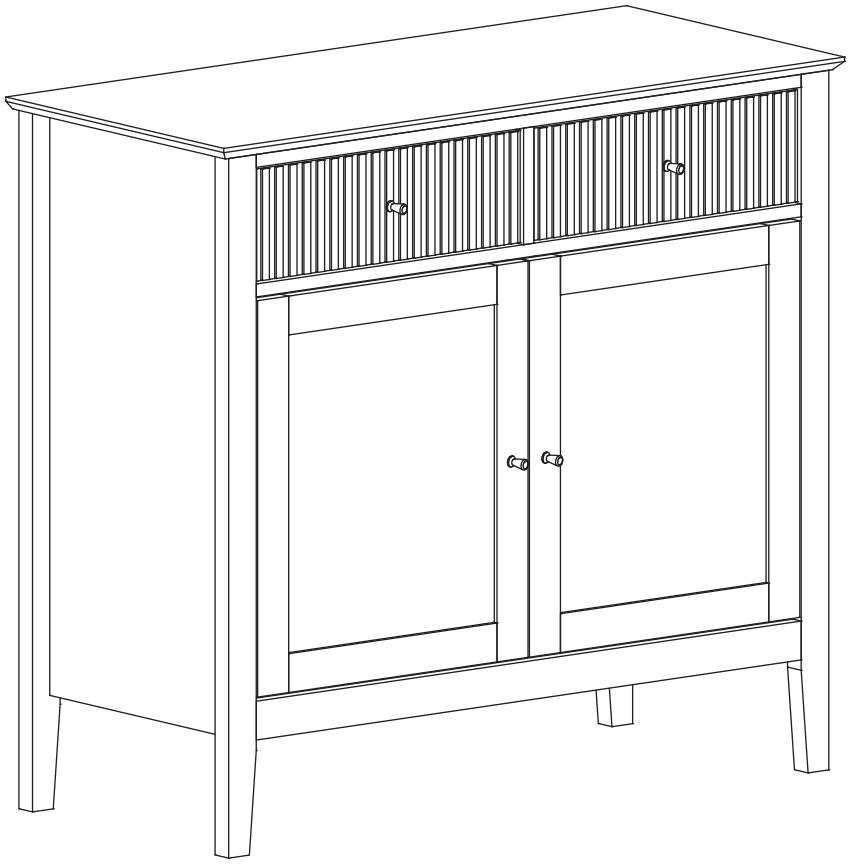

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. Always secure this product with an anchor device to the wall or suitable surface. Wall fixing hardware are not included since different surface materials require different attachments.Please seek professional advice if you are in doubt of what fixing device to use.

Your product has been provided with a permanent safety label that should never be removed for safety reasons.



For more information please visit www.productsafety.gov.au

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

⚠ WARNING, PLEASE READ To Reduce the risk of toppling furniture

- NEVER open more than one drawer at the time.
- NEVER allow children to stand, climb or hang on furniture. lt may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- ALWAYS anchor this product to a wall or other suitable surface. Check anchors regularly.
- Place heavy items in lower drawers

  NEVER put a TV on this product.
  For more information please visit www.productsafety.gov.au

Important

Please read these instructions carefully before use and keep for future reference.

- This product is intended for domestic use only and is not designed for commercial use.
- Do not assemble/use this item if any components are missing or damaged. Please contact the retailer straight away.
- DO NOT attempt to modify your item as this will void your warranty. Please call the retailer for required parts.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.

Please refer to separate Warranty Certificate for full warranty details and information.

Tips before you start:

- **Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.**
- **For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.**

Assembly Tips

1. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
2. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
3. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
4. During assembly please take care not to over-tighten any fittings, as this may damage the product.
5. Always place the product on a flat, steady and stable surface.
6. Do not stand on the product. Do not use the product as a stepladder.
7. This product is intended for indoor, household use only as it is non industrial product.
8. Use of power tools is NOT recommended for assembling this product.
9. Due to the painted finish of this product, when first opening the carton and assembling, the smell of paint may be noticeable. If there is any smell of paint it will dissipate over a short period of time. The paint is non-toxic and contains no lead. Please contact the retailer you purchased this item from if you have any concerns.
10. Please use caution and care when lifting the product to avoid personal injury and/or damage.


Care and Maintenance of your Furniture

- ☑ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean. Never use harsh chemicals or strong detergents as this could damage the finish of your product.
- ☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Avoid placing sharp objects on the surface as this may scratch the surface. It is recommended to use trivets or coasters under flowerpots, vases, cups etc to avoid damage to your item.
- ☑ Please do not place hot/cold items (eg. Hot drinks) directly on to the surface.
- ☑ Do not pull or drag your item. Ensure its evenly supported and lifted while moving it.
- ☑ If your item has been fitted with an anti toppling device, check anchors regularly.

Zara Fluted 2 Door 2 Drawer Sideboard Buffet


Tips before you start:

QUICKFIT

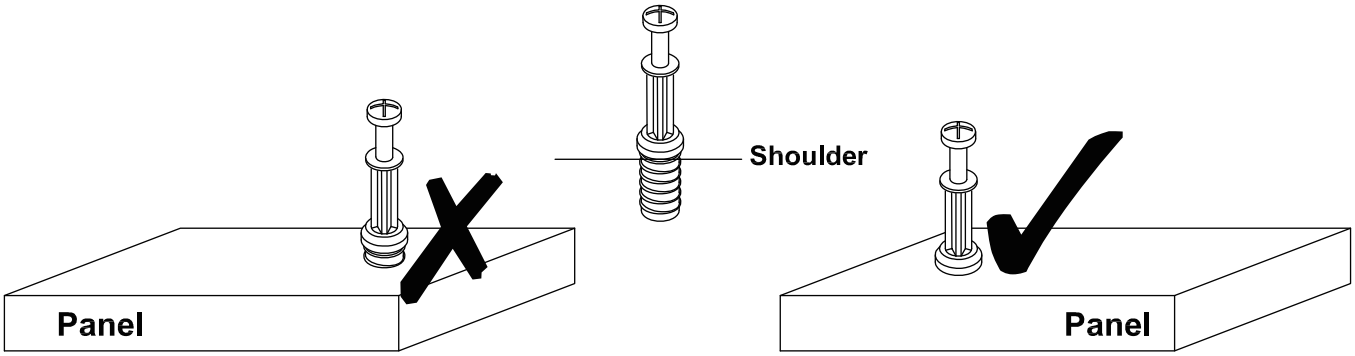

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

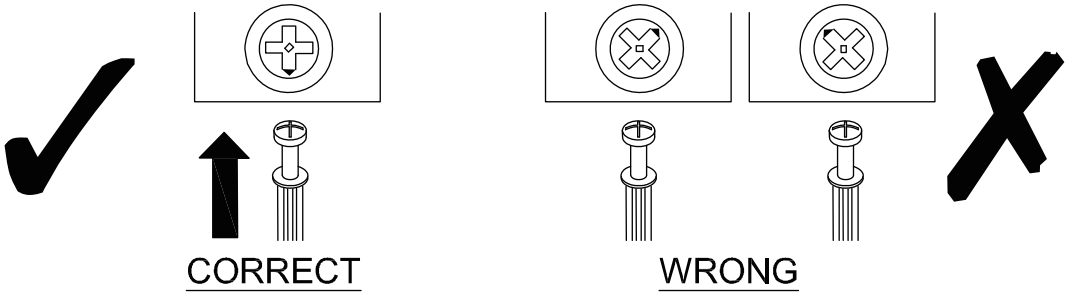


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock


when the two panels are joined.

Cam lock should be inserted before quickfit.

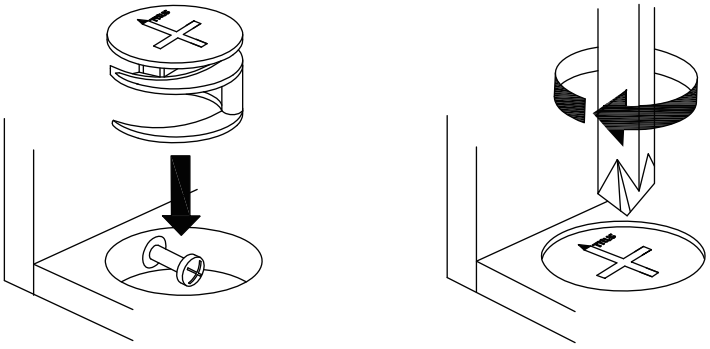


















Turn cam lock clockwise to tighten.

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

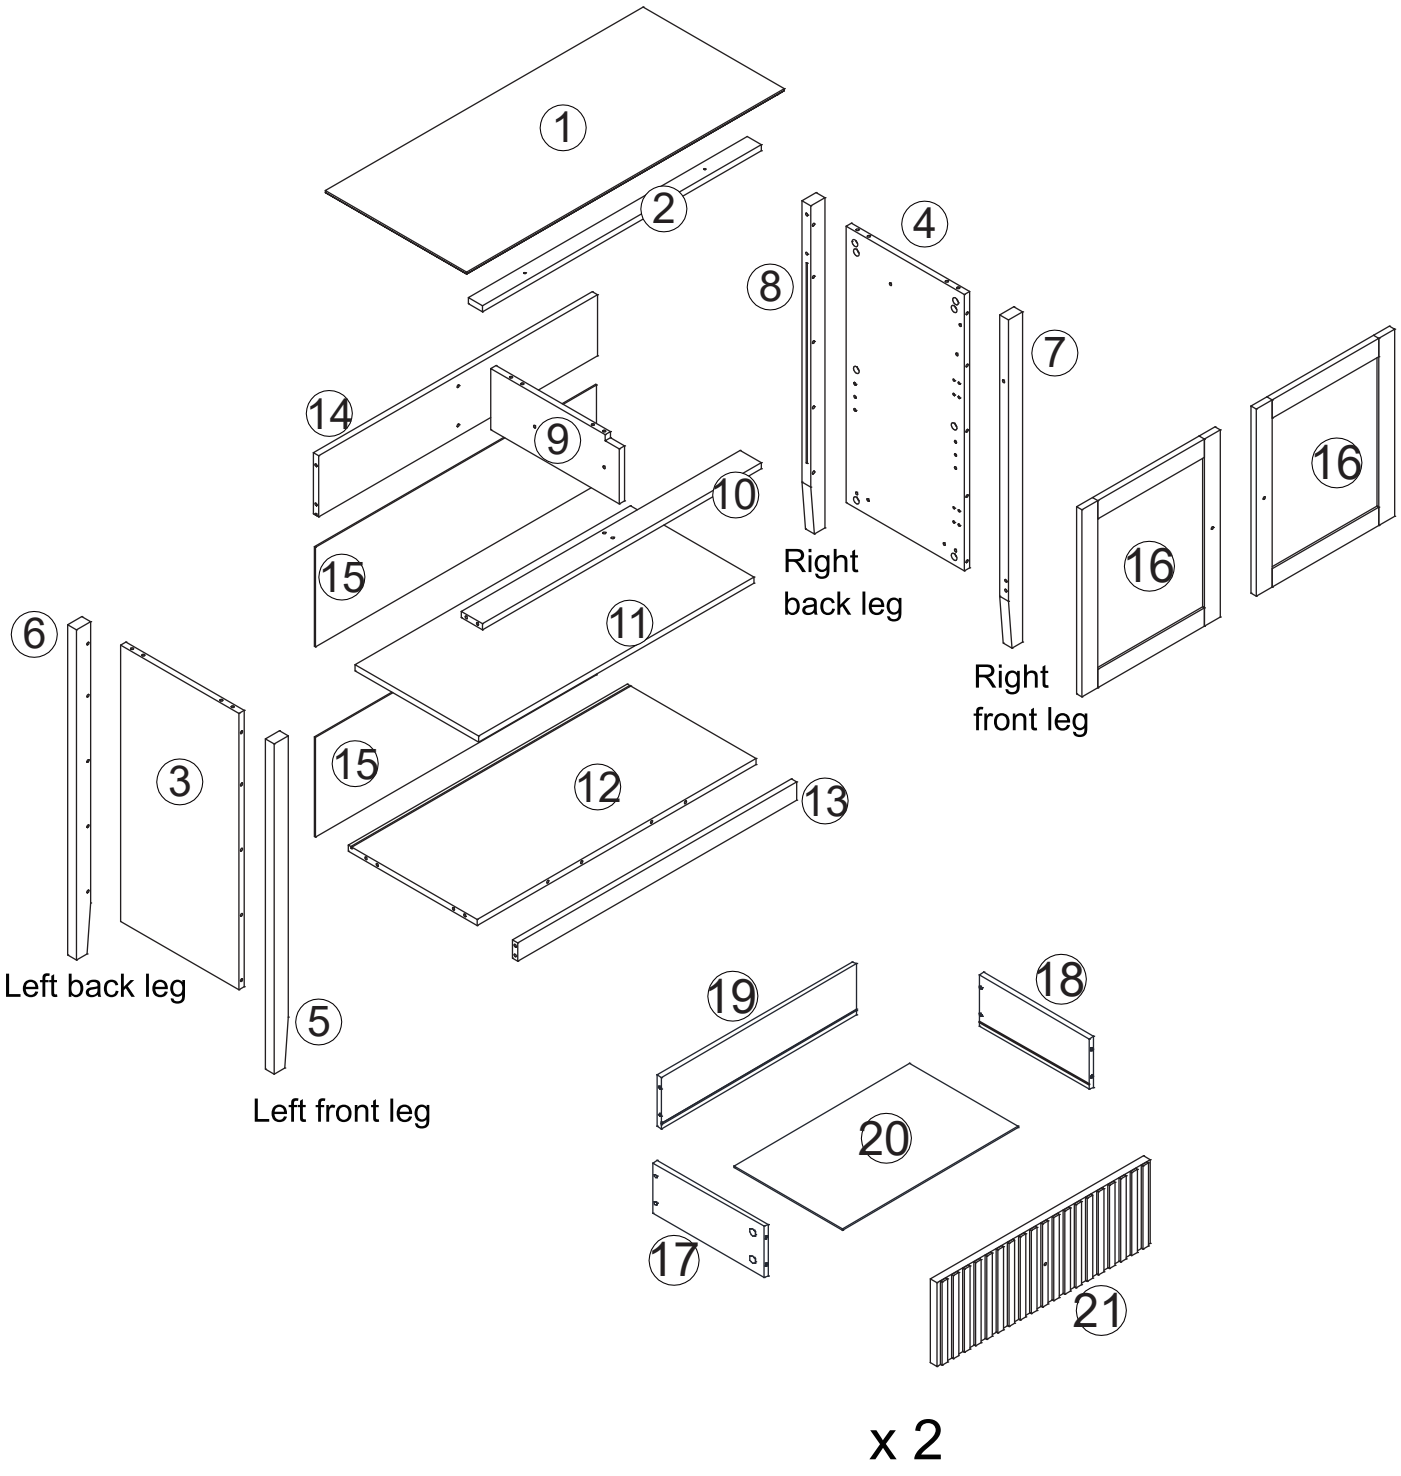


Zara Fluted 2 Door 2 Drawer Sideboard Buffet

PARTS LIST

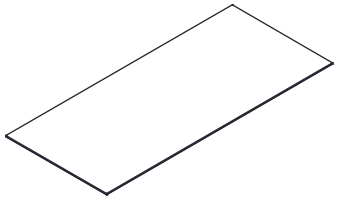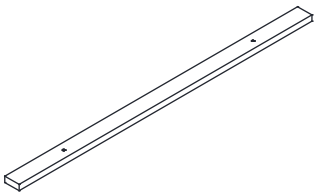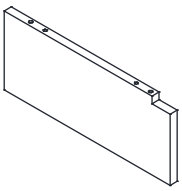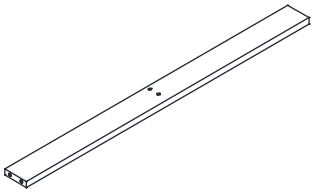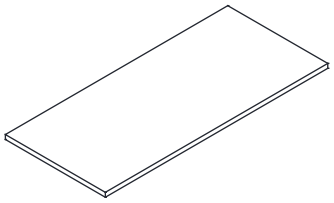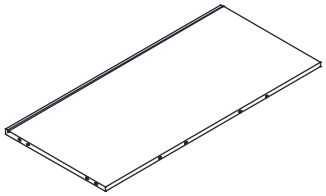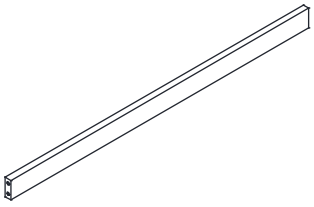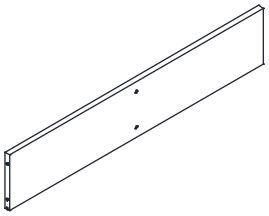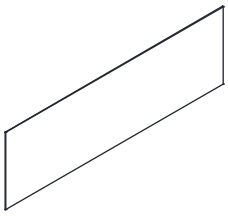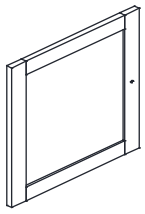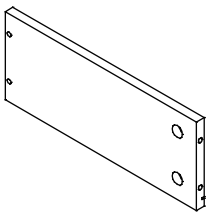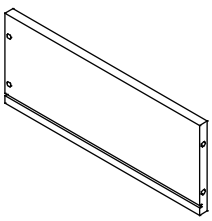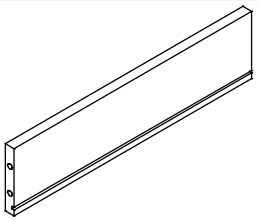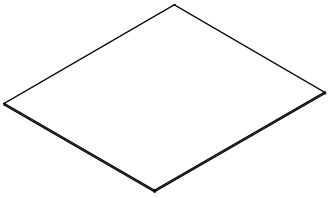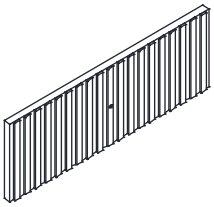			
1 1PC	2 1PC	3 1PC	4 1PC
			
5 1PC	6 1PC	7 1PC	8 1PC
			
9 1PC	10 1PC	11 1PC	12 1PC
			
13 1PC	14 1PC	15 2PCS	16 2PCS
			
17 2PCS	18 2PCS	19 2PCS	20 2PCS
			
21 2PCS			

Zara Fluted 2 Door 2 Drawer Sideboard Buffet


HARDWARE LIST



Cam Bolt
Ax40




Cam Lock
Bx40



Wooden Dowel
(6X30mm)Cx24



Screw
Dx24



Screw
Ex12



I-Beam
Fx1



Floor Pads
Gx4




Screw
Hx2



Handle
Ix4



Screw
Jx4

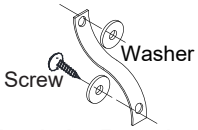

Anti-tip Bracket
Kx2



Buckle Screw
Lx8




Cabinet Slider
Mx4




Drawer Slider
Nx4



Layered Support
Ox4




Magnet Screw
Px1




Hinge
Qx4



Screw
Rx32




L Bracket
Sx4

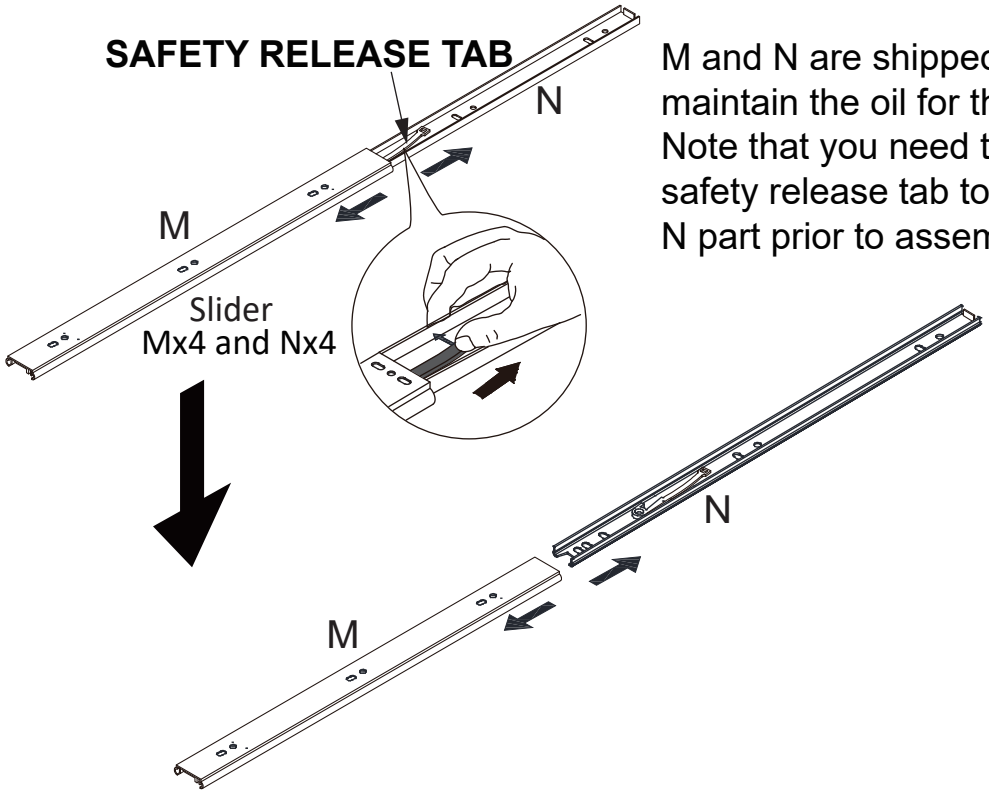


M and N are shipped together to maintain the oil for the ball bearings. Note that you need to push up the safety release tab to take out the N part prior to assembly.


Zara Fluted 2 Door 2 Drawer Sideboard Buffet


STEP 1

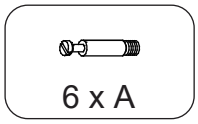

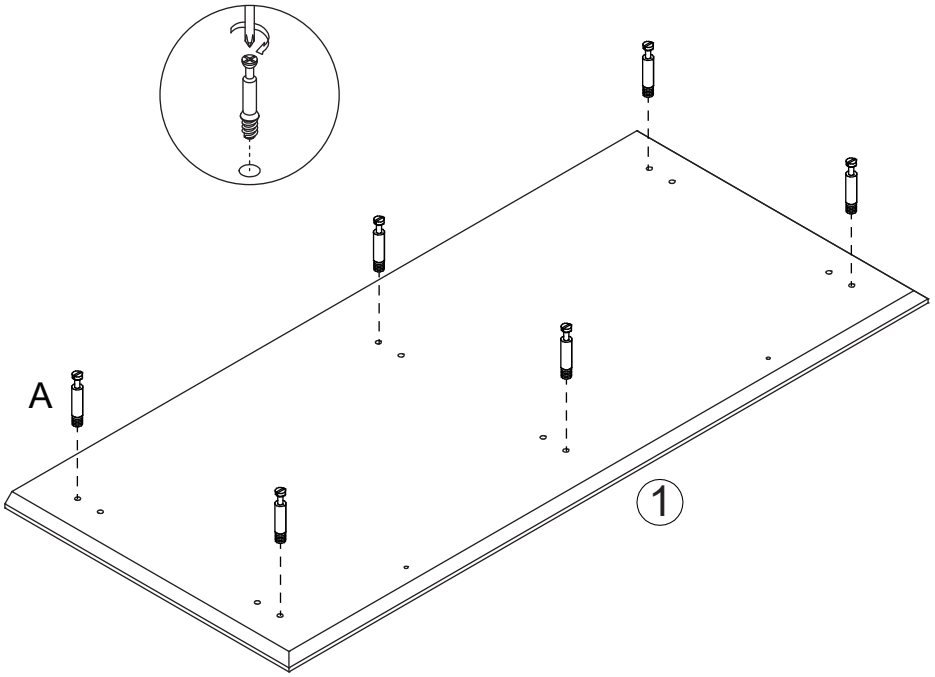


STEP 2

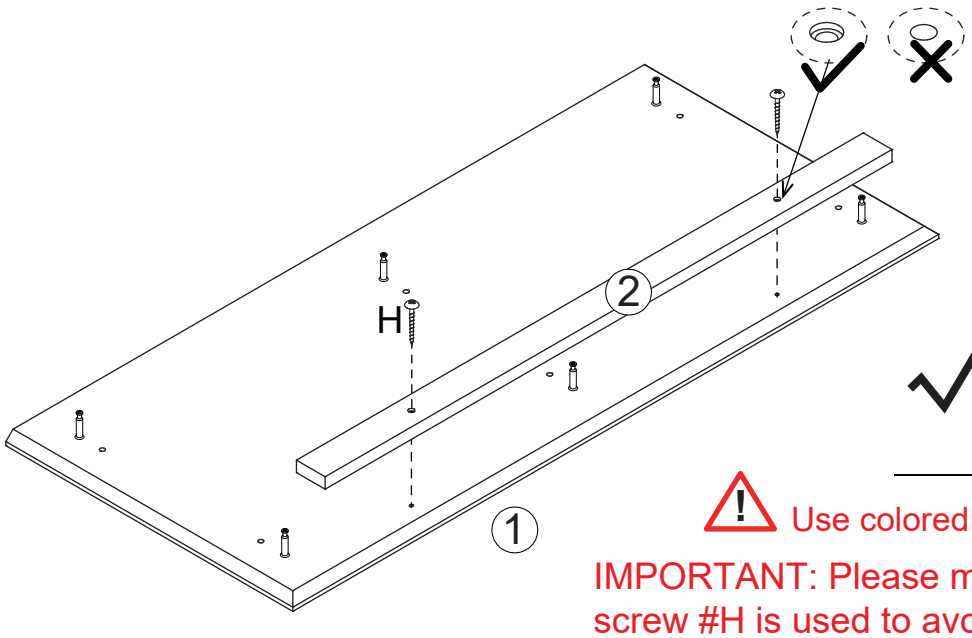

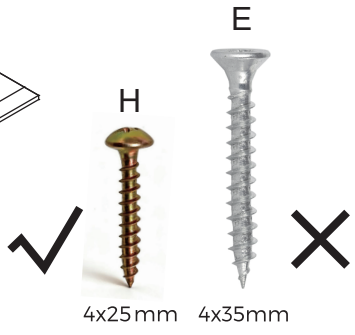


Use colored screw #H on this step.

IMPORTANT: Please make sure the correct size screw #H is used to avoid damage to your item.

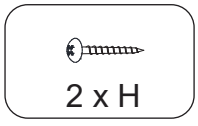


Zara Fluted 2 Door 2 Drawer Sideboard Buffet

STEP 3

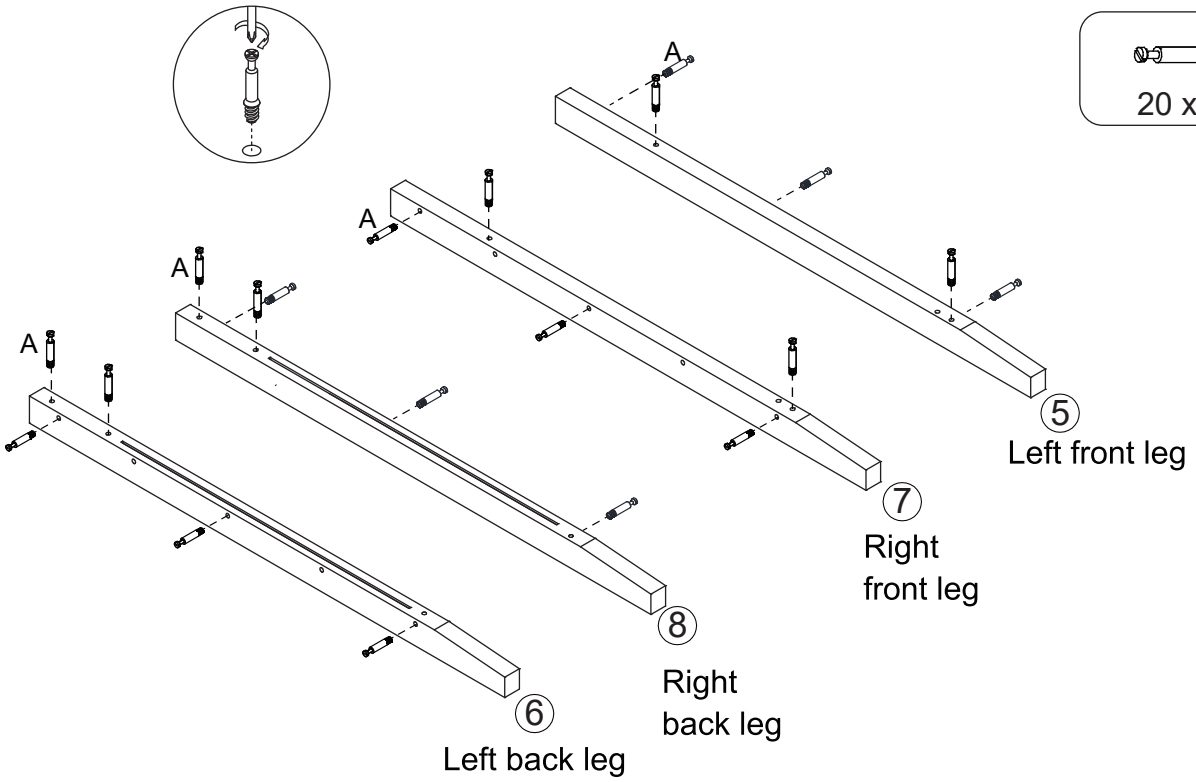


STEP 4

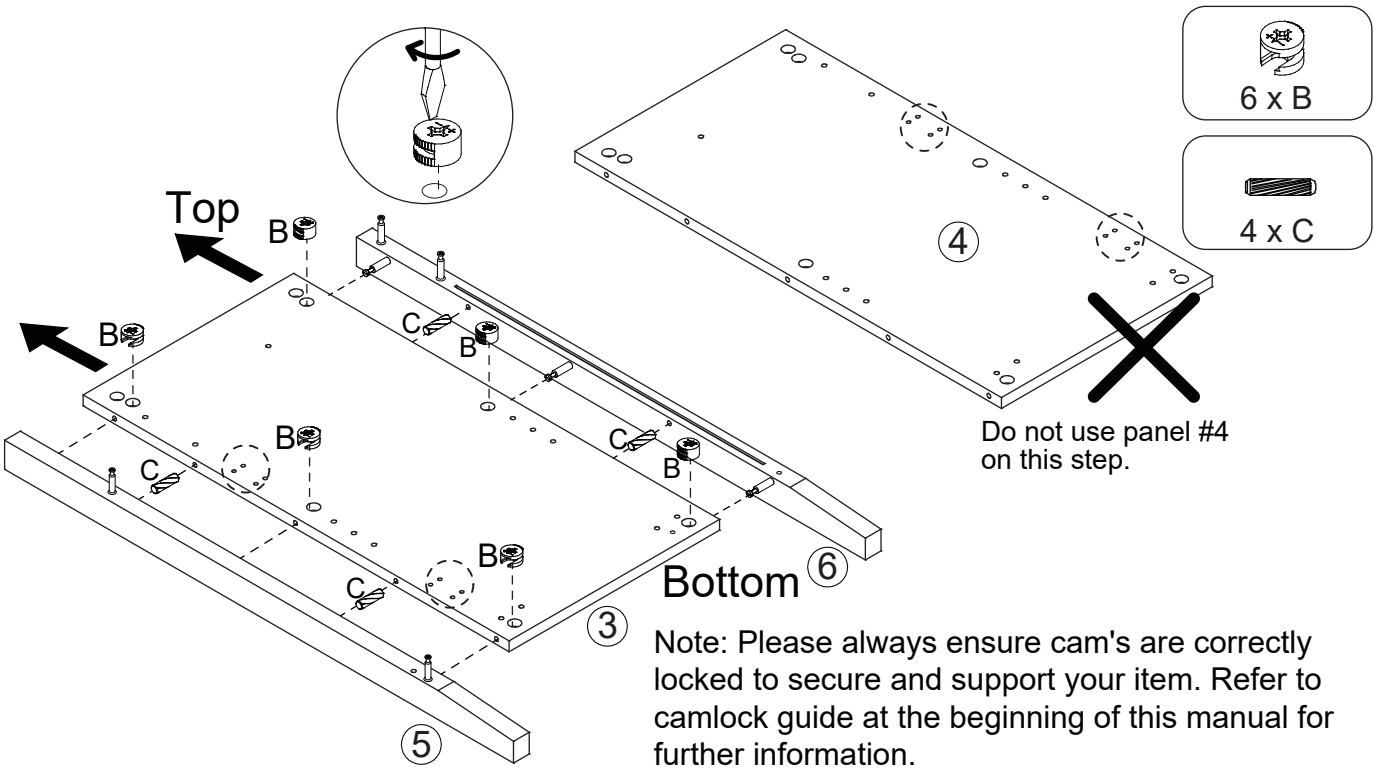


Note: Please always ensure cam's are correctly locked to secure and support your item. Refer to camlock guide at the beginning of this manual for further information.


STEP 5

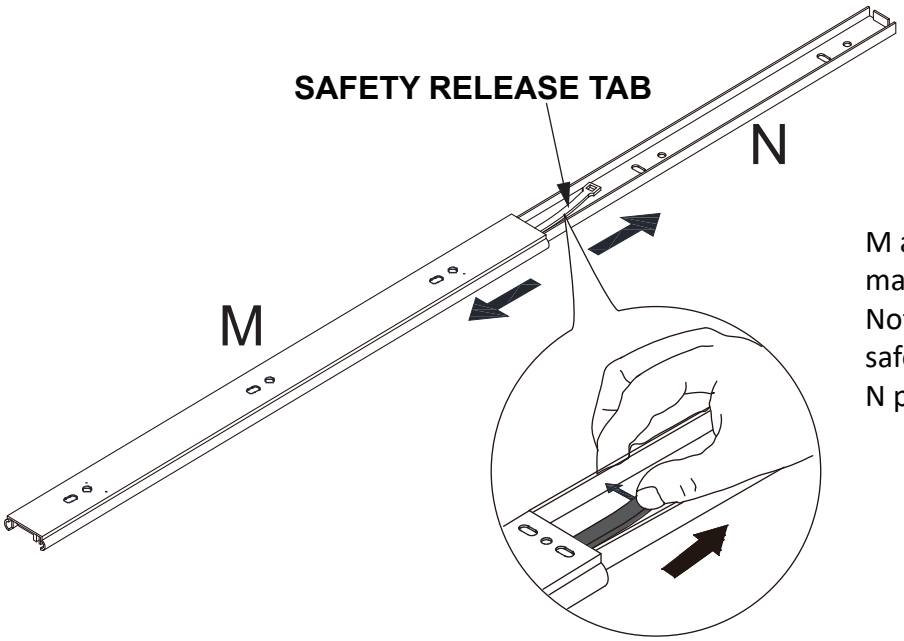



M and N are shipped together to maintain the oil for the ball bearings. Note that you need to push up the safety release tab to take out the N part prior to assembly.

STEP 6

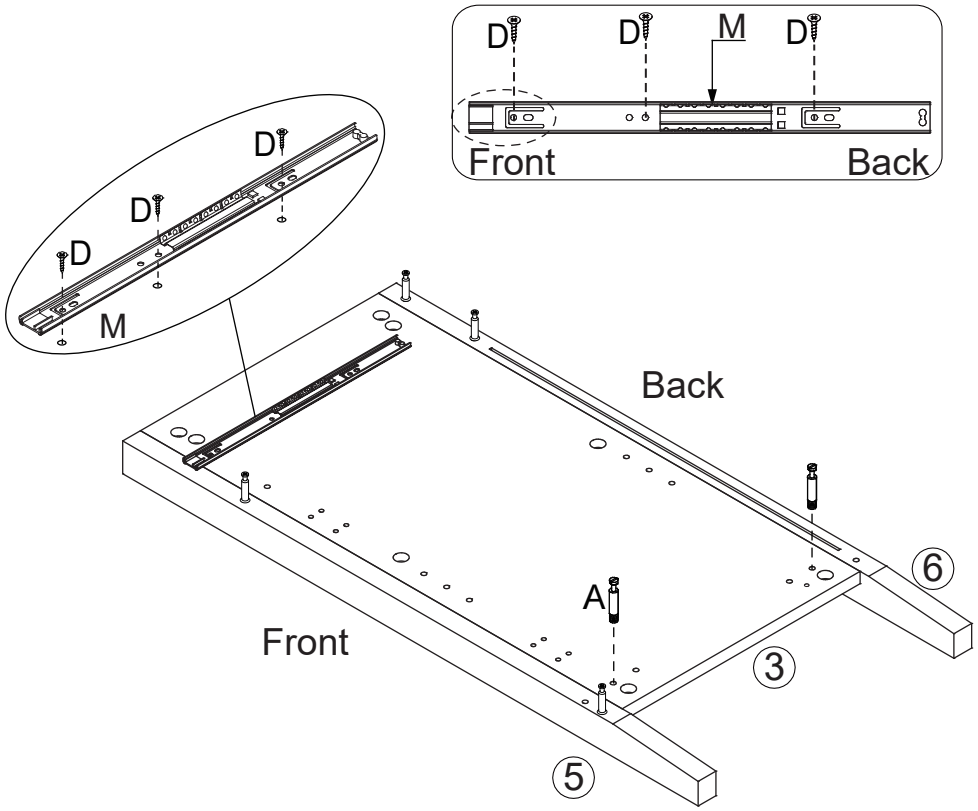

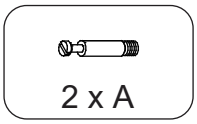


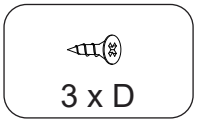


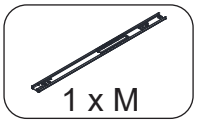



STEP 7

Note: Please always ensure cam's are correctly locked to secure and support your item. Refer to camlock guide at the beginning of this manual for further information

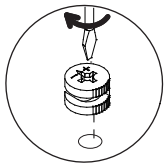


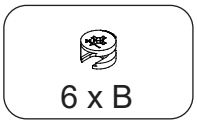


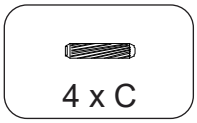


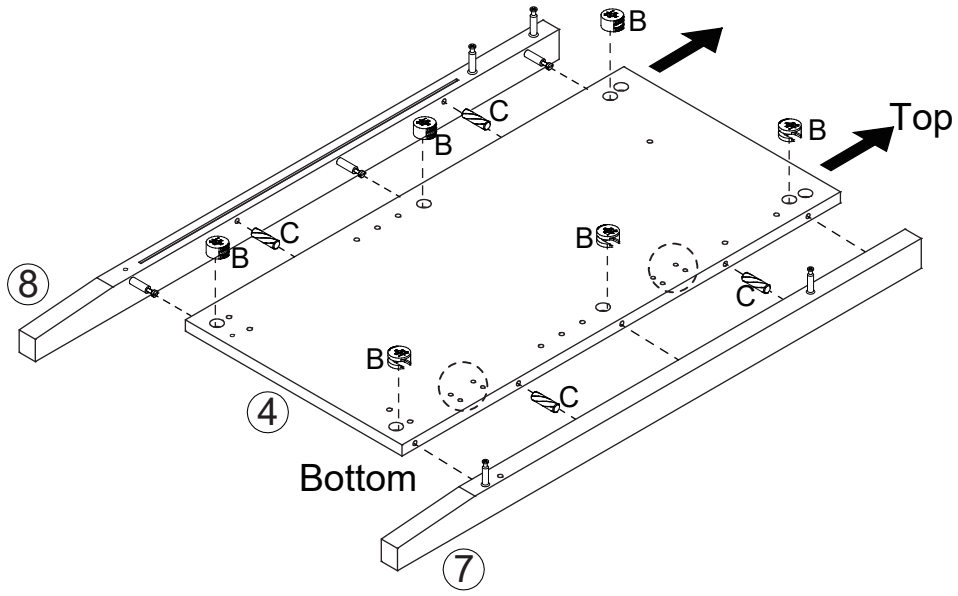



STEP 8

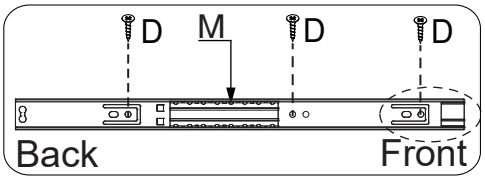


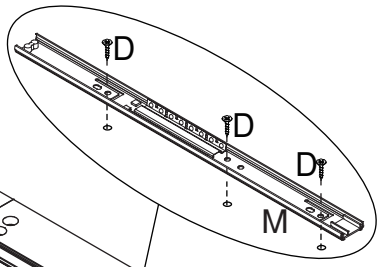

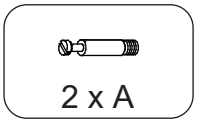


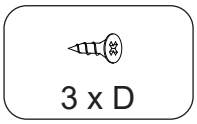


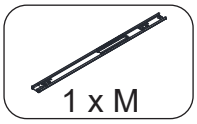


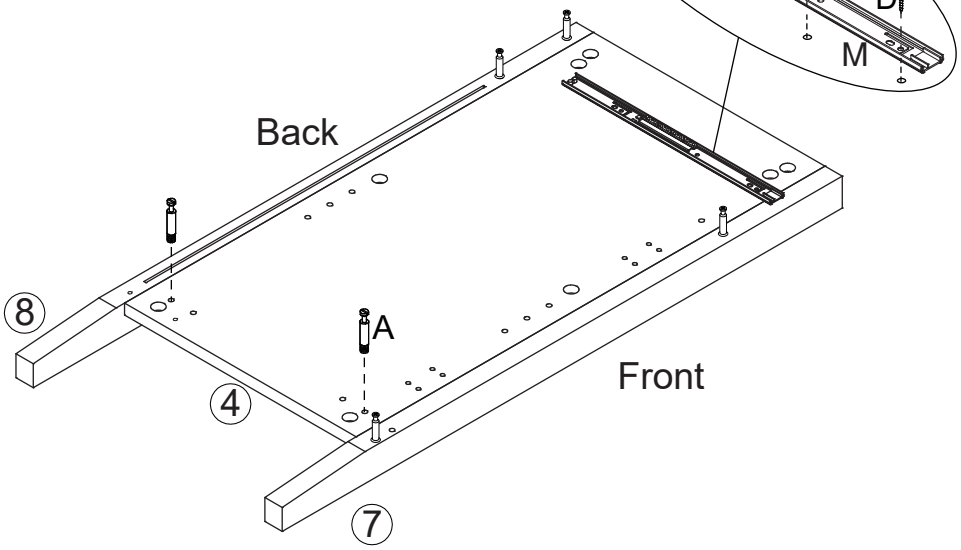


STEP 9

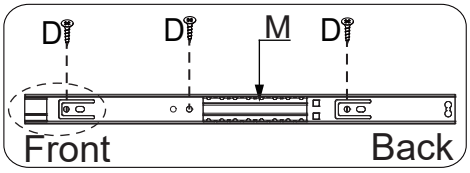


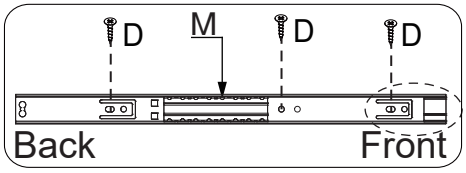

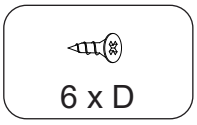


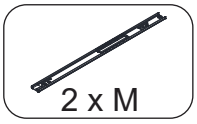


Note: Please check screw placement carefully as its different for each side of the panel to avoid the screws hitting each other.

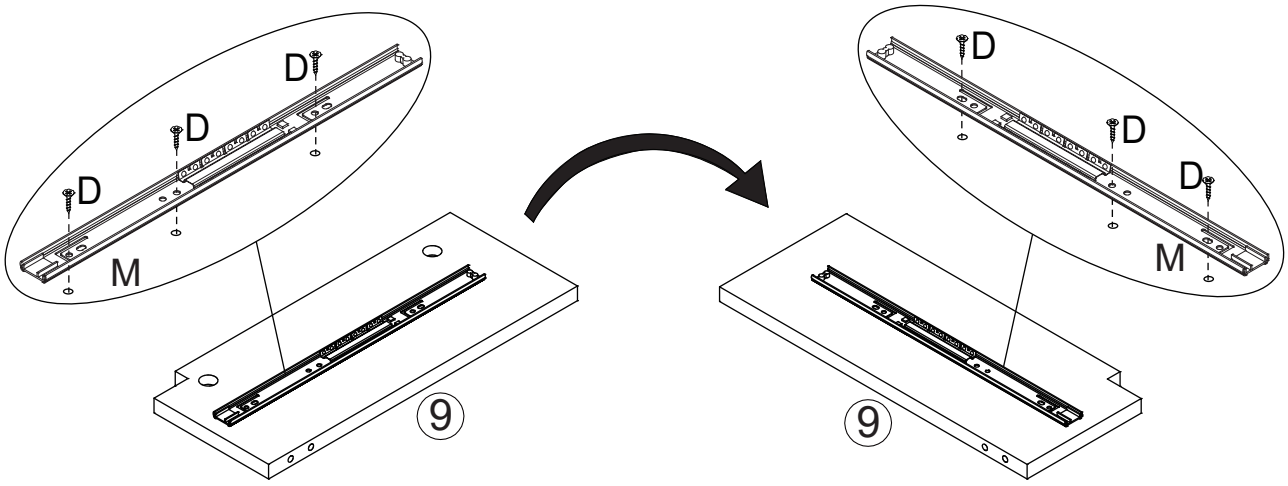


STEP 10

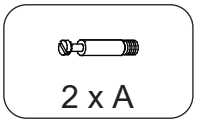


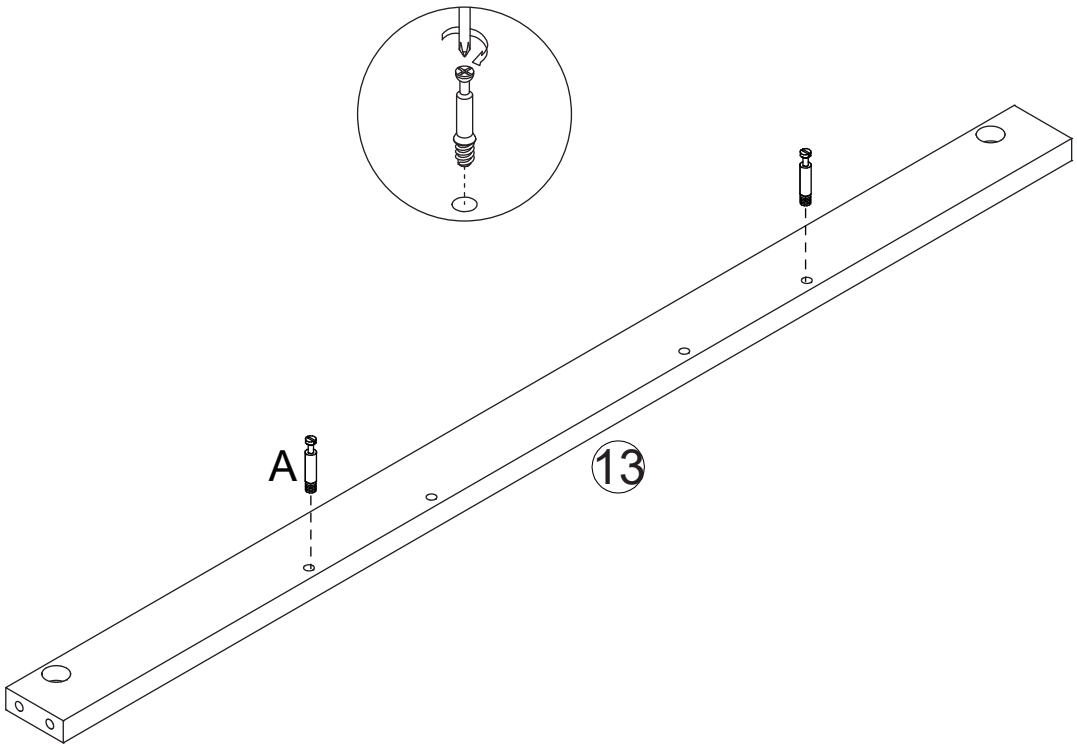


Zara Fluted 2 Door 2 Drawer Sideboard Buffet


STEP 11

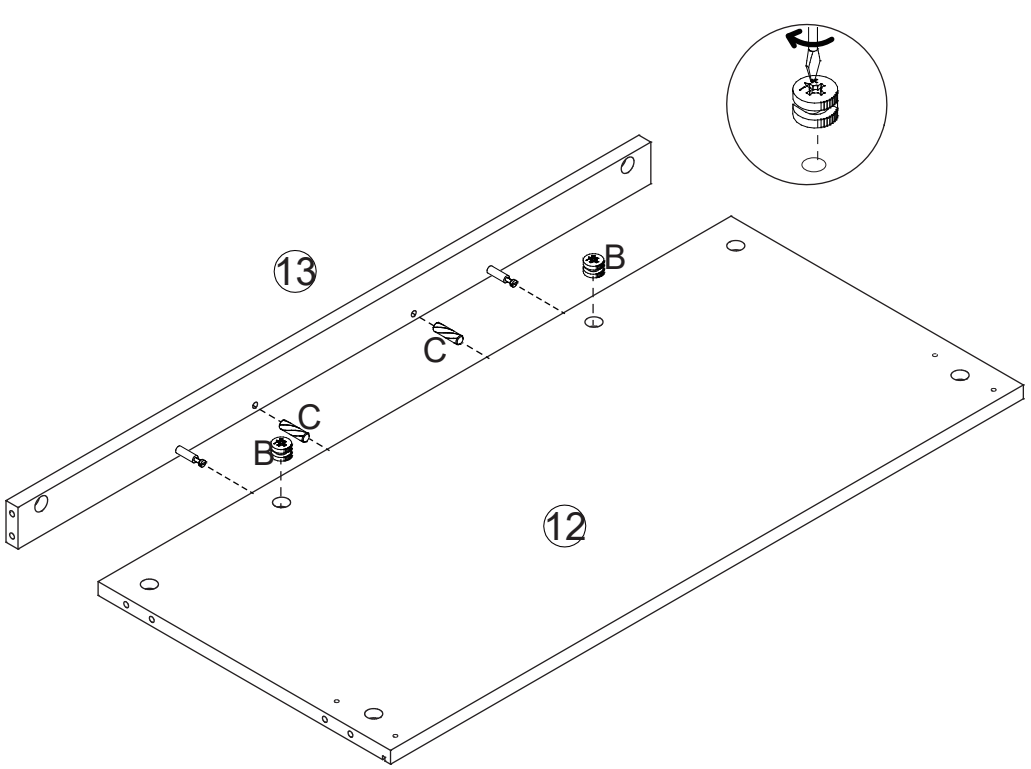


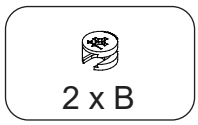

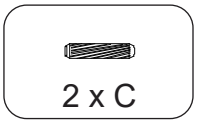

STEP 12

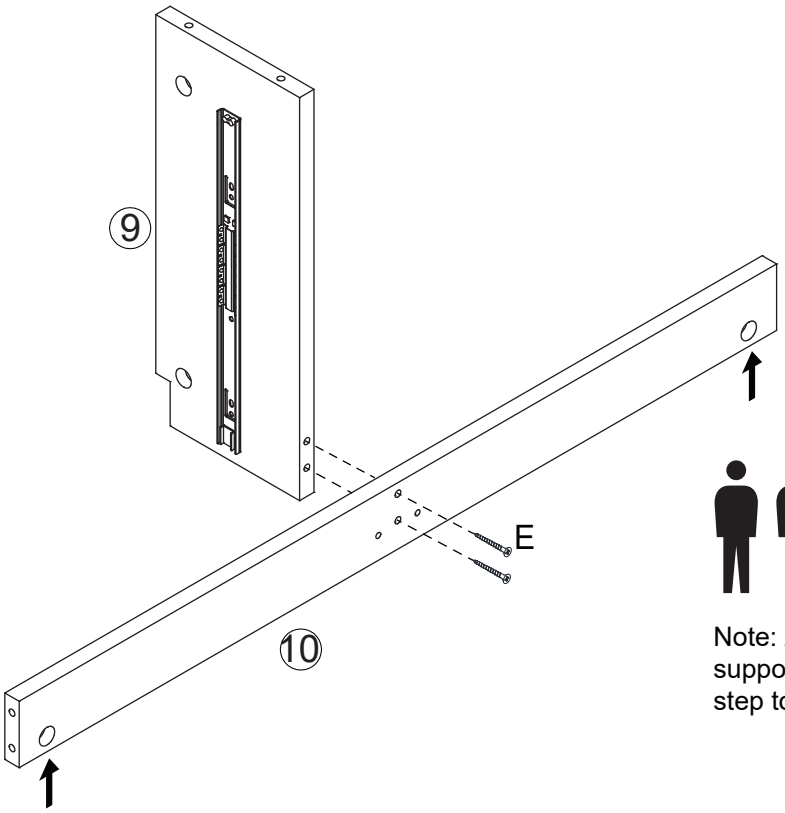

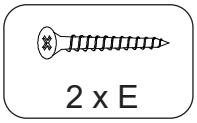





Note: A second adult must help support the panels during this step to avoid damage to your item.

STEP 13

x2

Note: A second adult must help support the panels during this step to avoid damage to your item.

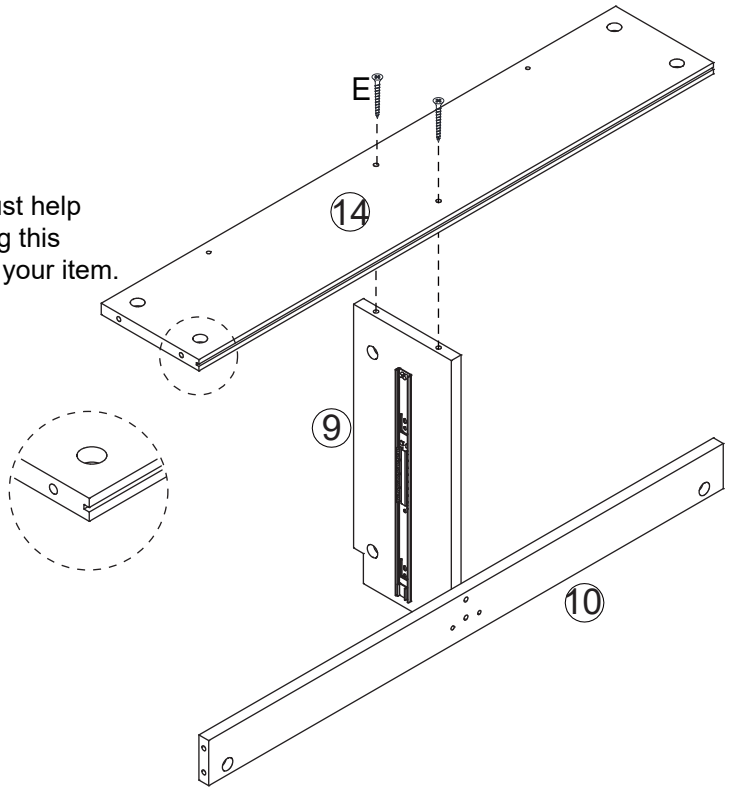



2 x E


STEP 14

x2

Note: A second adult must help support the panels during this step to avoid damage to your item.

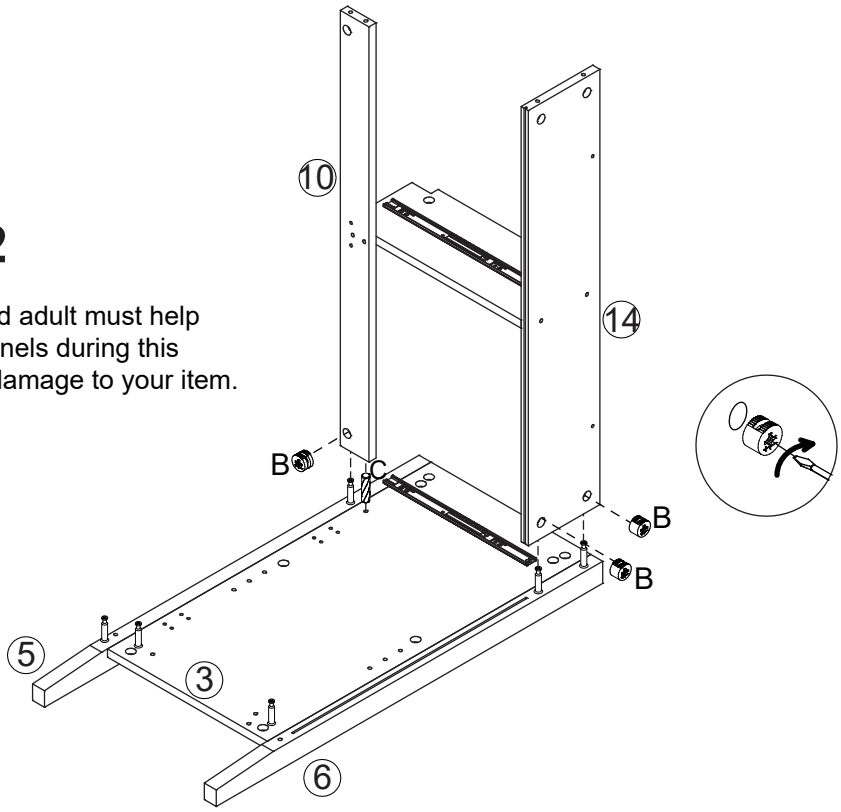


3 x B



1 x C

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

STEP 15

x2

Note: A second adult must help support the panels during this step to avoid damage to your item.

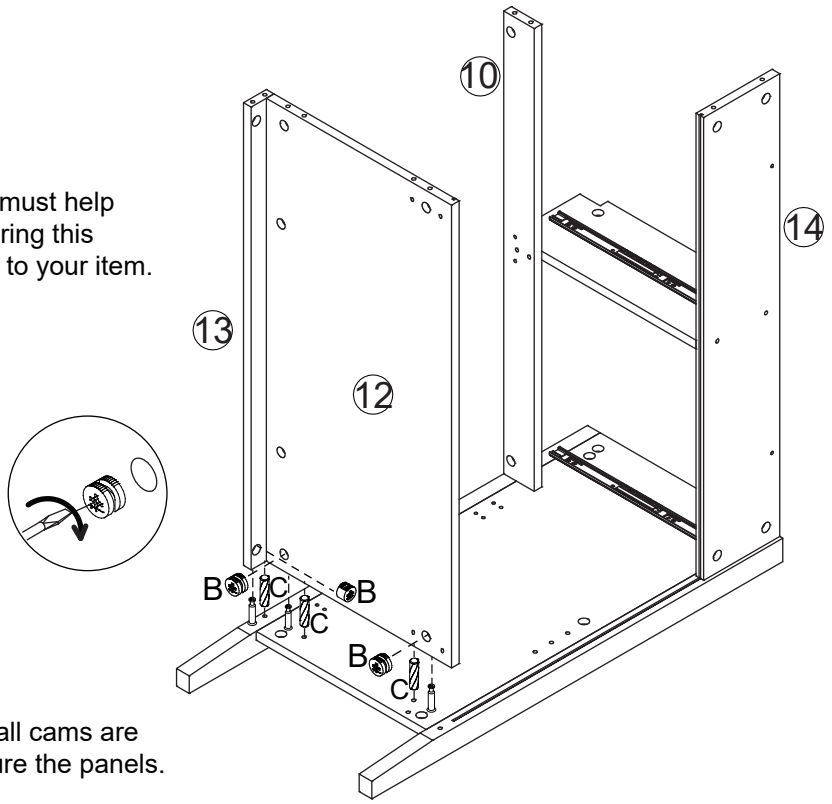

3 x B


3 x C

Note: Please ensure all cams are fully tightened to secure the panels.

STEP 16

x2

Note: A second adult must help support the panels during this step to avoid damage to your item.

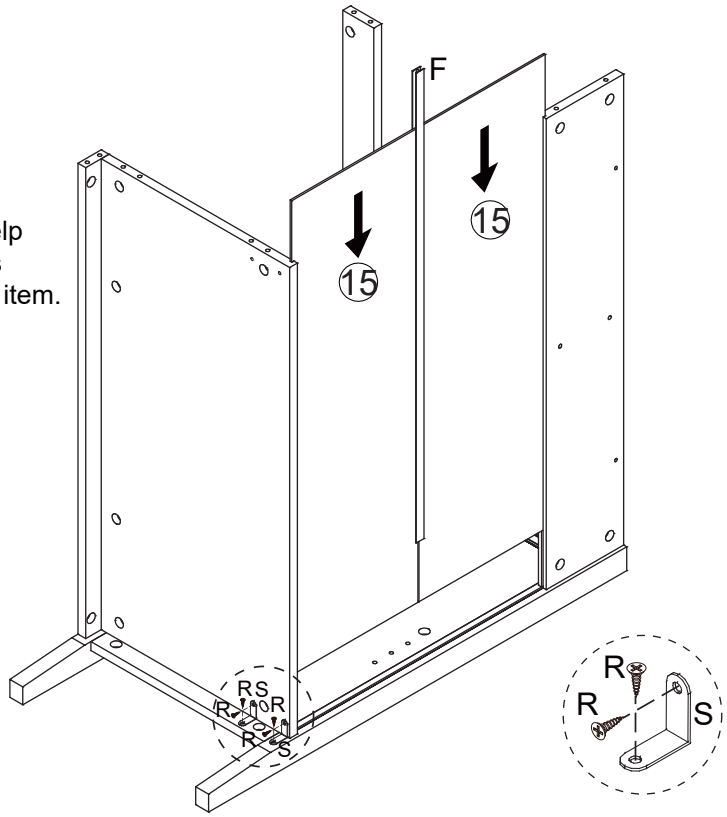


1 x F


4 x R

2 x S

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

STEP 17

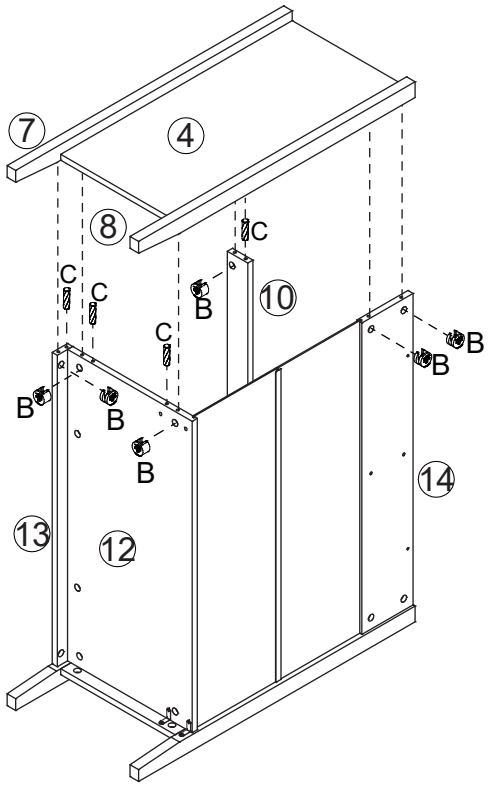

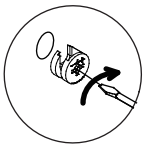


6 x B


4 x C

x2

Note: A second adult must help support the panels during this step to avoid damage to your item.

STEP 18

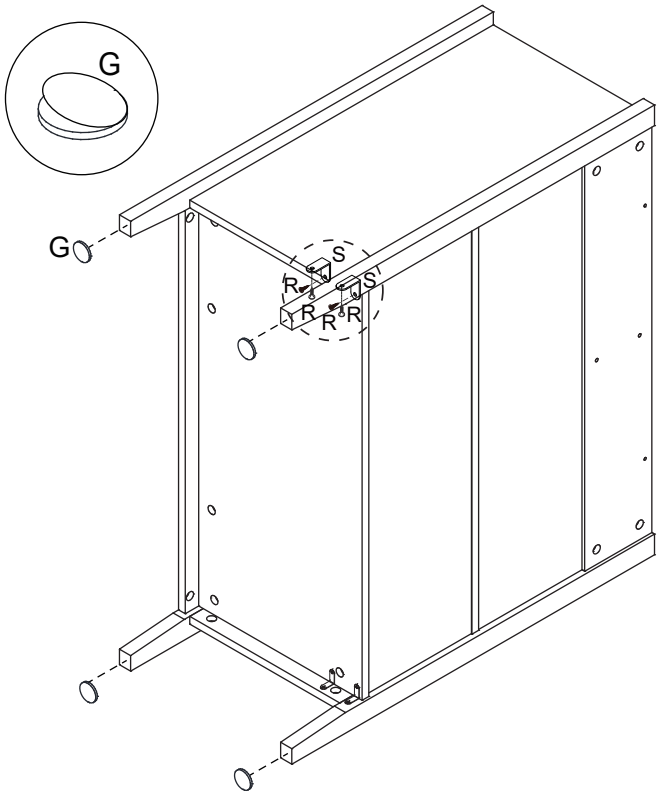

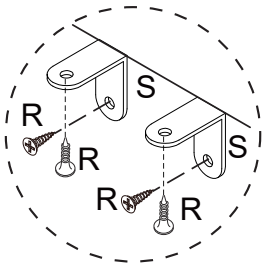


4 x G

4 x R

2 x S


Zara Fluted 2 Door 2 Drawer Sideboard Buffet

STEP 19

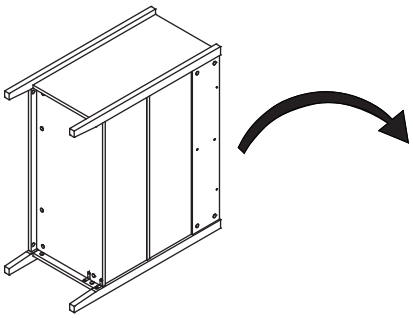

x2

Note: A second adult must help support the panels during this step to avoid damage to your item.

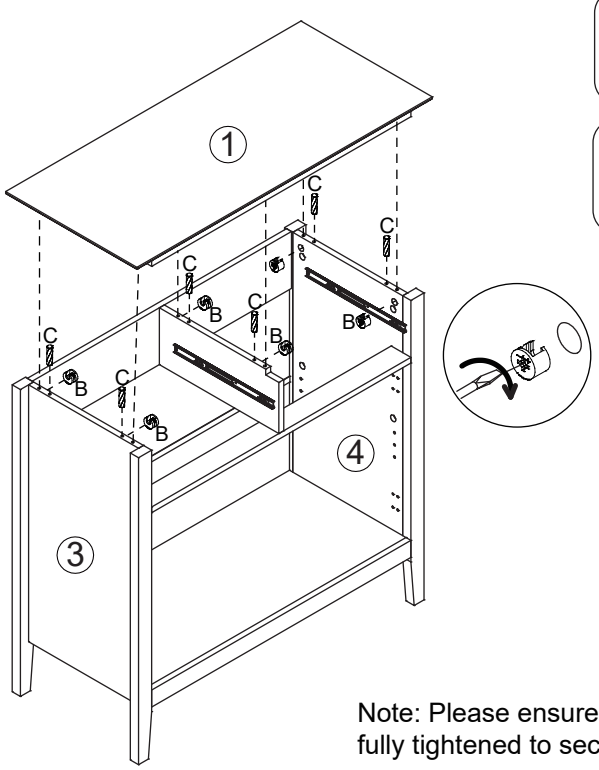


6 x B

6 x C

Note: Please ensure all cams are fully tightened to secure the panels.

STEP 20

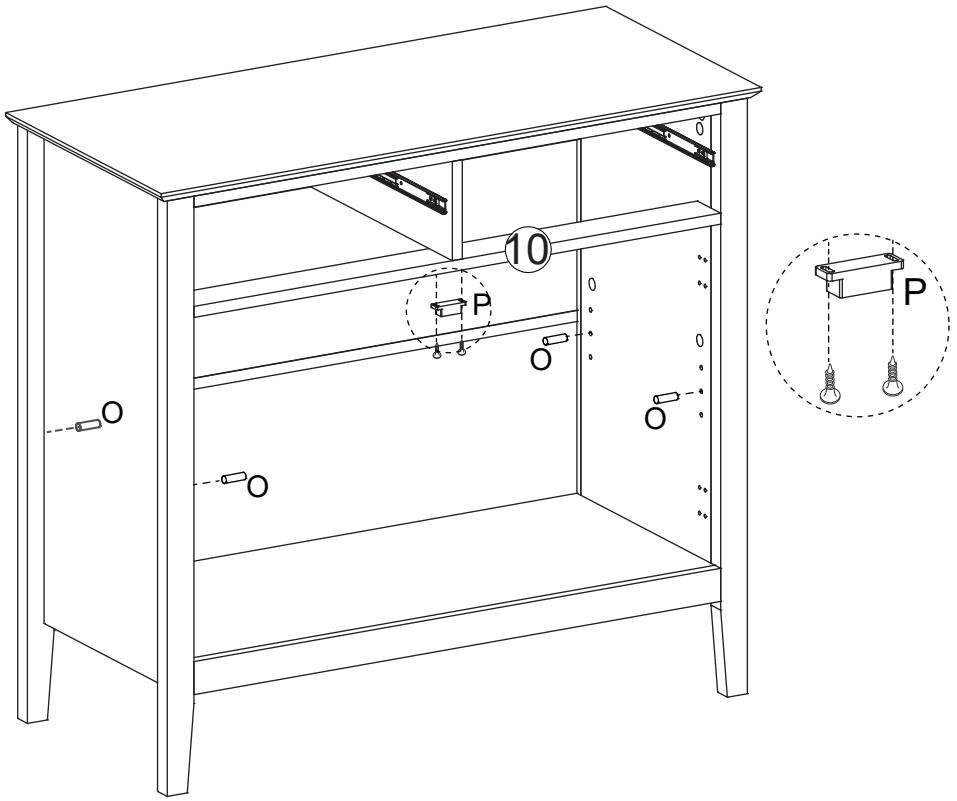


4 x O

1 x P


Zara Fluted 2 Door 2 Drawer Sideboard Buffet


STEP 21

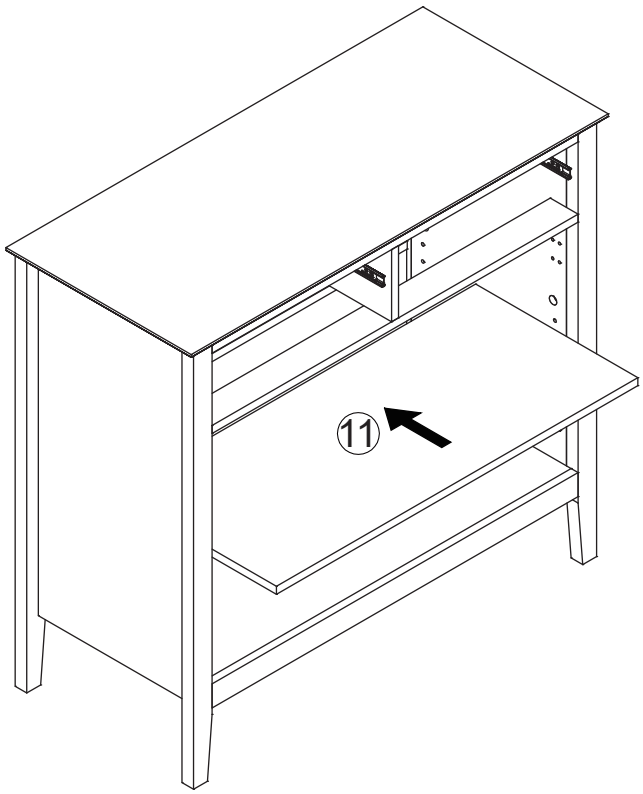


STEP 22


TIP : To ensure the hinge plates are straight
you could use the straight edge of the other door
and place on top and position the edge against
the hinge plates, ensure the panel is aligned properly
and double check all hinges are nice and straight
before you tighten / secure the hinges onto the panel.

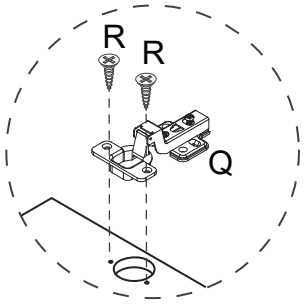


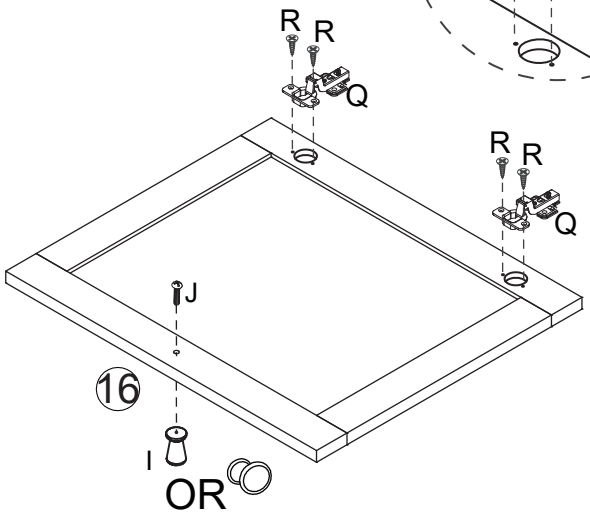


x 2

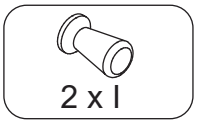

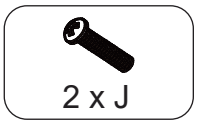


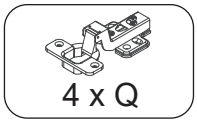



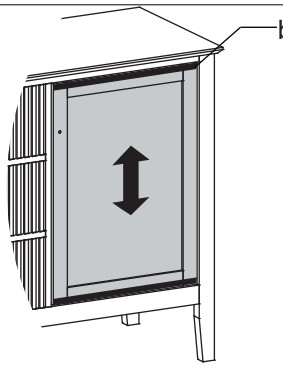

This adjustment is used if your doors have a big gap at the top or the bottom, or if one door sits straight but is lower than the other door.

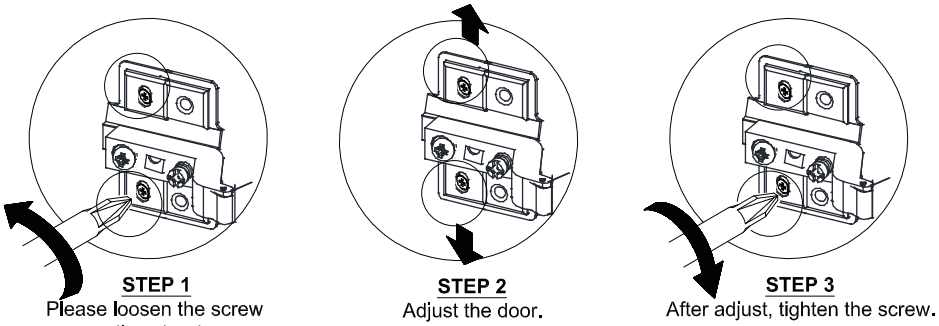


STEP 1
Please loosen the screw to adjust the door.


STEP 2
Adjust the door.

STEP 3
After adjust, tighten the screw.

Open the door and hold it. Loosen the screw as shown in STEP1.
Gently adjust the height of the door by hand as shown in STEP2.
Tighten the screws as shown in STEP3, until the heights of the two doors are the same.

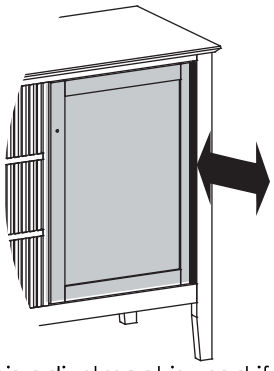

This adjustment is used if your doors are TOO CLOSE to the main cavity. You can loosen the screw and then move the door hinge closer or further out depending on the outcome you want to achieve

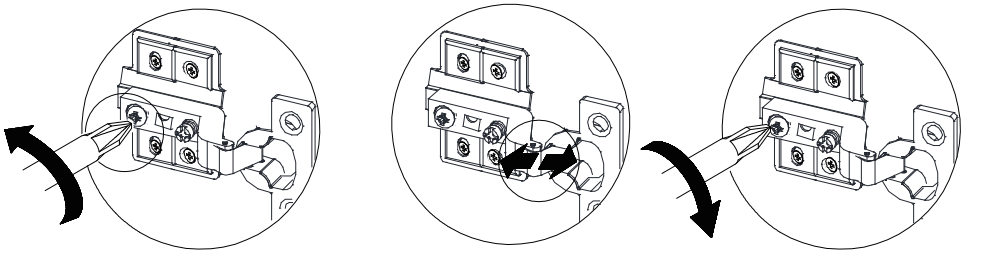


STEP 1
Please loosen the screw to adjust the door.


STEP 2
Adjust the door.

STEP 3
After adjust, tighten the screw.

Open the door and hold it. Loosen the screw as shown in STEP1.
Gently adjust the gap between the door and body by hand as shown in STEP2.
Tighten the screws as shown in STEP3,until the distances on both sides are equal,

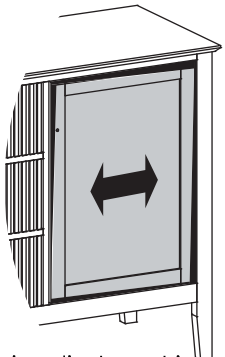

This adjustment is used if your doors are overlapping in the middle OR there is a larger gap through the middle or on the sides

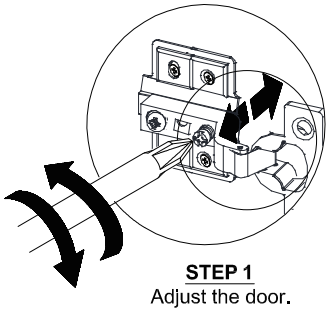


STEP 1
Adjust the door.


If the gap between the door and body is uneven, can solve the problem as shown in STEP1, by rotating the screw to adjust the door.
Anti-Clockwise the screw can move the door to left, clockwise rotate can move the door to right.
Gradually adjust the door according to the actual situation,until the gap between the door and body is even.
Note that the gap of all doors on the same level should be consistent.

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

STEP 23

Note: Its best to have the assistance of a second adult to help hold the door while you attach it to the cavity.

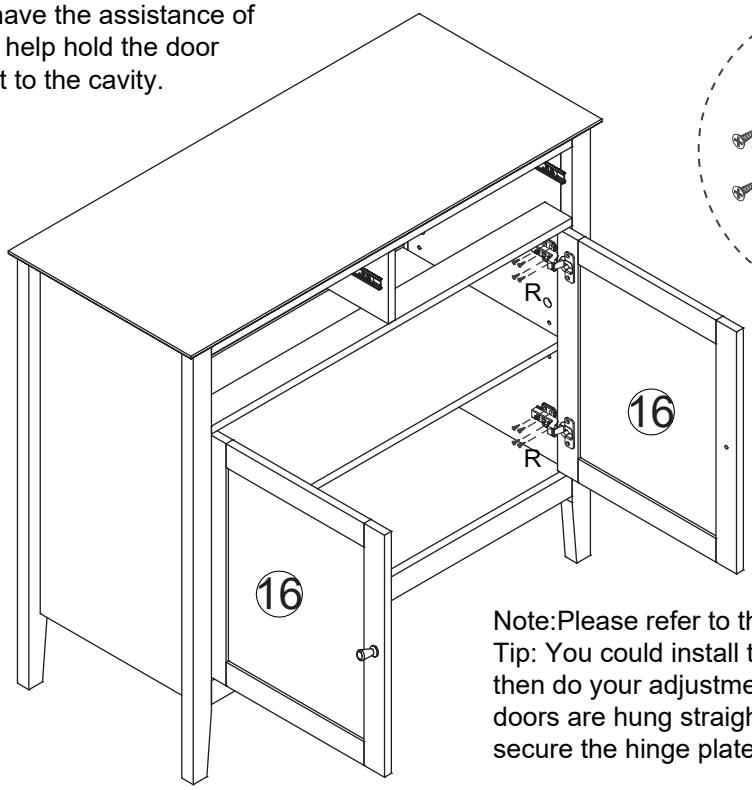

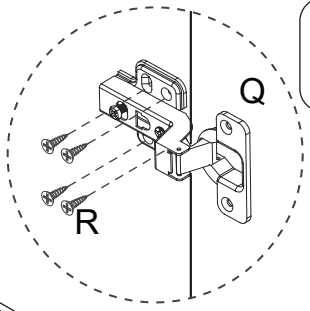



16 x R

Note:Please refer to the next page for hinge adjustment.
Tip: You could install the screws into the oval holes first, then do your adjustments as per the next page, and once doors are hung straight install the remaining screws to secure the hinge plate into position.


STEP 24



8 x A




8 x B

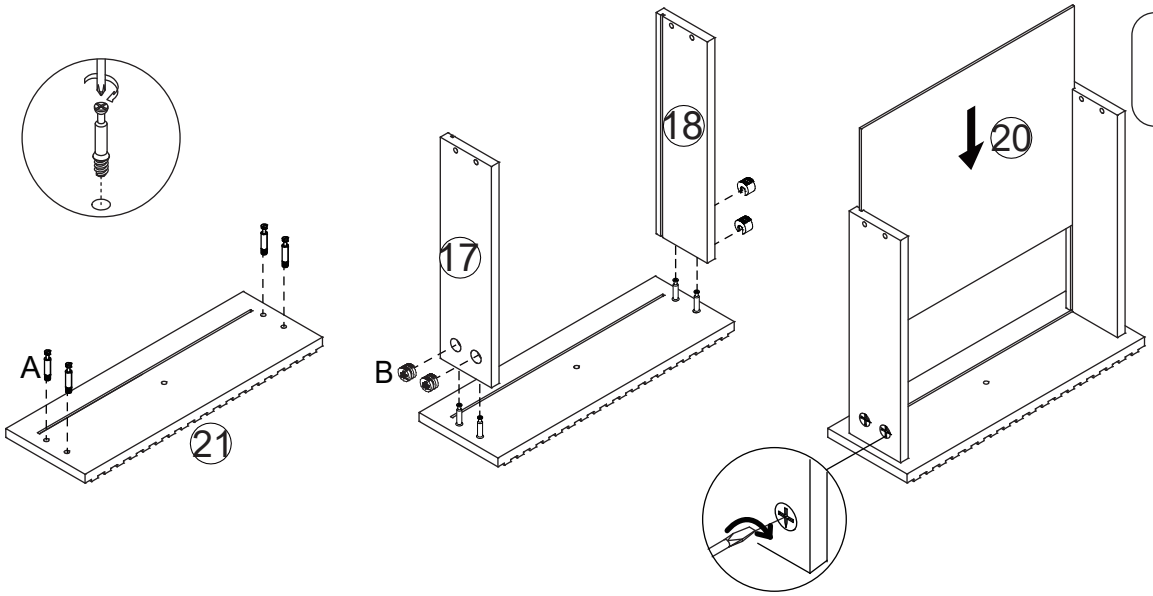

x 2


STEP 25

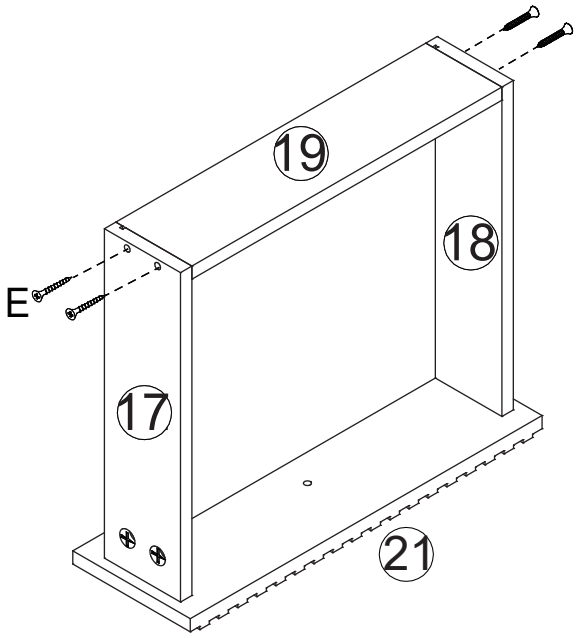


8 x E

x 2

STEP 26

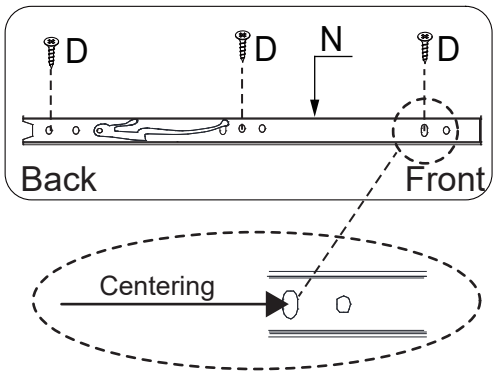

NOTE:
Please insert the screw head into the middle of the oval hole as a starting point,adjustments can be made once the drawer is installed in the final steps.

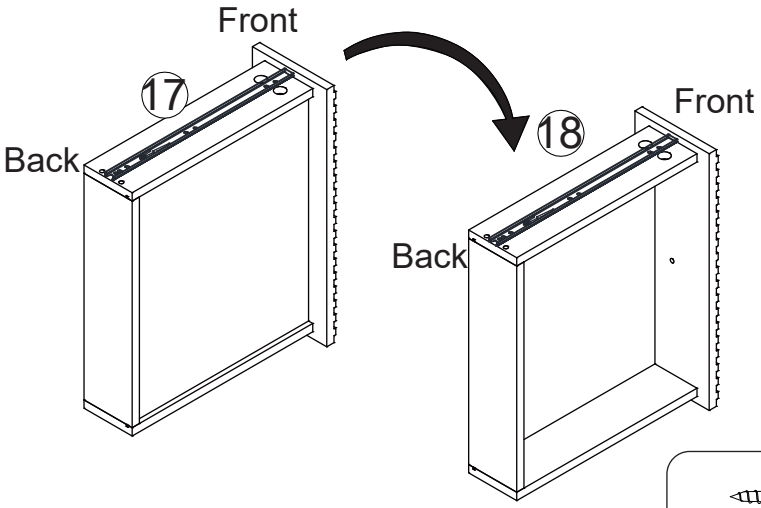

x 2

Important: When installing the runners only insert the front and back screws. The front screw hole on the runner is an oval shape to allow for small adjustments to the gaps around the drawers, or if drawers are touching eachother. These adjustments are done once the drawers are installed.


The Middle screw must be installed in the last step once the drawer is in place and final adjustments have been completed.


12 x D

4 x N


Drawer Installation Guide

- Before you insert the drawers into the frame, please ensure that the ball bearing sliders (on the assembled unit) have been placed to the front of the main unit. If the bearings are in the middle of the slider it will be difficult to install the drawers correctly.

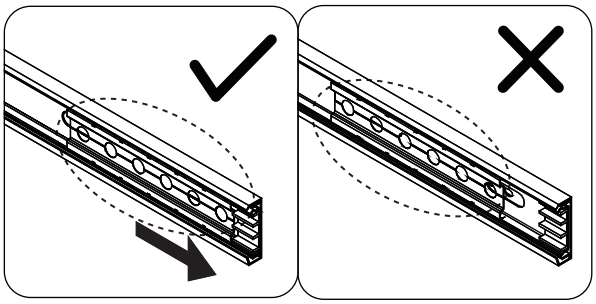

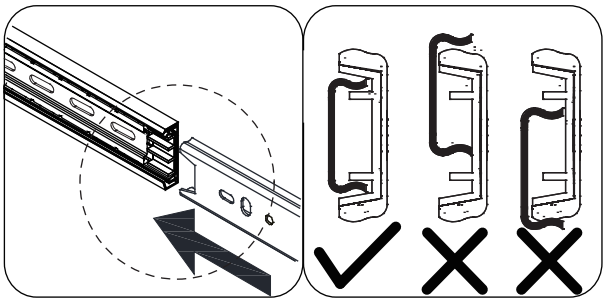


- Insert the drawer into the assembled frame as show below. Keep each side of the drawer straight and aligned correctly to the sliders on the assembled frame.

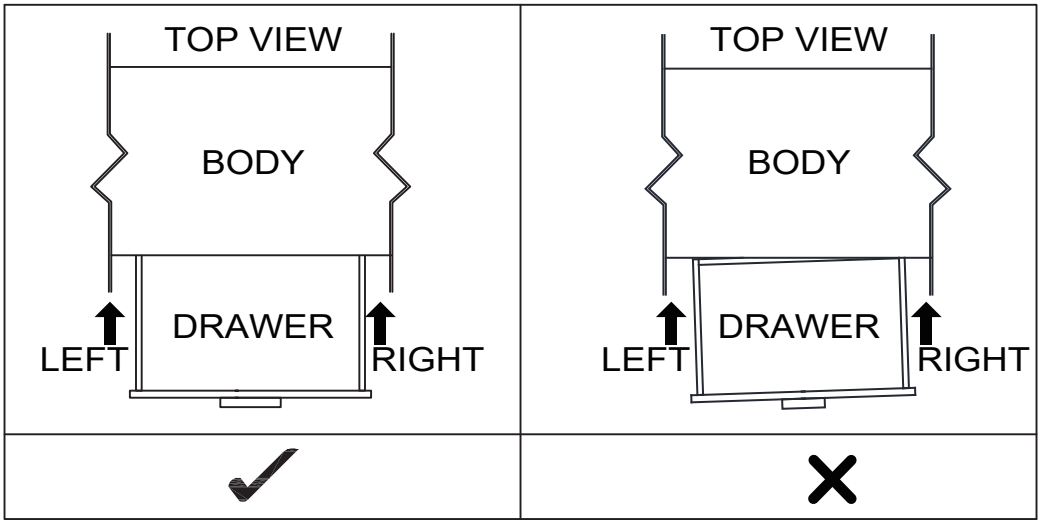



- Gently start to push the drawer into position, the drawer sliders should start to connect with the sliders on the assembled frame. Once connected apply even pressure to each side and gently push the drawer into place.
- The ball bearings should catch the drawer sliders, once they do you may find that you need to apply more pressure, this is perfectly normal as long as you are keeping the drawers straight, push the drawers 100% of the way in. Finally slide drawer in and out a few times to ensure the ball bearings are running smoothly in the slider. Installation is complete.
- At any stage throughout the install process you feel like the drawers are not evenly sliding into the assembled frame, please remove the drawers before they start to attach to the bearing slider and start the install steps again.

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

STEP 27

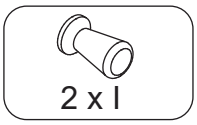


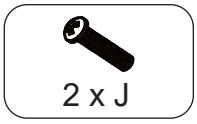


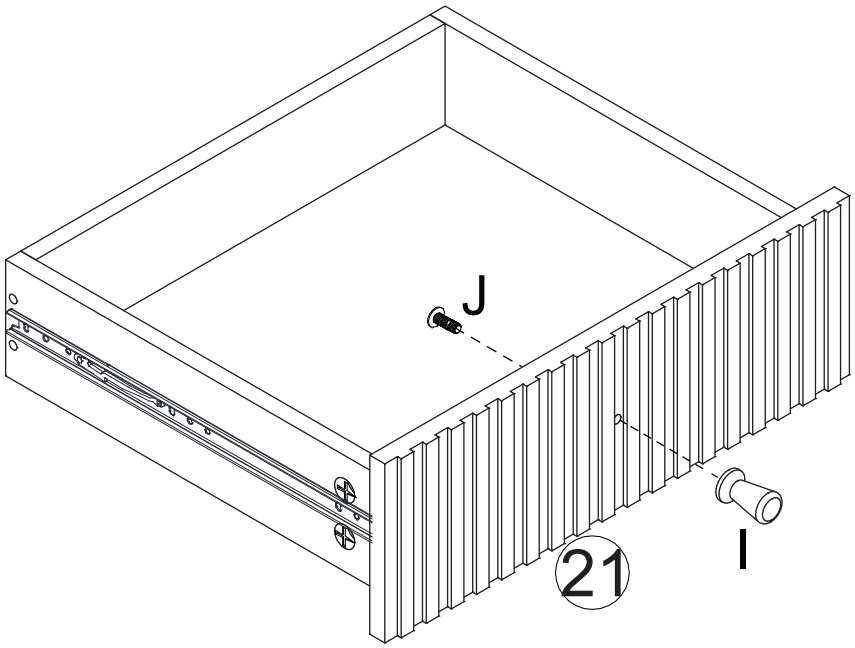



x 2

STEP 28

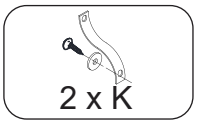

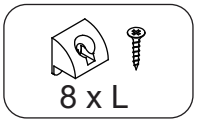


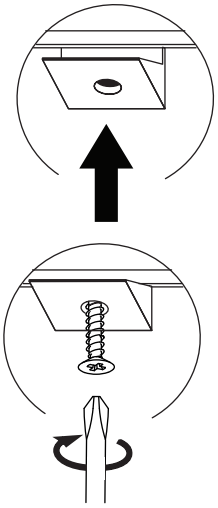

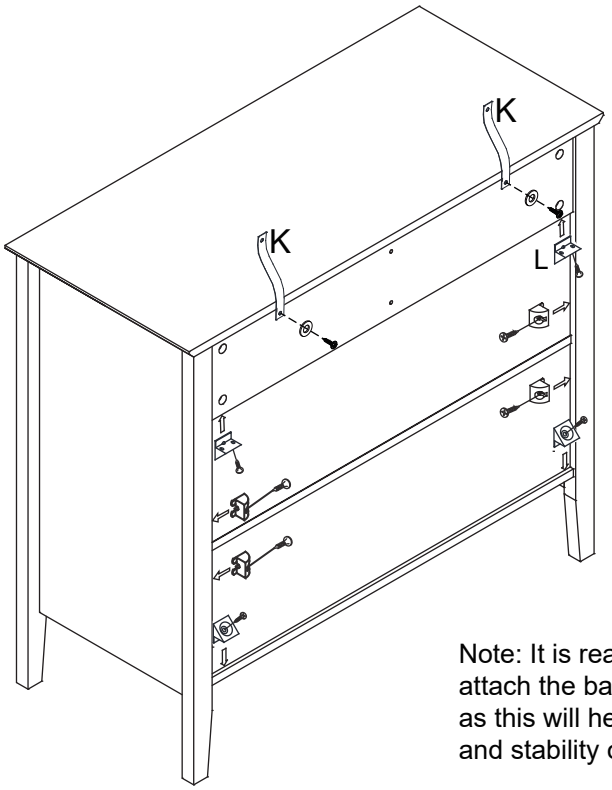

Note: It is really important to correctly attach the backply stoppers correctly as this will help with the overall structure and stability of the item.

STEP 29

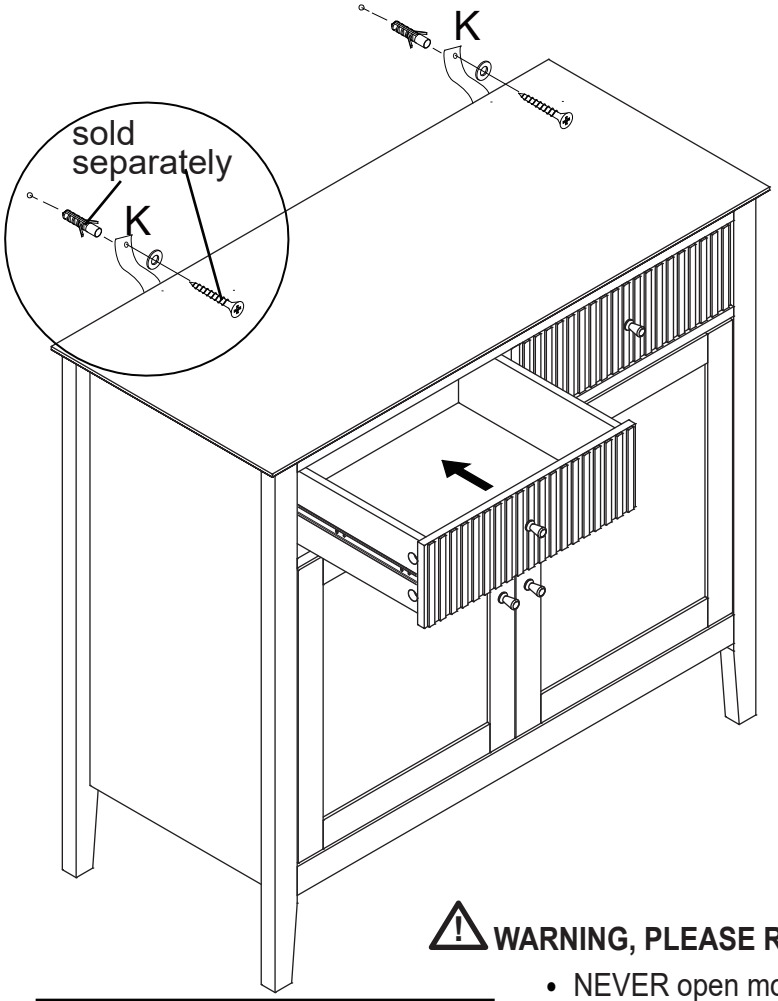

2 x K

Different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home, sold separately. Please seek professional advice if you are in doubt of what fixing should be use.




⚠ WARNING, PLEASE READ To Reduce the risk of toppling furniture

- NEVER open more than one drawer at the time.
- NEVER allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture,and place heaviest items towards the bottom of the furniture.
- ALWAYS anchor this product to a wall or other suitable surface. Check anchors regularly.
- Place heavy items in lower drawers
- Use of anti toppling restraints may only reduce, but will not eliminate the risk of tip over.


NEVER put a TV on this product.
For more information please visit www.productsafety.gov.au


Troubleshoot misaligned drawers

- When a drawer front does this ...

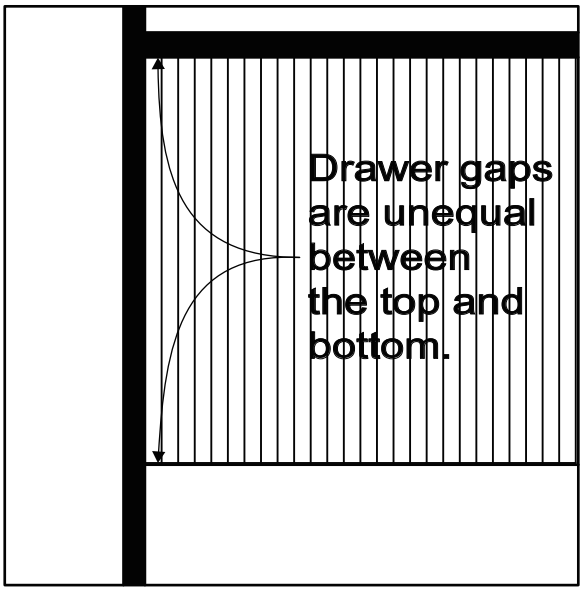


To fix drawers with unequal reveals on the top or bottom, loosen the screws attaching the slide to the drawer box and raise or lower the slide as needed slightly.

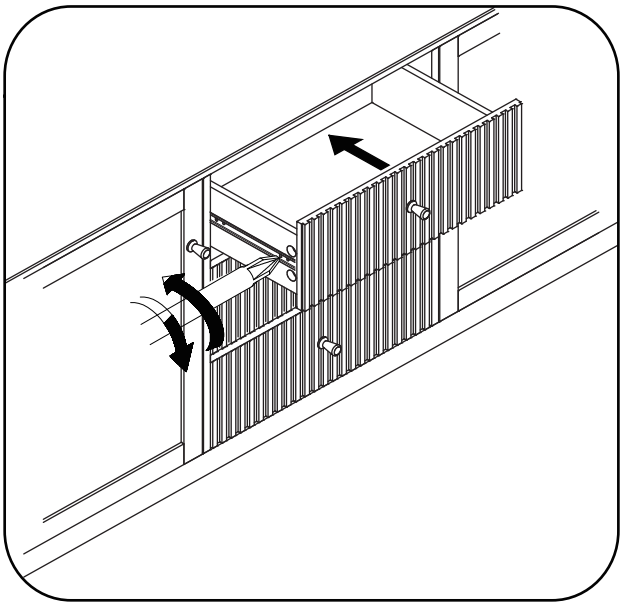

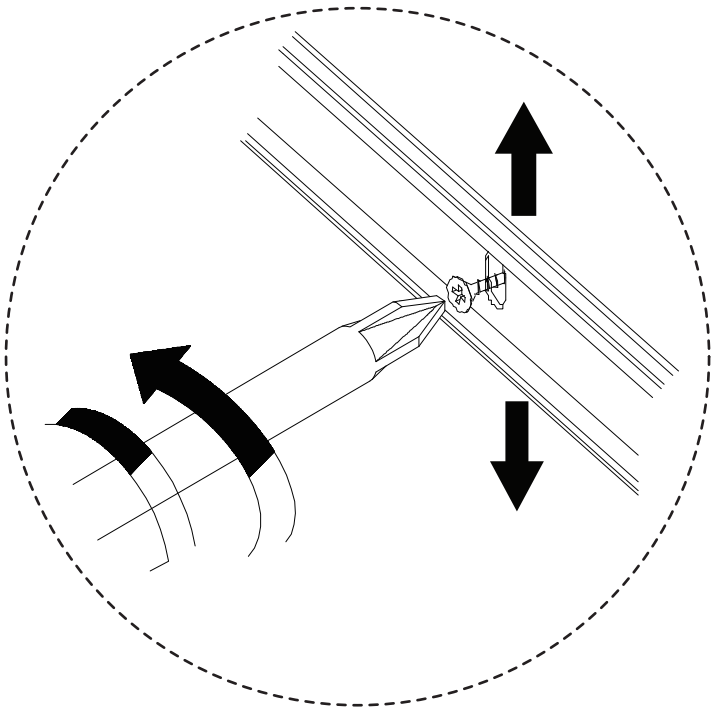



NOTE:

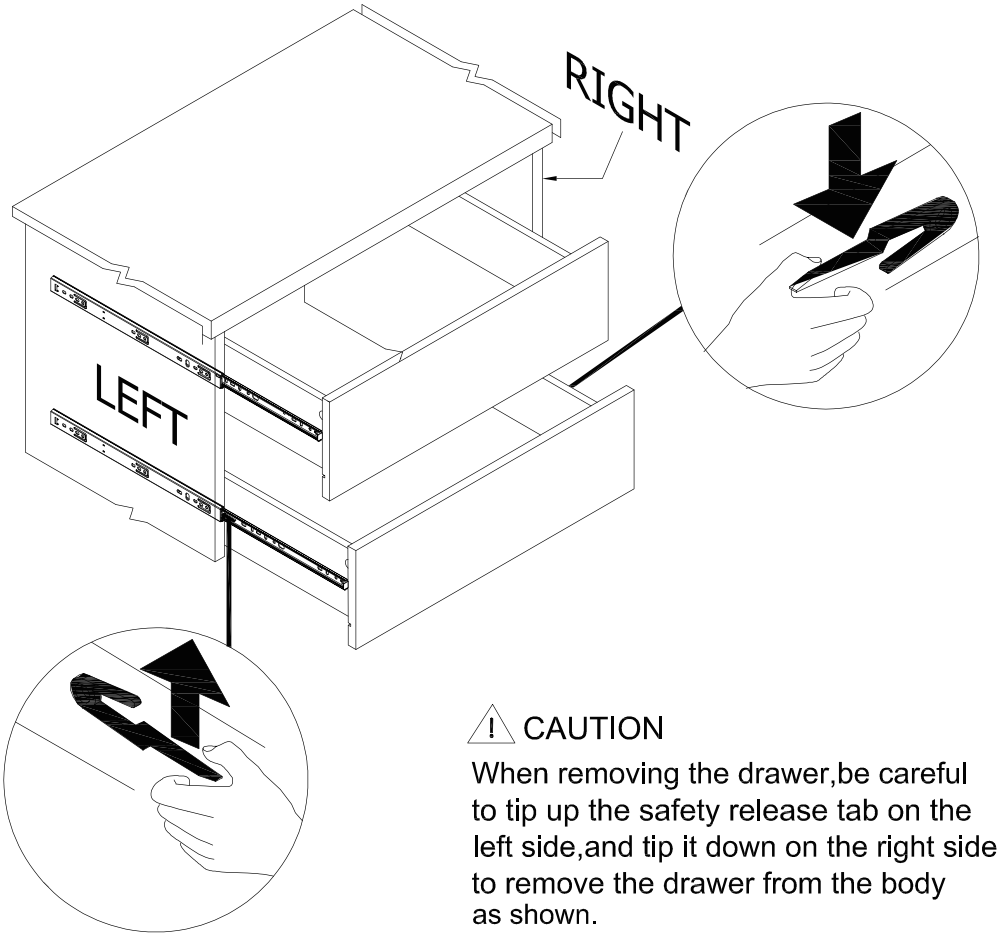

⚠ CAUTION

When removing the drawer,be careful to tip up the safety release tab on the left side,and tip it down on the right side to remove the drawer from the body as shown.

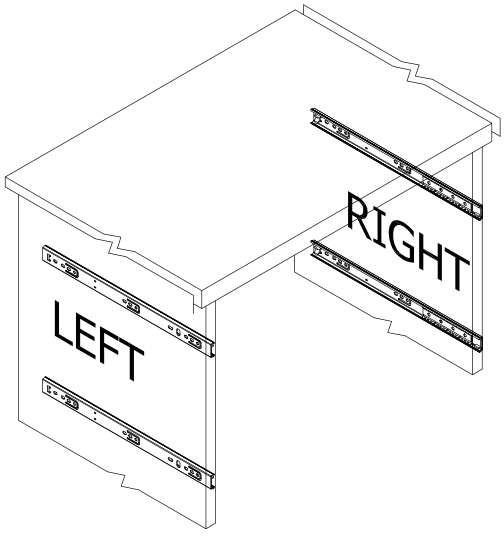

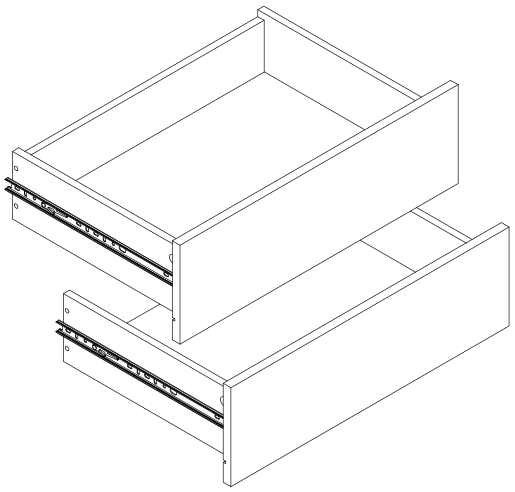

Zara Fluted 2 Door 2 Drawer Sideboard Buffet

Wall Mounting & Fixing Guide

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.

IMPORTANT:
When drilling into walls, always check for hidden wires or pipes, etc.


Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.


- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

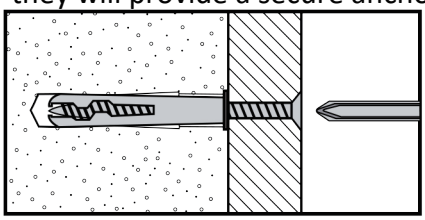


1. General Purpose Wall Plug
Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

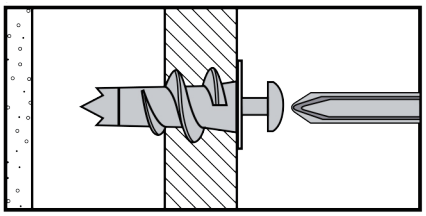


2. Plasterboard Wall Plug
For use when attaching light loads onto plasterboard partitions.

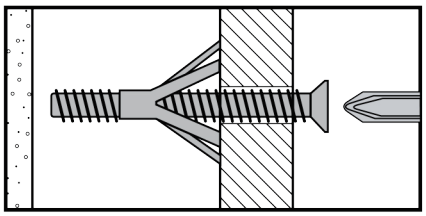


3. Cavity Fixing Wall Plug
For use with plasterboard partitions or hollow wooden doors.

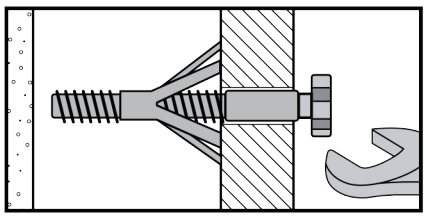

4. Cavity Fixing Heavy Duty Wall Plug
For use when fitting or supporting heavy loads such as shelving and wall cabinets.

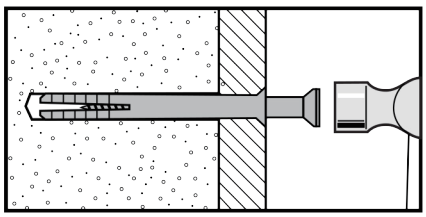

5. Hammer Fixing Wall Plug
For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

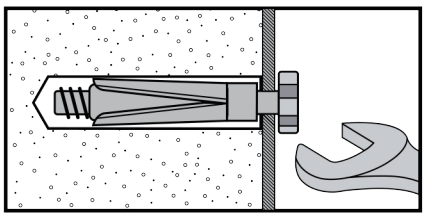

6. Shield Anchor Wall Plug Heavy Loads
For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.

MEUBILAIR
DIRECT IMPORTS

Warranty Certificate

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, Meubilai r Direct Imports will provide you with a warranty against defects as follows:

Warranty

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred
by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

Normal Wear and Tear

This warranty does not cover normal wear and tear to the products or parts.

Exclusions

This warranty does not cover:

- ☒ Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- ☒ Any product that has not been installed, operated or maintained in accordance with the manufacturers' operating instructions provided with the product.
- ☒ Any product that has been used for purposes other than domestic use.
- ☒ Any damage caused by improper power input or improper cable connection.

MEUBILAIR DIRECT IMPORTS PTY LTD
Customer Service
Email: cs@meubilair.com.au
Address: Unit 4, 16 Hickeys Lane, Penrith NSW 2750
Telephone Number: (02) 47015363
Opening Hours 9:00 am – 4:00 pm (Mon - Fri)

When making a return, please ensure the product is properly packaged, so as to ensure that no damage occurs to the product during transit.
Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem.
Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above.
Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

AFTER SALES SUPPORT

EMAIL : cs@meubilair.com.au
Product code: 203747



MEUBILAIR
DIRECT IMPORTS

Warranty Certificate

PRODUCT NAME: Zara Fluted 2 Door 2 Drawer Sideboard Buffet

BRAND NAME:

PRODUCT CODE: 203747

NAME

ADDRESS

EMAIL DAYTIME TEL NO

DATE OF PURCHASE

SERIAL NUMBER

We recommend that you attach a photocopy of your receipt, showing the date of purchase, to this Warranty certificate and keep for your reference.

In the event of a product fault, please email the Customer Service team. Please ensure that you include the product details (as shown on the card) at hand so that we are able to respond as quickly and efficiently as possible.

Meubilair Direct Imports PTY LTD

Customer Service
Email: cs@meubilair.com.au
Address: Unit 4, 16 Hickeys Lane, Penrith NSW 2750
Opening Hours 9:00 am – 4:00 pm (Mon - Fri)

AFTER SALES SUPPORT

EMAIL : cs@meubilair.com.au
Product code: 203747

1 YEAR WARRANTY