
TEMPLE & WEBSTER

REEVE WINE FRIDGE 70L

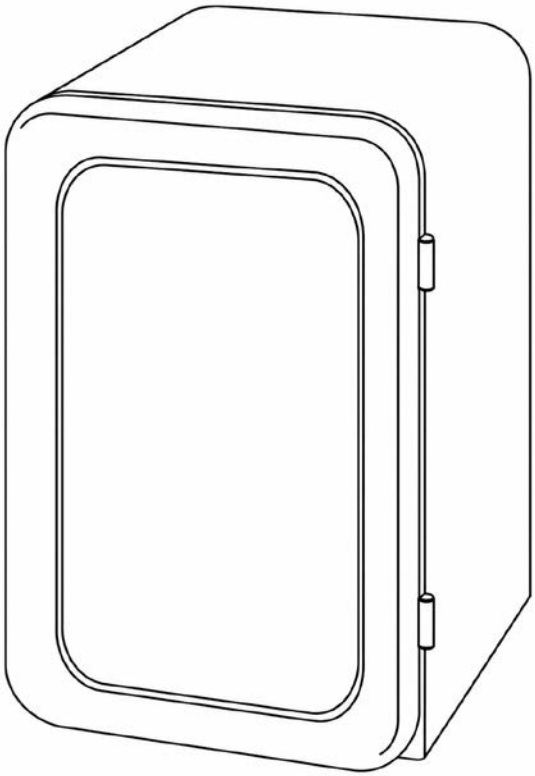

Instruction Manual

Item: UBREWFBL (Black), UBREWFWH (White)

Contents

Important Safeguards 3

Features of Your Wine Fridge 6

Control Panel 7

Before First Use 8

Installation Instructions 9

Operating Instructions 10

Tips 11

Cleaning and Maintenance 12

Frequently Asked Questions 13

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

1. Read all instructions before using the Wine Fridge.
2. Before turning on the Wine Fridge ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the product.
3. Do not use an extension cord unless completely necessary with the Wine Fridge. If an extension cord is used please ensure that it has a rating equal or exceeding the rating of this product.
4. Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Keep cord away from heated surfaces.
5. Do not bend or damage the power cord and never force the plug into an outlet.
6. Always unplug the Wine Fridge when not in use. To disconnect from the power supply, grip the plug and pull from the power outlet. Never pull by the cord. The plug must be removed from the power outlet before cleaning, servicing, maintenance or moving the Wine Fridge.
7. Do not move or lift the Wine Fridge while the power cord is still connected to the power outlet or still on. Always ensure it is switched off and has cooled down before moving.
8. Do not use the Wine Fridge if the plug, cord or the Wine Fridge itself is damaged. Please contact Temple & Webster for further advice.
9. Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.
10. The Wine Fridge is intended for indoor household use only and not for commercial purposes.
11. Do not use the Wine Fridge for reasons other than its intended use.
12. The Wine Fridge is not a toy. Supervise young children to ensure they do not play with this product.
13. The Wine Fridge is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
14. Do not install the Wine Fridge in a tight fitting cabinet. Please see page 9 for installation clearances. Do not install near heat sources such as radiators, heaters, ovens, air ducts or direct sunlight.
15. Make sure you install the Wine Fridge in a well ventilated area. To ensure sufficient ventilation, the rear, sides and top of the unit must be completely unobstructed. Keep any ventilation openings clear of obstructions. Choose a well ventilated area with temperatures below 30˚C.

Important Safeguards (cont.)

16. Do not cover the Wine Fridge whilst in use. Do not block any ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc.
17. Do not attempt to repair, disassemble or modify any part of the Wine Fridge. Refer all servicing to a qualified technician, or contact Temple & Webster for advice on repair.
18. Improper installation may result in the risk of fire, electric shock or injury to person.
19. The manufacturer is not responsible for any eventual damage caused by improper or faulty use.
20. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
21. The Wine Fridge is not intended to be operated by means of an external timer or any type of separate remote control system.
22. Arrange the cord away from high traffic areas where it will not become a trip hazard.
23. Do not place the Wine Fridge on carpet, as it may create a blockage to the air ventilation and create risk of fire, spontaneous combustion, or injury to persons.
24. The Wine Fridge is heavy, take care when installing and moving it. To avoid back and other injuries, you will need to use a hand trolley when installing or moving.
25. Do not move the Wine Fridge while it is filled with wine. This may cause damage to the appliance.
26. The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the Wine Fridge. This is a natural gas with a high level of environmental compatibility, which is very flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged. In the event of damage please contact Temple & Webster.
27. Do not store electrical appliances or accessories inside the Wine Fridge.
28. Never clean this appliance with flammable cleaning agents. Do not store or use volatile, flammable or explosive propellants or liquids close to the Wine Fridge. The fumes can create a fire hazard or explosion.
29. Never allow open flames or ignitions to enter the interior of the Wine Fridge.
30. Do not use solvent based or abrasive cleaning agents on the interior of the Wine Fridge.
31. Keep the Wine Fridge away from all substances that may cause ignition.
32. Make sure the cord is kept away from the compressor on the back of the Wine Fridge.
33. Before plugging in your new Wine Fridge, allow it to stand in an upright position for at least 24 hours. This will allow the refrigerant gases to settle into the compressor and reduce the possibility of a malfunction in the cooling system from handling during transportation.
34. When moving and transporting the Wine Fridge, make sure the Wine Fridge stays in an upright position. Do not tilt the unit more than 45° in any direction.

Important Safeguards (cont.)

35. Take care when handling as to not damage exposed components of the refrigerant circuit found at the rear of the Wine Fridge.
36. Do not install the Wine Fridge in a damp place or anywhere it may come in contact with water.
37. Do not overload the shelves.
38. It is not recommended that the Wine Fridge be used for storage of foods other than drinks.
39. Do not store temperature sensitive liquids such as milk in the Wine Fridge.
40. If disposing of the Wine Fridge, the door must be removed. Children can suffocate if they get trapped inside. Ensure that the Wine Fridge is disposed of at a certified waste disposal centre.
41. Always remember to unplug the appliance before cleaning. When disconnecting from the electricity supply, pull the plug, not the power cord.
42. Do not use anything electrical inside the Wine Fridge.
43. All electrical repairs must be carried out by qualified technical personnel. Improper repair may result in a major source of danger for the user and invalidate any warranty.
44. Never store anything dangerous inside the appliance, such as combustibles, explosives, strong acid or alkali, etc.
45. The Wine Fridge is suitable for storing wine (or other bottled beverages). It is not suitable for storing fresh or frozen foods.
46. Children shall not play with the appliance.
47. To avoid contamination of wine, please take note of the following instructions:
    - Opening the door for long periods can cause a significant increase in the temperature in the compartment of the appliance.
    - Clean regularly surfaces that can come in contact with bottles and accessible drainage systems.
    - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould from developing within the appliance.



WARNING: This Wine Fridge contains the refrigerant isobutane (R600a), a flammable, natural gas. Ensure none of the exposed circuit components become damaged during installation. If damage does occur to the exposed circuit components, do not switch on the appliance at the power outlet. Ensure any open flame or other sources of ignition are removed from the vicinity of the Wine Fridge.


WARNING: Do not allow the refrigerant circuit to become damaged while using or installing the appliance. Should it become damaged, do not use the appliance until you are instructed to do so by qualified technical personnel. Refrigerant can ignite or cause damage to the eye when leaking.

WARNING: When positioning and installing the Wine Fridge, ensure the power cord is not trapped or damaged.

WARNING: Do not locate portable multiple socket outlets or portable power supplies at the rear of the appliance.

NOTE: This appliance is intended to be used exclusively for the storage of wine.


Features of Your Wine Fridge

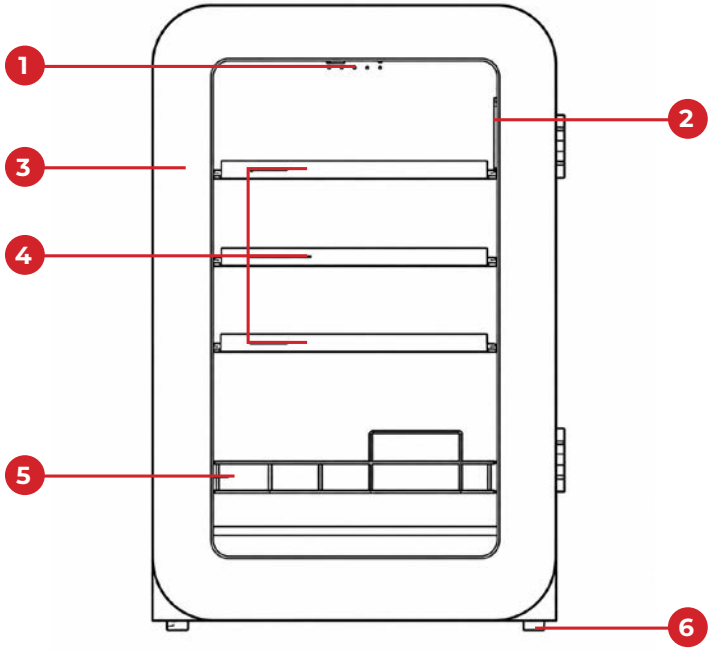

1. LED Light
2. Control Panel
3. Door
4. Shelves
5. Bottom Rack
6. Adjustable Feet

Included (not pictured): Power Cord, Instruction Manual.

Control Panel

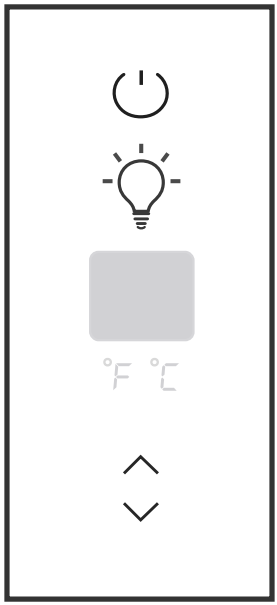

On/Off	• Press and hold the power button for 6 seconds to turn the Wine Fridge on or off.
Light	• Press to turn the LED light on or off in the Wine Fridge.
Temperature Display	• The display shows the current temperature of the Wine Fridge. • Press and hold both of the temperature adjustment buttons "^" and "v" for 2 seconds to switch the temperature display between Fahrenheit and Celsius.
Temperature Adjustment	• Press either one of the temperature adjustment buttons once. The LED display will flash with the current set temperature. Press the Up "^" or Down "v" button to increase or decrease the temperature by 1 °C increments. After 6 seconds, the new temperature will be set. • Temperature can be adjusted from 4°C - 22°C.

Before First Use

Congratulations on the purchase of your new Wine Fridge.

Before using your new Wine Fridge for the first time, it is extremely IMPORTANT that you read and follow the instructions in this instruction manual, even if you feel that you are familiar with this type of appliance.

In particular, please pay close attention to the section entitled IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Remove the Wine Fridge and all parts from the packaging materials and thoroughly read the user manual before using this appliance for the first time. Ensure all parts indicated on the FEATURES OF YOUR WINE FRIDGE have been included in the gift box.

1. Unpack the Wine Fridge but keep all packaging materials until you have made sure the Wine Fridge is undamaged and in good working order.
2. Find a suitable dry, stable position for the Wine Fridge. Adjust the feet on the Wine Fridge to ensure that it is flat and level. Do not position it on carpets or any other surfaces which could block the ventilation.
3. Ensure a clearance of at least 15cm on all sides of the Wine Fridge and ensure adequate ventilation. See page 8 displaying the clearance diagram.
4. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are kept out of their reach. Remove all packaging found internally and externally before use.
5. Remove the twist-tie which is securing the electrical cord. Uncoil the cord to straighten it to remove any kinks. Do not use if these parts are damaged. In case of damage, contact Temple & Webster.
6. Make sure the Wine Fridge is disconnected from the power supply before cleaning. Clean the interior surfaces with a damp cloth. Then use a soft cloth to remove any dust from transit and storage. Ensure it is thoroughly dry before turning the unit on.
7. Do not power on the Wine Fridge immediately after installation. Turn on the Wine Fridge after it has rested upright for 24 hours. This allows the gas to settle within the compressor to allow for proper operation.
8. Once turned on, select your desired temperature. Allow the Wine Fridge to stabilise at the selected temperature for 2-3 hours prior to filling it.
9. If the power is switched off to the Wine Fridge, wait 5 minutes before restarting.

WARNING: Take care when handling as to not damage exposed components of the refrigerant circuit found at the rear of the Wine Fridge.


WARNING: Do not store electrical appliances or accessories inside the Wine Fridge.

WARNING: Before turning on the Wine Fridge let it rest upright for 24 hours. This allows the gas to settle within the compressor to allow for proper operation.

Installation Instructions

The Wine Fridge should be installed following the diagram below.

1. Ensure your chosen position for the Wine Fridge has a minimum 15cm clearance on all sides to allow for adequate ventilation and ensure proper performance.
2. Do not power on the Wine Fridge immediately after installation. Turn on the Wine Fridge after it has rested upright for 24 hours. This allows the gas to settle within the compressor to allow for proper operation.
3. The Wine Fridge must be leveled in order to work properly. If it is not leveled, the door and magnetic seal alignment will not be covered properly. The Wine Fridge is equipped with 2 adjustable feet. To level, adjust one or both the levelling feet at the base of the unit.

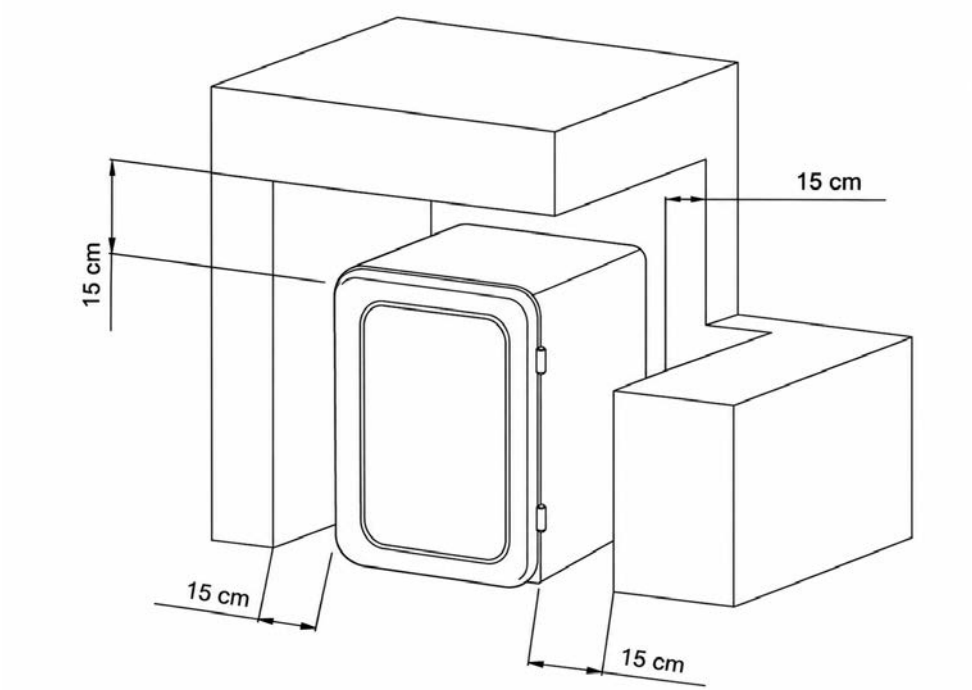

WARNING: Keep all the Wine Fridge vents and ventilation clearance around the Wine Fridge clear of obstructions at all time.

NOTE: Do not immediately power on the Wine Fridge after installation. Turn on the Wine Fridge after it has sat upright for 24 hours. This allows the gas to settle within the compressor to allow for proper operation.

Operating Instructions

Once the Wine Fridge has been installed and allowed to rest for 24 hours it is ready to begin operation. Connect the plug to a power outlet and switch the outlet on.

NOTE: Refer to the control panel instructions on page 7 for how to use the control panel.


Wine Storage

The Wine Fridge is equipped with storage shelves. You can follow the placement of the bottle in the guide below.

NOTES:

- Loading capacity varies depending on the arrangement of the wine or depending on the bottle sizes.
- Each shelf is designed to put 1 or 2 layers of wine. More than 2 layers of the bottle are not recommended.


Capacity: 24 standard size bottle (750ml)

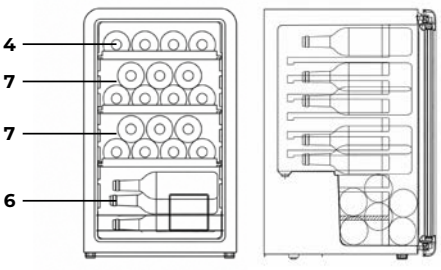

Removing the Wooden Shelf

To prevent damaging the doors or gasket, make sure to open the door fully before removing the shelves.

Remove it by lifting the back of the shelf upwards and gently pull it out.

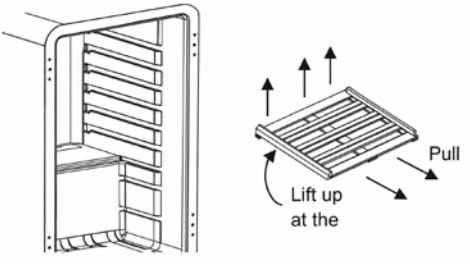

Tips

- The Wine Fridge should be placed where the ambient temperature is between 10-32°C (50-90 Fahrenheit). If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate. The range of 4-22°C may not be reached.
- Condensation may appear on the outer surface of the glass door of the Wine Fridge during period of high humidity. This will cause a foggy effect or in extreme situations, water can even flow off. This is normal and does not affect the operation of the Wine Fridge. The condensation will disappear when humidity level drop.
- Below is an indicative temperature chart for recommended serving temperature of wine for drinking purpose.

  Red Wines: 15-18°C
  Dry/ White Wines: 9-14°C
  Rose Wines: 10-11 °C
  Sparkling Wines: 5-8°C

- If the unit is unplugged, power lost or turned off, you must wait at least 3-5 minutes before restarting the unit. This is to allow the compressor oil to flow back down and settle in. If you attempt to restart before the recommended time, it may cause a malfunction on the compressor unit.
- When you first turn on the Wine Fridge or restart after having been shut off for a long time, there could be a few degrees variance between the temperature set and the one indicated on the LED display.. This is normal and it is due to the length of the activation time. Once the Wine Fridge is running for a few hours everything will stabilise.
- The actual temperatures may fluctuate depending on whether the interior light is turned on and depending on the position of the bottles.
- The body of the Wine Fridge can be warm during operation, this is normal.
- The Wine Fridge will have operational noise. To reach to the desired temperature the compressor and fan may produce some noise. These noises are normal and may occur as follows:
  - Gurgling sound - caused by refrigerant flowing through the appliance's coil.
  - Cracking/Popping sound - caused by the contraction and expansion of the refrigerant gas to produce cool air.
  - Fan operating sound - to circulate the air within the cabinet.
- Short vacations: Leave the Wine Fridge in operation for a vacation of fewer than three weeks.
- Long vacations: If the Wine Fridge will not be used for several months, remove all items and turn off the Wine Fridge. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly.
- To save energy, Do not leave the fridge door open for longer than required and only open the door when necessary. The Wine Fridge should be located, away from heat-producing appliances, and away from direct sunlight.
- Ensure the Wine Fridge is well ventilated. Do not overload the Wine Fridge as it forces the compressor to run longer. Make sure the bottles are not touching the back of the compartment.

Cleaning and Maintenance

- For hygienic reasons the Wine Fridge (including exterior and interior accessories), should be cleaned regularly at least every two months.
- Before performing any cleaning or maintenance ensure that the Wine Fridge is disconnected from the power outlet.
- Wipe the interior and exterior of the Wine Fridge with a damp cloth. Ensure that all surfaces are dry before operating the Wine Fridge once again.
- The wine racks can be removed for cleaning. Use a soft damp cloth to wipe clean or wash in mild, soapy water. Ensure the wine racks are thoroughly dried before inserting back into the Wine Fridge.
- Do not use abrasive cleaners, caustic or acidic substances as these can damage both the interior and exterior surfaces.

NOTE: Do not use abrasive cleaners, caustic, or acidic substances as these can damage both the interior and exterior surfaces of the appliance.

Frequently Asked Questions

Problem	Solution
Wine Fridge does not operate.	• Not plugged in. • The appliance is turned off. • The circuit breaker tripped or a blown fuse.
The Wine Fridge is not cold enough.	• Check the temperature control setting. • The external environment may require a higher setting. • The door is opened too often. • The door is not closed completely. • The door gasket does not seal properly.
Turns on and off frequently.	• The room temperature is hotter than normal. • A large amount of contents has been added to the Wine Fridge. • The door is opened too often. • The door is not closed completely. • The temperature control is not set correctly. • The door gasket does not seal properly.
The light does not work.	• Not plugged in. • The circuit breaker tripped or a blown fuse. • The bulb has burned out. • The light button is "OFF".
The Wine Fridge is Vibrating.	• Check to assure that the Wine Fridge is leveled to the floor.
The Wine Fridge is noisy.	• The rattling noise may come from the flow of the refrigerant, which is normal. • As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Wine Fridge. • Contraction and expansion of the inside walls may cause popping and crackling noises. • The Wine Fridge is not leveled.

Frequently Asked Questions (cont.)

Problem	Solution
The door cannot close properly.	• The Wine Fridge is not leveled. • The gasket is dirty. • The shelves are out of position.
Condensation on the Glass	• The door opens too frequently. • It indicates expressive humidity in the environment- in an extreme situation, water can even flow out.

Failure Display

The Wine Fridge is equipped with safety devices to protect the electronic system and if an abnormality occurs, the wine cooler will enter into protective state automatically and the following error codes will show:

Error Code	Problem
1H	• The temperature continues to be higher than 26°C after the Wine Fridge is turned on for more than 10 hours. • The probe is short-circuited.
1L	• The temperature continues to be lower than -15°C after the Wine Fridge is turned on for more than 1 hour. • The probe is open-circuited.
2H	• The defrosting probe is short-circuited.
2L	• The defrosting probe is open-circuited.
E9	• Communication failure between main PCB and display PCB.

TEMPLE & WEBSTER