

SIDEBOARD

MODEL:SB-NED-A29-WHWD/BK

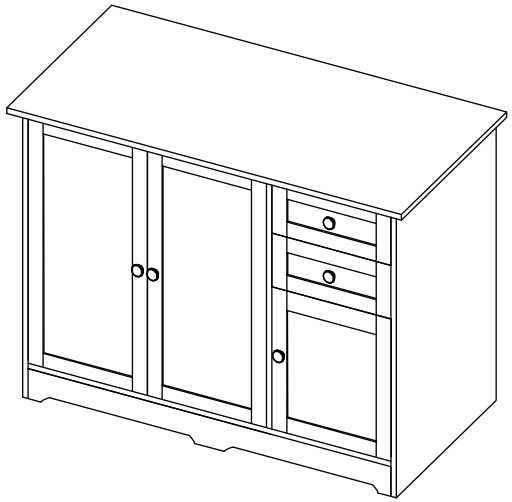



ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.



Two persons and tools required for assembly


HARDWARE


A	x16	B	x8	C	x18	D	x30	E	x15	F	x2
 7x35mm		 15x12mm		 Ø6x30mm		 M4x40mm				 M4x30mm	
G	x2	H	x2	I	x2	J	x14	K	x4	L	x15
 M4x14mm								 278mm		 M3x12mm	
M	x6	N	x18	O	x6	P	x8	Q	x3	R	x5
		 M3.5x14mm				 12x10mm		 M4x20mm			
S	x6	T	x2	U	x12	V	x16	W	x2	X	x3
 M4x10mm						 M3x14mm					
Y	x4										
											


PARTS

Wipe with dry cloths




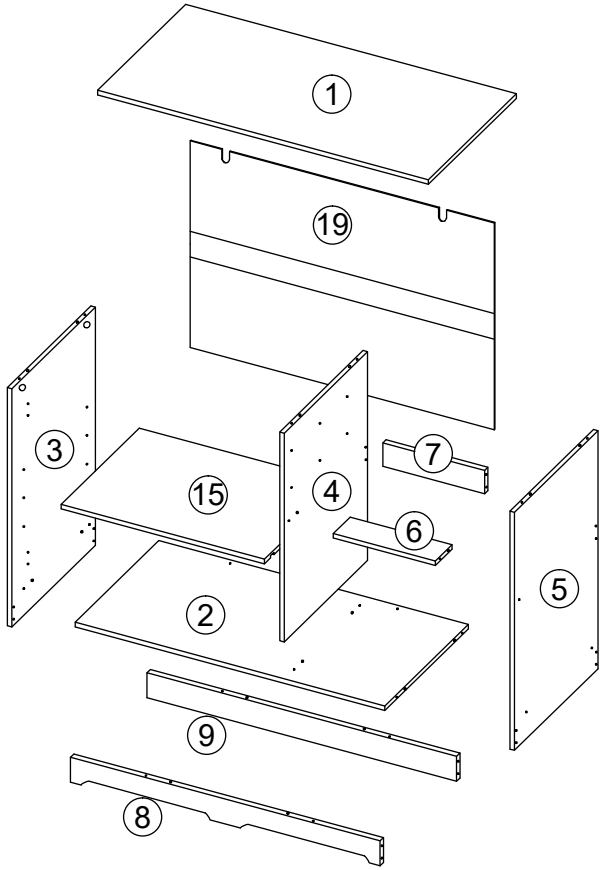


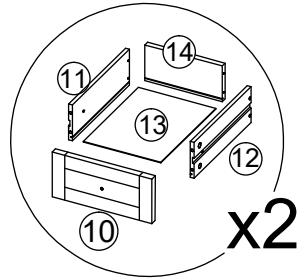

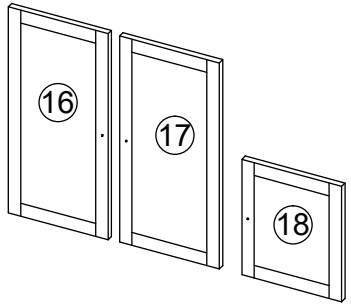


1

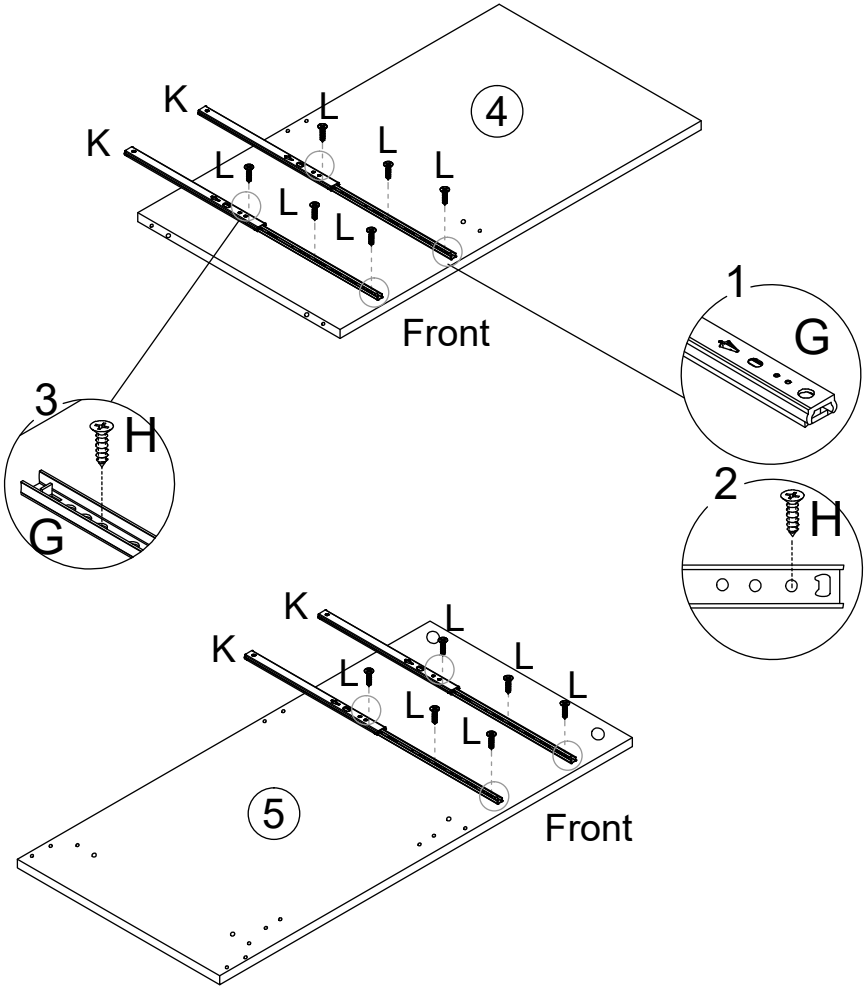

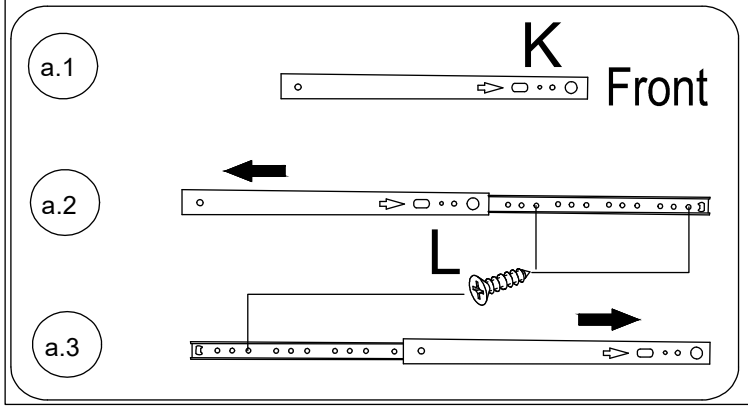


K	x4	L	x12
278mm		M3x12mm	

2

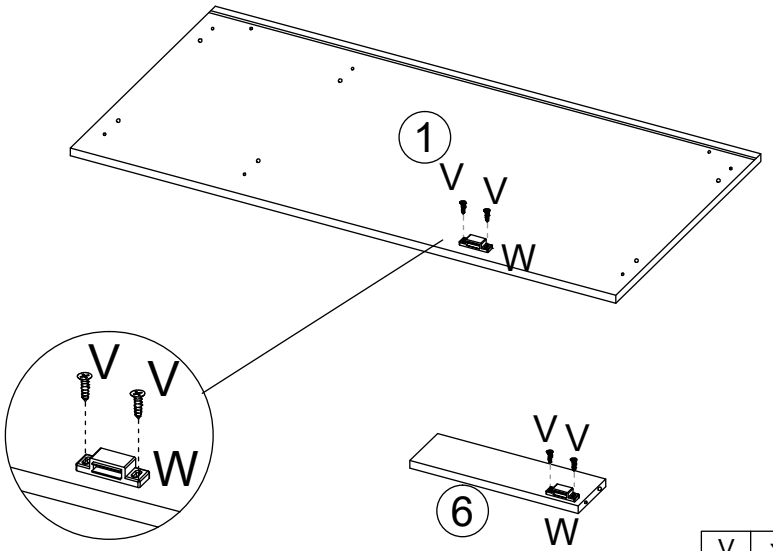


V	x4	W	x2
M3x14mm			

3

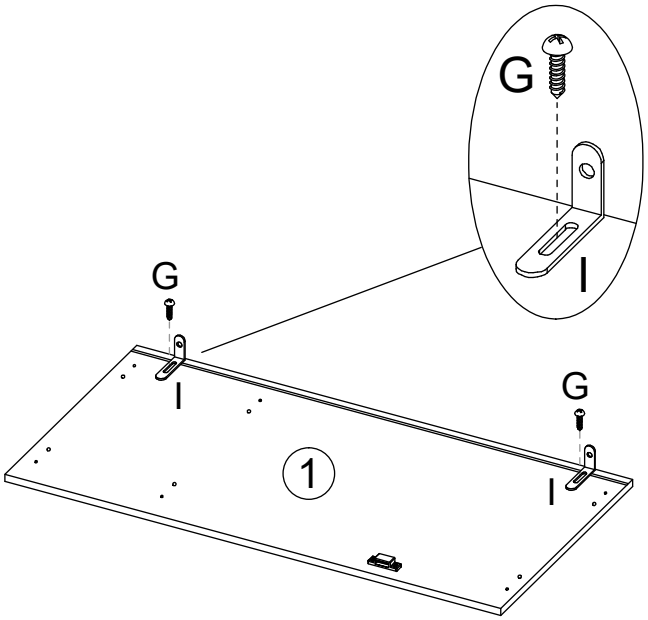

G	x2	I	x2
M4x14mm			


4

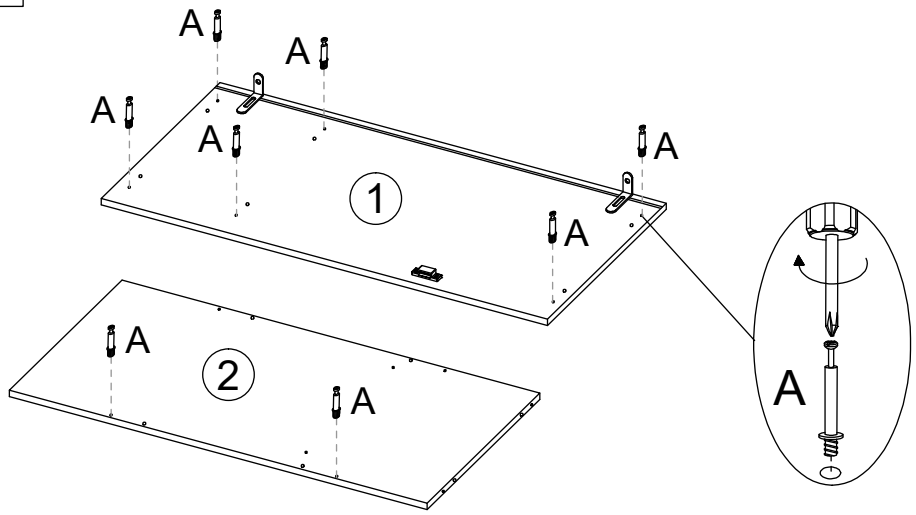


A	x8

7x35mm

6

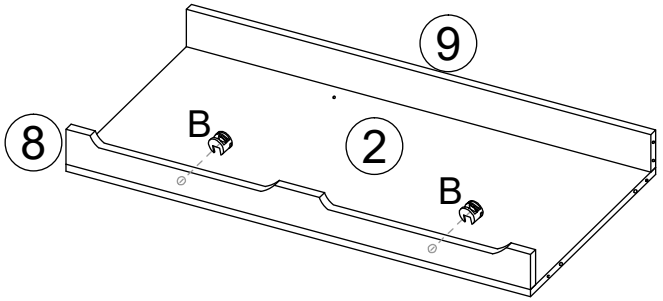


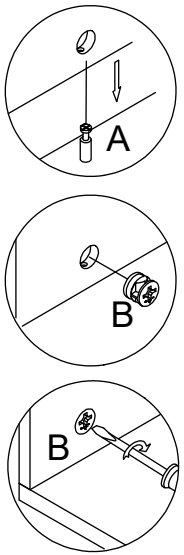

B	x2

15x12mm


5

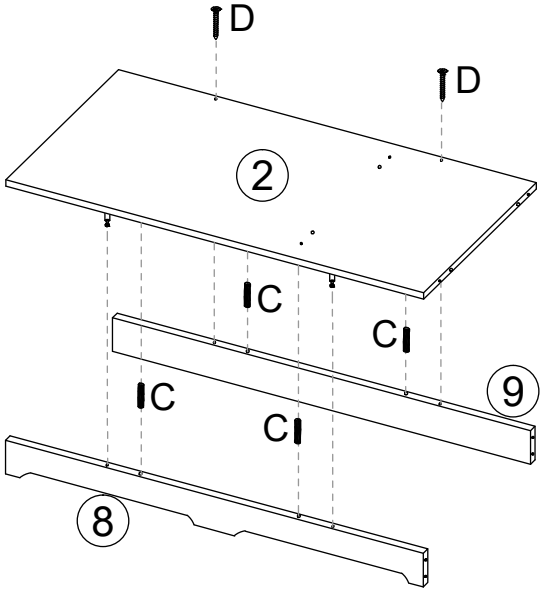

C	x4	D	x2

Ø6x30mm M4x40mm


7

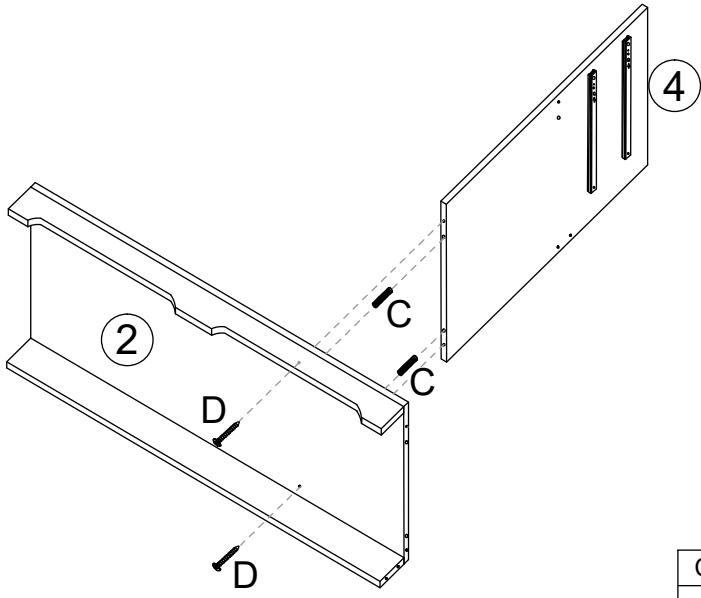

C	x2	D	x2

Ø6x30mm M4x40mm

8

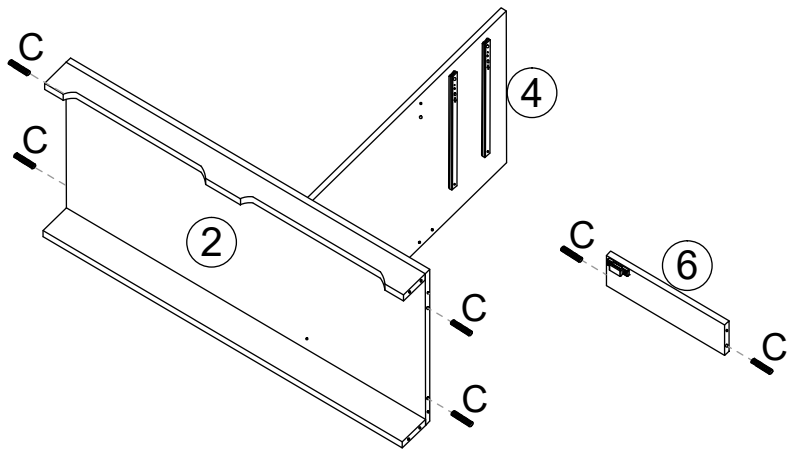



C	x6



Ø6x30mm

10

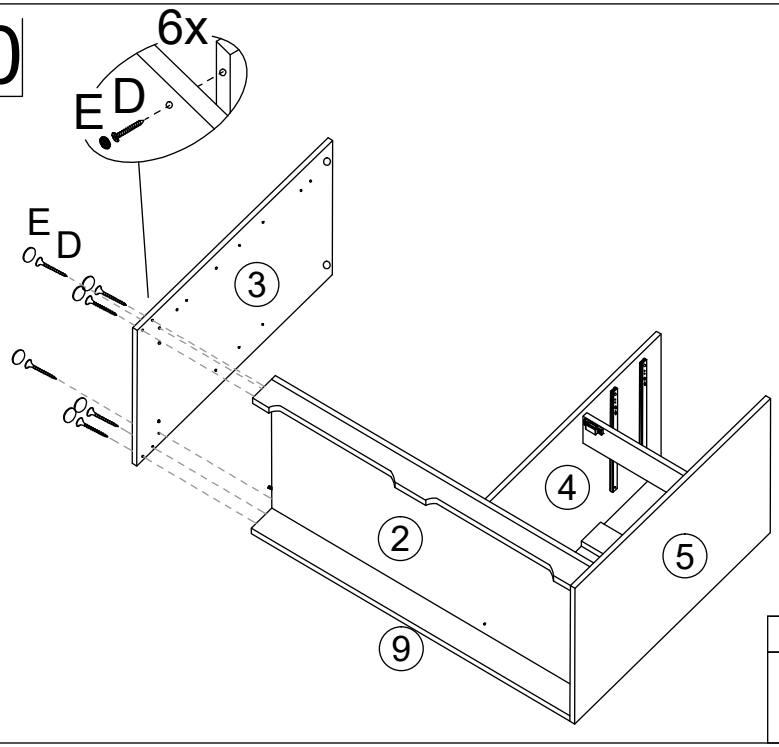


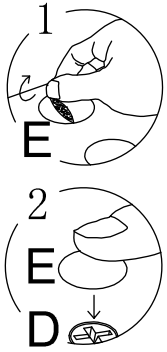


D	x6	E	x6




M4x40mm




9

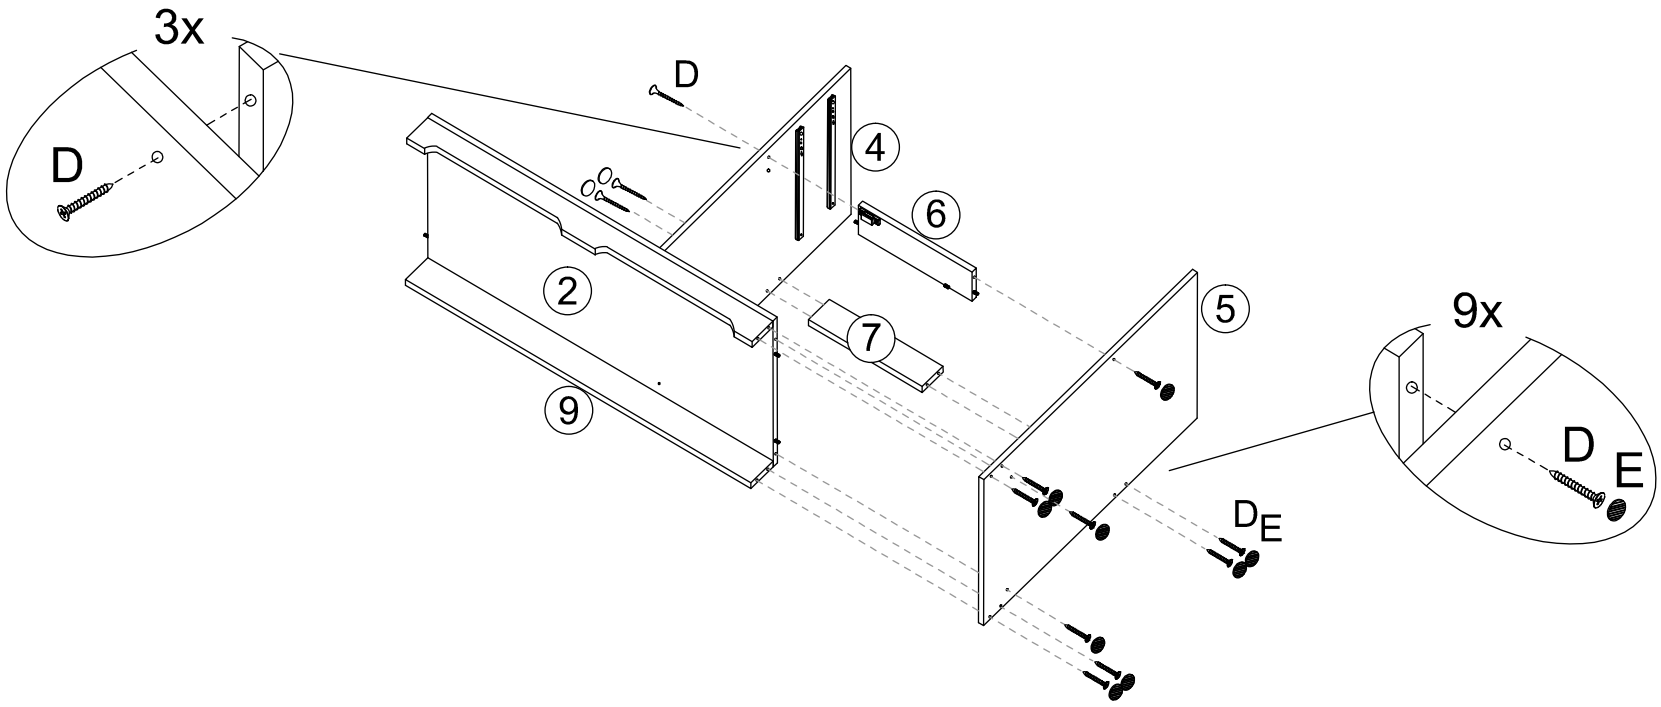


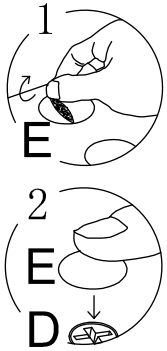


D	x12	E	x9



M4x40mm





11

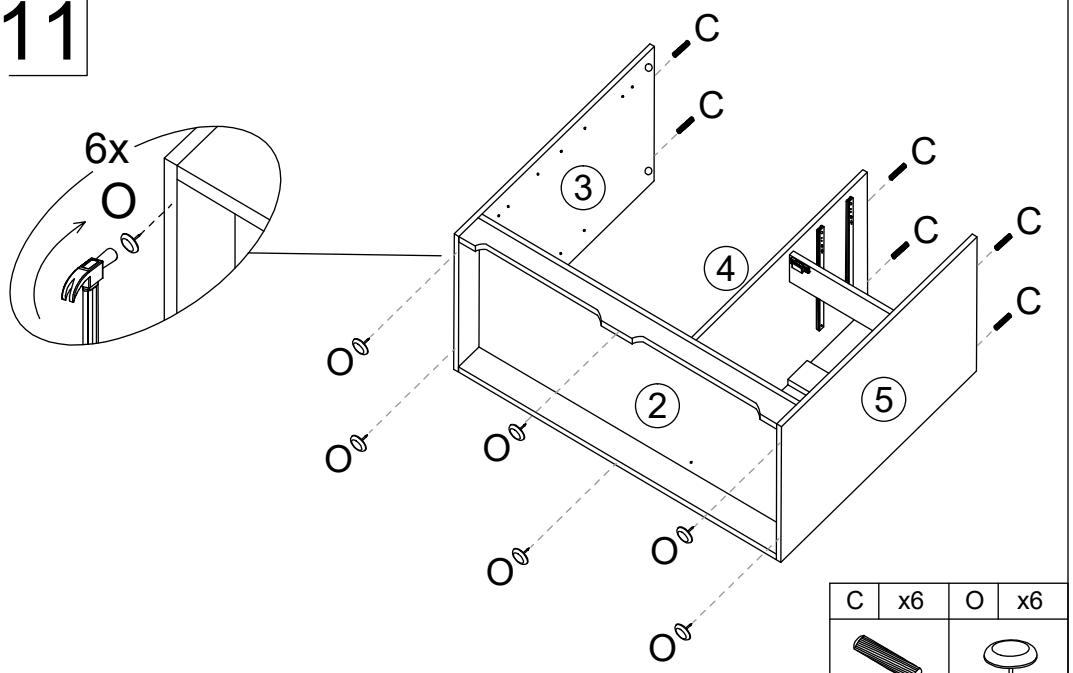



C	x6	O	x6
Ø6x30mm			

12

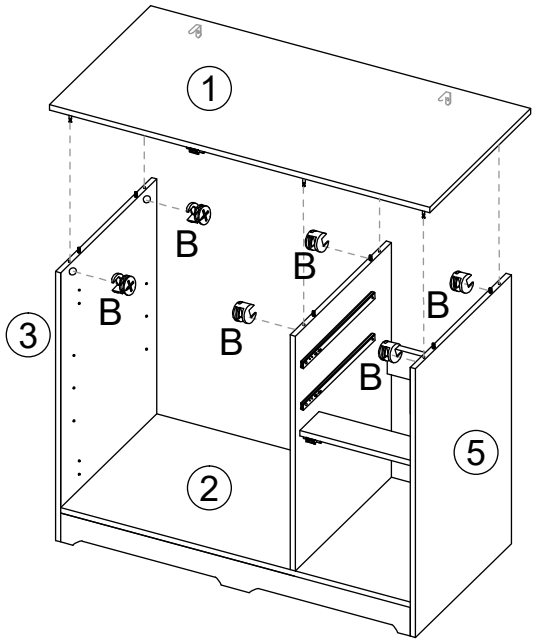

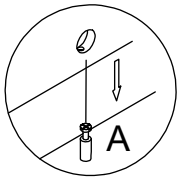


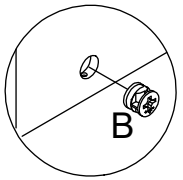


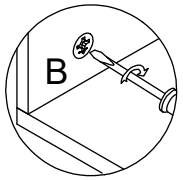


B	x6
15x12mm	

13

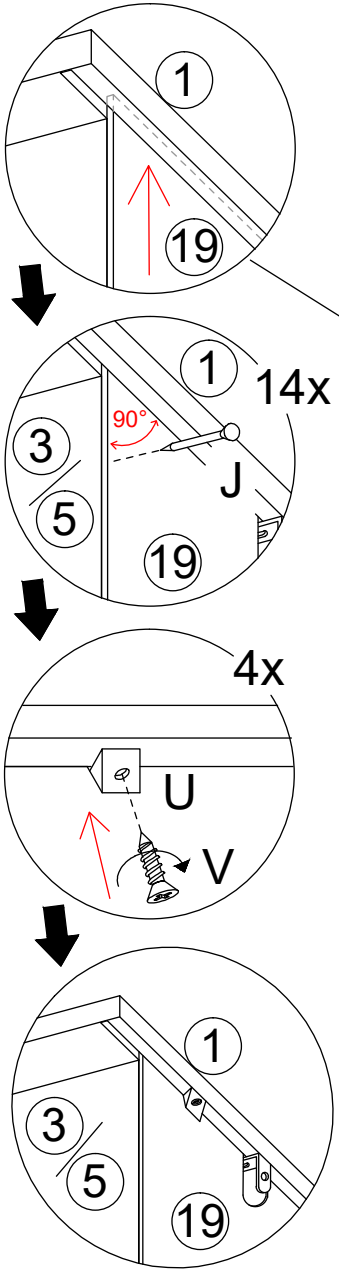


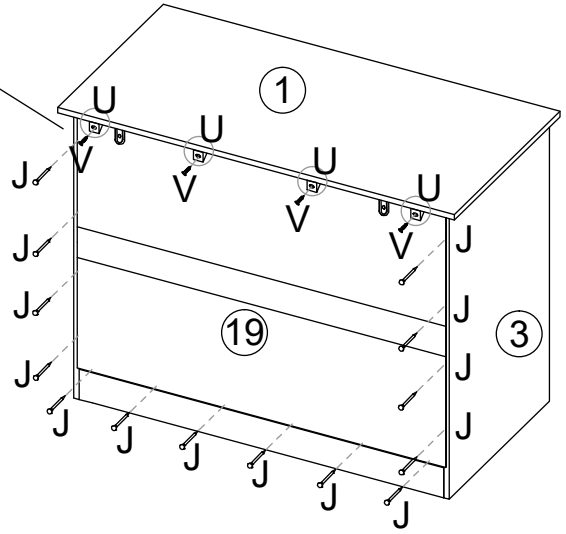




J	x14	U	x4	V	x4
				M3x14mm	

14

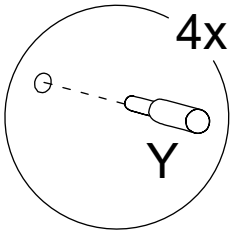


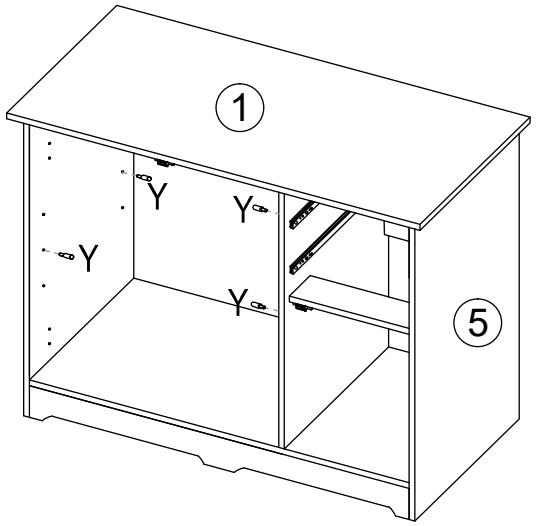


Y	x4





15

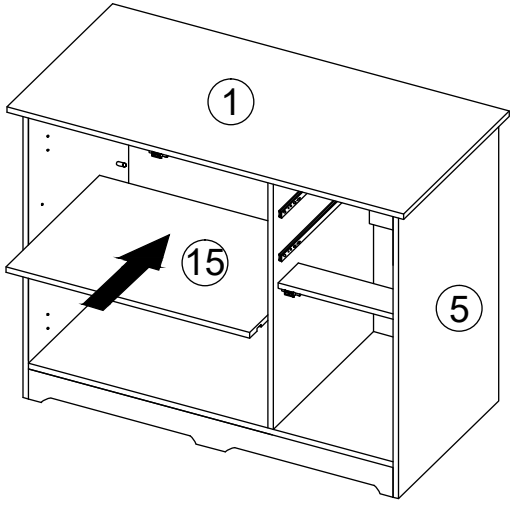


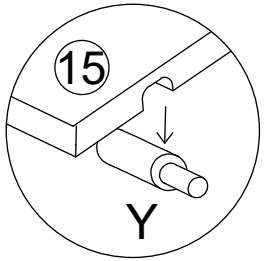



16

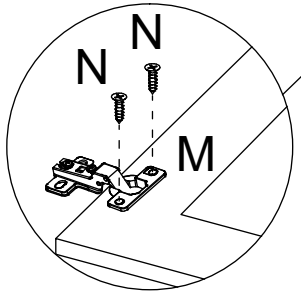


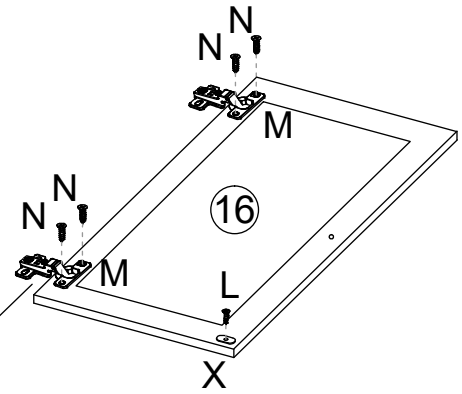

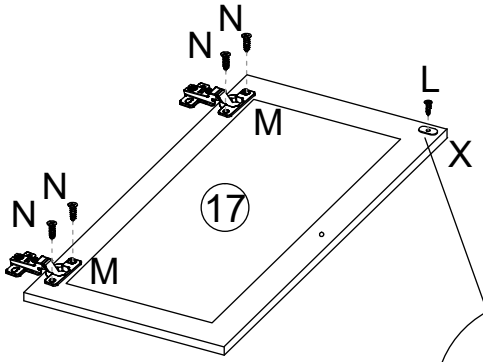


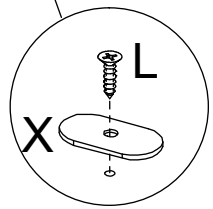


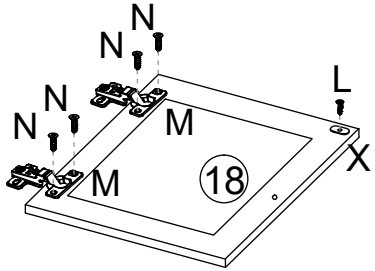

M	x6	N	x12	L	x3	X	x3
		 M3.5x14mm		 M3x12mm			


17

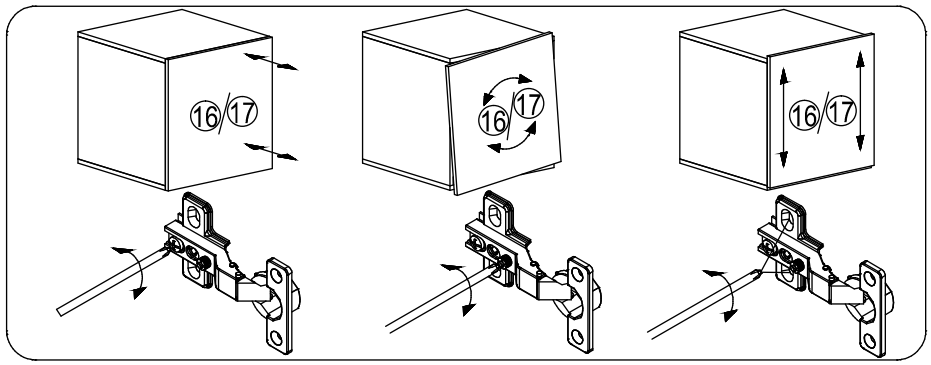


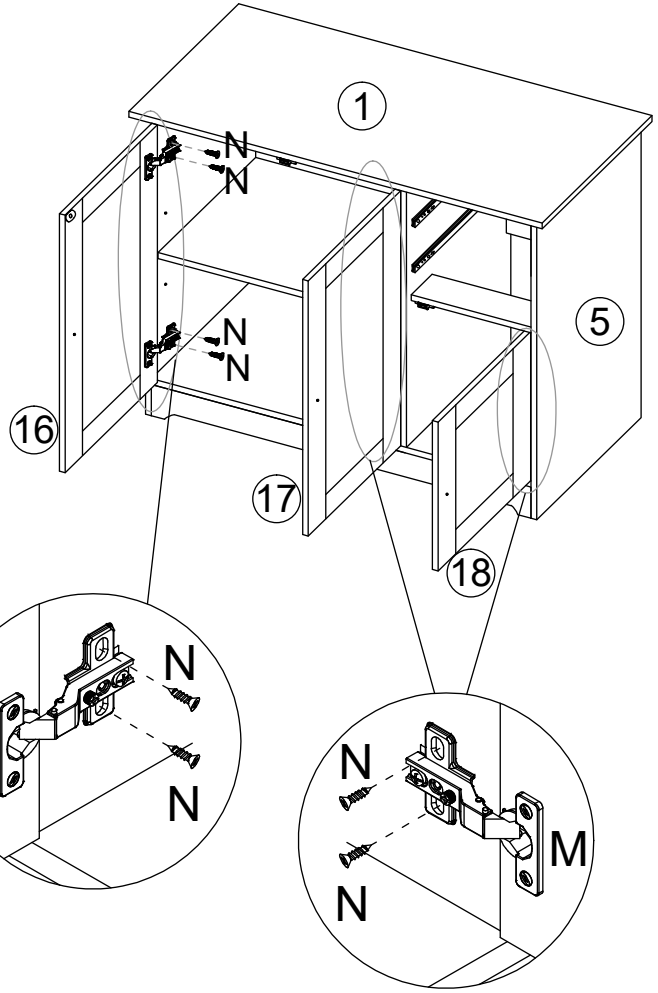

N	x6
M3.5x14mm	

18

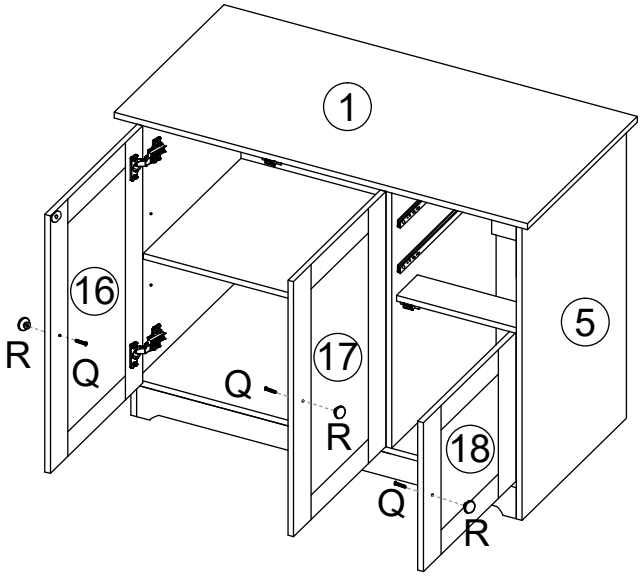

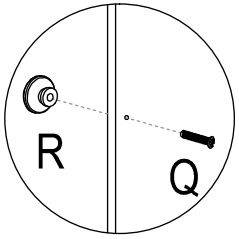


Q	x3	R	x3
M4x20mm			


19


⚠ WARNING:

It is very important to secure this furniture with an anchoring device for your safety in use.

Pre-drilled hole at wall

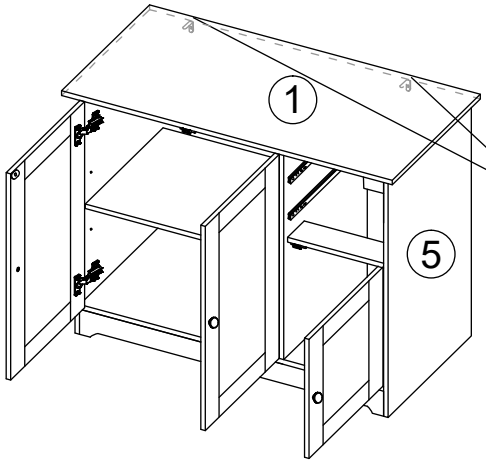


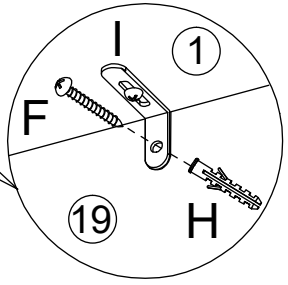

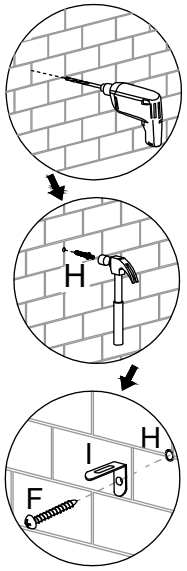

H	x2	F	x2
		M4x30mm	


20

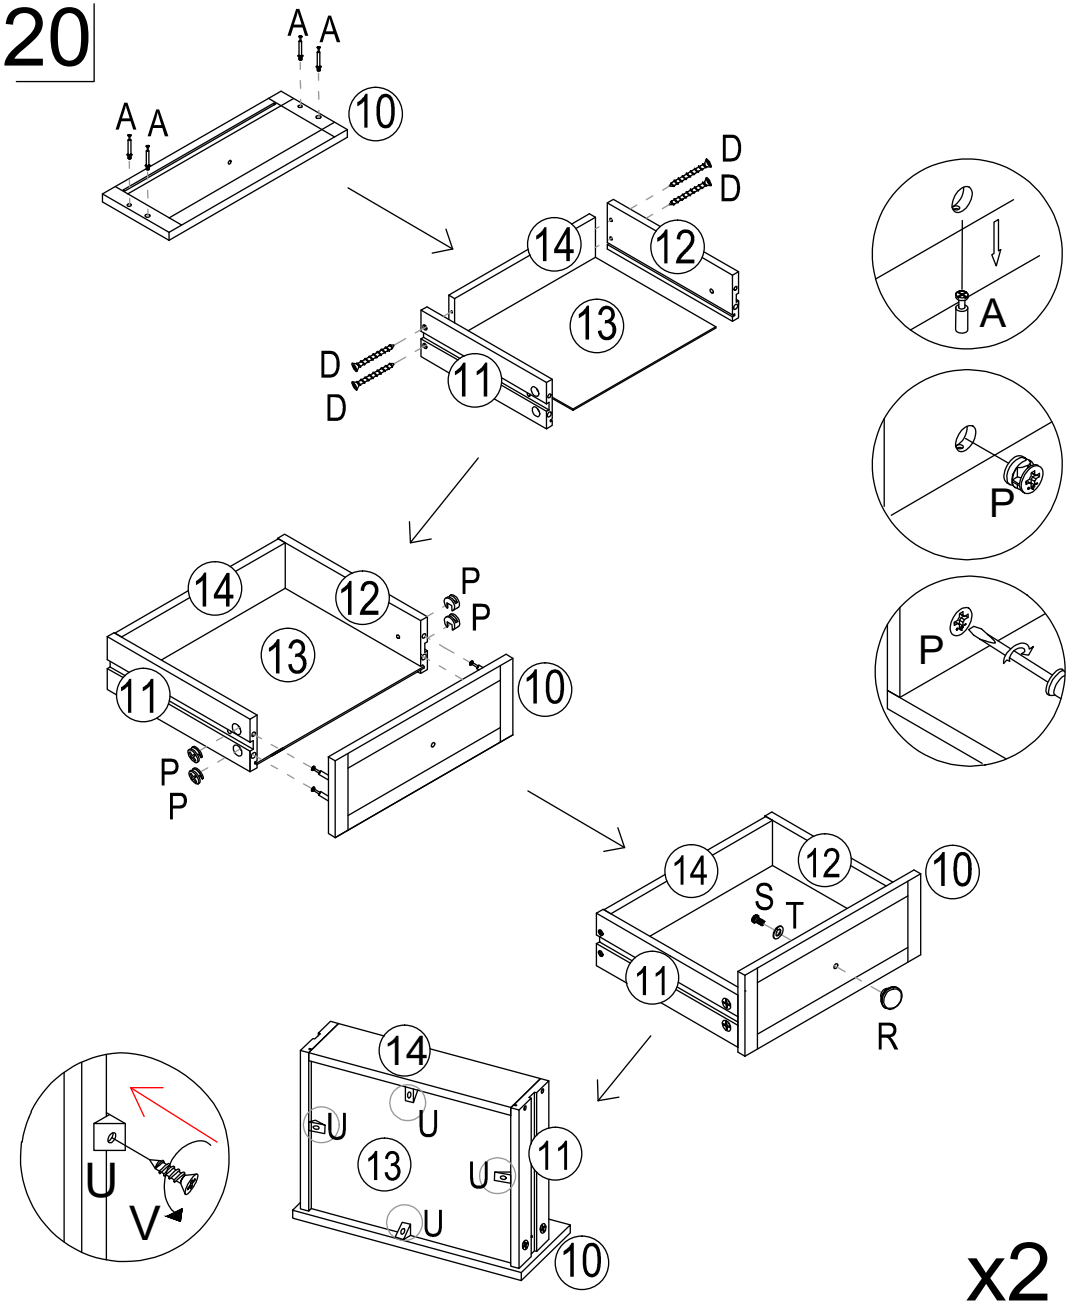

x2

U	x8	V	x8	P	x8	A	x8	D	x8	S	x2	R	x2	T	x2
		M3x14mm		12x10mm				M4x40mm		M4x10mm					

21

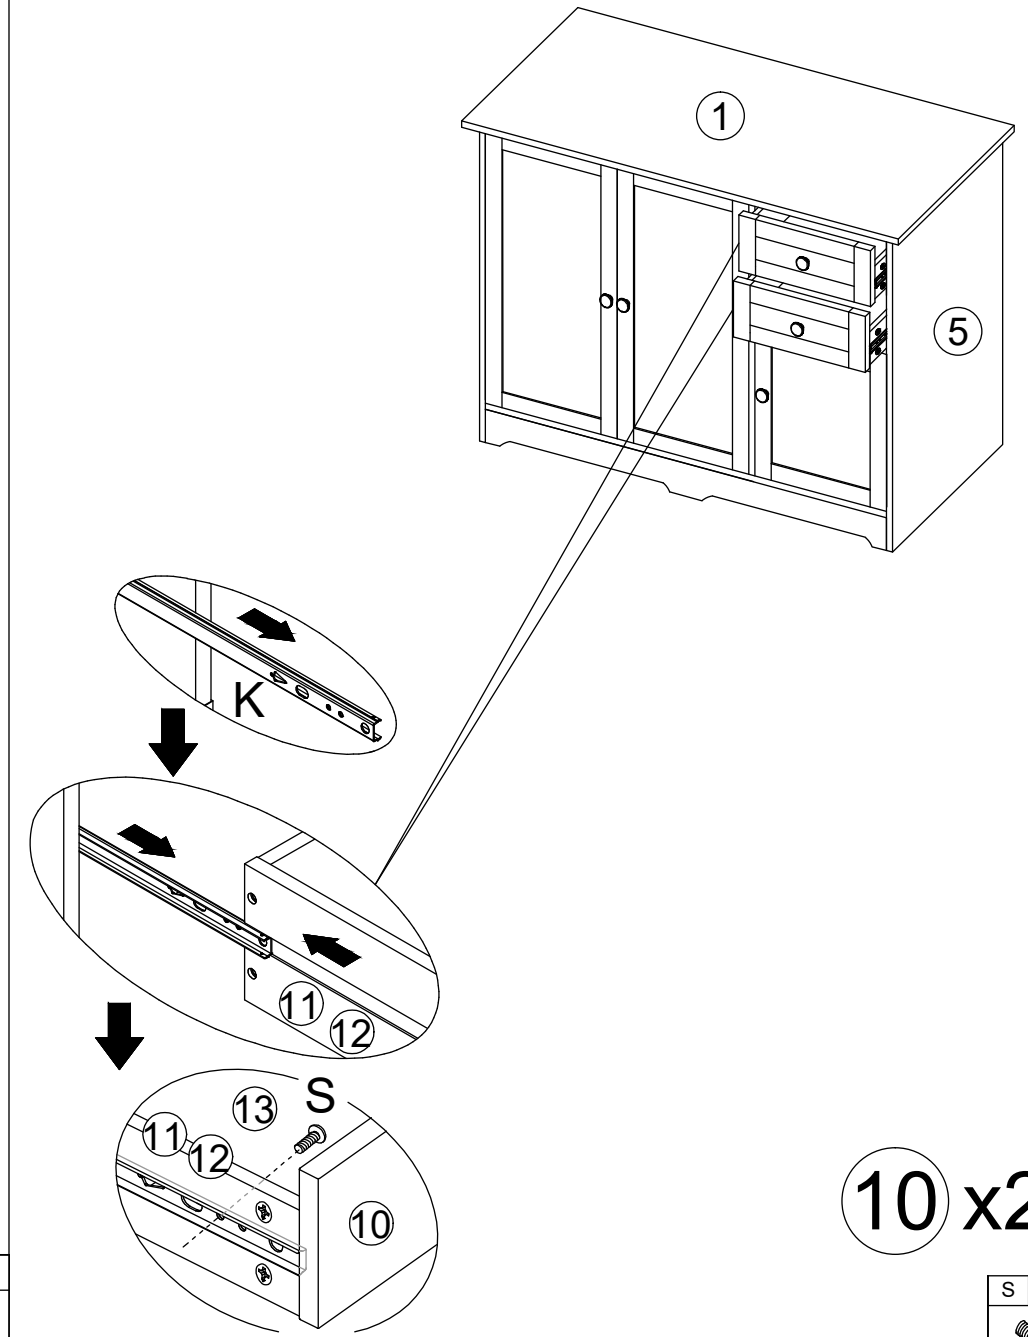

10 x2

Screw from the inside of the drawers

S	x4
M4x10mm	

CARE AND MAINTENANCE - FURNITURE

GENERAL

- Periodically check all screws, bolts and joints connections and tighten them if necessary.
- Periodically check for any damage and deteriorated parts and components and seek repairs or replacements if needed.
- Do not allow any liquids to remain on the furniture as this may cause stains and allow the liquid to be absorbed into the finishes and materials. In some cases, this may also cause warping and/or cracking of the materials and finishes. Use coasters and placemats for all food and beverages.
- Do not place hot items, such as dishes, pots and cups, directly on the furniture. Use coasters and placemats for all food and beverages.
- Keep sharp and pointed objects away from furniture to avoid damaging the surface and finish.
- Do not place the furniture near hot objects, heating vents or heating equipment.
- Do not place the furniture in moist areas, such as bathrooms, to avoid water damage.

CLEANING AND CARE

- Dust the furniture regularly using a soft cloth or microfibre duster to prevent dust build-up
- Only wipe and clean with a soft, damp cloth with a mild cleaning detergent.
- Do not use abrasive cleaning materials such as scouring pads and chemical cleaning solvents to avoid damage to finishes and paintwork.
- After using or cleaning a glass table top, wipe it completely dry as leaving the glass unattended when wet may leave water marks that cannot be removed easily.
- For upholstery, vacuum regularly with a soft, non-metallic brush to remove dust and grime and to prevent overall soiling. Follow manufacturer's instructions for spot cleaning.
- If removable, wash upholstery covers periodically. If machine washable, use a cold wash cycle.
- Do not use a dryer. Only air dry the upholstery covers.

ENVIRONMENTAL

- Do not expose the furniture (including outdoor furniture) to direct sunlight. Protect your outdoor furniture with weather-resistant covers, and have curtains and blinds to shield indoor furniture if direct sunlight is unavoidable.
- Bamboo, rattan as well as wood-based furniture are prone to damage and fade with prolonged exposure to extremely high or low humidity conditions. Do not place them in such extreme conditions.
- For outdoor bamboo/rattan furniture, do not place the furniture in shady or moist areas to prevent it from moulding. Bring the furniture indoors during the off season or covered it with weather-resistant covers.

HANDLING

- Do not drag, push or pull furniture when moving them. Lift them up to avoid damage to the furniture legs and scratches on floors.
- Do not sit or stand on the armrests or use the furniture as a stepping stool for safety reasons.
- Do not exceed the recommended weight capacities of the furniture specified.
- Do not use the furniture for any other purpose other than what is intended for.

STORAGE

- Store furniture in a clean, dry environment when not in use.
- If possible, disassemble furniture before storing to save space and prevent damage during transportation.

SPECIFIC CARE

- Engage professional upholstery cleaning services for deeper cleaning if required.
- For genuine leather, suede leather or synthetic leather upholstery, use an appropriate leather conditioner to maintain its suppleness and appearance and prevent drying and cracking. The conditioner also adds a thin protective layer on the leather surface to facilitate easier cleaning.
- If a furniture polish is used for wooden furniture, make sure that it is of low alcohol content.
- To prevent rattan from becoming dry and brittle, spray water on the underside of the furniture piece every six months and wipe down with a dry cloth to remove excess water.
- As an optional protection for bamboo furniture, apply a bamboo sealant/varnish on it for durable protection against scratches, water, UV rays and other weather elements.

