
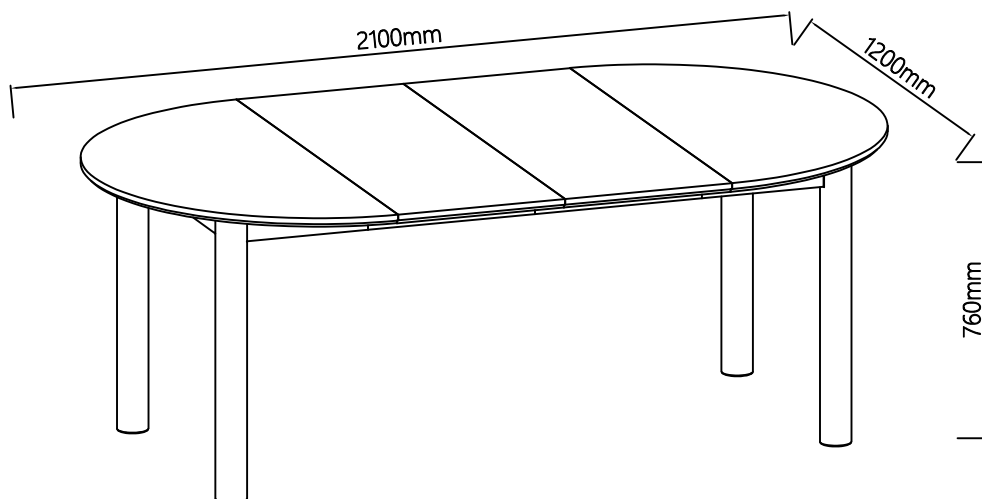


# Assembly Instructions

## Cannes Ext dining table Oak

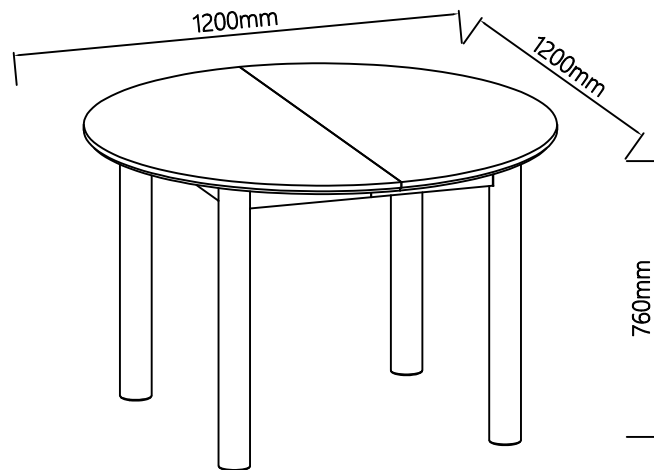

Please read the Assembly Instructions carefully  
before assembling.

Imported By PRODESIGN FURNITURE PTY LTD.

# WARNING

**FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY**

1. Read instructions carefully. Check no parts are missing.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.
4. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.
5. **DO NOT** fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

**Warning: In order to prevent overturning, this product must be used with the wall attachment device provided.**

## **Daily Care:**




**Water and other liquids can cause discoloration and damage to the surface. In case any liquids are spilled on the surface, remove immediately with a clean cloth. Avoid rubbing the spilled liquid into the veneer, but wipe gently, using a clean, firmly wrung damp cloth. If stains or marks persist, seek professional help and advice.**

**Wood expands and contracts according to the surrounding humidity and temperature. In case of temperature and humidity fluctuations, the wood might warp and/or crack. To avoid this, do not place the furniture near a radiator or in hot surroundings.**






**Take care when moving the furniture across the floor. Do not drag the furniture, as this can cause damage to both the furniture and the floor.**

# What you need

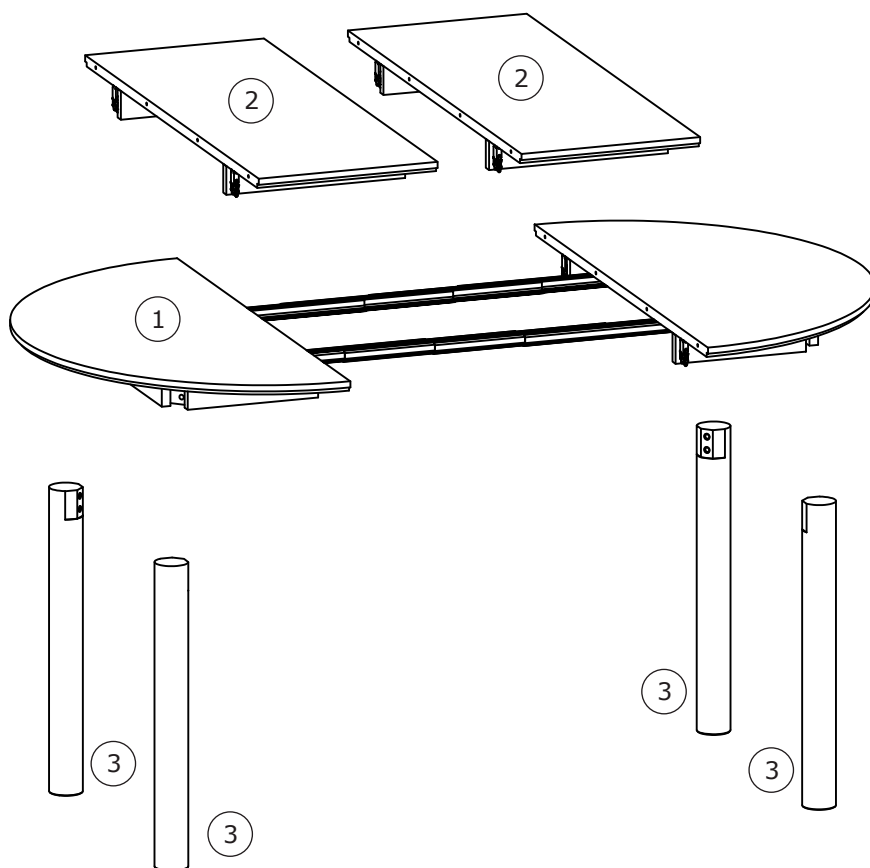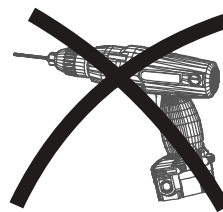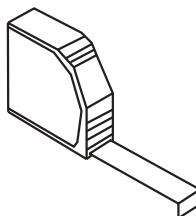to assemble the product









NO.	PARTS LIST	QTY
(1)	Top panel	1
(2)	Add on panel	2
(3)	LEG	4

 <p>8 x Bolt M8x65mm (A)</p>	 <p>8 x Spring Washer M8mm (B)</p>	 <p>8 x Washer Ø8/Ø19x1.5mm (C)</p>	 <p>1 x Allen key M5mm (D)</p>
 <p>4 x Felt Pads Ø50x3mm (E)</p>			

Please make sure you have all these parts before you start.

# Step 1



You will need	
	
8 x Bolt (A)	8 x Washer (B)
	
8 x Washer (C)	1 x Allen key (D)
	
4 x Felt Pads (E)	

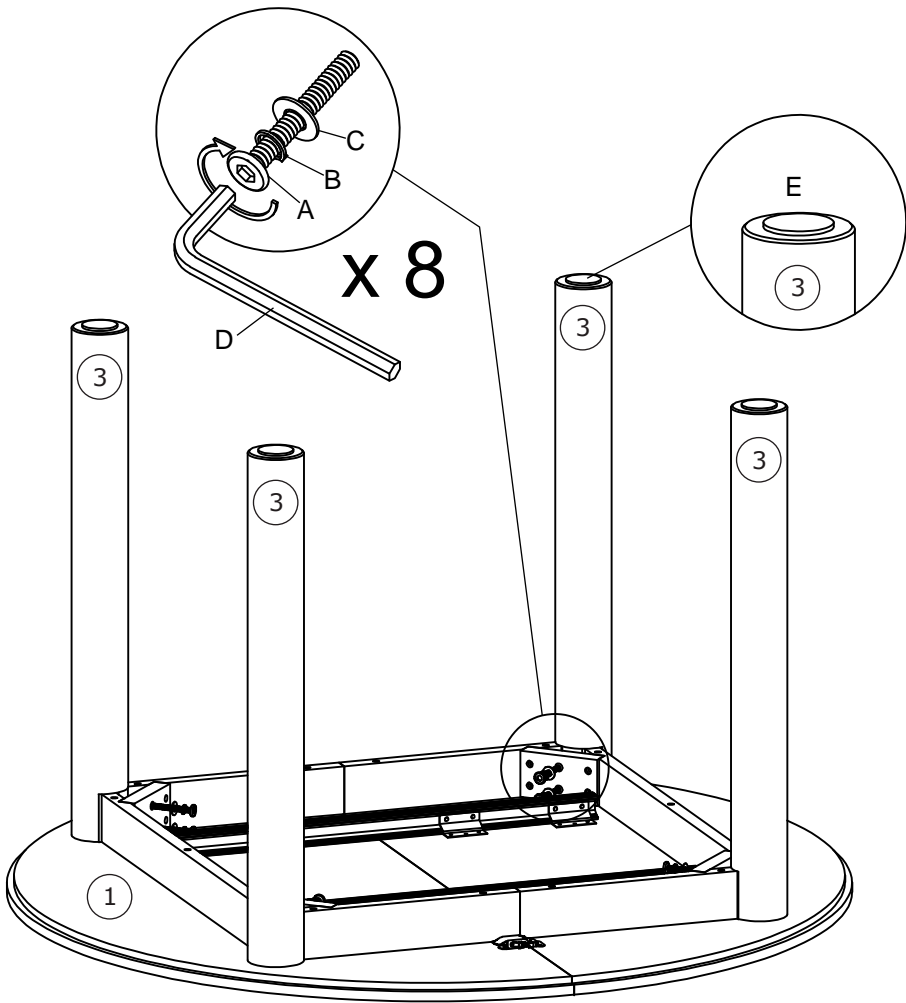

Attach 2 x Legs (2) to Body (1) using 4 x Bolts (B), 4 x Spring Washers (C) and 4 x Washers (D).  
Tighten the bolts with Allen Key (E) .


Attach 4 x Felt Pads (F) to the 4 x Legs.

# Step 2      OPTION1

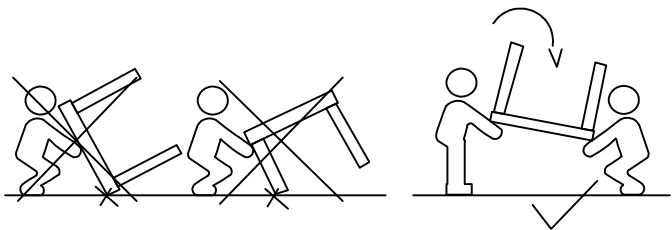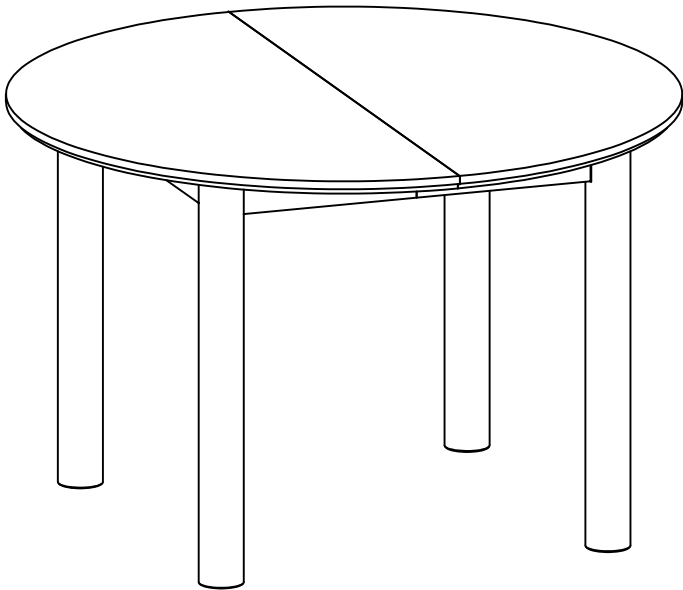


With help, carefully turn the Sideboard over.



**Step 3**      OPTION2

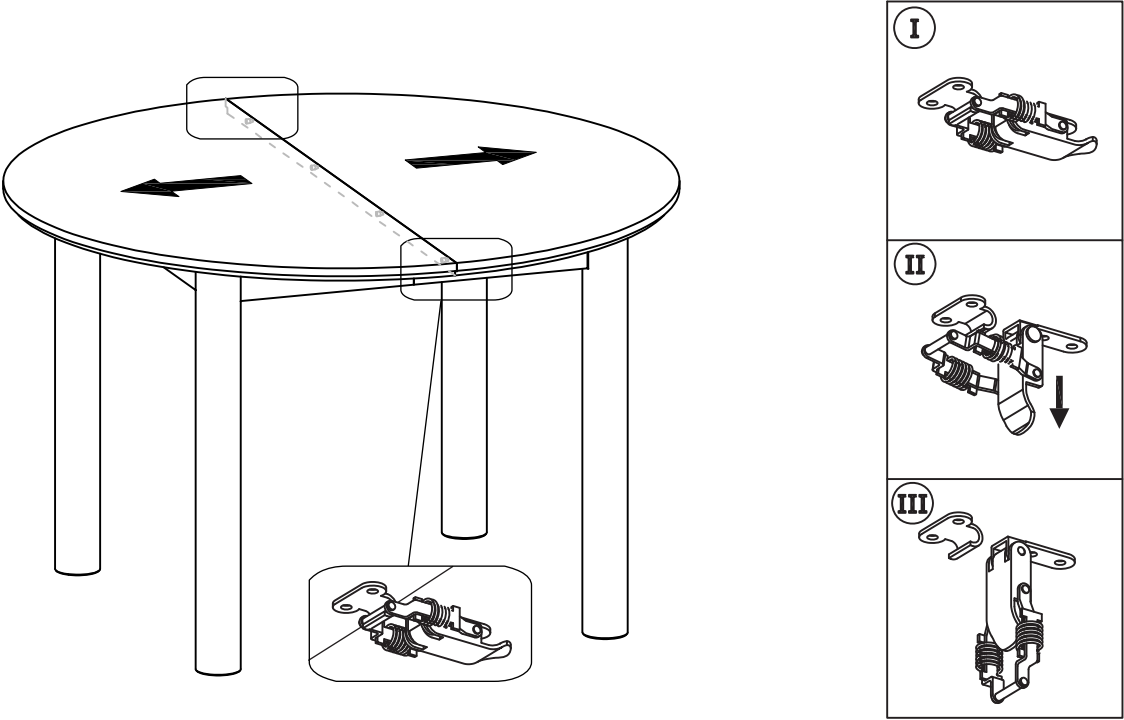



**Step 4**

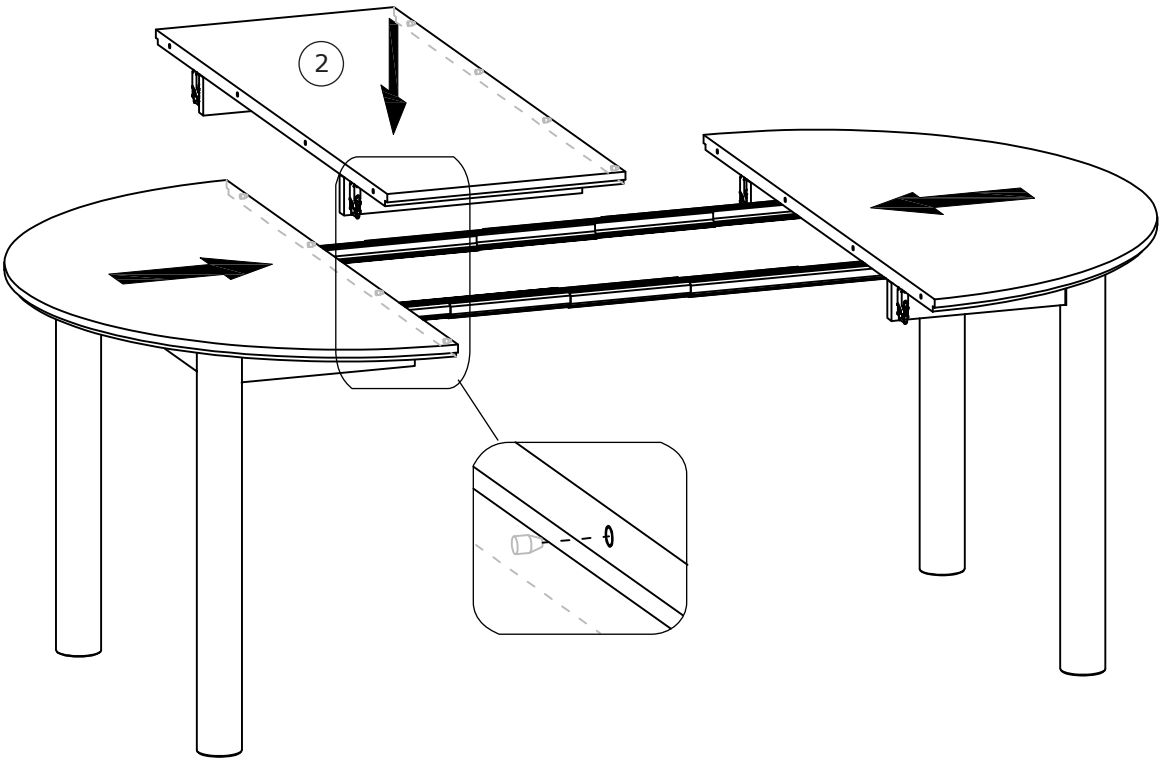

Step 5

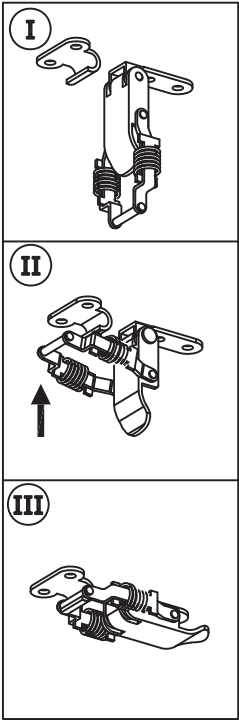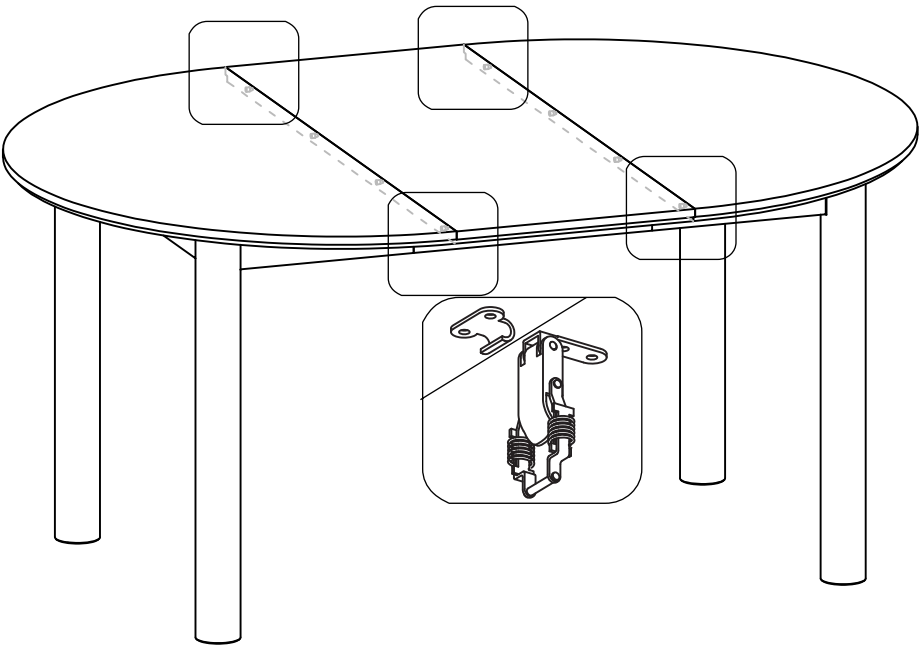


Step 6      OPTION3

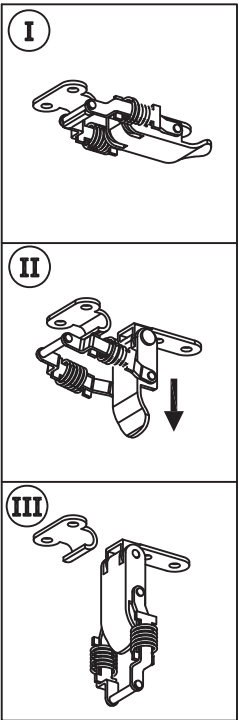
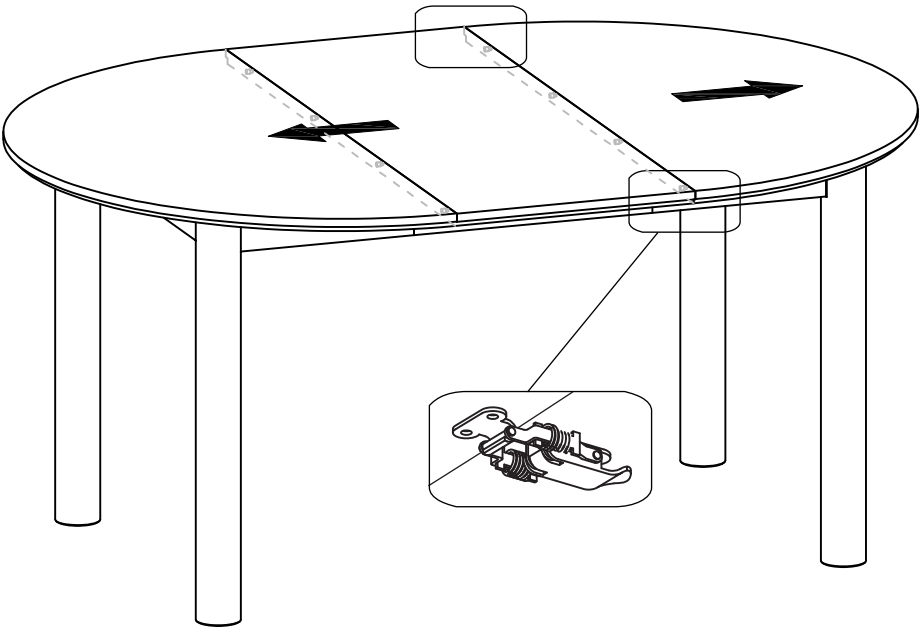





# Step 7

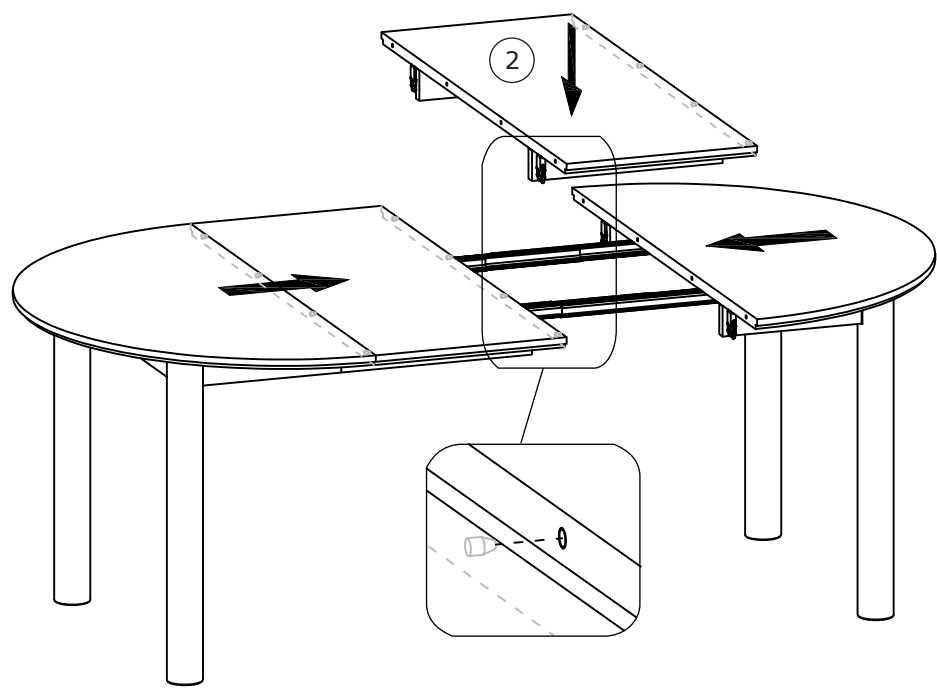

# Step 8

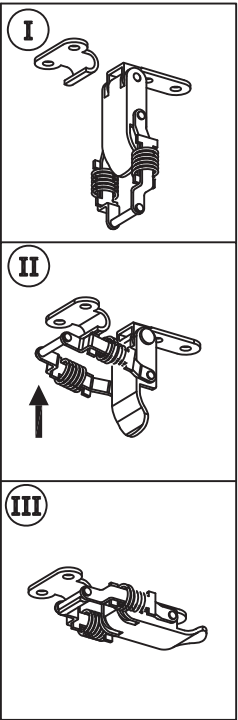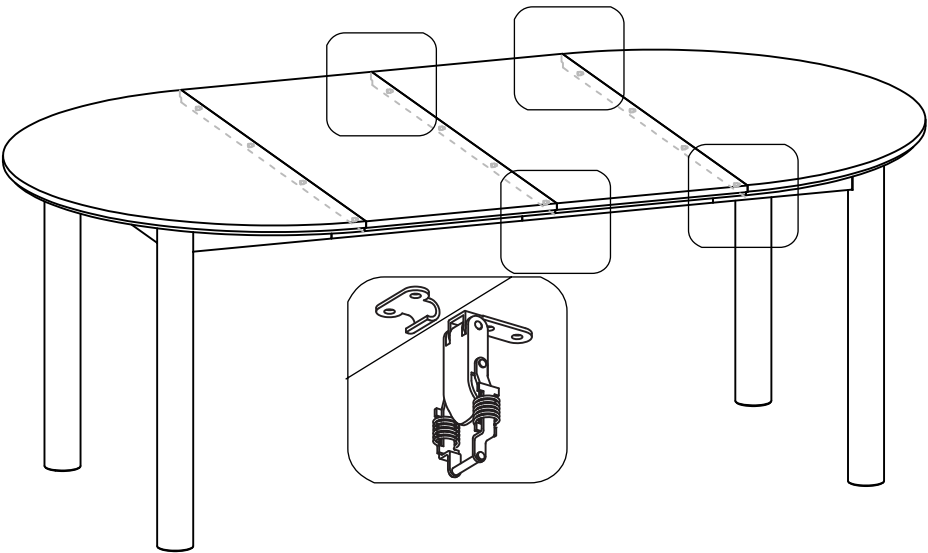


## Step 9

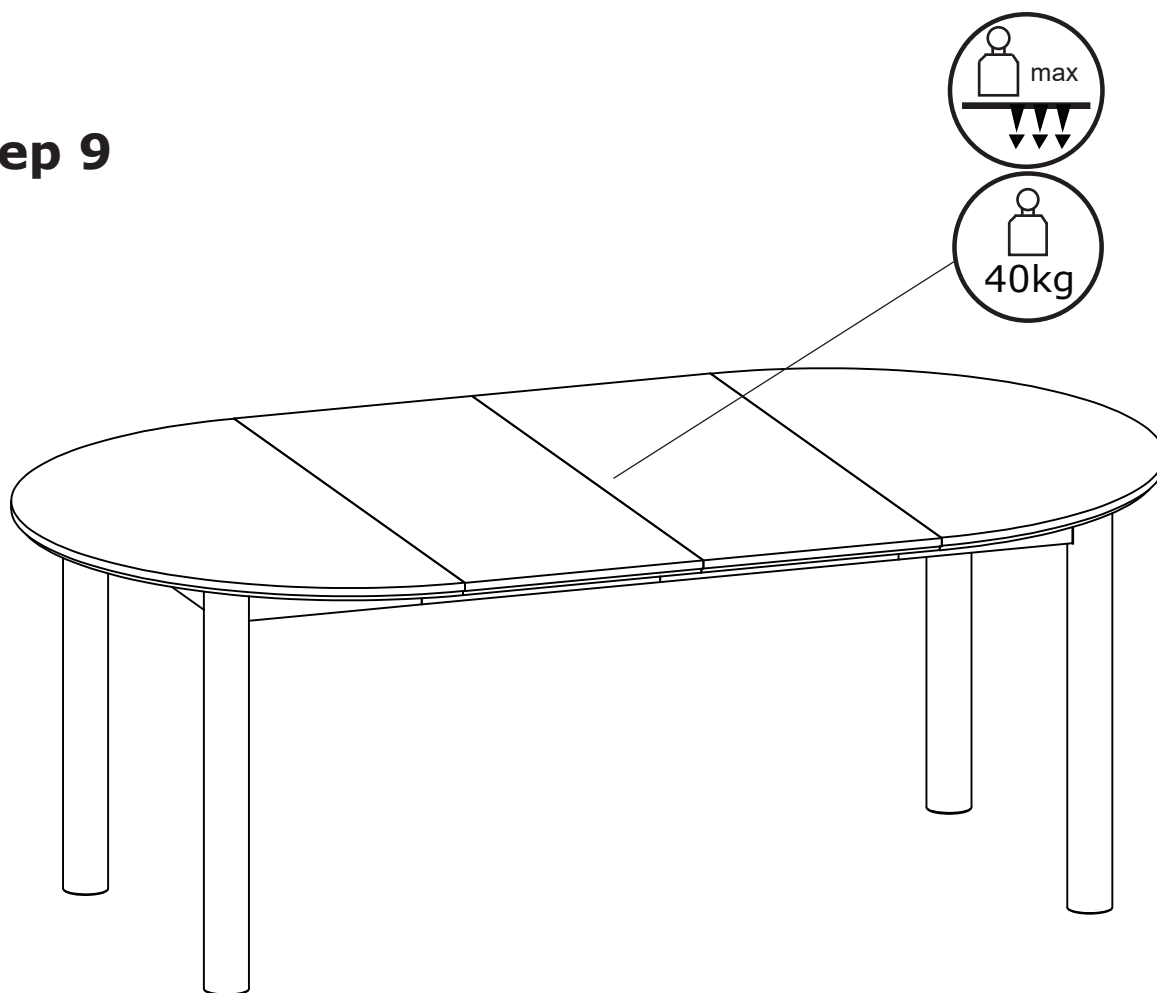

# Job Complete !

In the interest of our environment Please dispose of all packaging thoughtfully.

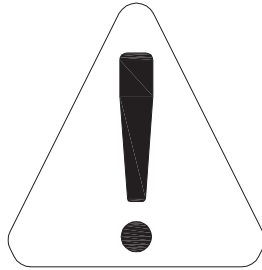

**THIS PRODUCT IS FINISHED WITH LACQUER**

Avoid placing hot items directly onto the surface unless using a thick insulation material such as placemats or coasters. Heat may lead to discolouration or other damage to the surface of the product.

Use a soft cloth that has been dampened in water to clean the surface of this product. Do not use abrasive cleaners, furniture wax or polish on the surface of this product, as it may damage the surface.

**CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.**