


Assembly Instructions

Villeneuve Entertainment unit - Wall Mounted - 180CM

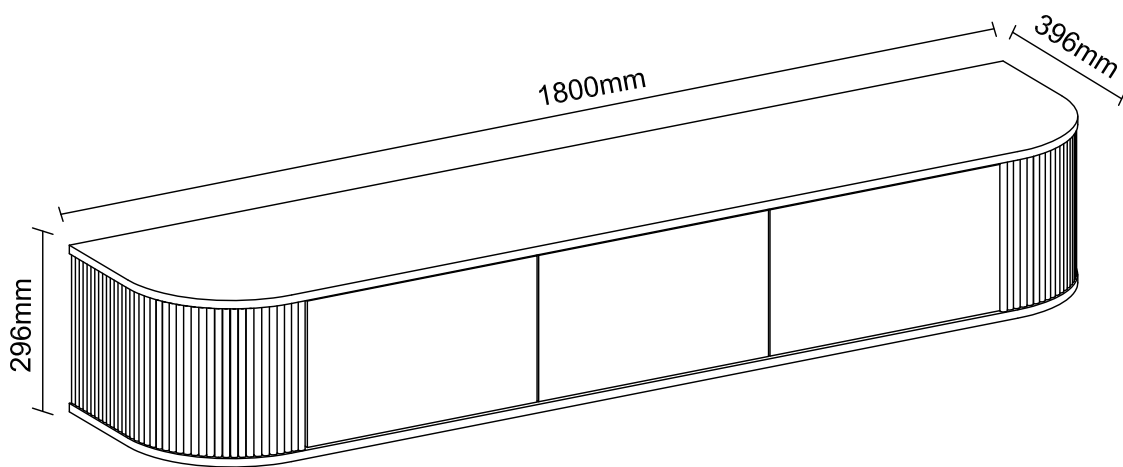

**THIS PRODUCT MUST BE WALL MOUNTED BY A QUALIFIED
TRADESMAN/TECHNICIAN**

THIS WALL MOUNT CABINET IS FOR THE STORAGE OF COMPONENTS
ONLY AND IS NOT INTENDED TO HAVE TV PLACED/STORED ON IT.
MAXIMUM WEIGHT CAPACITY OF THIS UNIT IS 20 KG.

Please read the Assembly Instructions carefully
before assembling.

Imported by Sourcebynet Australia Pty Ltd.

Important safety instructions

DANGER!

Children have died from furniture tip over.

Toppling Hazard Warning

- ALWAYS secure television with an anchor device
- ALWAYS secure this furniture with an anchor device
- For safety reasons, we recommend you follow the provided instructions
- When installed properly, the provided hardware may prevent the unit from tipping over unexpectedly.
- Never let children climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local specialized dealer



WARNING

**FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO
DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY**

1. Read Instructions carefully. Check no parts are missing.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Carefully identify each component , especially those that are similar. The most common mistake is getting things back to front.
4. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.
5. **DO NOT** fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

**THIS PRODUCT MUST BE WALL MOUNTED BY A QUALIFIED
TRADESMAN/TECHNICIAN**


Daily Care :

Water and other liquids can cause discoloration and damage to the surface. In case any liquids are spilled on the surface, remove immediately with a clean cloth. Avoid rubbing the spilled liquid into the veneer, but wipe gently, using a clean, firmly wrung damp cloth. If stains or marks persist, seek professional help and advice.


Woods expand and contract according to the surrounding humidity and temperature. In case of temperature and humidity fluctuations, the wood might warp and/or crack. To avoid this, do not place the furniture near a radiator or in hot surroundings.

What you need


To assemble the product

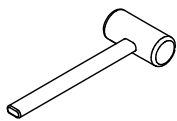




Mallet

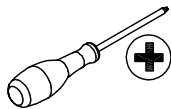

Phillips Screw driver

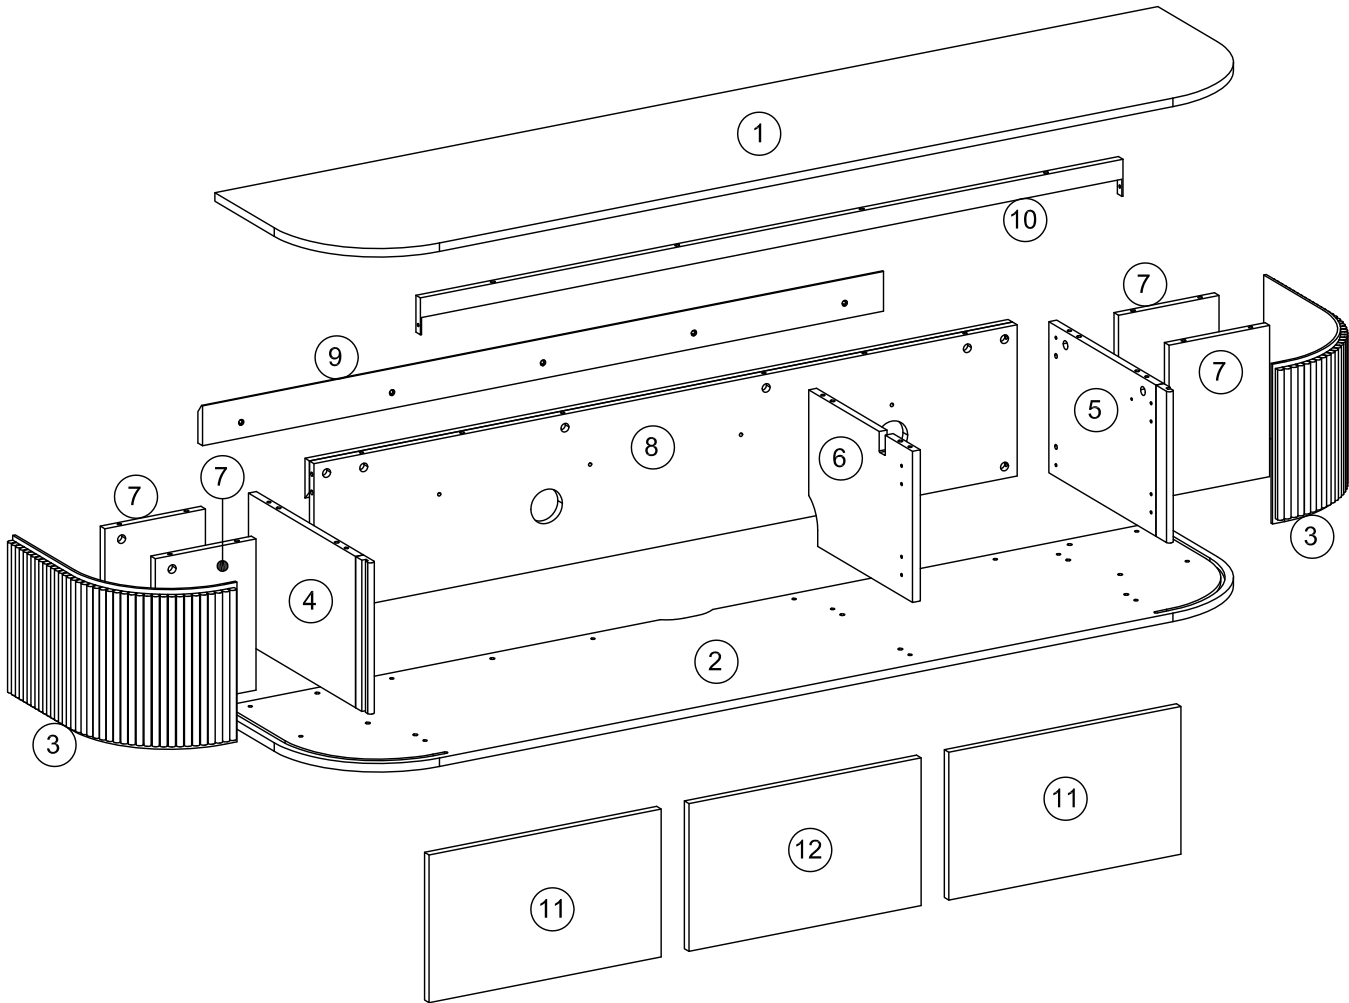


NO.	PART LIST	QTY	NO.	PART LIST	QTY
(1)	Top Panel	1	(7)	Side Support	4
(2)	Bottom Panel	1	(8)	Rear Panel	1
(3)	Curve Panel	2	(9)	Mounting Board	1
(4)	Left Panel	1	(10)	Metal Support	1
(5)	Right Panel	1	(11)	Side Door	2
(6)	Divider Panel	1	(12)	Middle Door	1

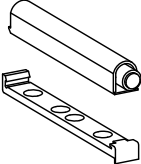 18 x Cam Lock Ø15x12mm (A)	 18 x Cam Bolt Ø7.5x32mm (B)	 18 x Cam Cap Ø17mm (C)	 28 x Plastic Dowel Ø8x32mm (D)
 14 x Screw Ø4x10mm (E)	 14 x Screw Ø6.3x50mm (F)	 6 x Screw Ø6x8mm (G)	 4 x Screw Ø6x40mm (H)
 3 x Push To Open (I)	 4 x Screw Ø6x25mm (J)	 4 x Full Curve Door Hinge (K)	 2 x Cable Holder (L)
 2 x Half Curve Door Hinge (M)	 1 x Allen Key (N)		

Please make sure you have all these parts before you start.

Step 1

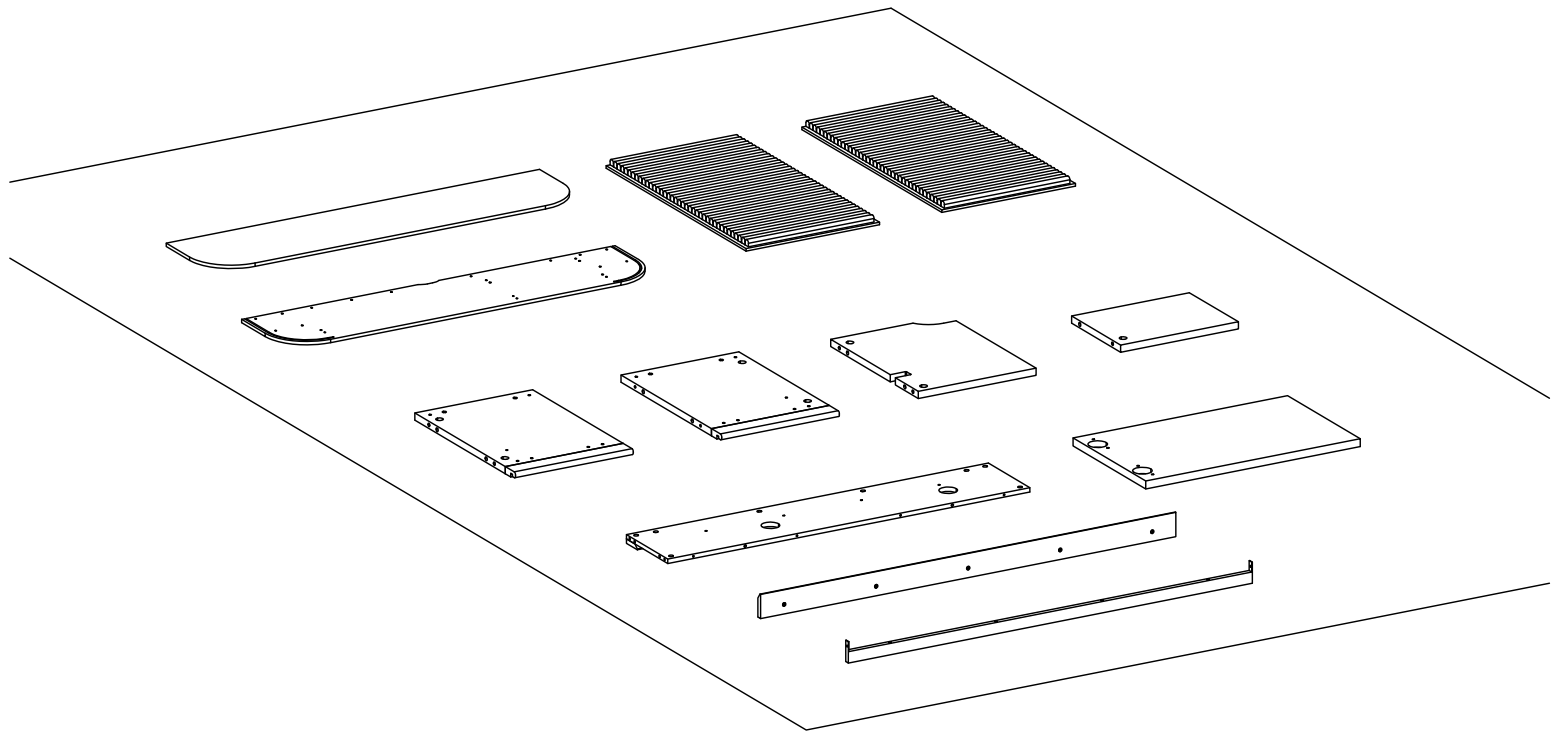


ALWAYS lay each panel down on a clean and level area ideally in the room of intended use, ensuring there is enough room to maneuver around the item.

Step 2

You will need		
		
14 x Cam Bolt (B)	6 x Screw (G)	3 x Push To Open (I)

Screw 14 x Cam Bolts (B) into Top Panel (1).
Attach 3 x Push To Open (I) using 6 x Screws (G).


Adjust in length before installed

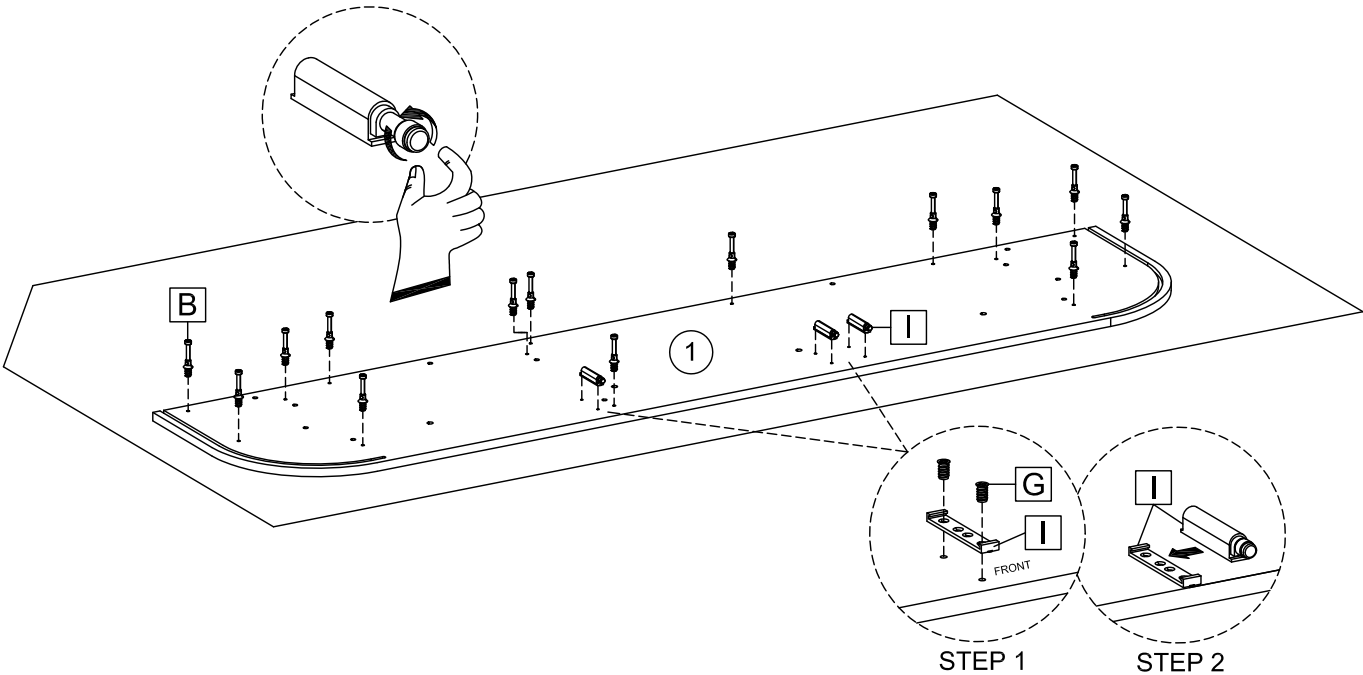

Step 3

You will need	
	
4 x Cam Bolt (B)	20 x Plastic Dowel (D)

Screw 4 x Cam Bolts (B) into Left Panel (4) and Right Panel (5).
Insert 20 x Plastic Dowel (D) into Left Panel (4), Right Panel (5),
Divider Panel (6) and Side Support (7).
If necessary, gently tap the Plastic dowels with a mallet.

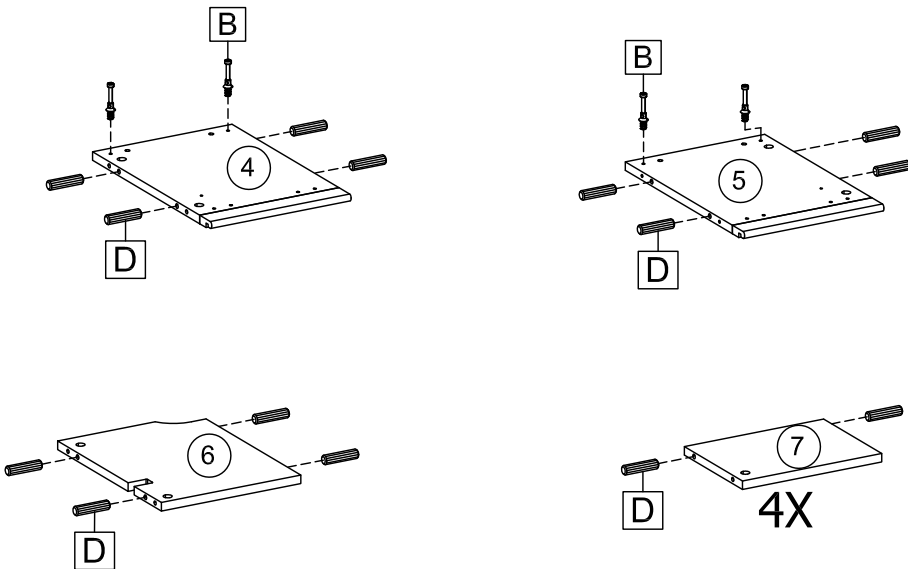


Step 4

You will need



8 x Plastic Dowel (D)


Insert 8 x Plastic Dowel (D) into Rear Panel (8).
If necessary, gently tap the Plastic dowels with a mallet.

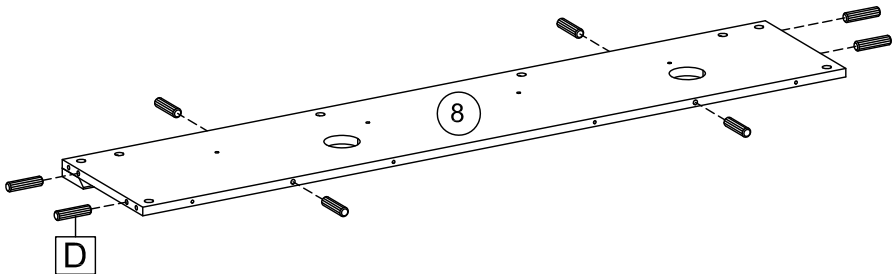

Step 5

You will need		
		
4 x Cam Lock (A)	4 x Cam Cap (C)	2 x Screw (E)


Attach Left Panel (4) and Right Panel (5) to Rear Panel (8) and Metal Support (10) using 4 x cam lock (A) as shown.
Use a screwdriver to turn the Cam lock (A) clockwise to lock.
Paste 4 x Cam Cap (C) as shown.
Tighten Metal Support (10) using 2 x Screws (E).

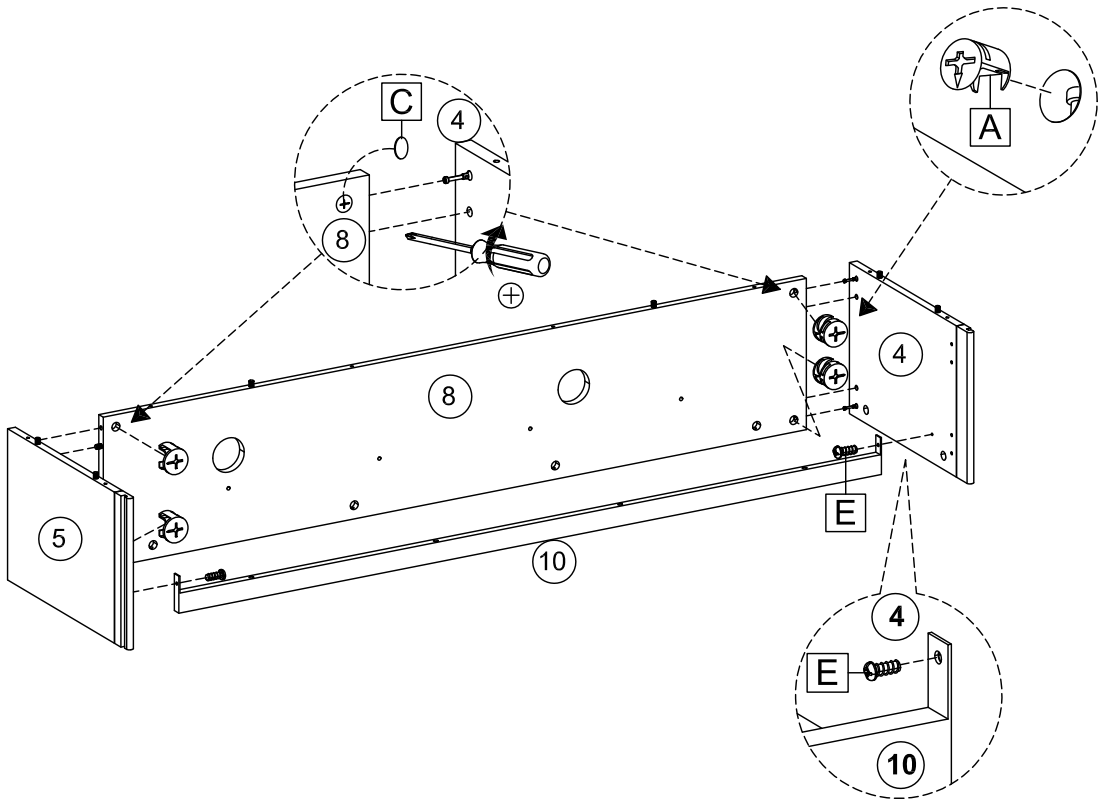

Step 6

You will need		
		
8 x Cam Lock (A)	8 x Cam Cap (C)	4 x Screw (H)


Attach Case Assembly to Top Panel (1) using 8 x cam lock (A) as shown.
Use a screwdriver to turn the Cam lock (A) clockwise to lock.
Paste 8 x Cam Cap (C) as shown.
Tighten Metal Support (10) using 4 x screws (H) as shown.

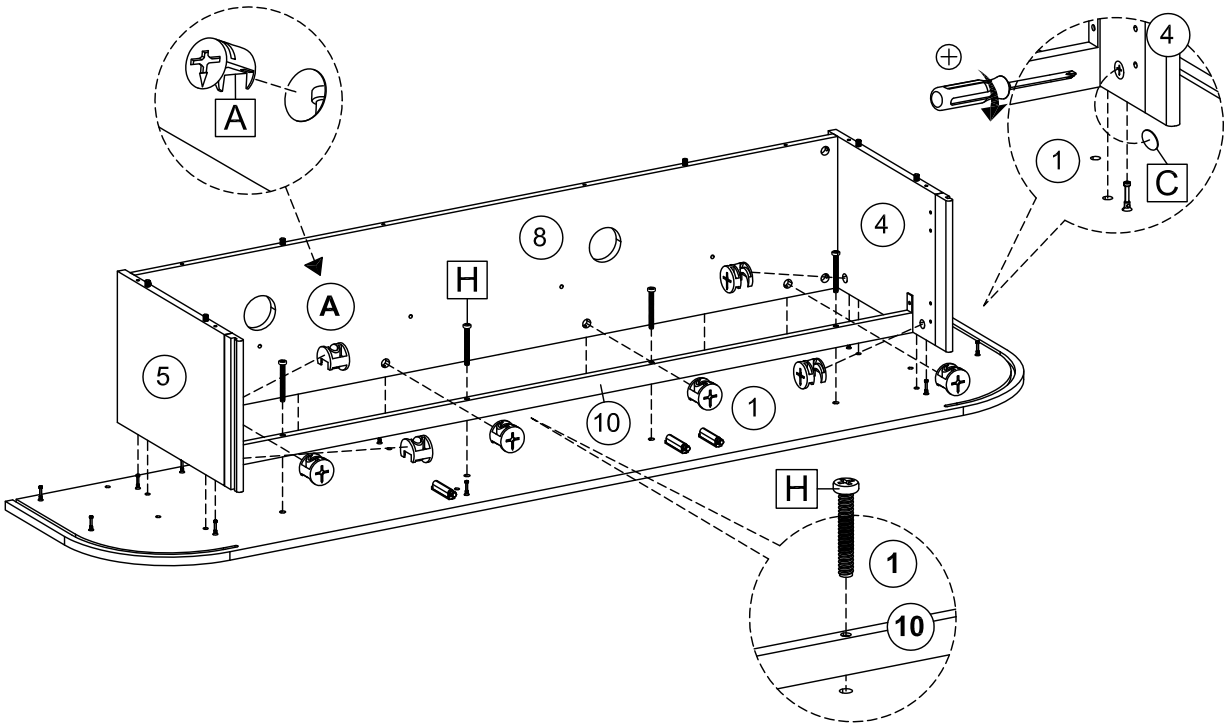

Step 7

You will need	
	
4 x Cam Lock (A)	4 x Cam Cap (C)


Attach 4 x Side Support (7) to Case Assembly using 4 x cam lock (A) as shown.
Use a screwdriver to turn the Cam lock (A) clockwise to lock.
Paste 4 x Cam Cap (C) as shown.

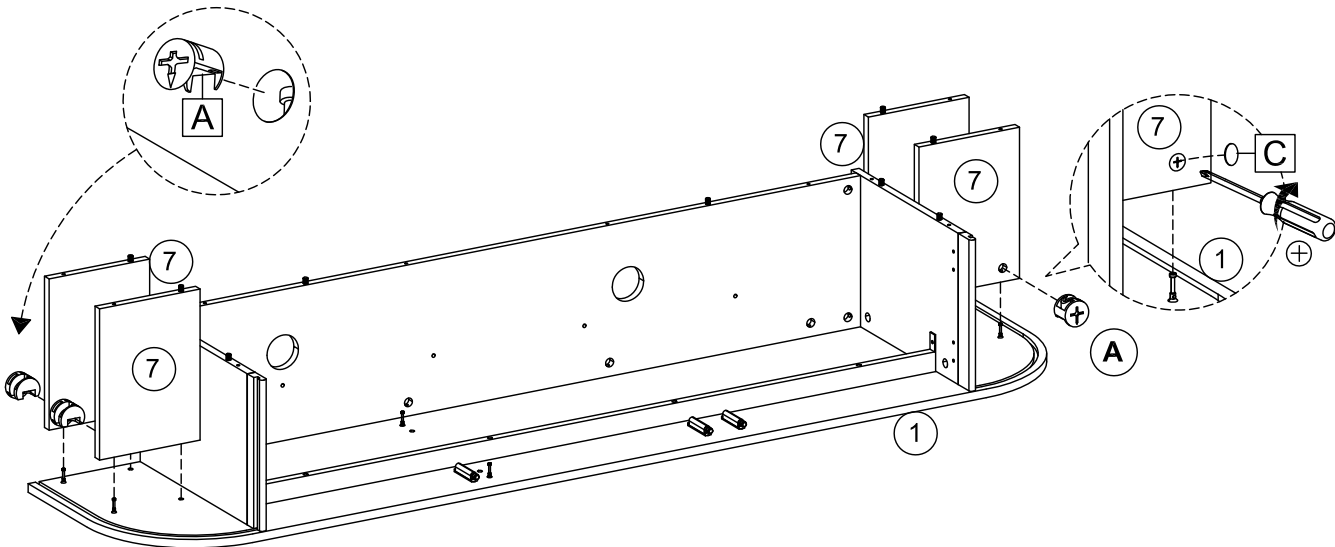

Step 8

You will need	
	
2 x Cam Lock (A)	2 x Cam Cap (C)


Attach Divider Panel (6) to Top Case Assembly using 2 x cam lock (A) as shown.
Use a screwdriver to turn the Cam lock (A) clockwise to lock.
Paste 2 x Cam Cap (C) as shown.

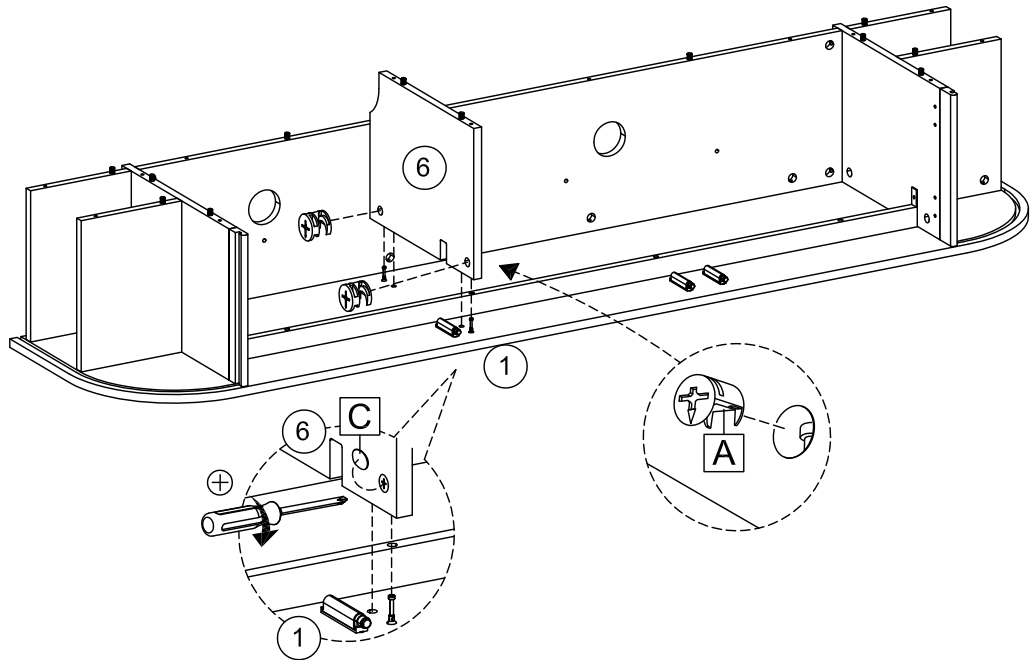



Step 9

You will need		
		
14 x Screw (F)	2 x Cable Holder (L)	1 x Allen Key (N)


Attach Bottom Panel (2) to Case Assembly using 14 x Screws (F).
Tighten 50% Screws (F) before fixing the Case Assembly using Allen Key (N).
Insert Cable Holder (L) into Case assembly as shown.

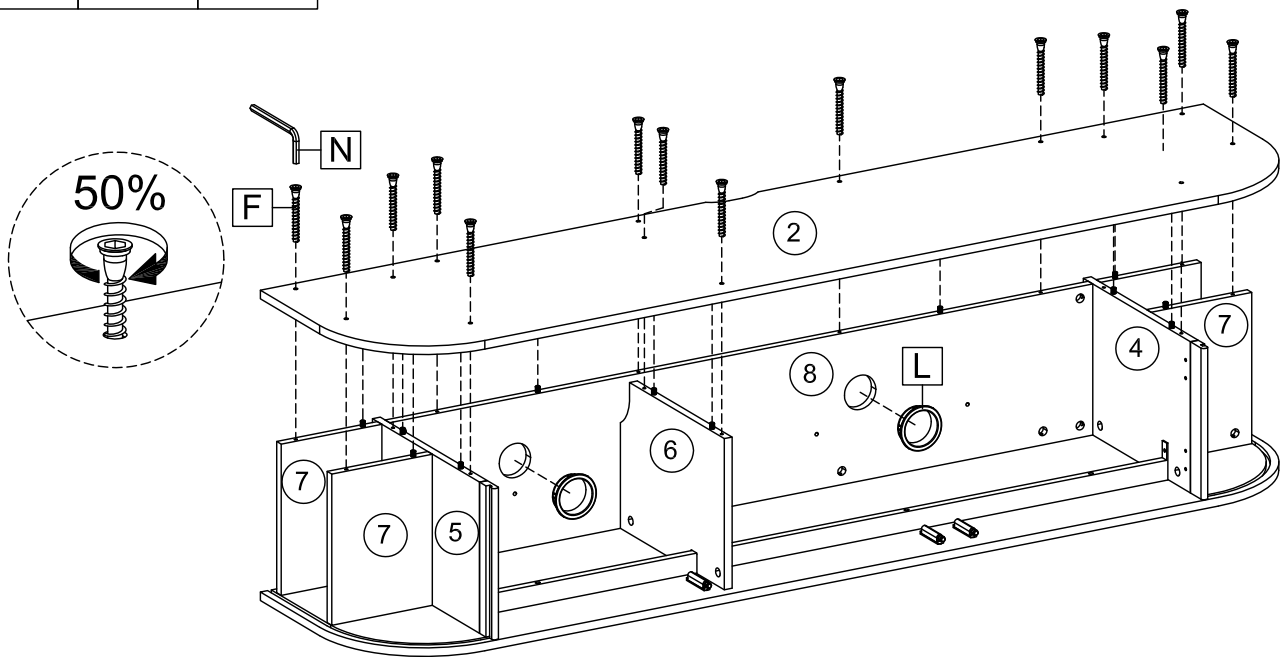

Step 10

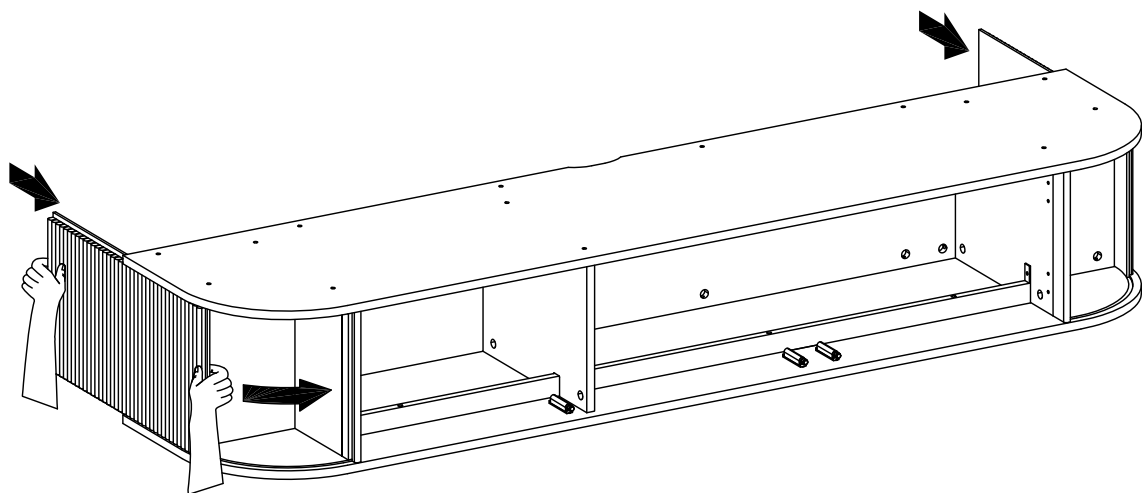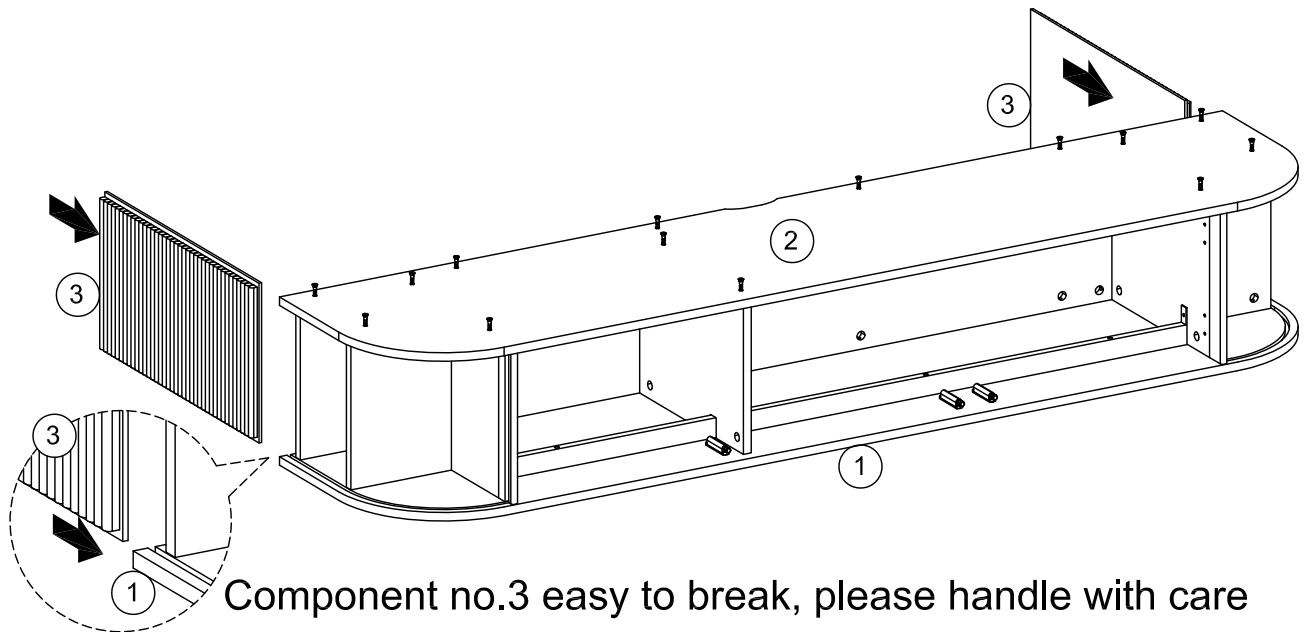

Please use two hands to pull & push component no.3 until the end of the groove line



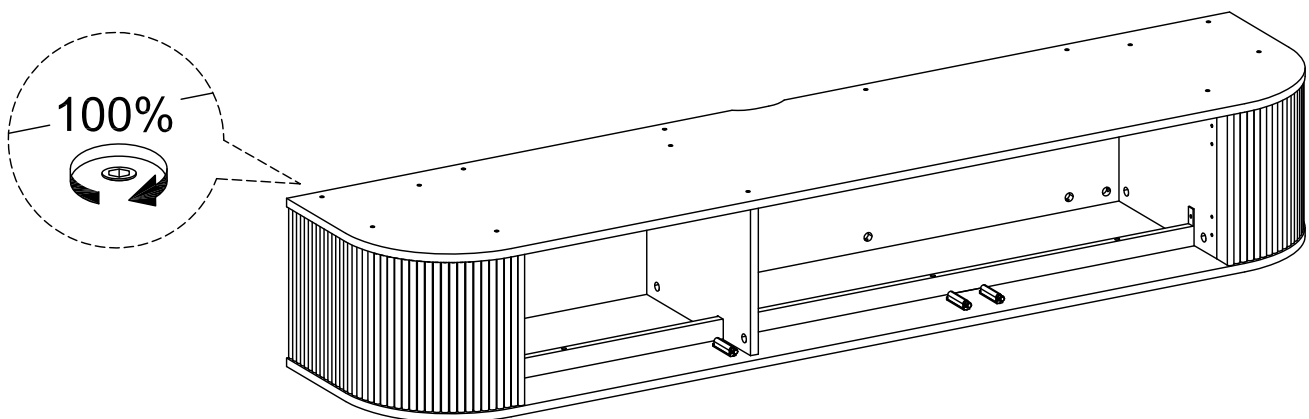


Step 11

You will need	
 8 x Screw (E)	 4 x Full Curve Door Hinge (K)


Attach 4 x **Full Curve Door Hinge (K)** to 2 x Side Door (11) using 8 x Screw (E) as shown.

Open Hinge pack with label "K"

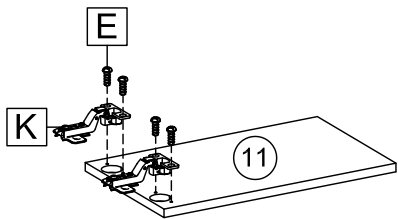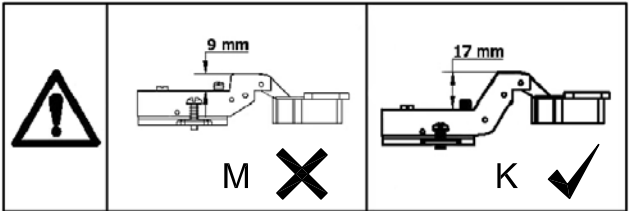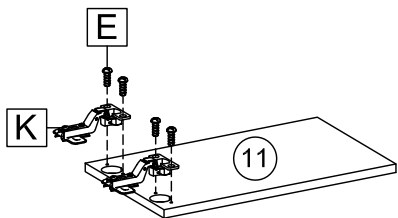

Step 12

Attach **Side Door (11)** with Hinge (K) to Case Assembly as shown.

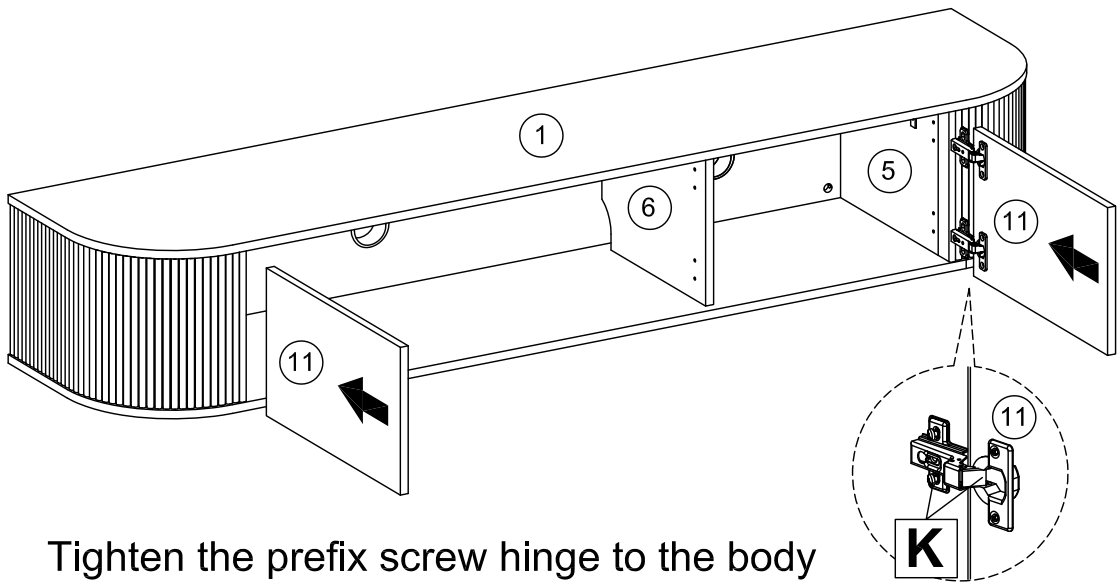



Tighten the prefix screw hinge to the body

Step 13

You will need	
 4 x Screw (E)	 2 x Half Curve Door Hinge (M)


Attach 2 x **Half Curve Door Hinge (M)** to 1 x Middle Door (12) using 4 x Screw (E) as shown.

Open Hinge pack with label "M"

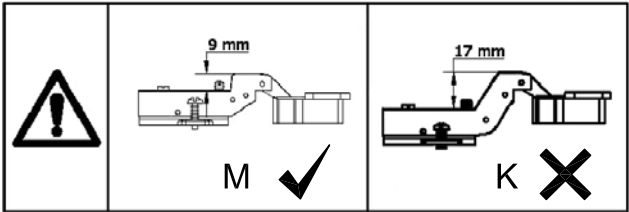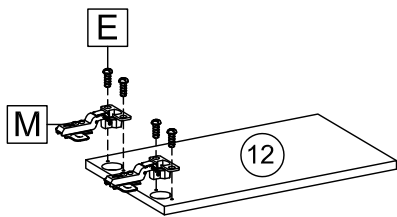

Step 14



Attach **Middle Door (12)** with Hinge (M) to Case Assembly as shown.

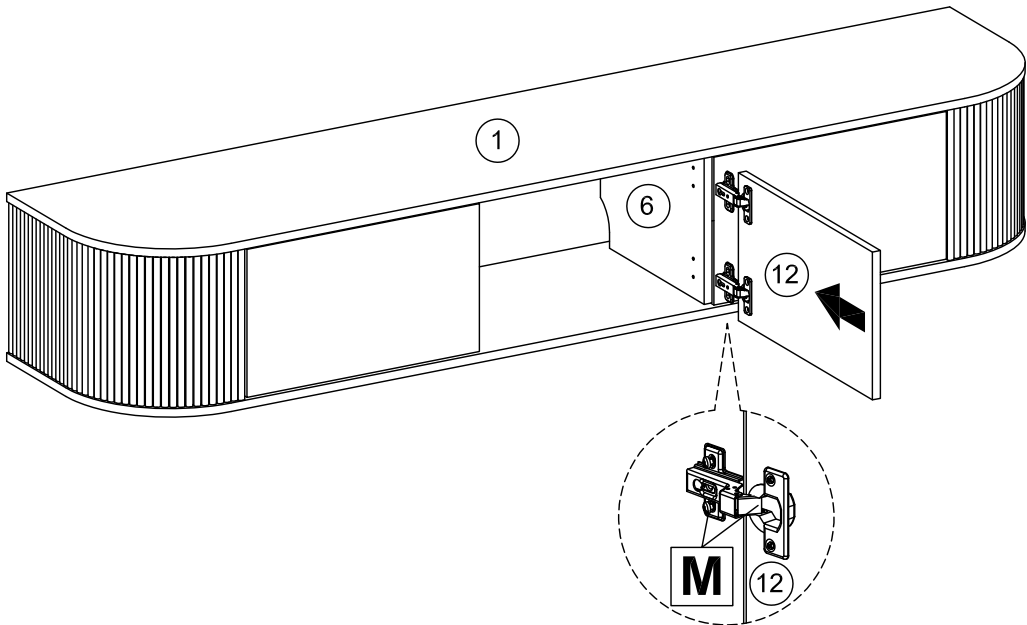

Tighten the prefix screw hinge to the body


What you need

To assemble the product

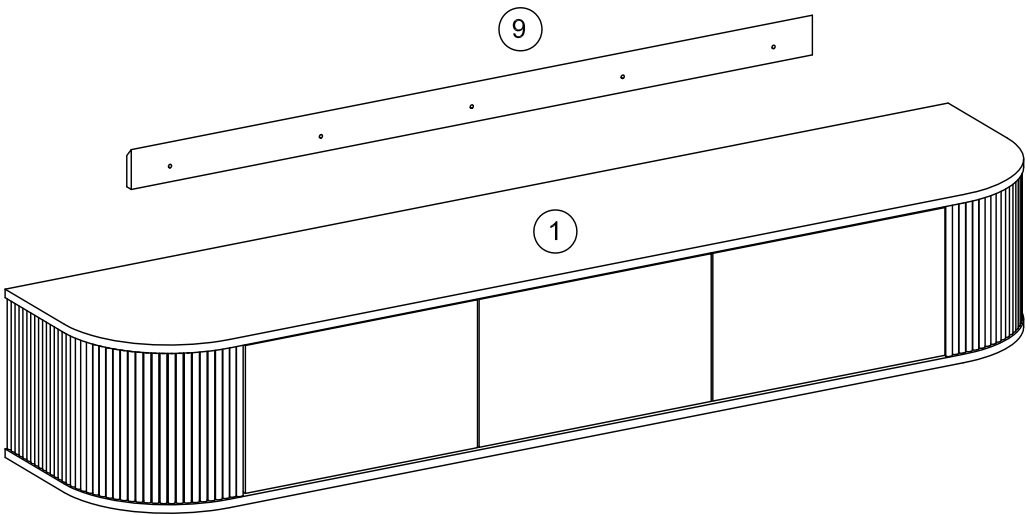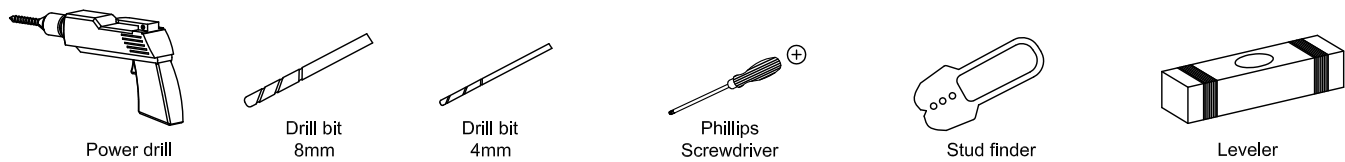

NO.	PART LIST	QTY
(1)	BODY	1
(9)	MOUNTING BOARD	1

Step 15

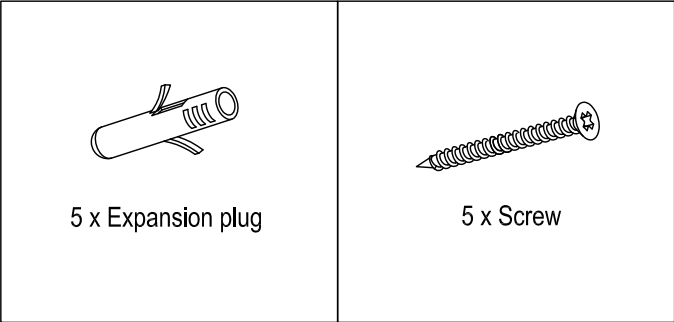

Please note, plugs and screws are not included and the suitable fittings for your wall will need to be bought from a local DIY store.

The following instructions are provided as a guide for installing this Wall Cabinet


**THIS PRODUCT MUST BE WALL MOUNTED BY A QUALIFIED
TRADESMAN/TECHNICIAN**

POSITIONING AND MOUNTING YOUR WALL CABINET

Decide on the height you would like the top of your new Wall Mount Cabinet to be. Measure 100mm down your wall to mark your first hole location. Place the coinciding hole of the wall bracket over this hole. While holding the Bracket on this hole ensure that it is level, with a spirit level and mark the remaining holes with a pencil or your drill. Remove wall mount and drill holes into your wall with an appropriate drill bit. If there is any major wall imperfections/unevenness please consider fixing these first, to allow cabinet to sit flat against the wall.

Please remember that this is a wall mount cabinet for components only and it is not intended for a TV to be placed on this unit.

Please ensure that your TV is secured/mounted to the wall with a suitable wall mount prior to the installation of this cabinet underneath.

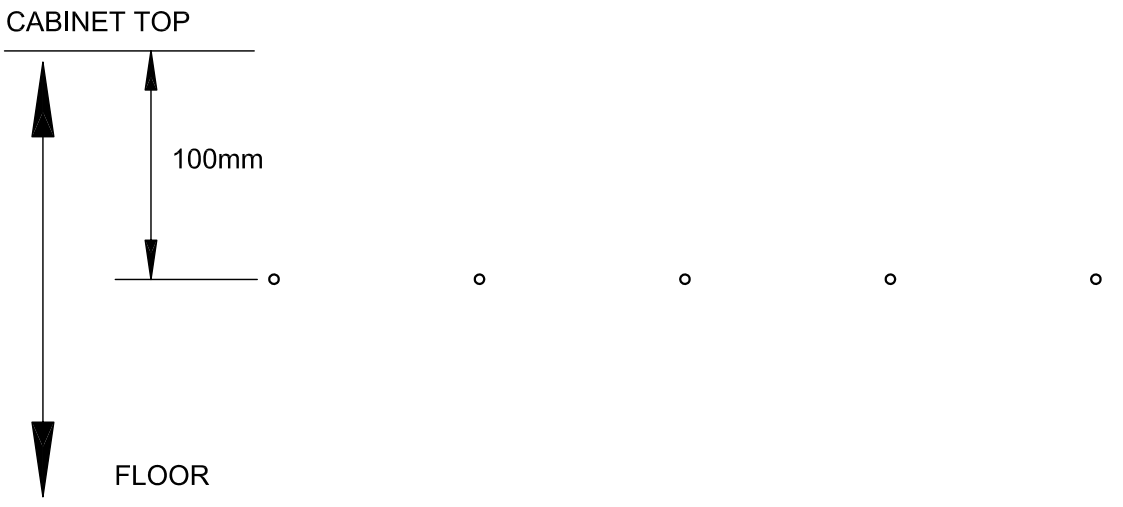




Step 16

You will need	
	
5 x Expansion plug	5 x Screw

ATTACH MOUNTING BOARD


STUD WALL SAFETY NOTE :
The mounting board has fixing holes in place for a standard stud wall. Please use a stud finder to ensure that you are fixing into the studs.

BRICK WALL NOTE :
Please fix screws into bricks not mortar

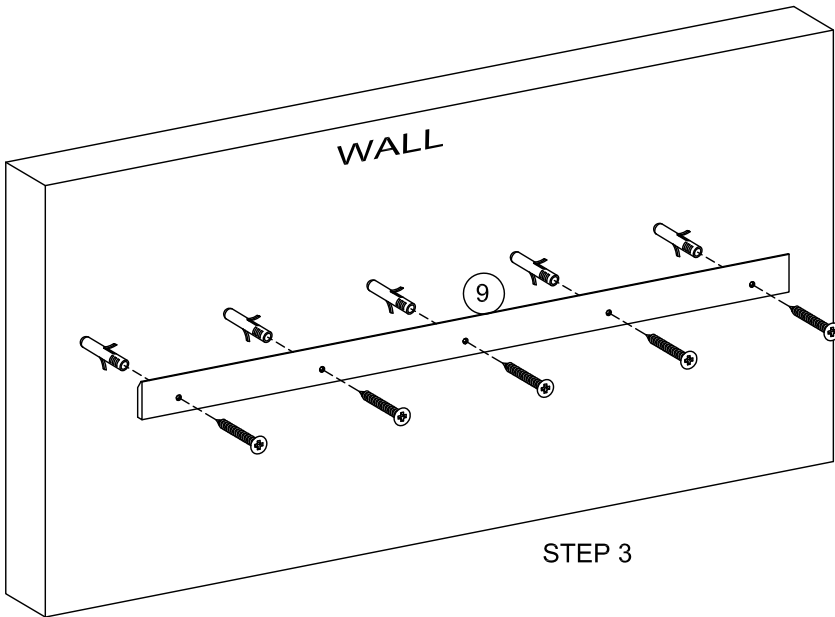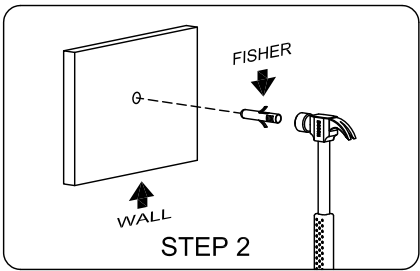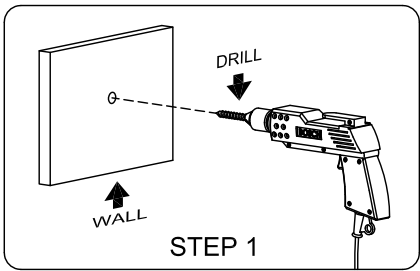

Step 17

LIFTING CABINET ONTO THE WALL

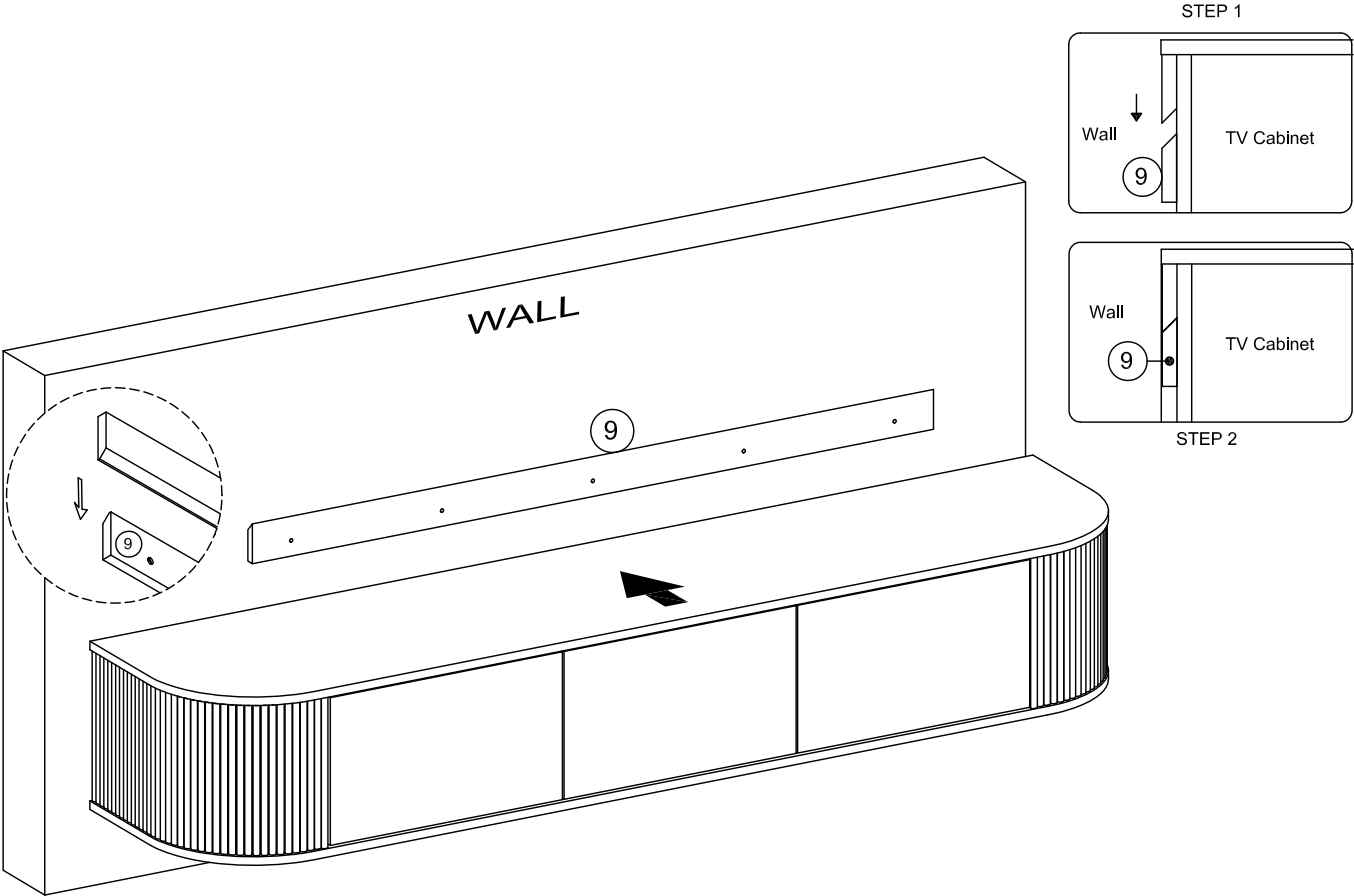

SAFETY NOTE :
This step must be completed by two persons to ensure the weight of cabinet is evenly distributed across mounting board and eliminate physical injury to individuals


Step 18

You will need



4 x Screw
(J)



SECURING CABINET TO WALL MOUNT

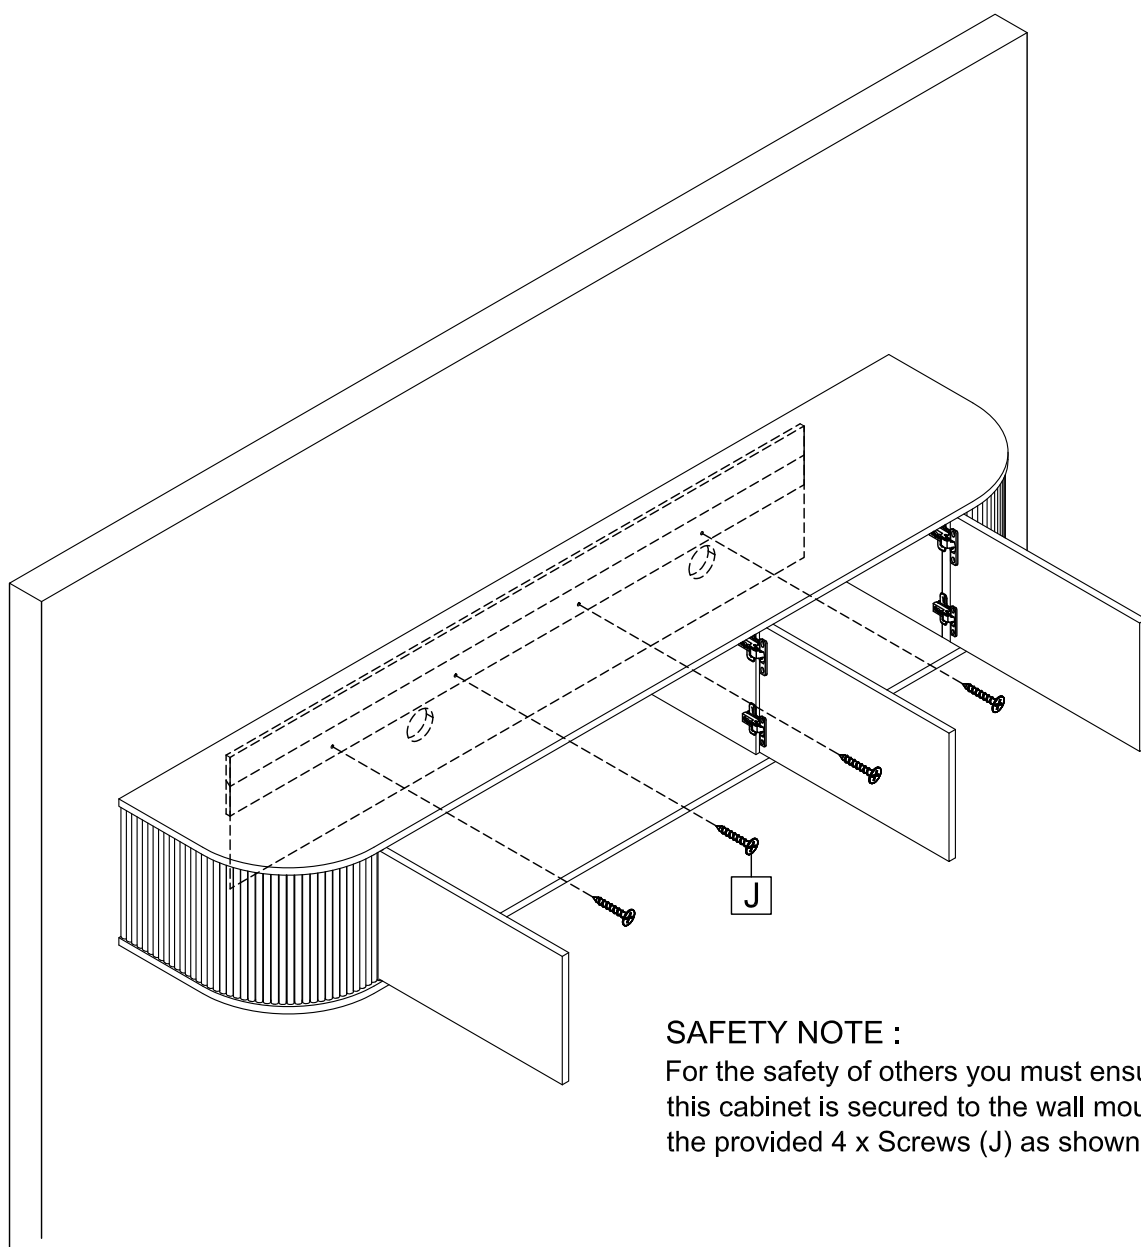

SAFETY NOTE :

For the safety of others you must ensure that this cabinet is secured to the wall mount with the provided 4 x Screws (J) as shown.

(Align doors and Adjust Hinge if Needed)

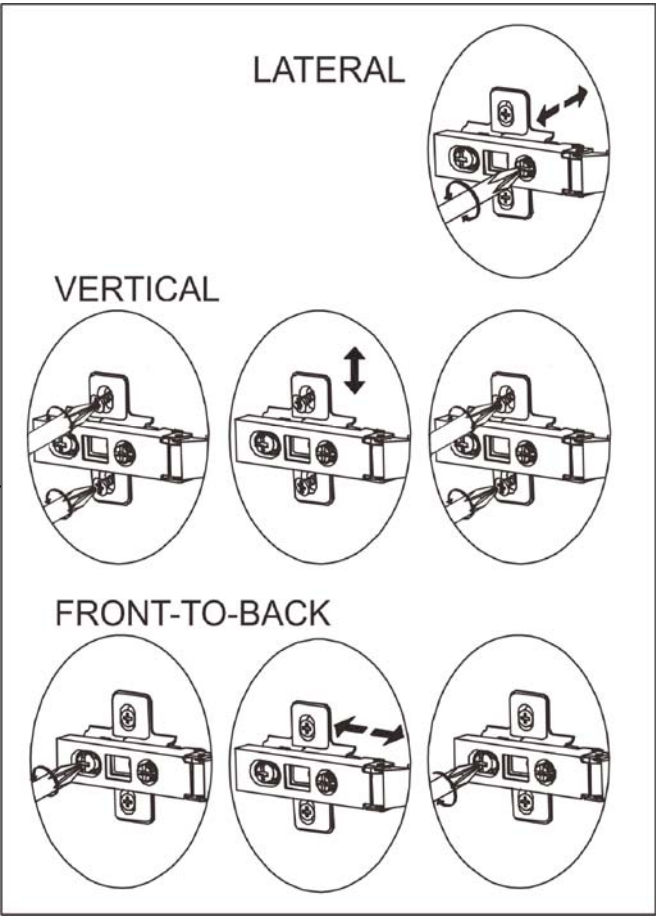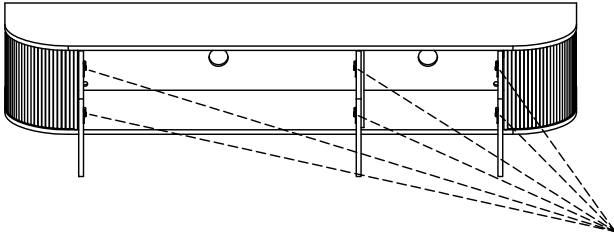

After assembly, the push to open latches may need to be adjusted if it does not work well.

The push to open latches may need to be adjusted from time to time.

To adjust please follow the steps below:


Push and release the piston once to allow the piston to extend.

Gently turn the piston clockwise or anti-clockwise to adjust its position.


①

②

③

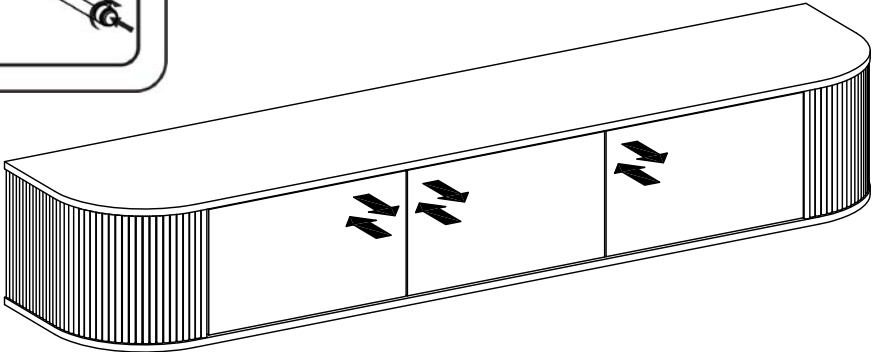


MAXIMUM WEIGHT CAPACITY OF THIS UNIT IS 20 KG.

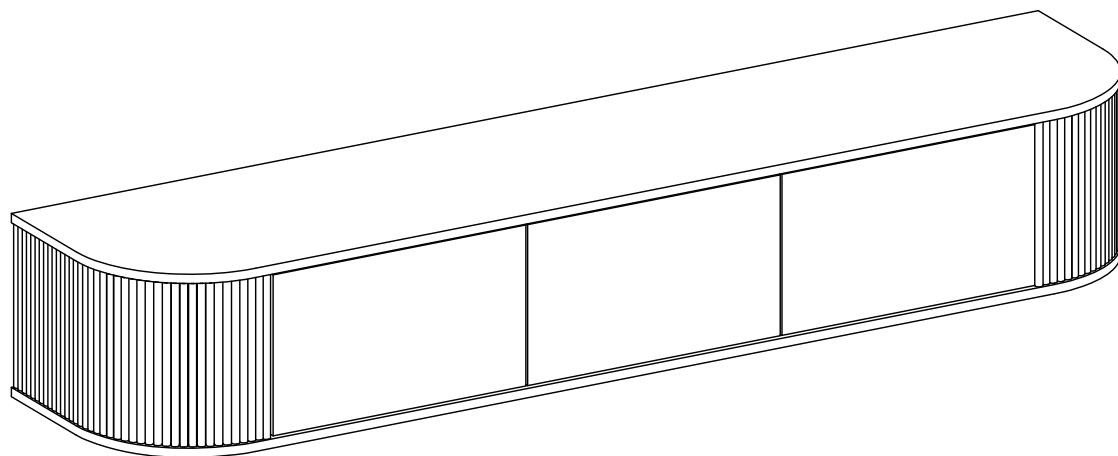

Job Complete !

In the interest of our environment Please dispose of all packaging thoughtfully.

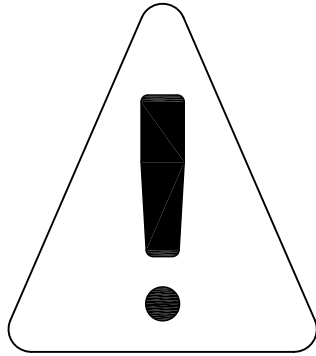

THIS PRODUCT IS FINISHED WITH FOIL LAMINATE

Avoid placing hot items directly onto the surface unless using a thick insulation material such as placemats or coasters. Heat may lead to discolouration or other damage to the surface of the product.

Use a soft cloth that has been dampened in water to clean the surface of this product. Do not use abrasive cleaners, furniture wax or polish on the surface of this product, as it may damage the surface.

CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.