


Assembly Instructions

ORLAITH 180CM TV STAND

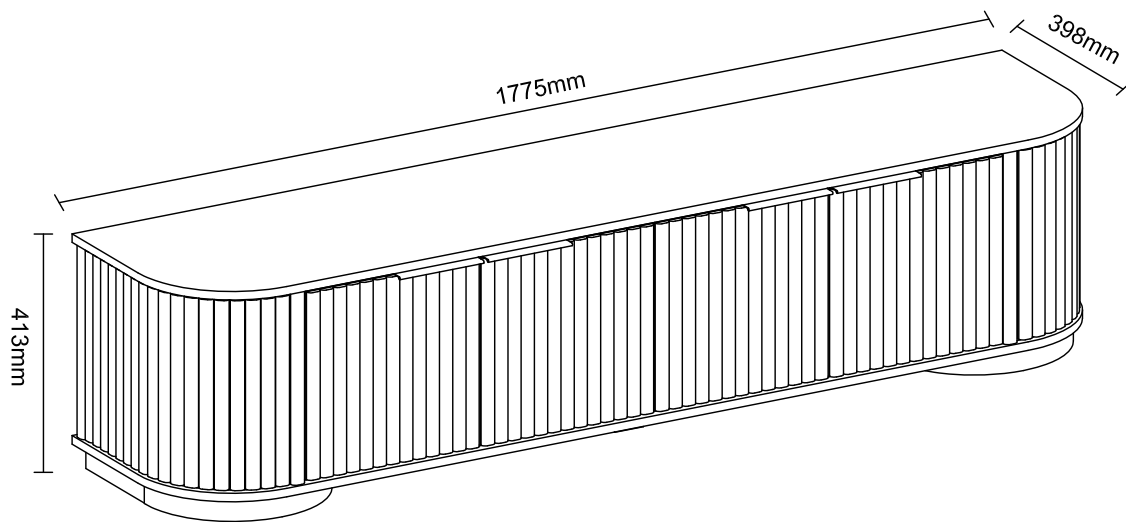

MAXIMUM WEIGHT CAPACITY OF THIS UNIT IS 30 KG.

Please read the Assembly Instructions carefully
before assembling.

Imported by Sourcebynet Australia Pty Ltd.

Important safety instructions

DANGER!

Children have died from furniture tip over.

Toppling Hazard Warning

- ALWAYS secure television with an anchor device
- ALWAYS secure this furniture with an anchor device
- For safety reasons, we recommend you follow the provided instructions
- When installed properly, the provided hardware may prevent the unit from tipping over unexpectedly.
- Never let children climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local specialized dealer



WARNING

FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1. Read Instructions carefully. Check no parts are missing.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Carefully identify each component , especially those that are similar. The most common mistake is getting things back to front.
4. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.
5. **DO NOT** fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

Warning: In order to prevent overturning this product must be used with the wall attachment device provided.

Daily Care :


Water and other liquids can cause discoloration and damage to the surface. In case any liquids are spilled on the surface, remove immediately with a clean cloth. Avoid rubbing the spilled liquid into the veneer, but wipe gently, using a clean, firmly wrung damp cloth. If stains or marks persist, seek professional help and advice.

Woods expands and contracts according to the surrounding humidity and temperature. In case of temperature and humidity fluctuations, the wood might warp and/or crack. To avoid this, do not place the furniture near a radiator or in hot surroundings.


Take care when moving the furniture across the floor. Do not drag the furniture, as this can cause damage to both the furniture and the floor.

What you need


To assemble the product



Mallet







Phillips Screw driver

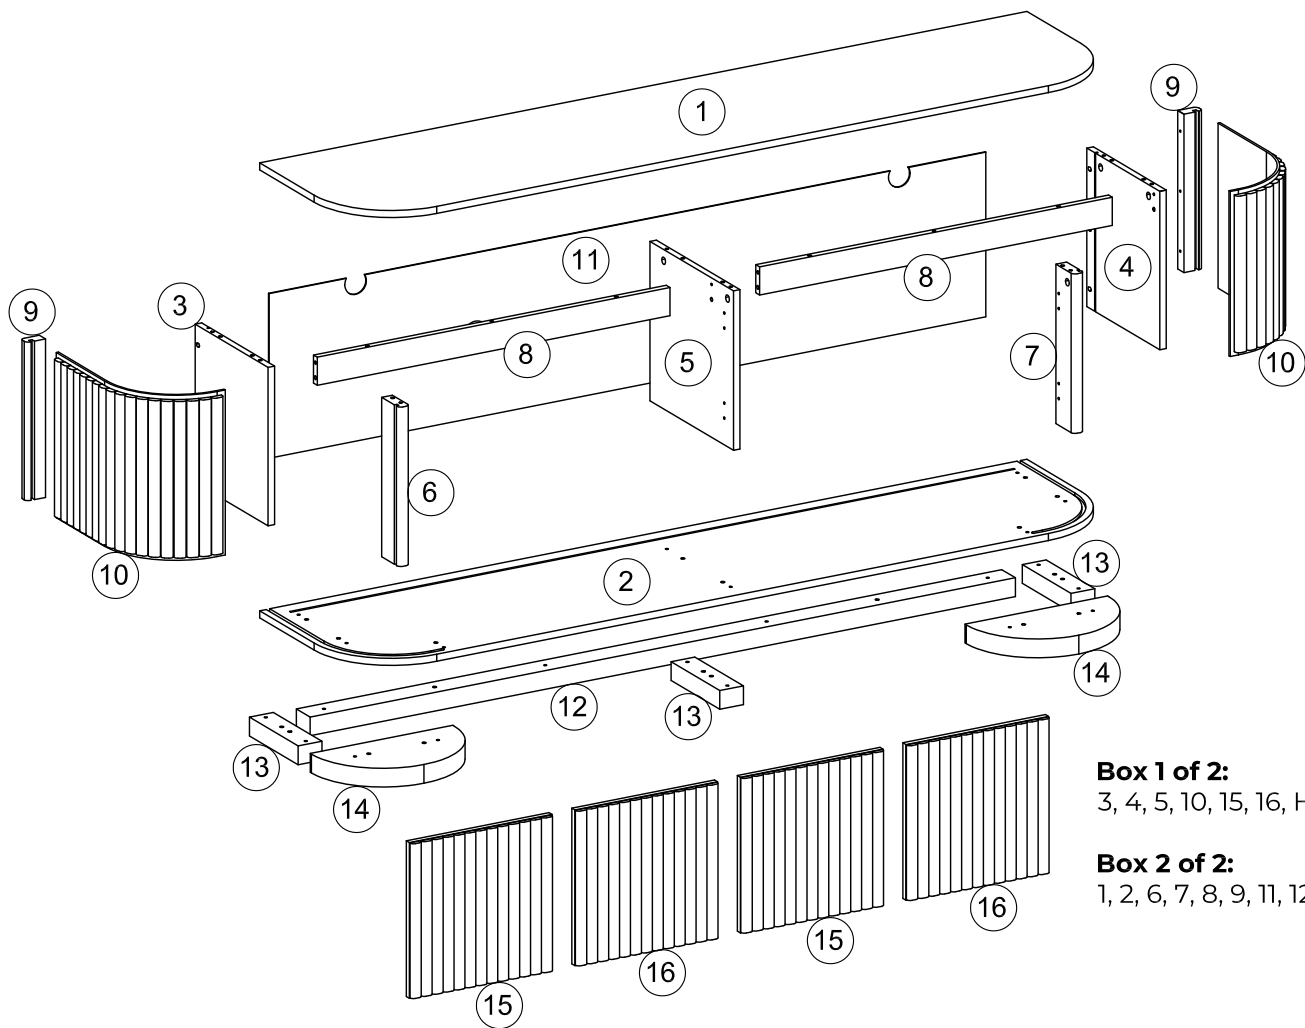

Box 1 of 2:
3, 4, 5, 10, 15, 16, HARDWARE


Box 2 of 2:
1, 2, 6, 7, 8, 9, 11, 12, 13, 14

NO.	PART LIST	QTY	NO.	PART LIST	QTY
(1)	Top Panel	1	(10)	Elastic Panel	2
(2)	Bottom Panel	1	(11)	Back Panel	1
(3)	Left Panel	1	(12)	Large Bottom Support	1
(4)	Right Panel	1	(13)	Small Bottom Support	3
(5)	Divider Panel	1	(14)	Half Moon Support	2
(6)	Left Pillar	1	(15)	Left Door	2
(7)	Right Pillar	1	(16)	Right Door	2
(8)	Top Support	2			
(9)	Rear Support	2			

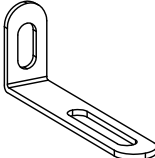 14 x Cam Lock Ø15x12mm (A)	 14 x Cam Bolt Ø7.5x32mm (B)	 14 x Cam Cap Ø17mm (C)	 36 x Plastic Dowel Ø8x32mm (D)
 8 x Screw Ø6x8mm (E)	 2 x Screw Ø6x10mm (F)	 28 x Screw Ø10x33.5mm (G)	 2 x stopper (H)
 1 x Screw Ø3x12mm (I)	 4 x Full Curve Door Hinge (J)	 4 x Half Curve Door Hinge (K)	 14 x Screw Ø4x19mm (L)
 14 x Backply Stopper (M)	 4 x Handle (N)	 2 x Bracket (O)	 12 x Nail Leg (P)
 16 x Screw Ø4x10mm (Q)			

Please make sure you have all these parts before you start.

Step 1

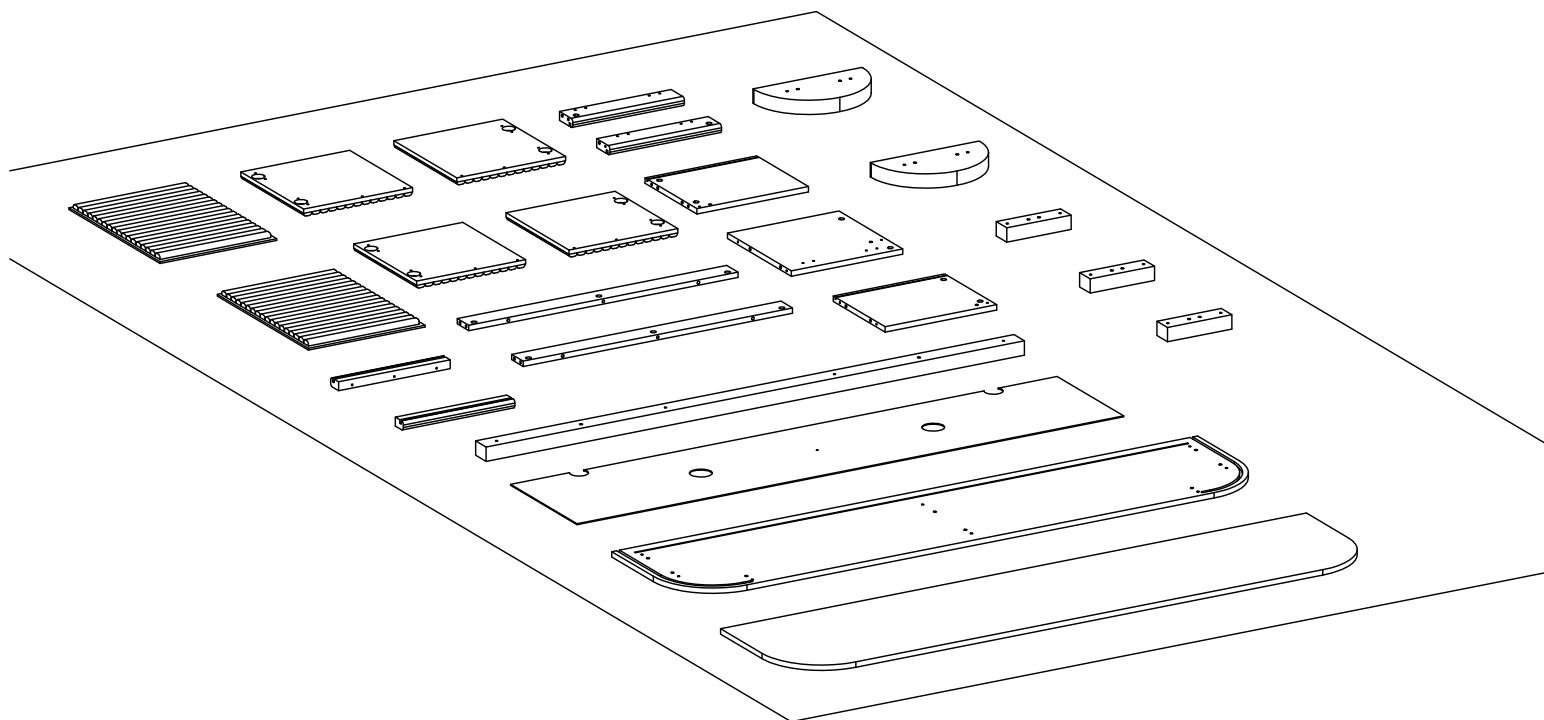


ALWAYS lay each panel down on a clean and level area ideally in the room of intended use, ensuring there is enough room to maneuver around the item.

Step 2

You will need			
			
10 x Cam Bolt (B)	2 x Screw (F)	2 x Stopper (H)	2 x Bracket (O)

Screw 10 x Cam Bolts (B) into Top Panel (1).
Attach 2 x Brackets (O) using 2 x Screws (F).
Insert 2 x Stopper (H) into Top Panel (1).

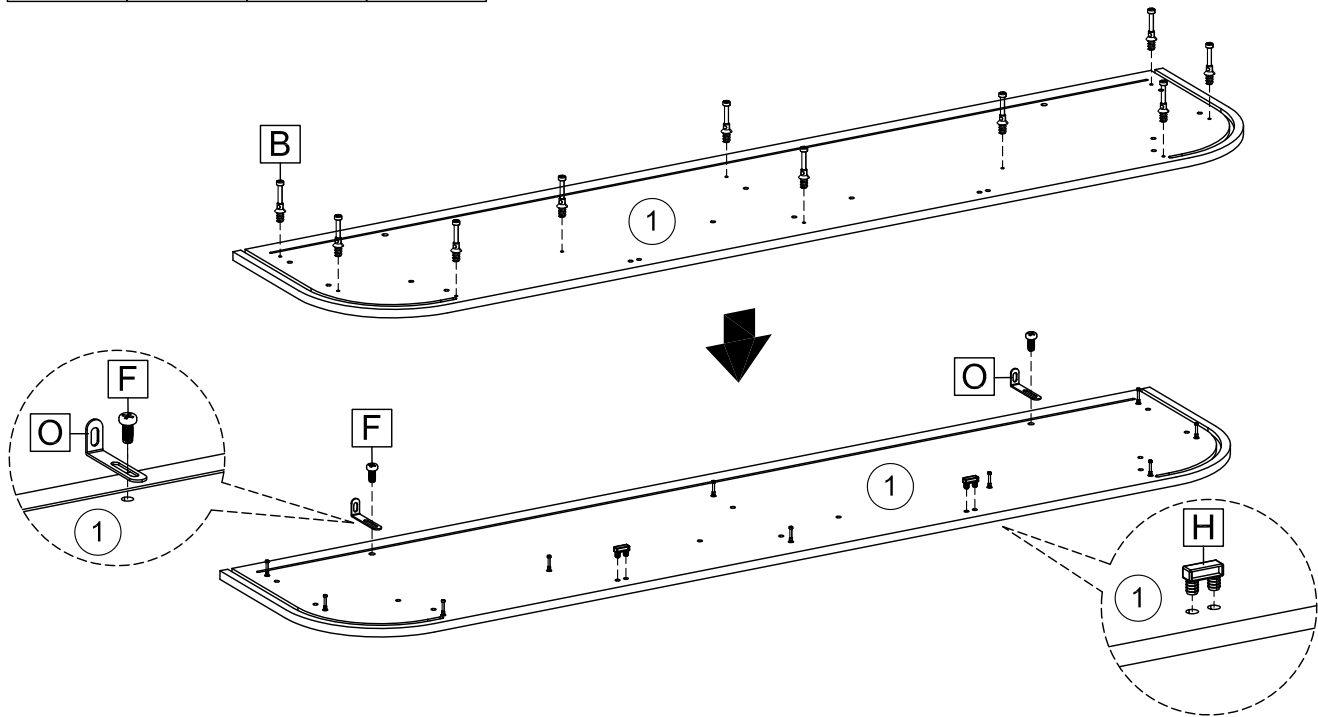

Step 3


You will need	
	
4 x Cam Bolt (B)	12 x Plastic Dowel (D)

Screw 3 x Cam Bolts (B) into Left Panel (3), Right Panel (4) and Divider Panel (5).

Insert 12 x Plastic Dowel (D) into Left Panel (3), Right Panel (4) and Divider Panel (5).

If necessary, gently tap the Plastic dowels with a mallet.

Flip 180° Divider Panel (5), then screw 1 x Cam Bolts (B).

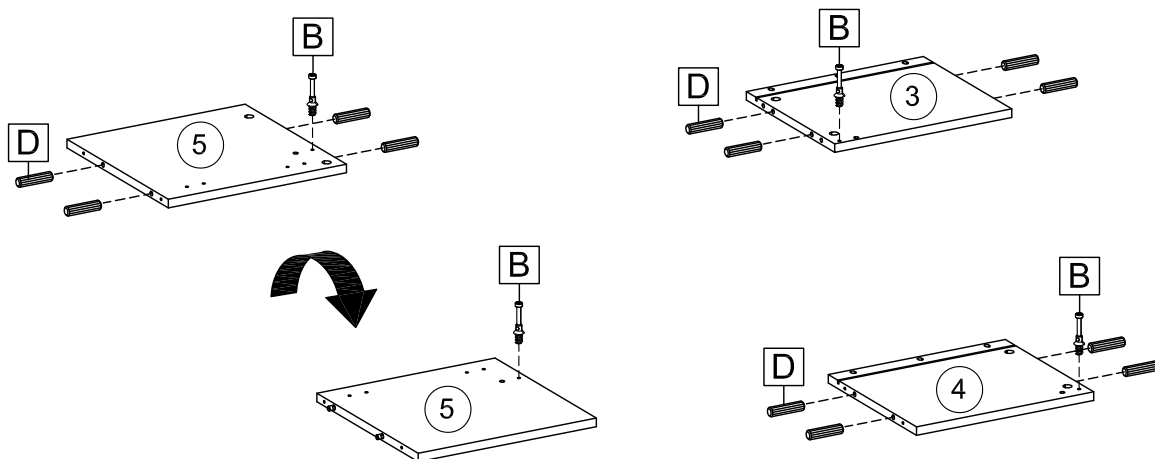

Step 4


You will need



24 x Plastic Dowel (D)

Insert 24 x Plastic Dowel (D) into Left Pillar (6), Right Pillar (7), 2 x Top Support (8), Large Bottom Support (12), 3 x Small Bottom Support (13) and 2 x Half Moon Support (14).

If necessary, gently tap the Plastic dowels with a mallet.

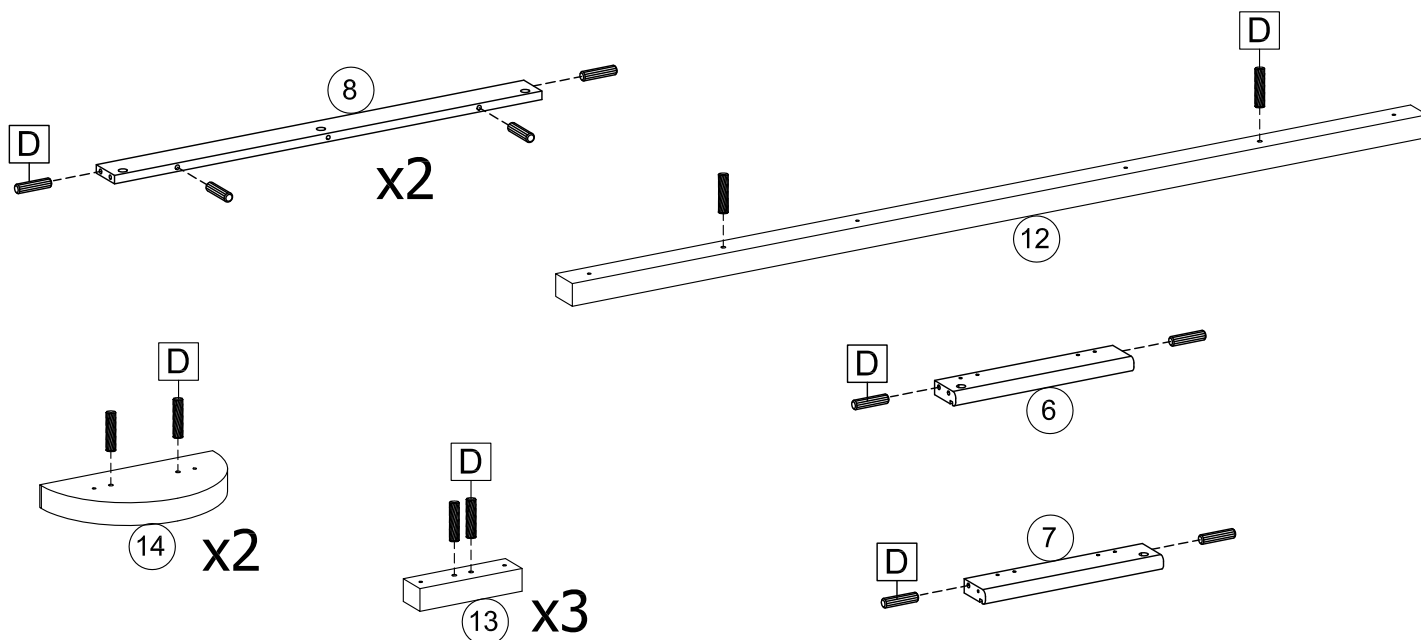

Step 5

You will need




2 x Cam Lock (A)




2 x Cam Cap (C)

Attach Left Pillar (6) and Right Pillar (7) to Top Panel (1) using 2 x Cam lock (A) as shown, Use a screwdriver to turn the Cam lock clockwise to lock. Paste 2 x Cam Cap (C) as shown.

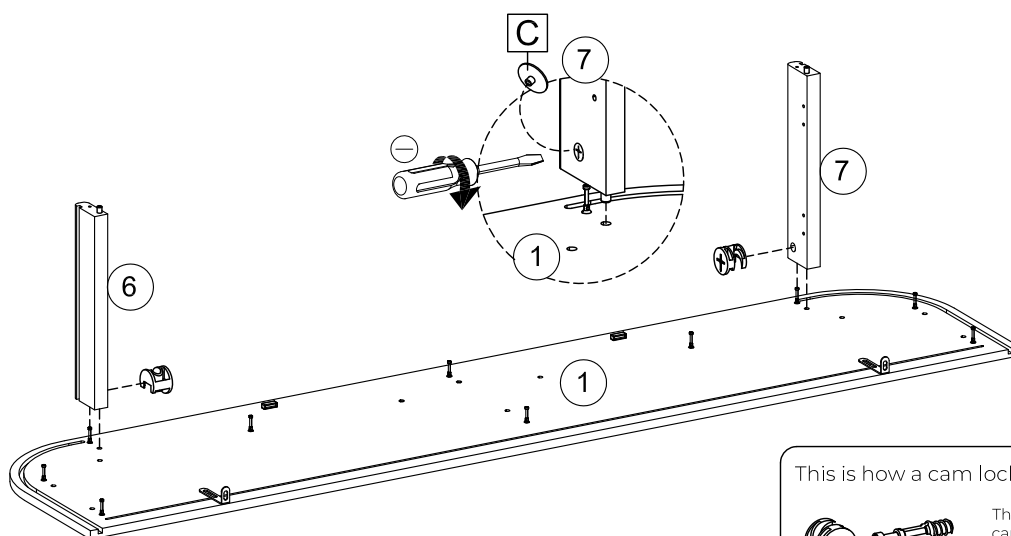


This is how a cam lock works....




The head of the cam bolt goes into the open mouth of the cam lock. You then turn the cam lock so it tightens over the bolt.


Step 6

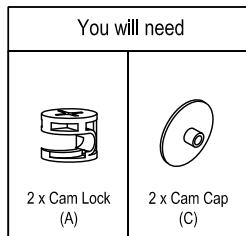

Attach 2 x Top Support (8) to Divider Panel (5) using 2 x Cam lock (A) as shown,
Use a screwdriver to turn the Cam lock clockwise to lock.
Paste 2 x Cam Cap (C) as shown.

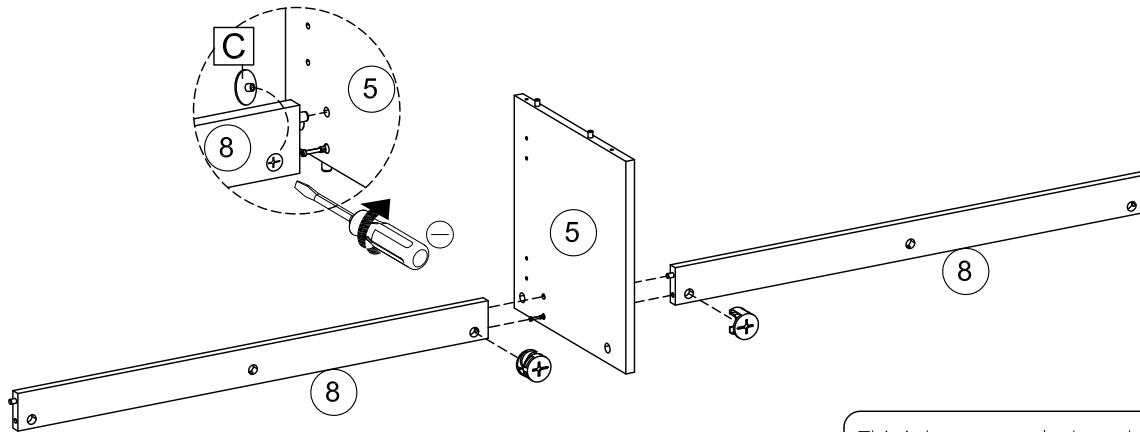


This is how a cam lock works....

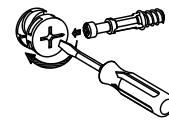


The head of the cam bolt goes into the open mouth of the cam lock. You then turn the cam lock so it tightens over the bolt.


Step 7

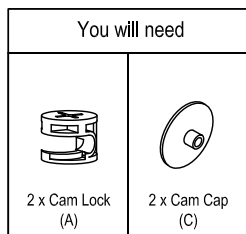

Attach Left Panel (3) and Right Panel (4) to 2 x Top Support (8) using 2 x Cam lock (A) as shown,
Use a screwdriver to turn the Cam lock clockwise to lock.
Paste 2 x Cam Cap (C) as shown.

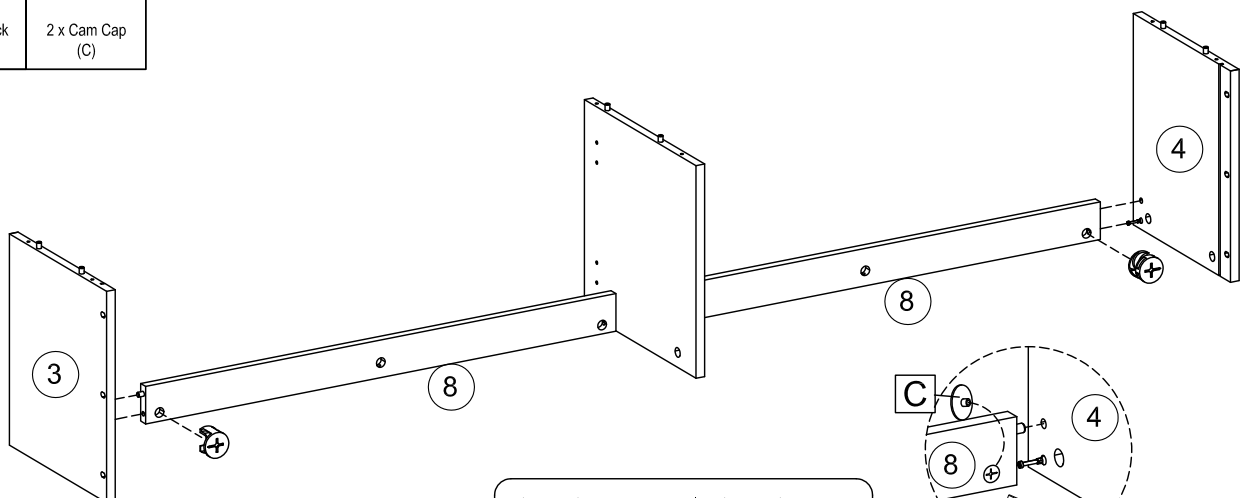


This is how a cam lock works....

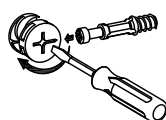


The head of the cam bolt goes into the open mouth of the cam lock. You then turn the cam lock so it tightens over the bolt.

Step 8

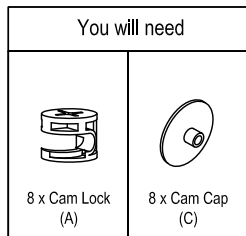


Attach the assembly to Top Panel (1) using 8 x Cam lock (A) as shown, Use a screwdriver to turn the Cam lock clockwise to lock. Paste 8 x Cam Cap (C) as shown.

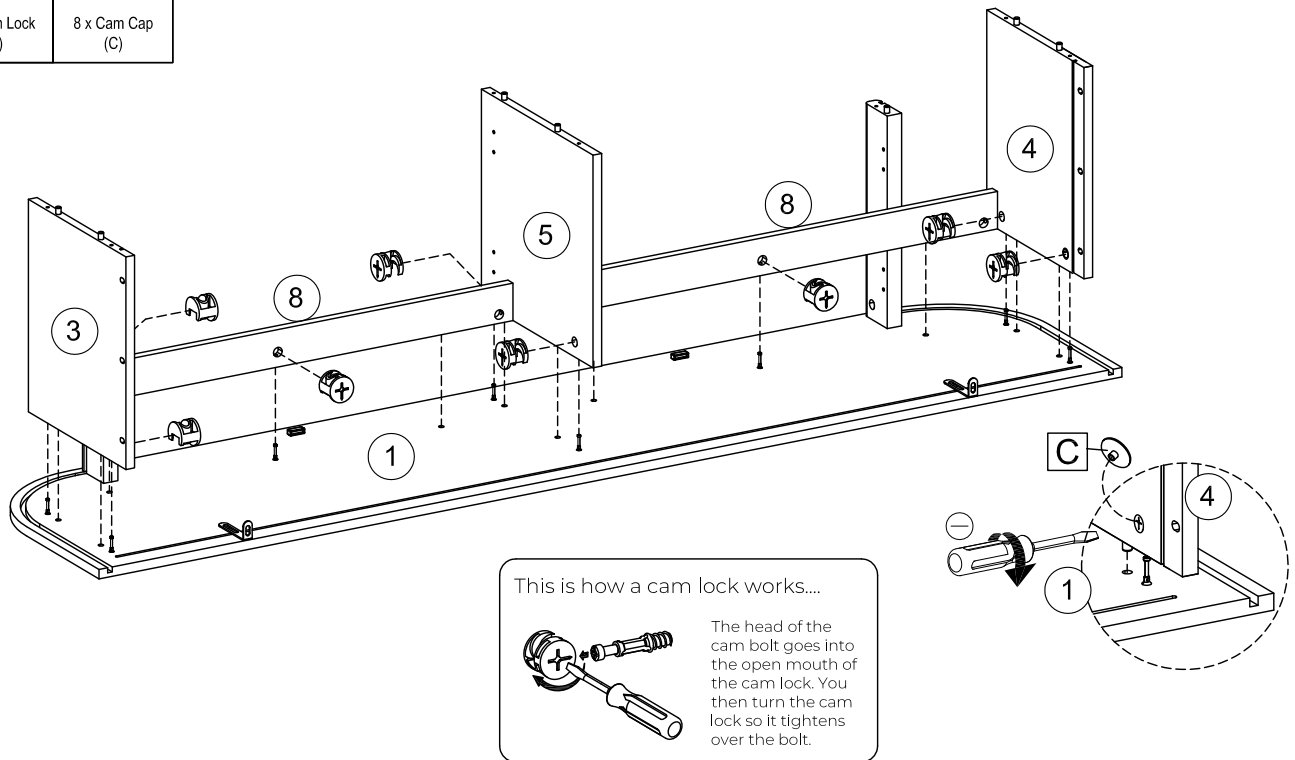

Step 9

Insert Back Panel (11) into case assembly as shown.

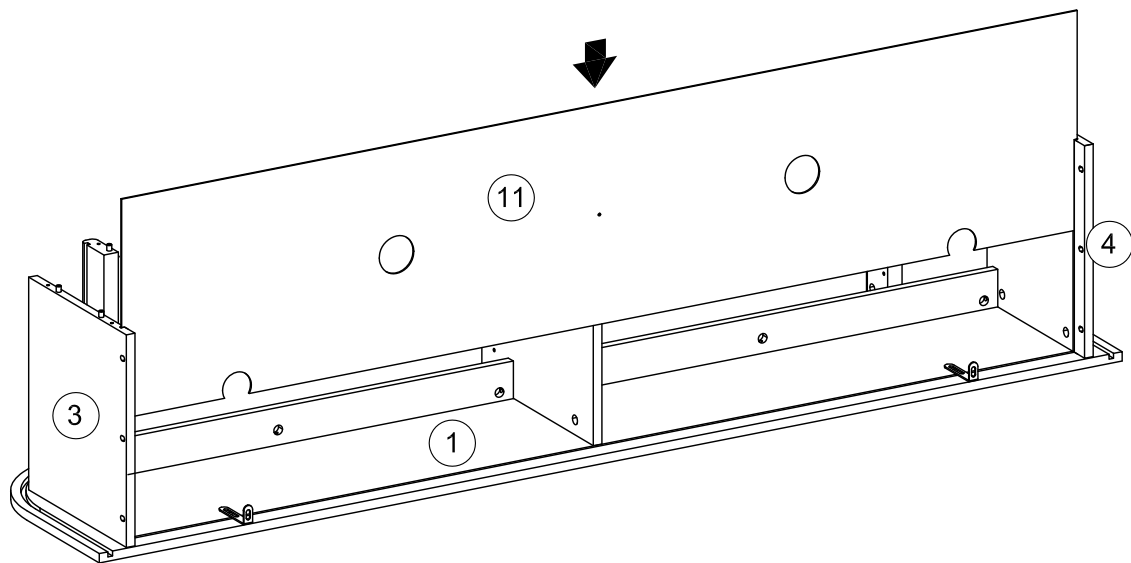


Step 10

You will need





8 x Screw
(G)


Attach Bottom Panel (2) to case assembly using 8 x Screw (G).
Tighten the screw about 50% only.

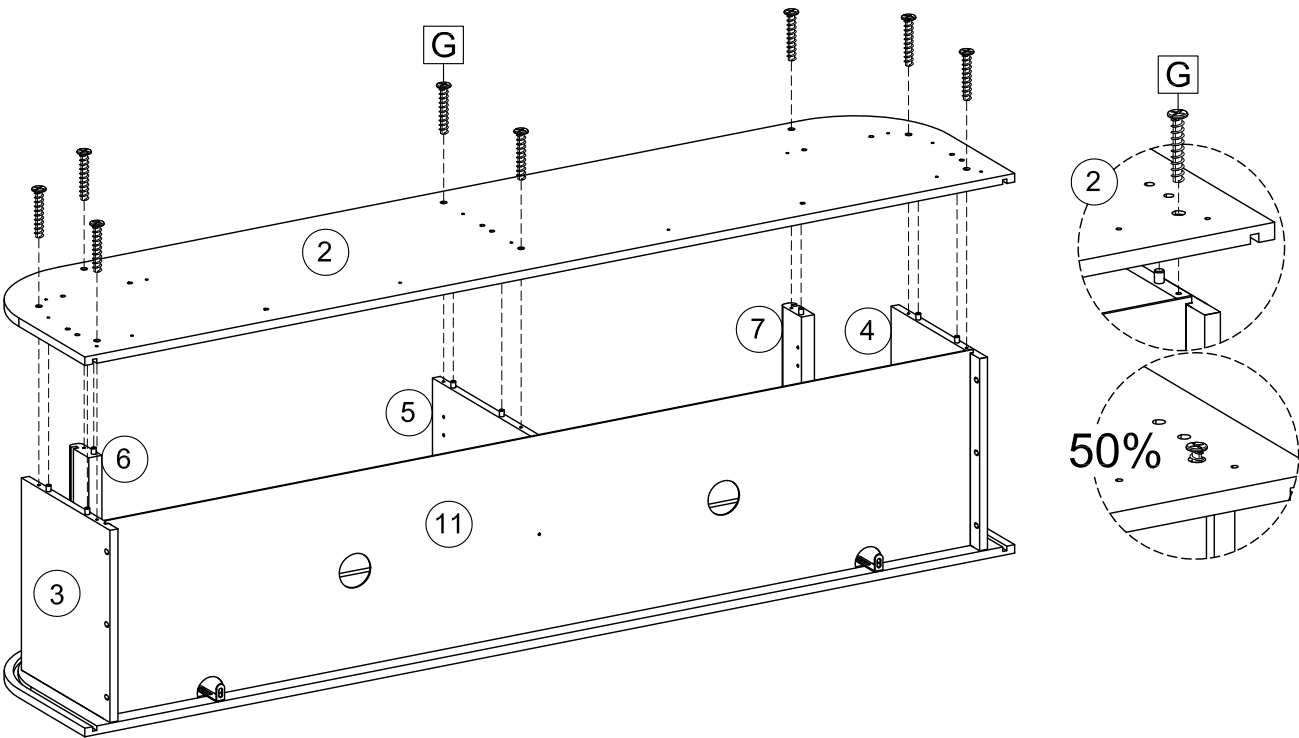

Step 11

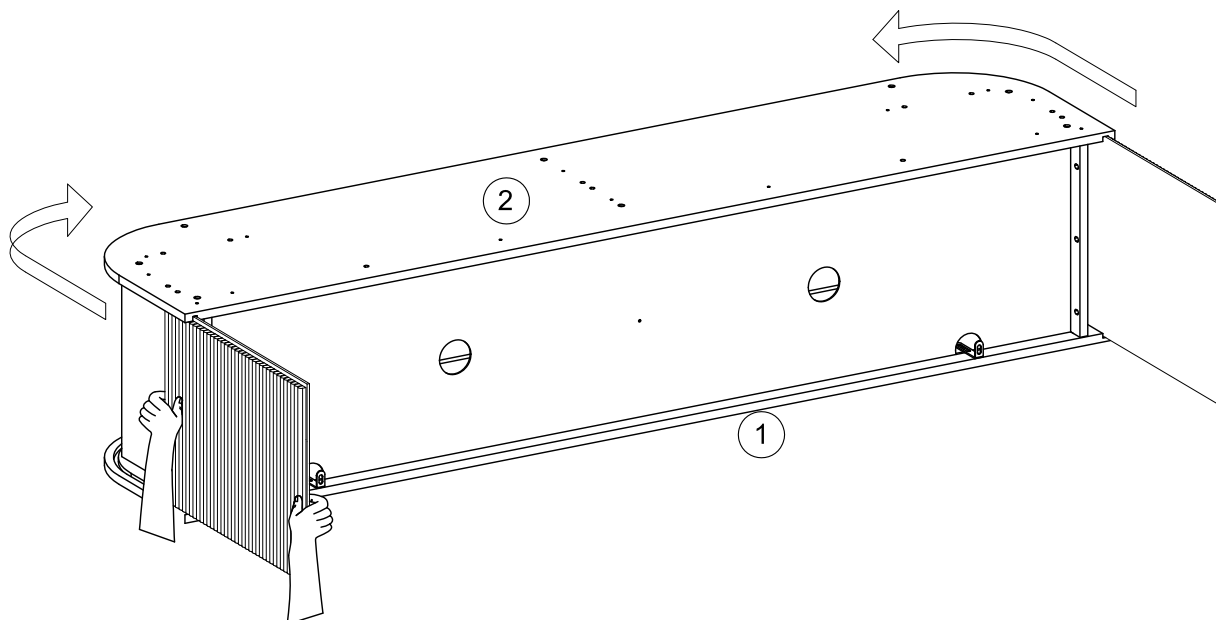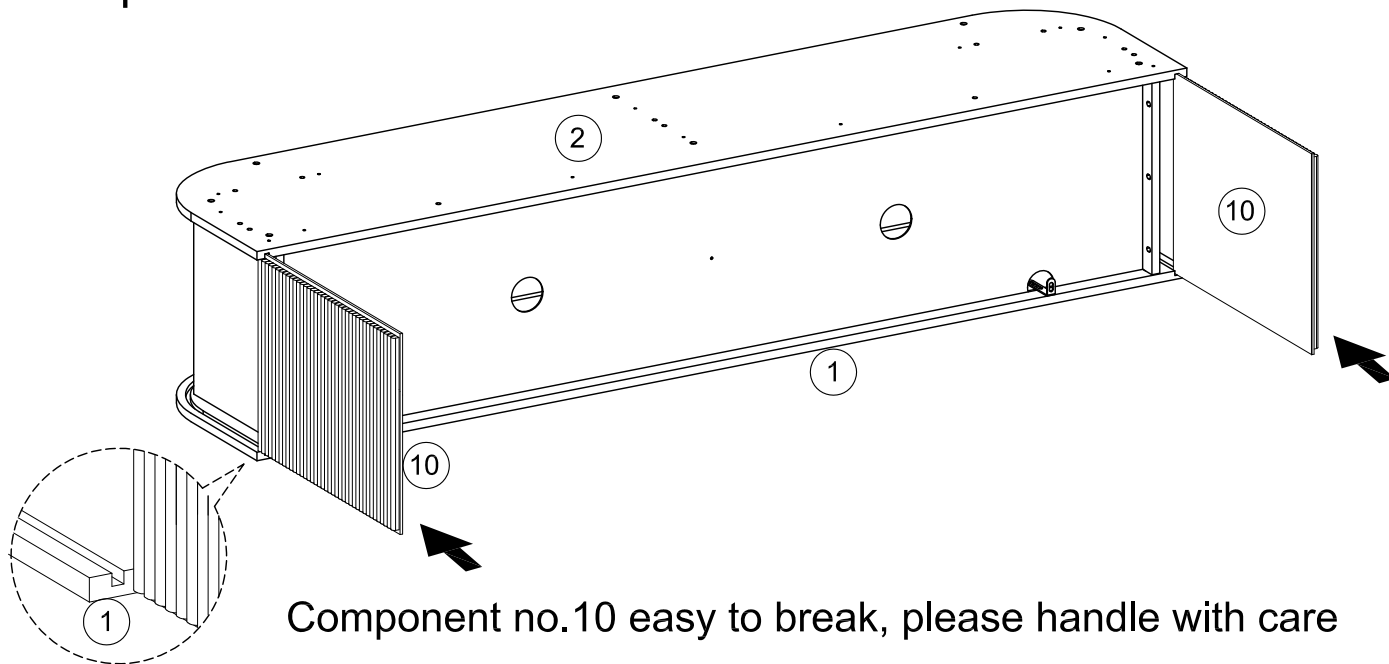

Please use two hands to pull & push component no.10 until the end of the groove line

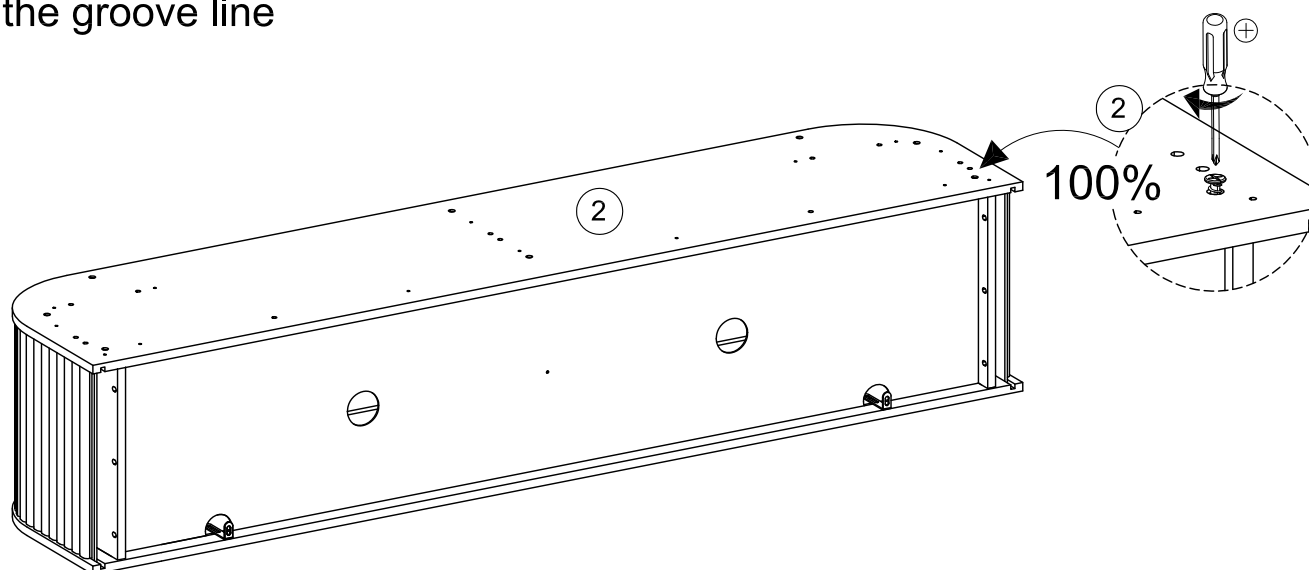

Step 12


You will need



6 x Screw
(G)

Rotate the product as shown.

Attach 2 x Rear Support (9) to case assembly using 6 x screw (G) as shown.

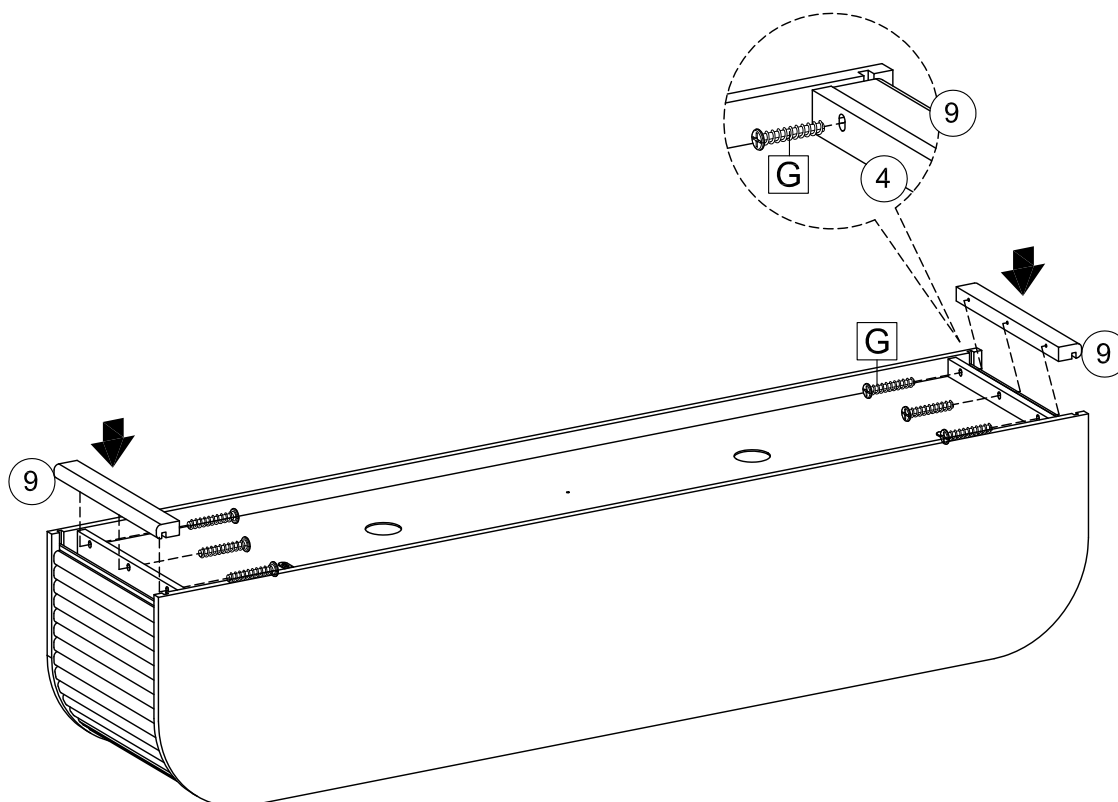

Step 13


You will need



14 x Screw
(G)

Rotate the product again, as shown.

Attach 1 x Large Bottom Support (12), 3 x Small Bottom Support (13) and 2 x Half moon Support (14) to case assembly using 14 x Screw (G).

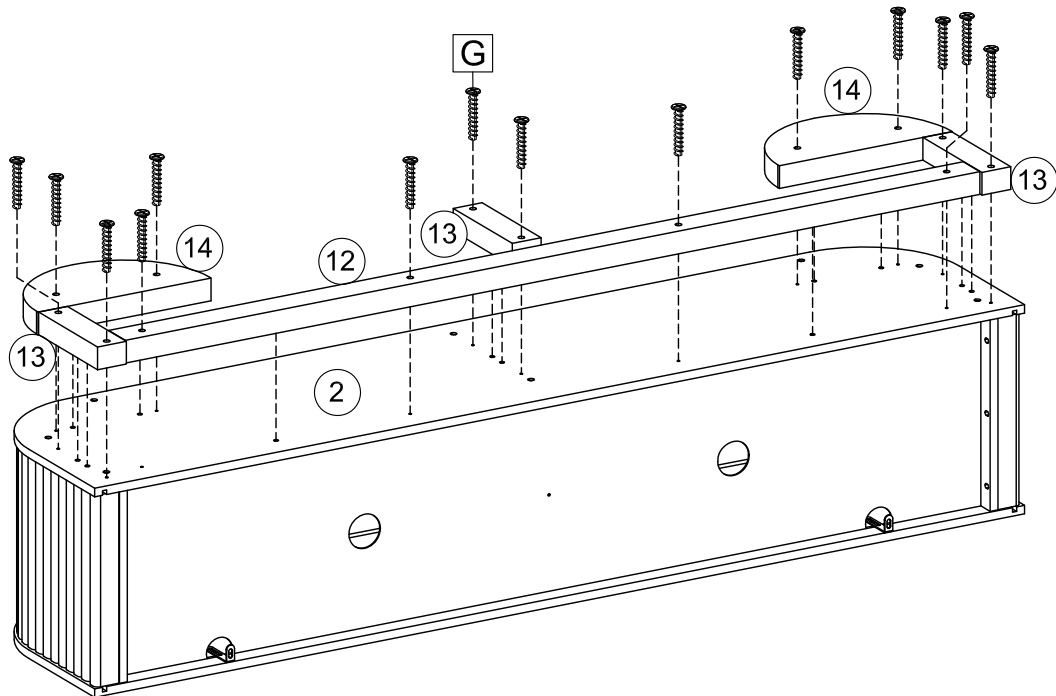


Step 14

You will need



12 x Nail Leg
(P)

Install 12 x Nail Leg (P) to the bottom of the case assembly as shown.

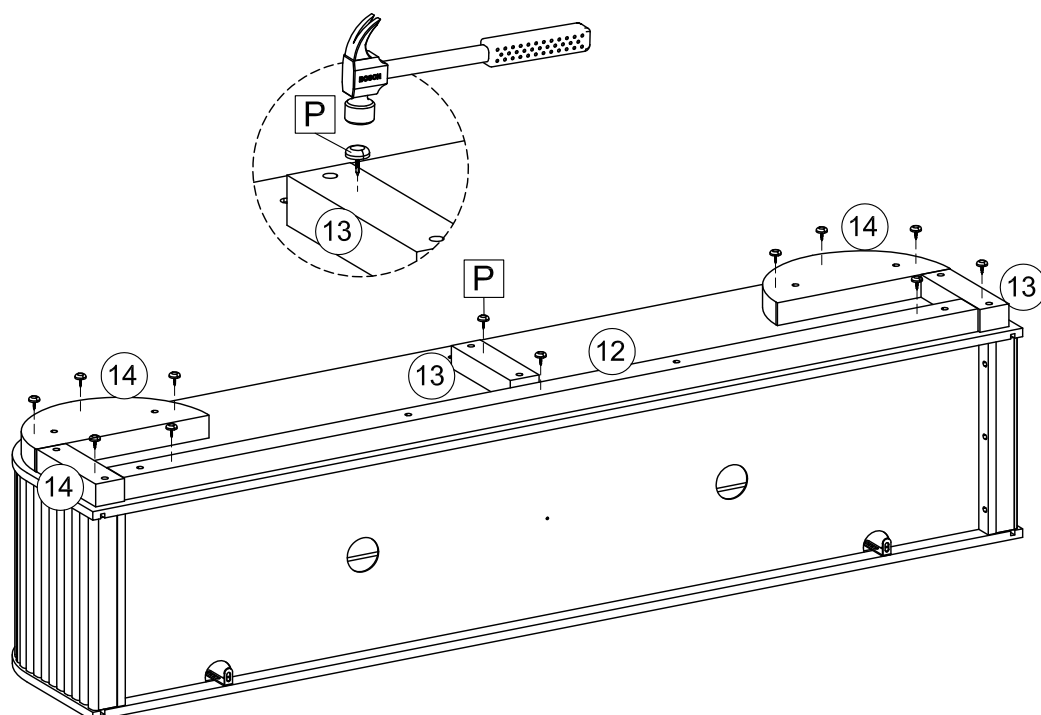


Step 15

You will need		
		
1 x Screw (I)	14 x Screw (L)	14 x Backply Stopper (M)


Rotate the product as shown.

Install 14 x Backply Stopper (M) to Back Panel (11) using 14 x Screws (L).

Tighten Back Panel using 1 x Screw (I).

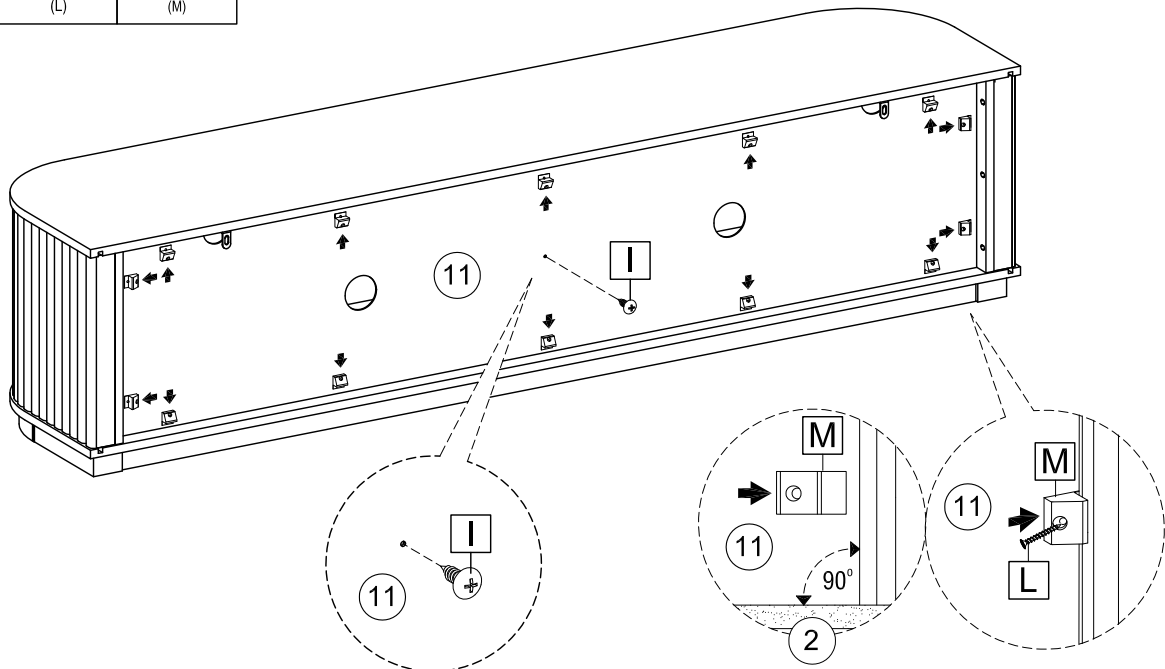

Step 16

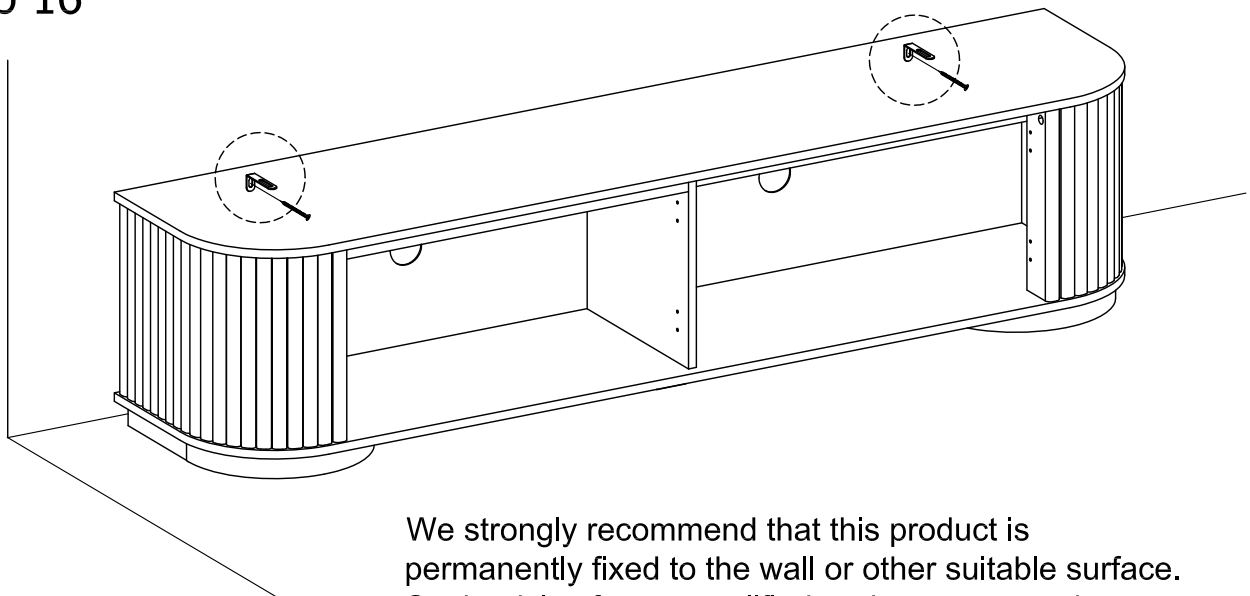

We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Seek advice from a qualified trades person on how to attach this wall strap to your specific wall.



Screw and wall plug are not included.
Please use appropriate fixtures for your wall.
With assistance, move the product to the final position.
Attach the wall straps to the wall with the appropriate fixtures.
Make sure they are firmly attached and secure.

Step 17

You will need		
 4 x Screw Ø6x8mm (E)	 4 x Full Curve Door Hinge (J)	 2 x Handle (N)
 8 x Screw Ø4x10mm (Q)	Open Hinge pack with label "J"	


Attach 4 x Full Curve Door Hinge (J) to 1 x Left Door (15) and 1 x Right Door (16) using 8 x Screw (Q).

Install 2 x Handle (N) to 1 x Left Door (15) and 1 x Right Door (16) using 4 x Screw (E).

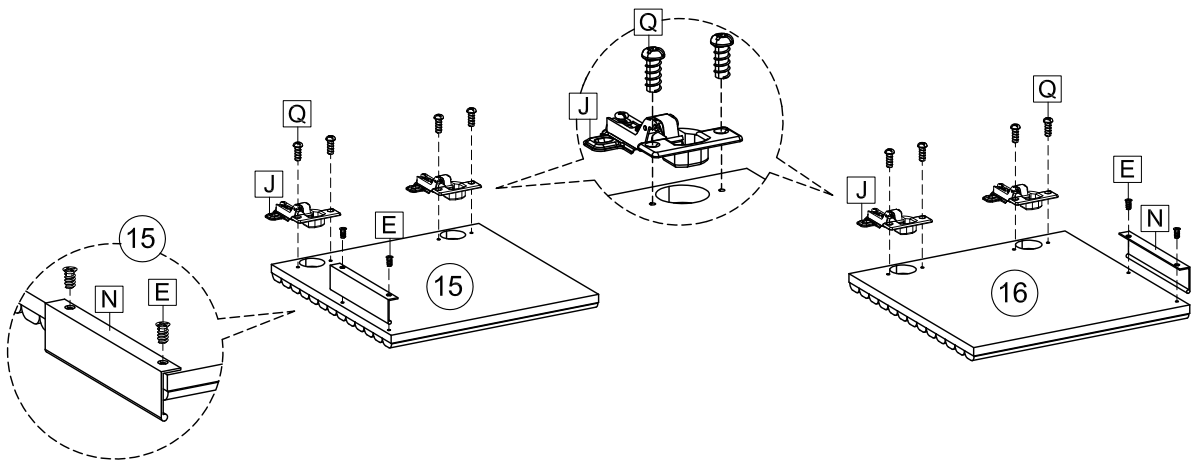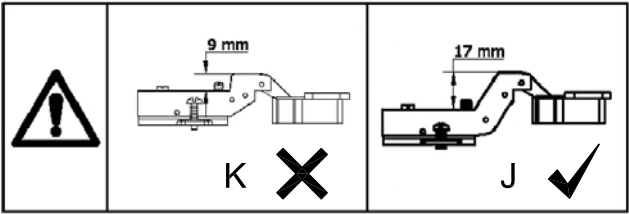

Step 18

Attach 1 x Left Door (15) and 1 x Right Door (16) to case assembly as shown.


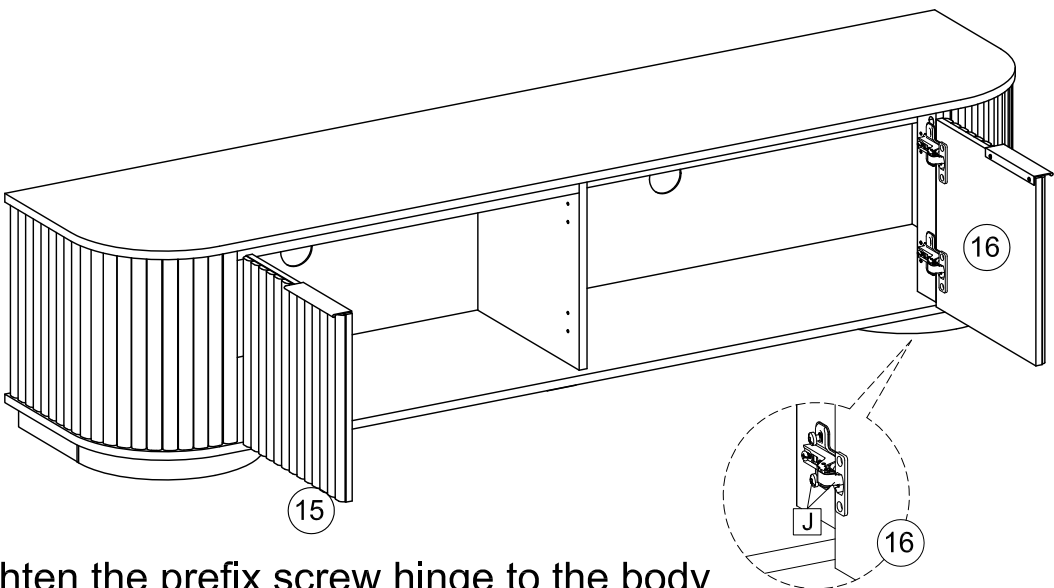


Tighten the prefix screw hinge to the body

Step 19


You will need		
 4 x Screw Ø6x8mm (E)	 4 x Half Curve Door Hinge (K)	 2 x Handle (N)
 8 x Screw Ø4x10mm (Q)	Open Hinge pack with label "K"	

Attach 4 x Half Curve Door Hinge (K) to 1 x Left Door (15) and 1 x Right Door (16) using 8 x Screw (Q).
Install 2 x Handle (N) to 1 x Left Door (15) and 1 x Right Door (16) using 4 x Screw (E).

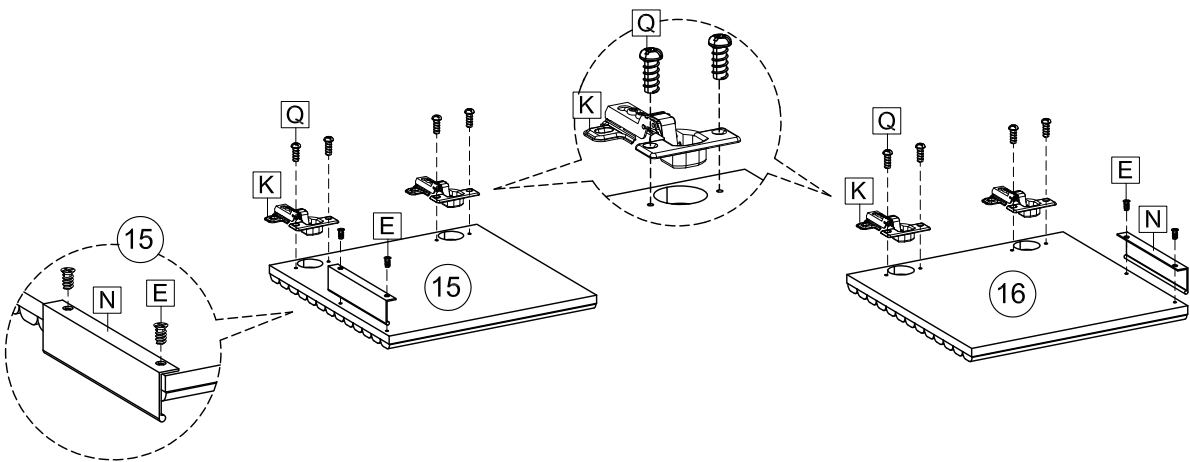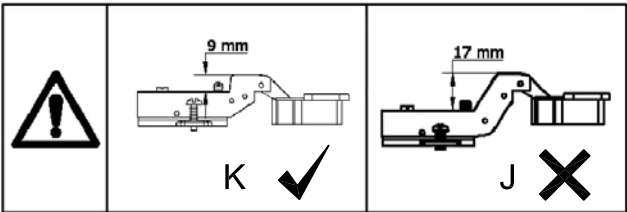

Step 20


Attach 1 x Left Door (15) and 1 x Right Door (16) to case assembly as shown.

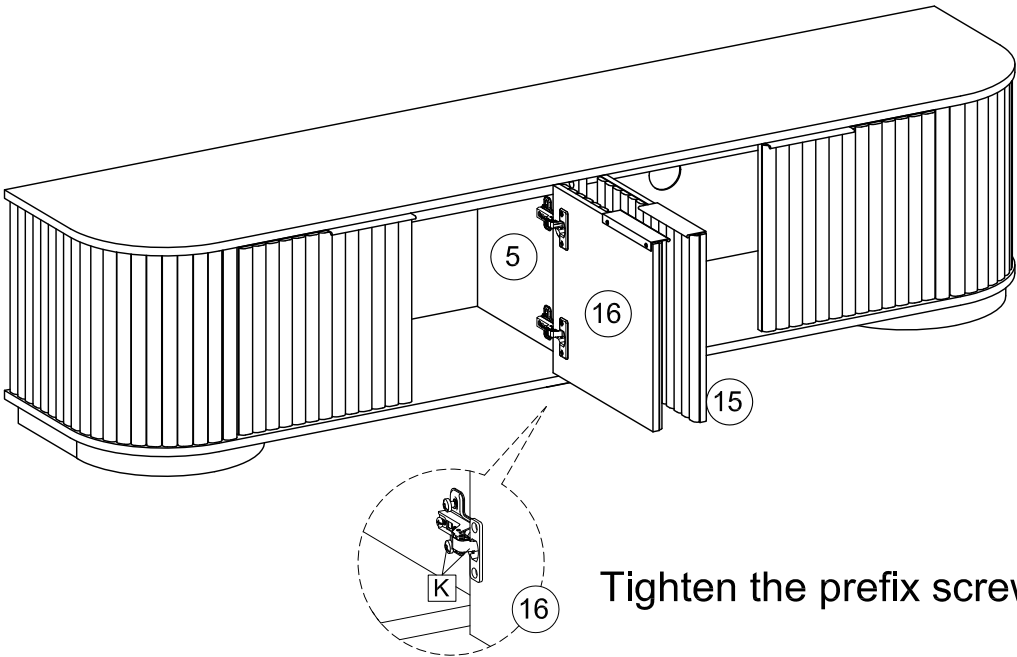

Tighten the prefix screw hinge to the body

Step 21


HOW TO ADJUST YOUR HINGES
AND ALIGN THE DOORS

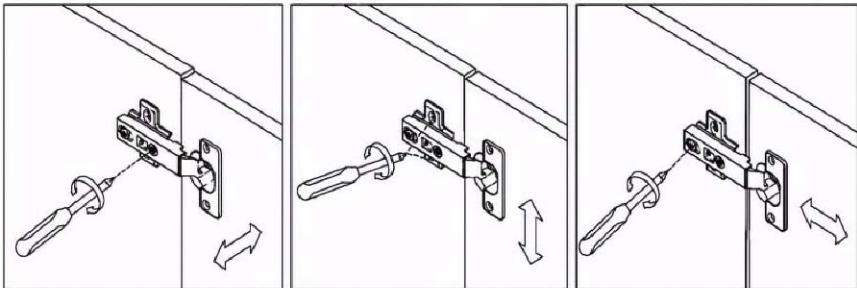

A. Lateral adjustment
by screw adjusting


B. Vertical adjustment via
slot in the mounting plate

C. Front-to-Back by the slacking
the hinge arm mounting screw

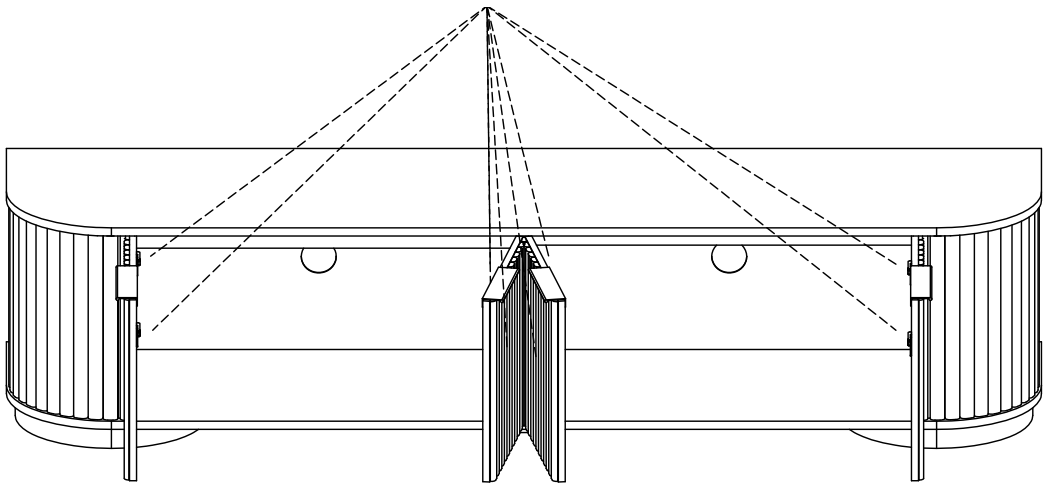


Step 22

MAXIMUM WEIGHT CAPACITY OF THIS UNIT IS 30 KG.

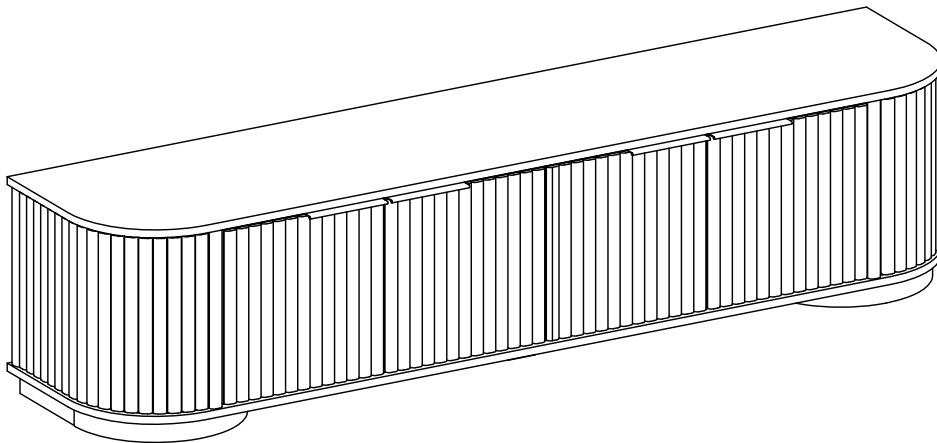

Job Complete !

In the interest of our environment Please dispose of all packaging thoughtfully.

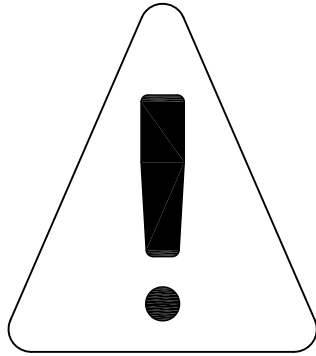

THIS PRODUCT IS FINISHED WITH LAMINATE

Avoid placing hot items directly onto the surface unless using a thick insulation material such as placemats or coasters. Heat may lead to discolouration or other damage to the surface of the product.

Use a soft cloth that has been dampened in water to clean the surface of this product. Do not use abrasive cleaners, furniture wax or polish on the surface of this product, as it may damage the surface.

CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.