


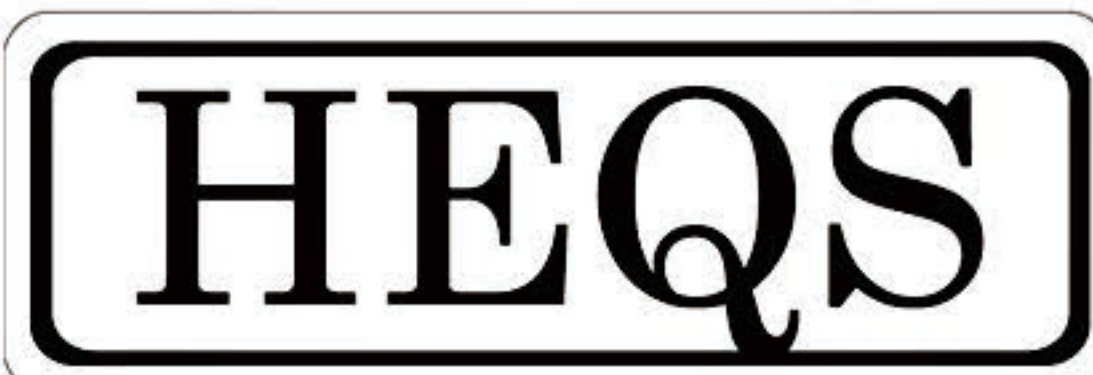
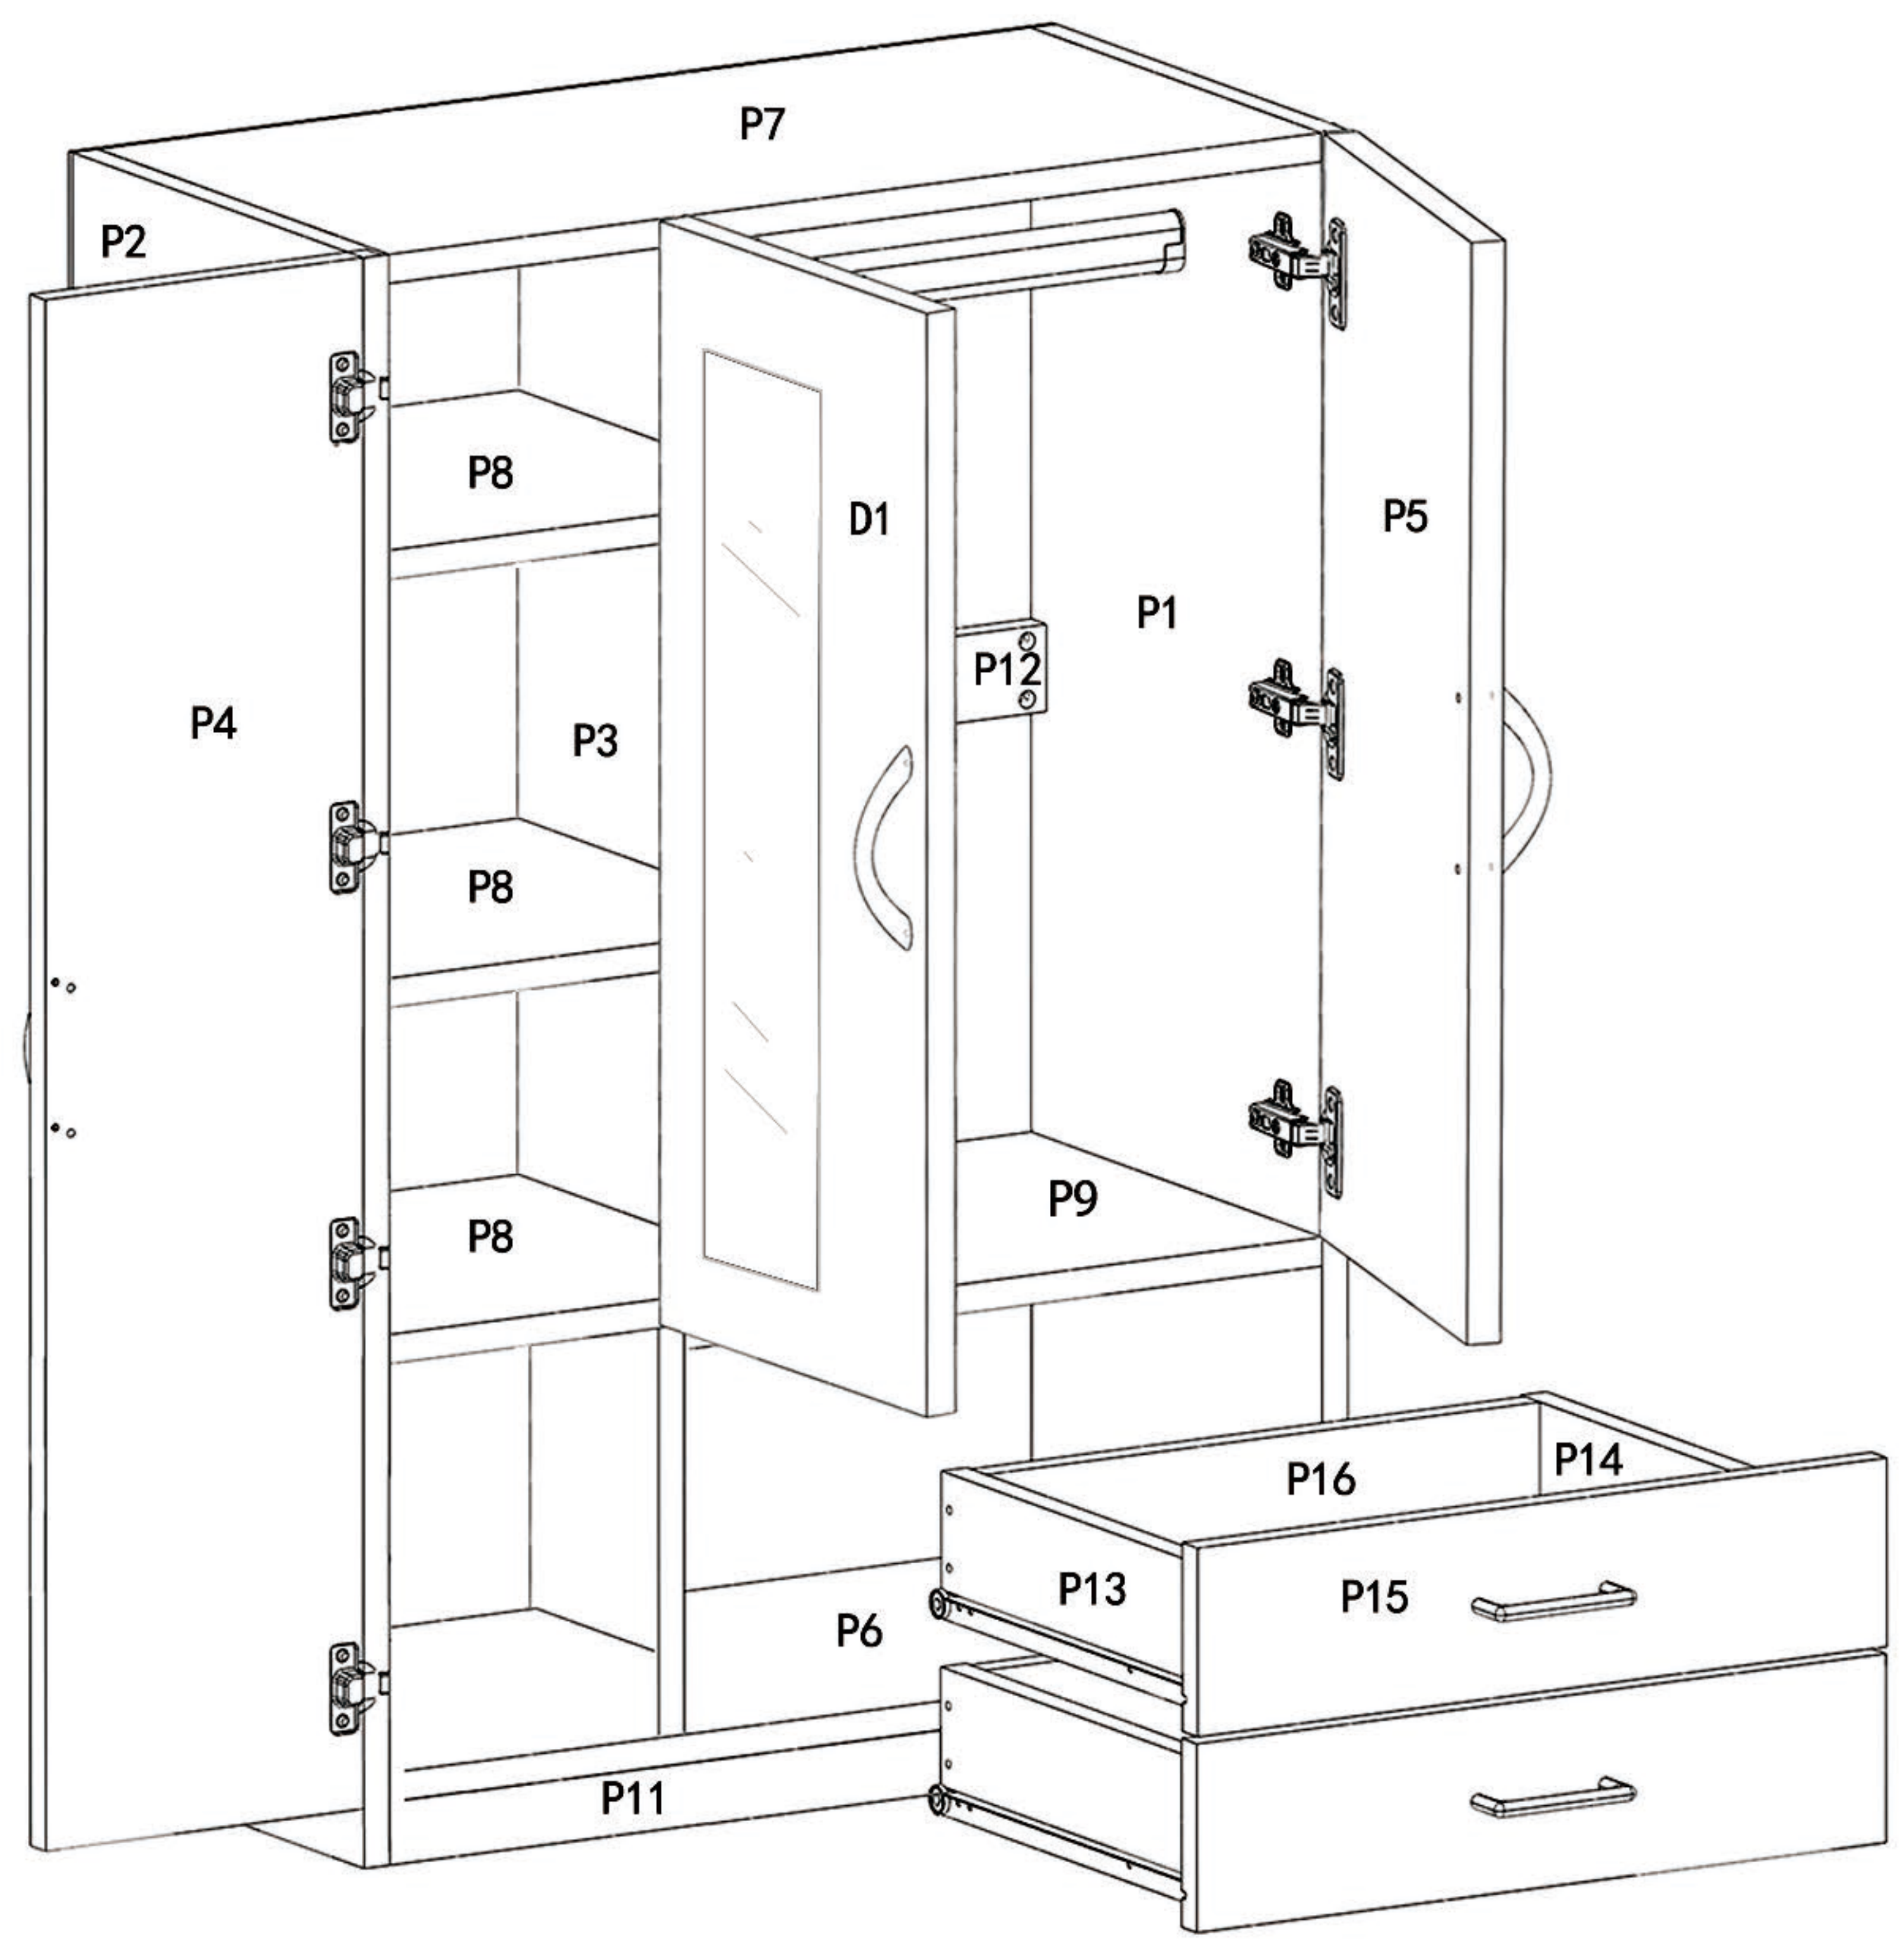
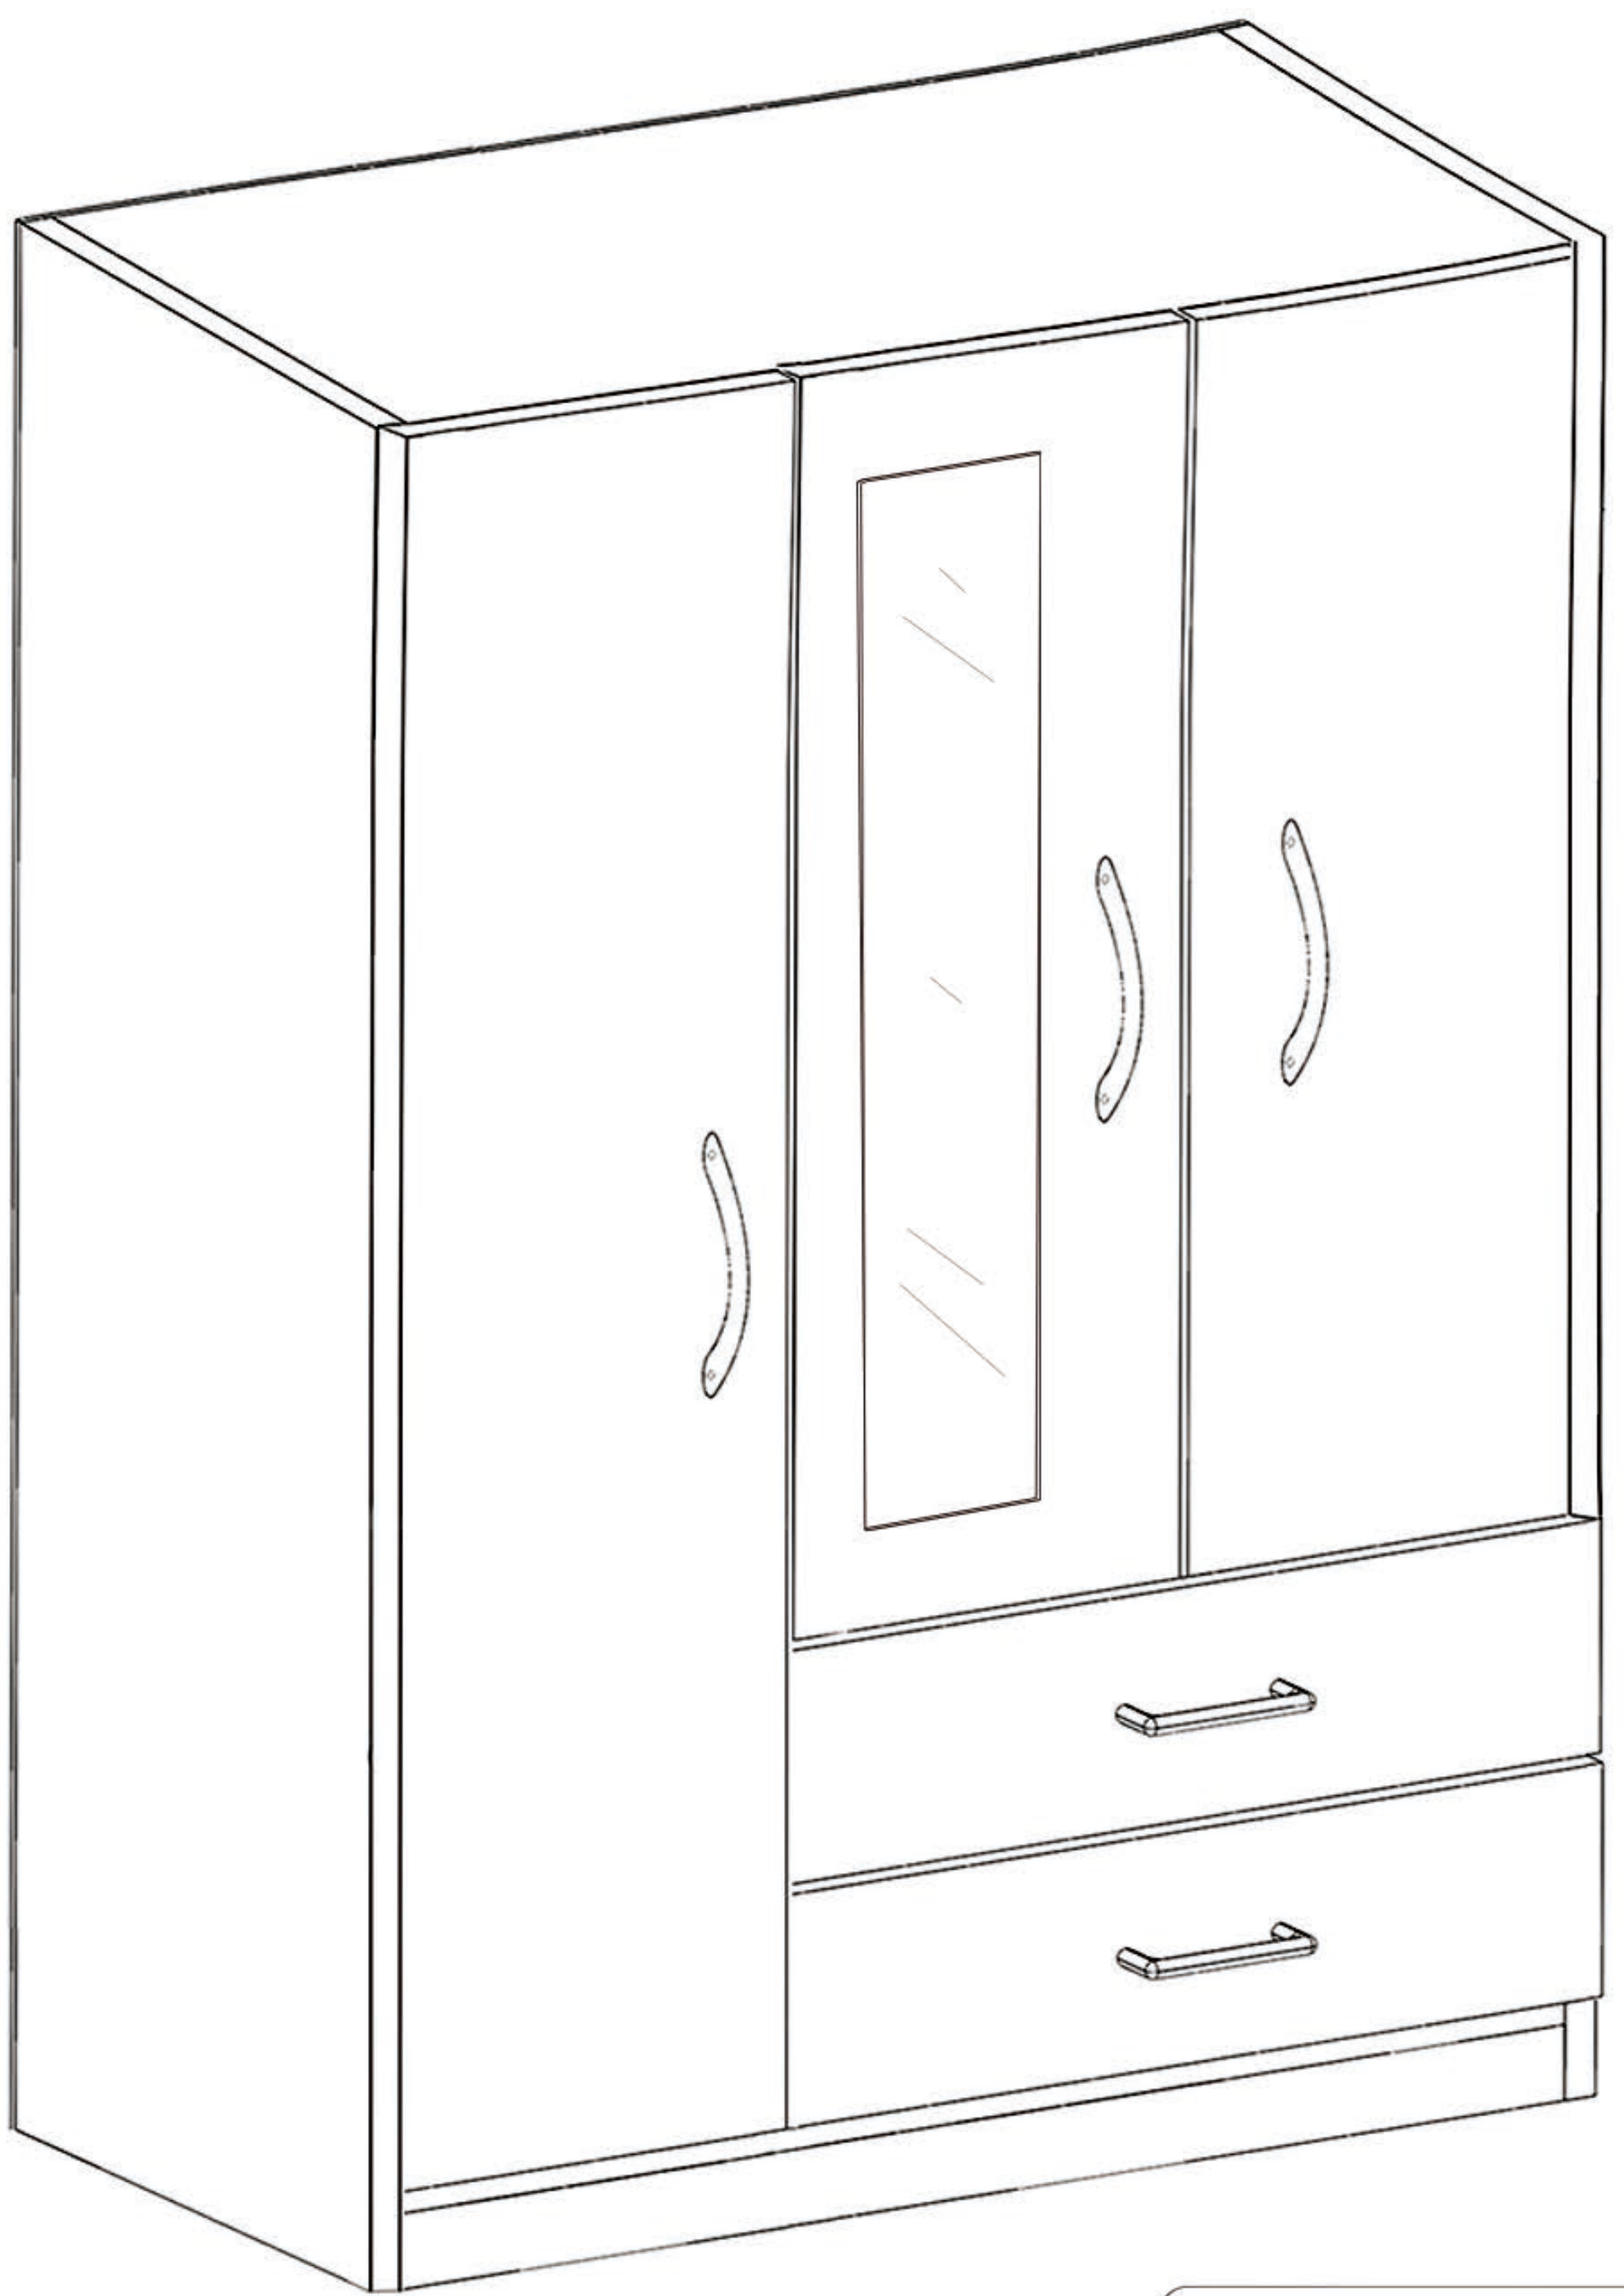
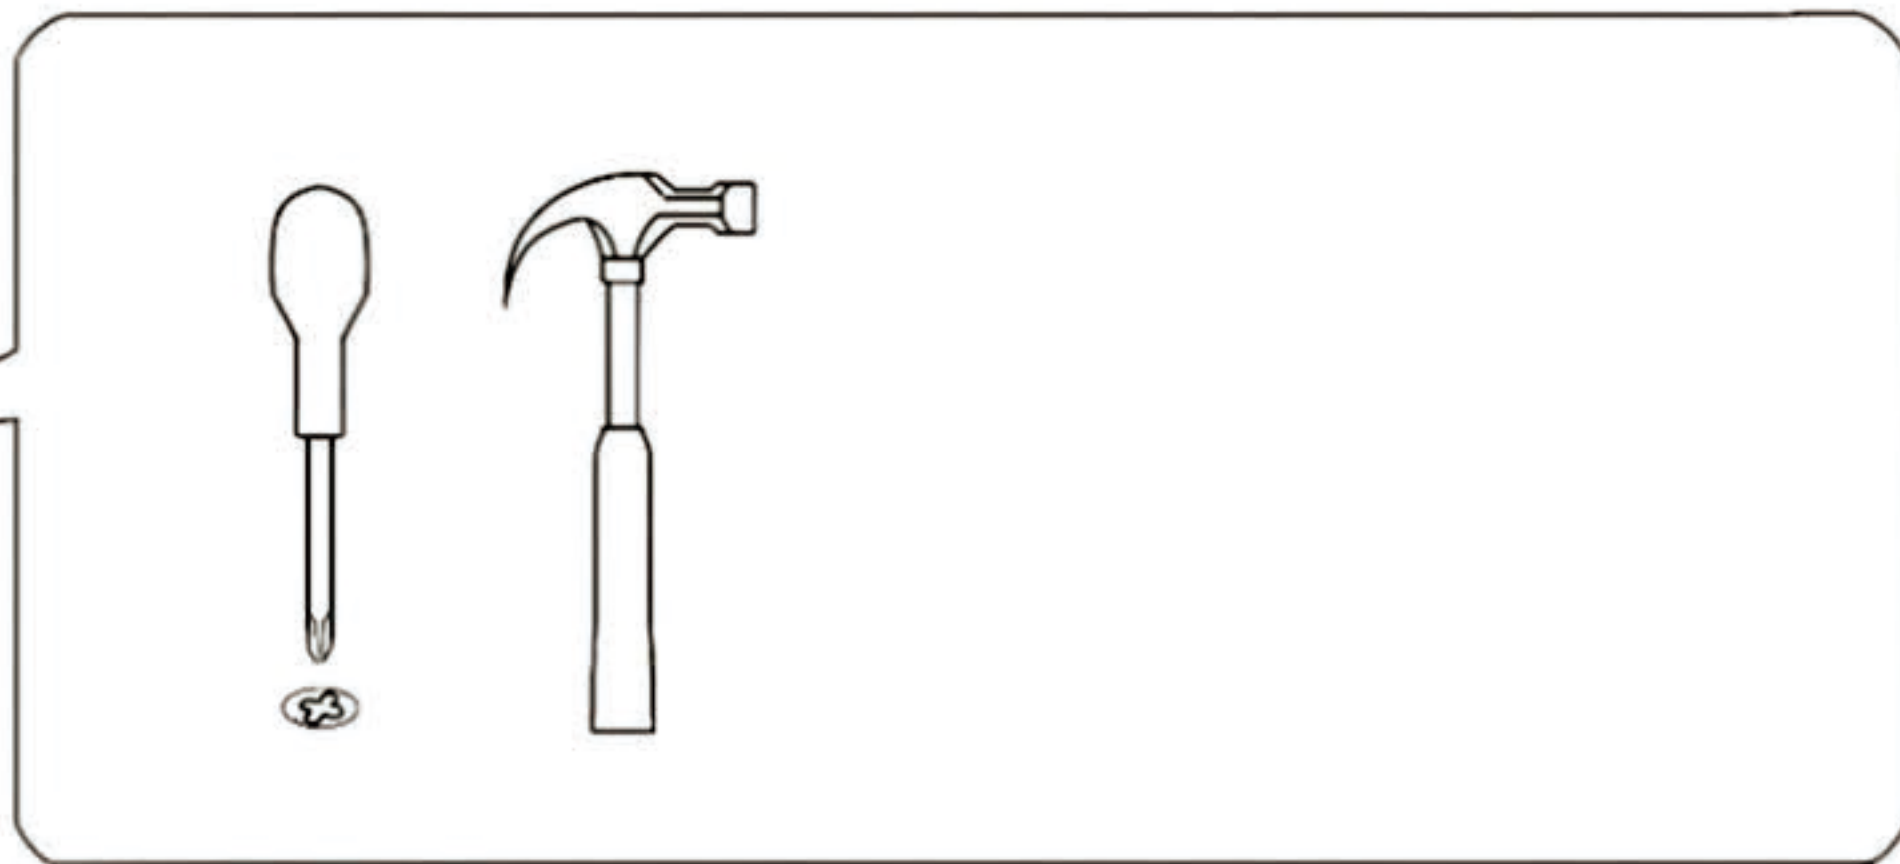
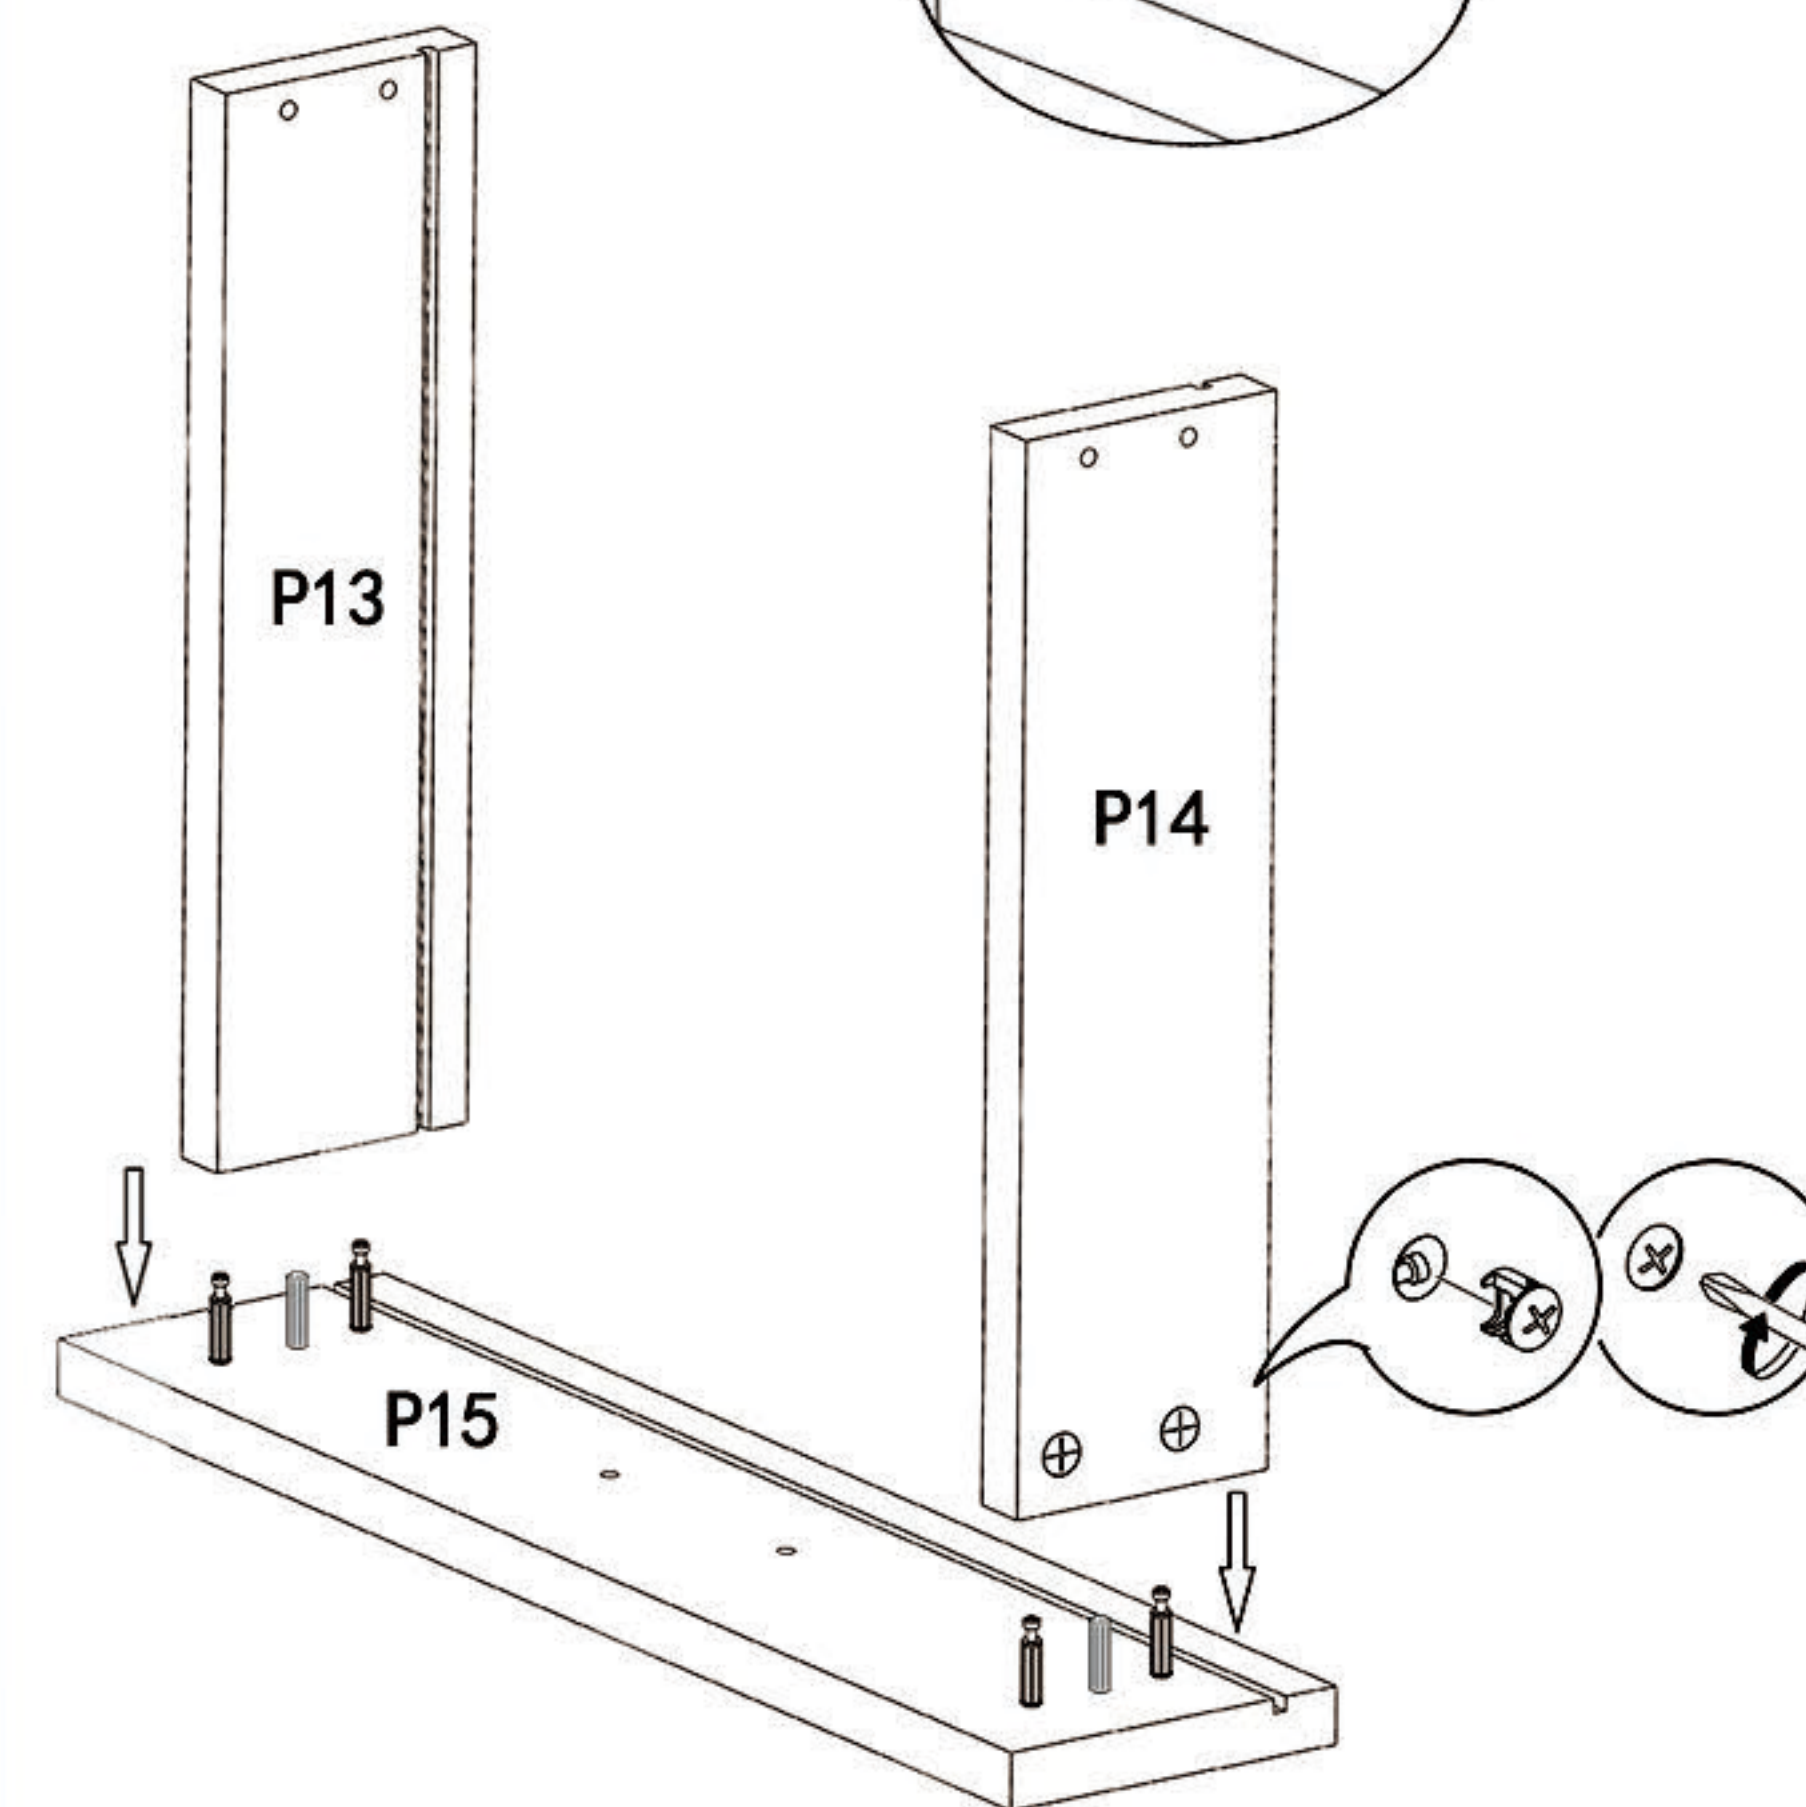
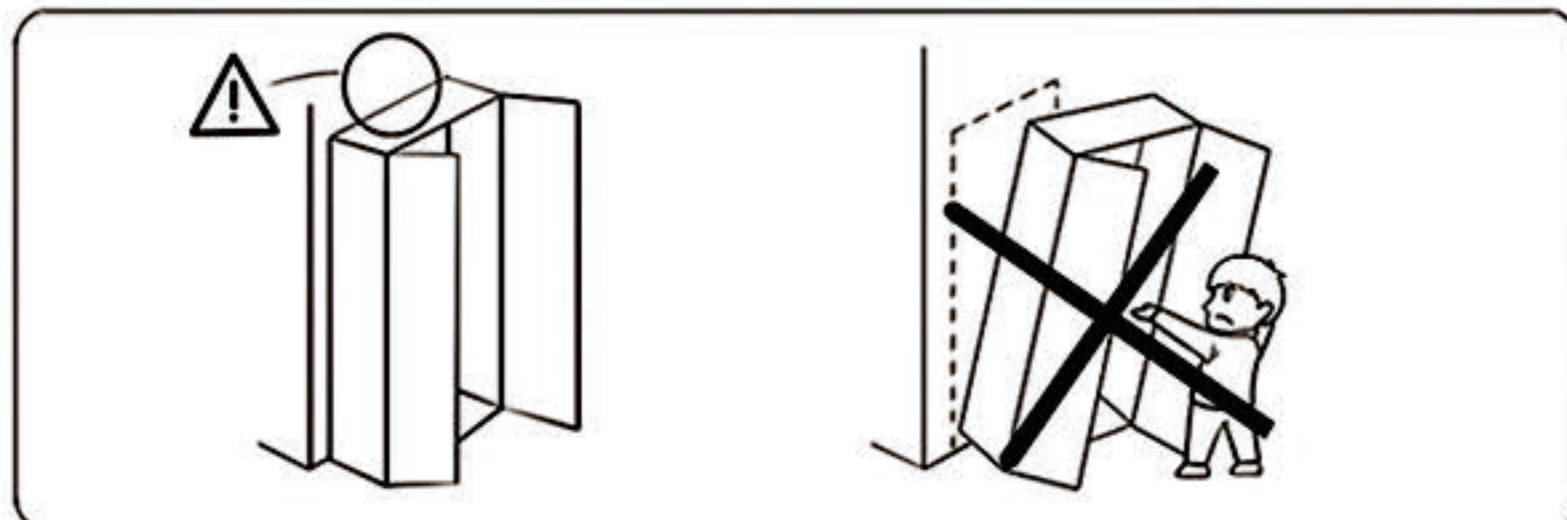
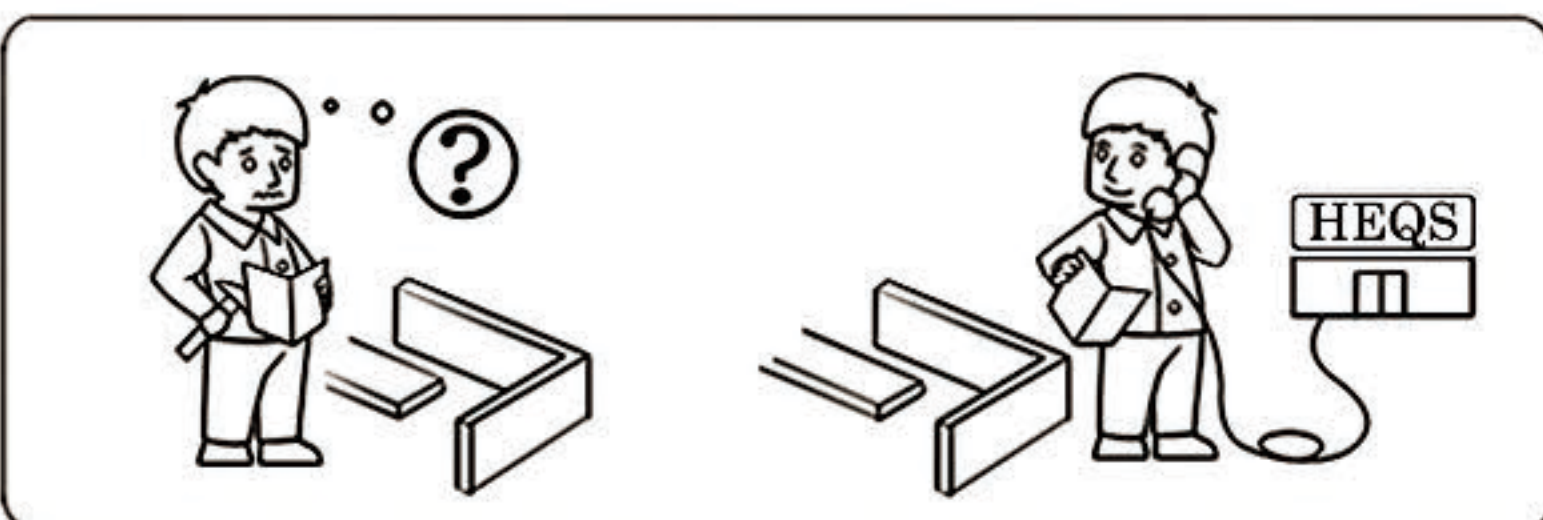


Redfern 3Door 2Drawers Wardrobe

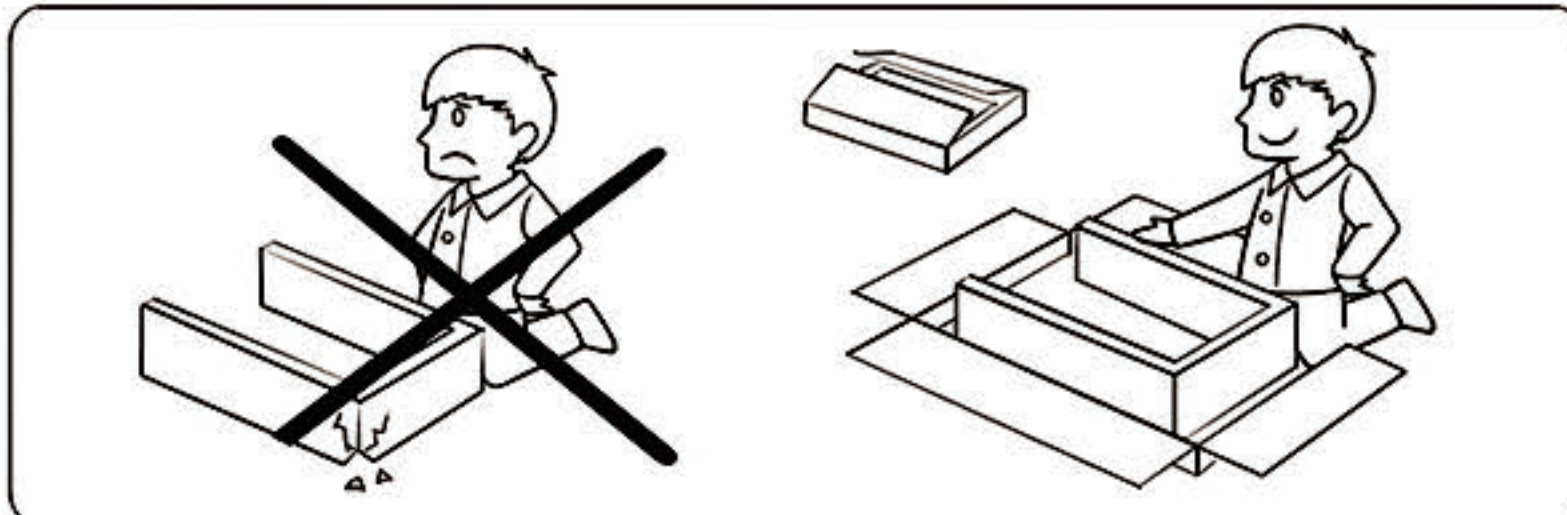


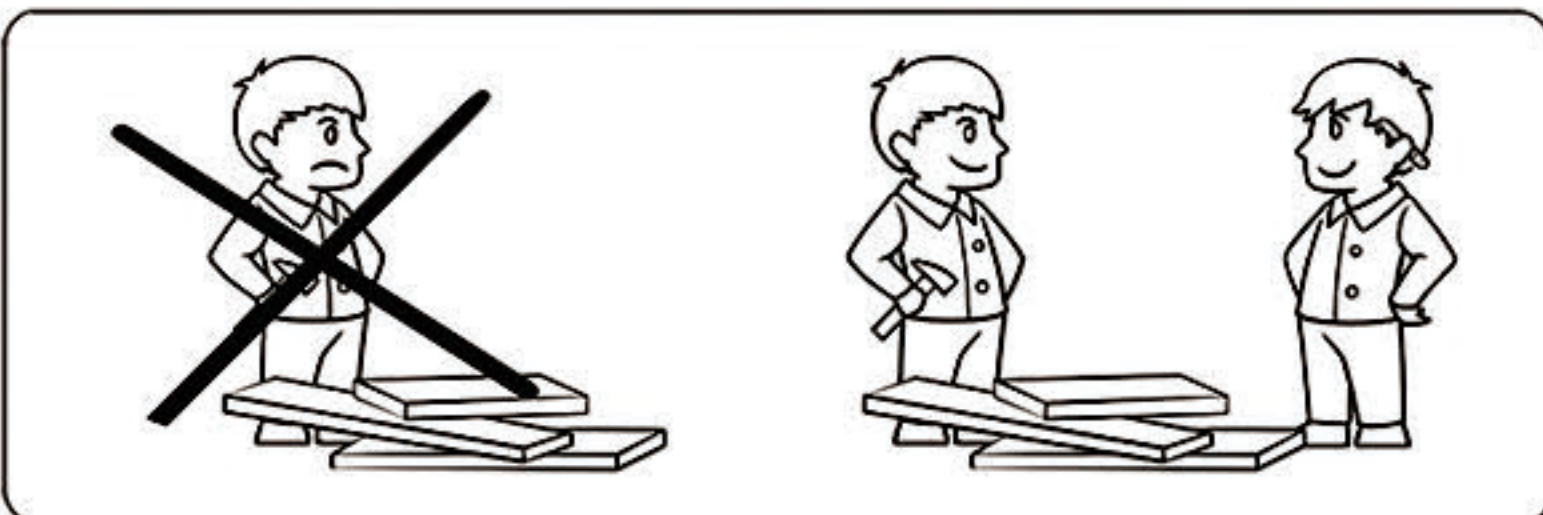



1-1


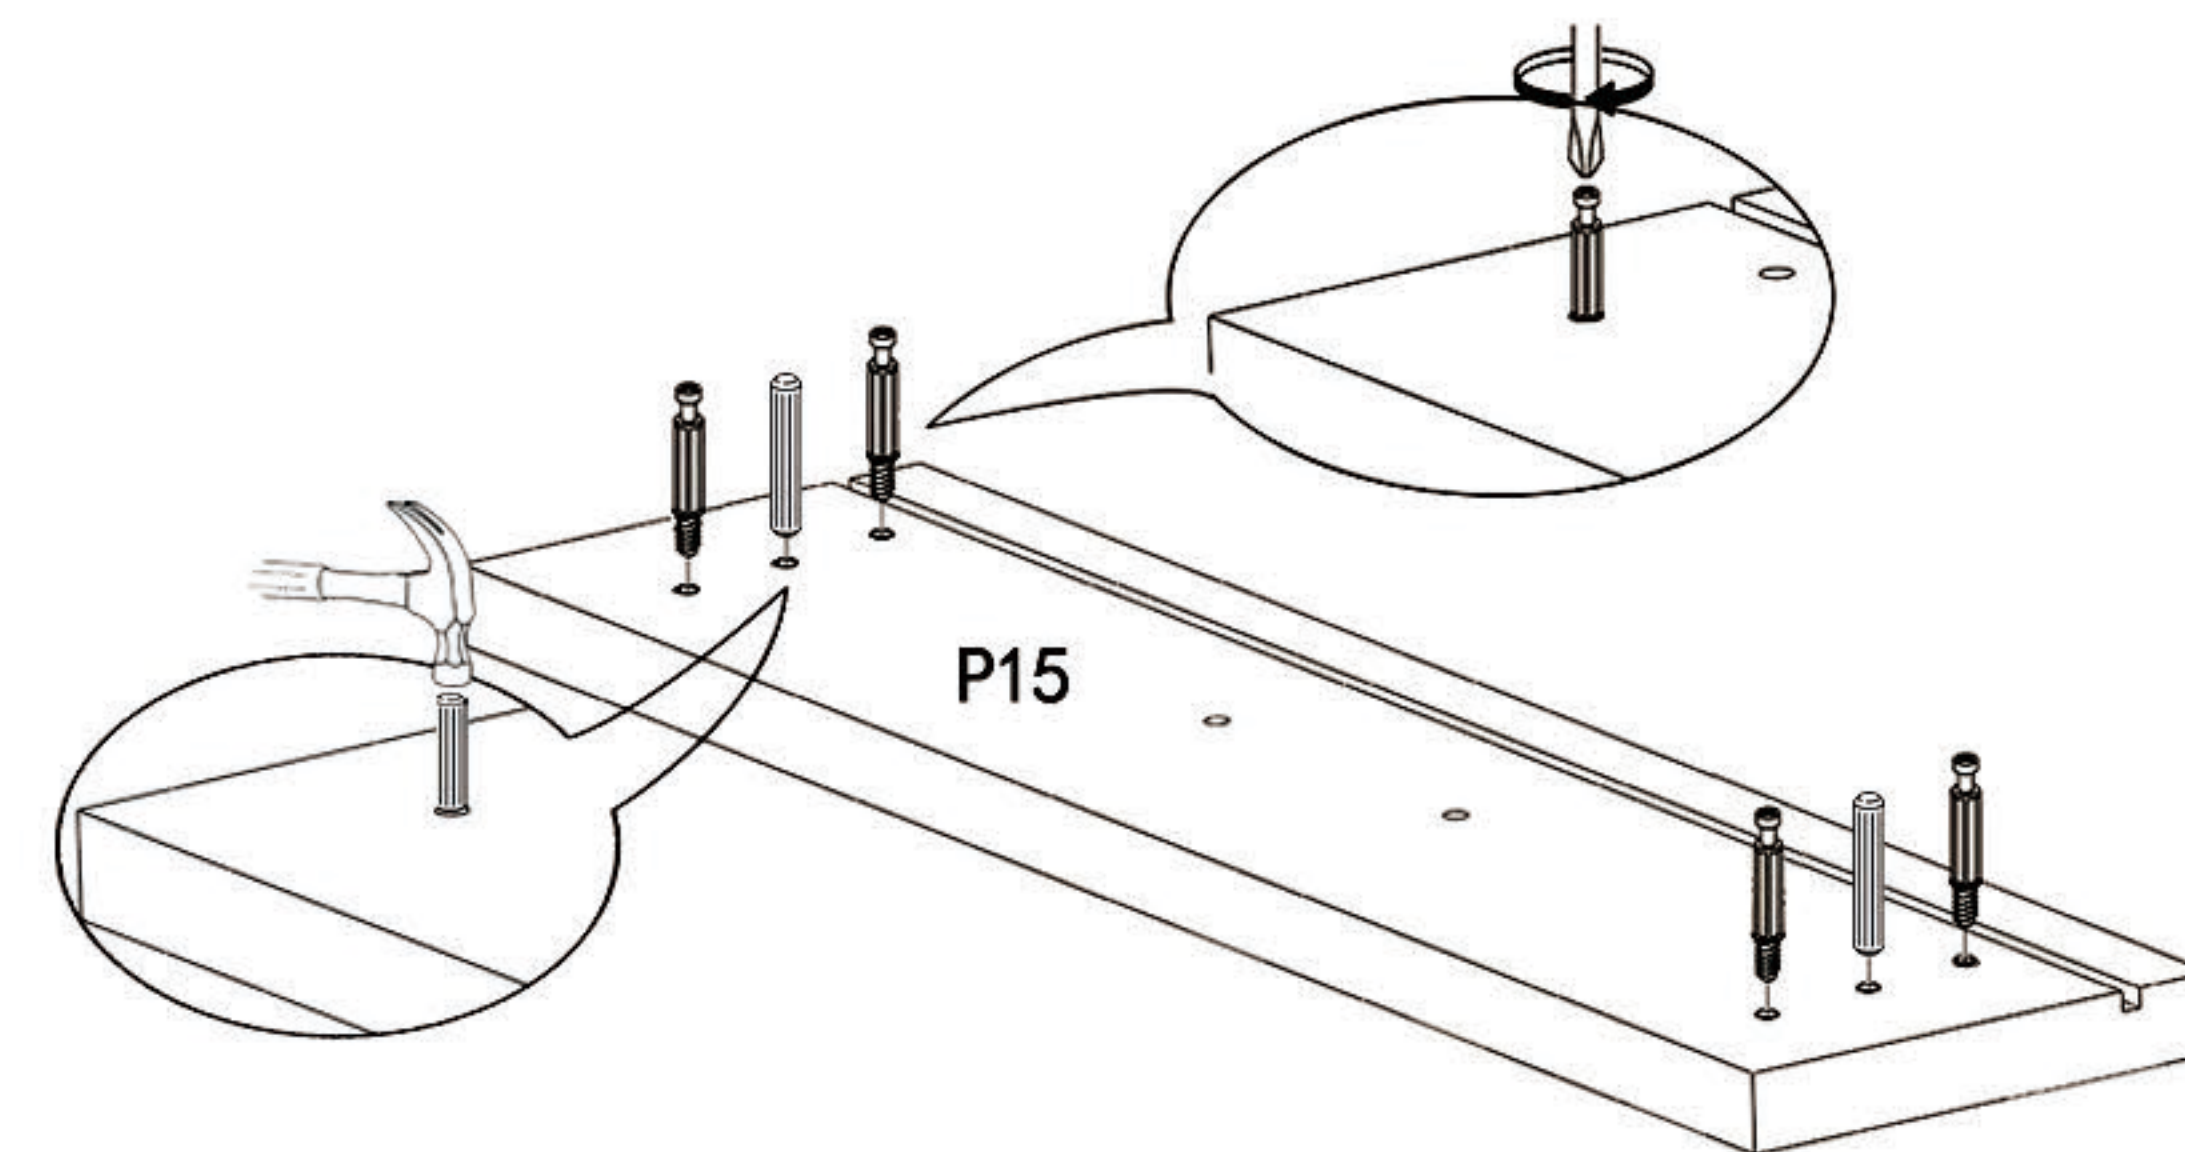


1-3

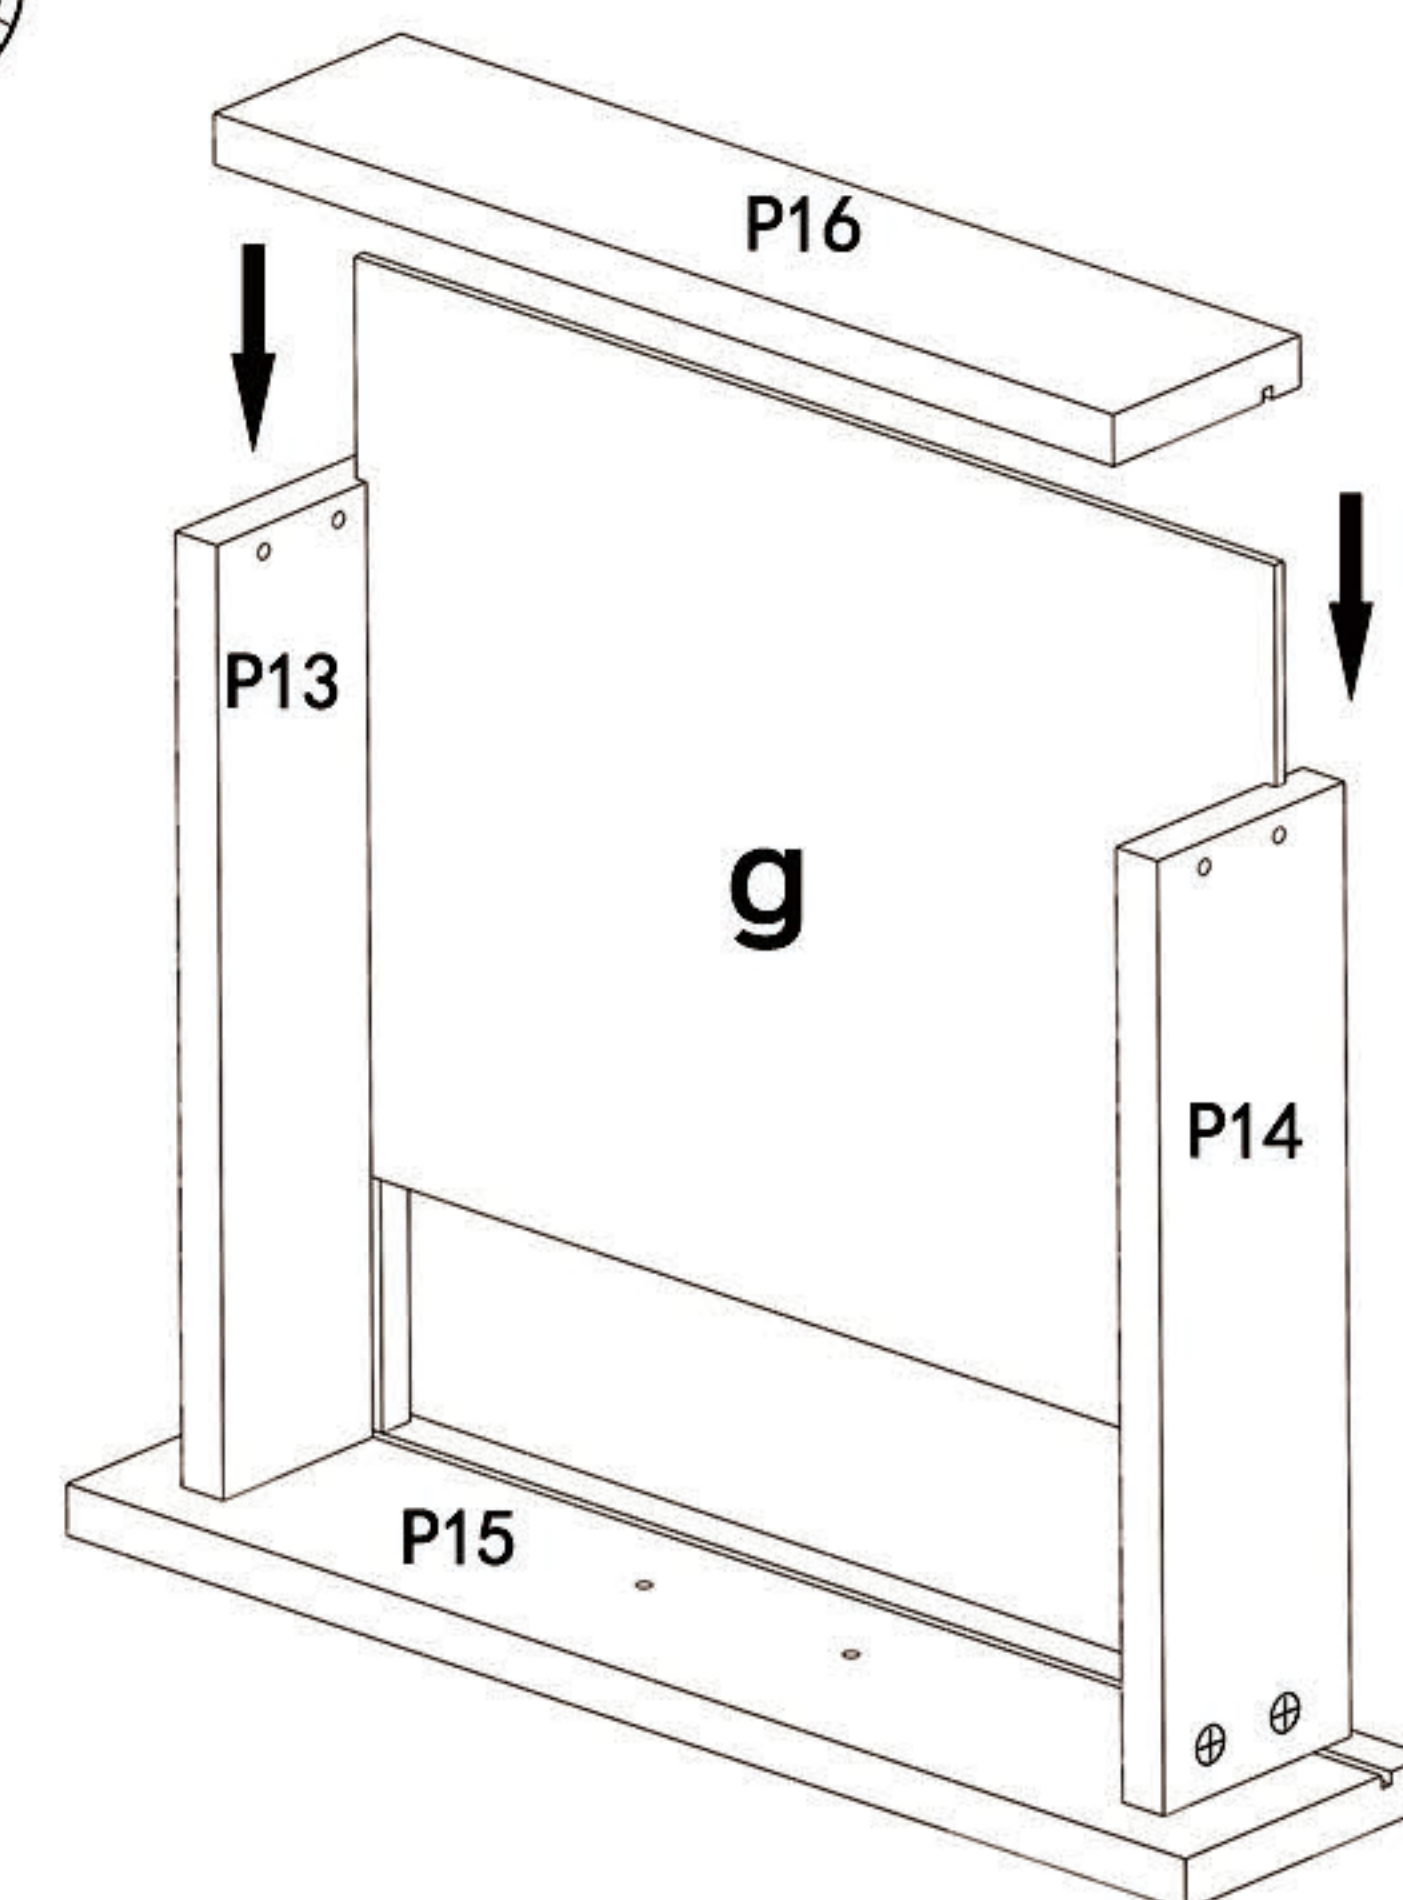


1-2

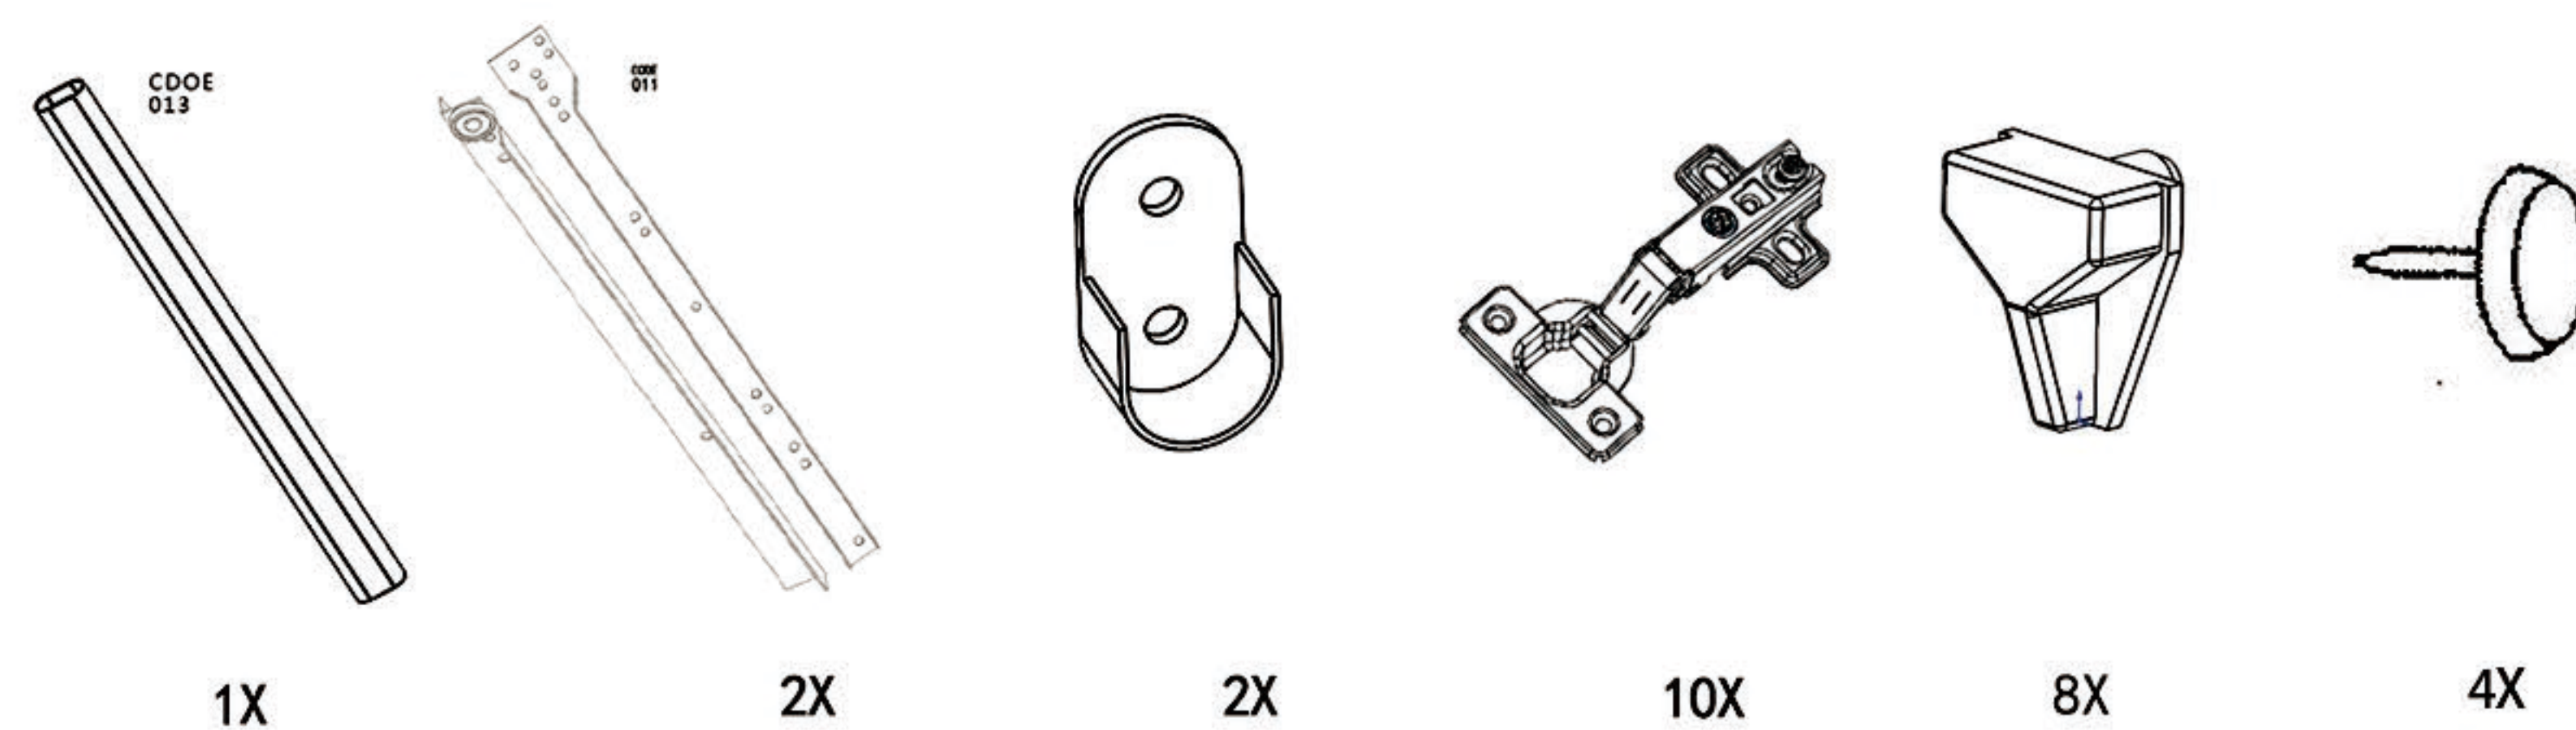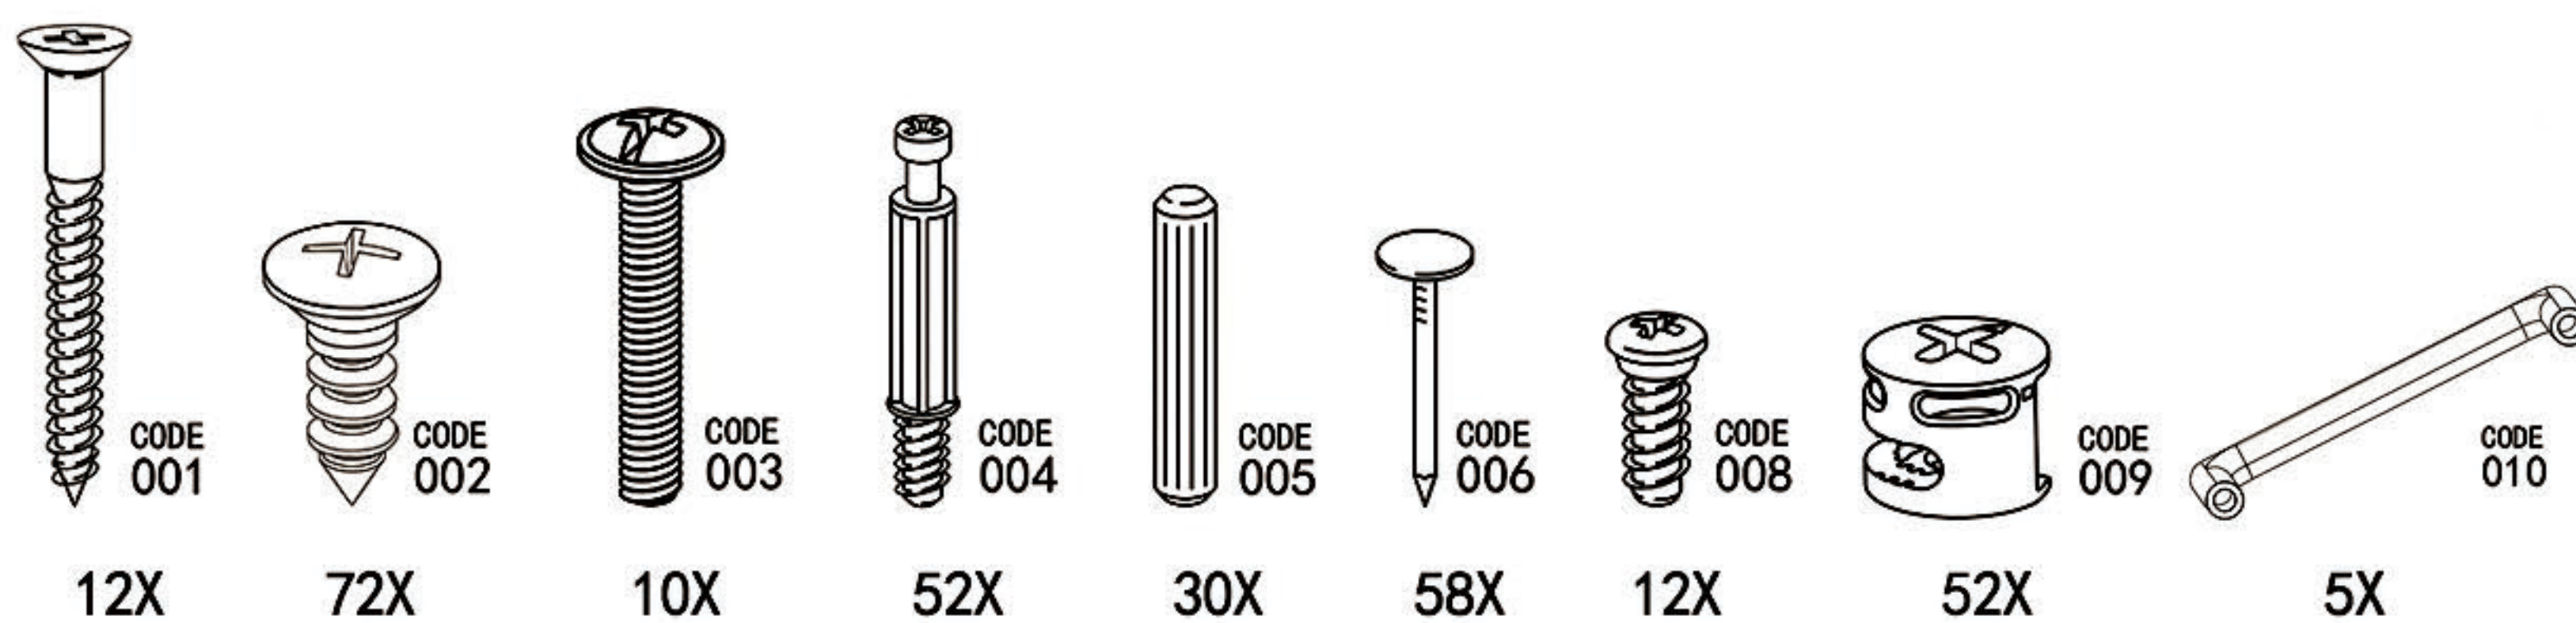


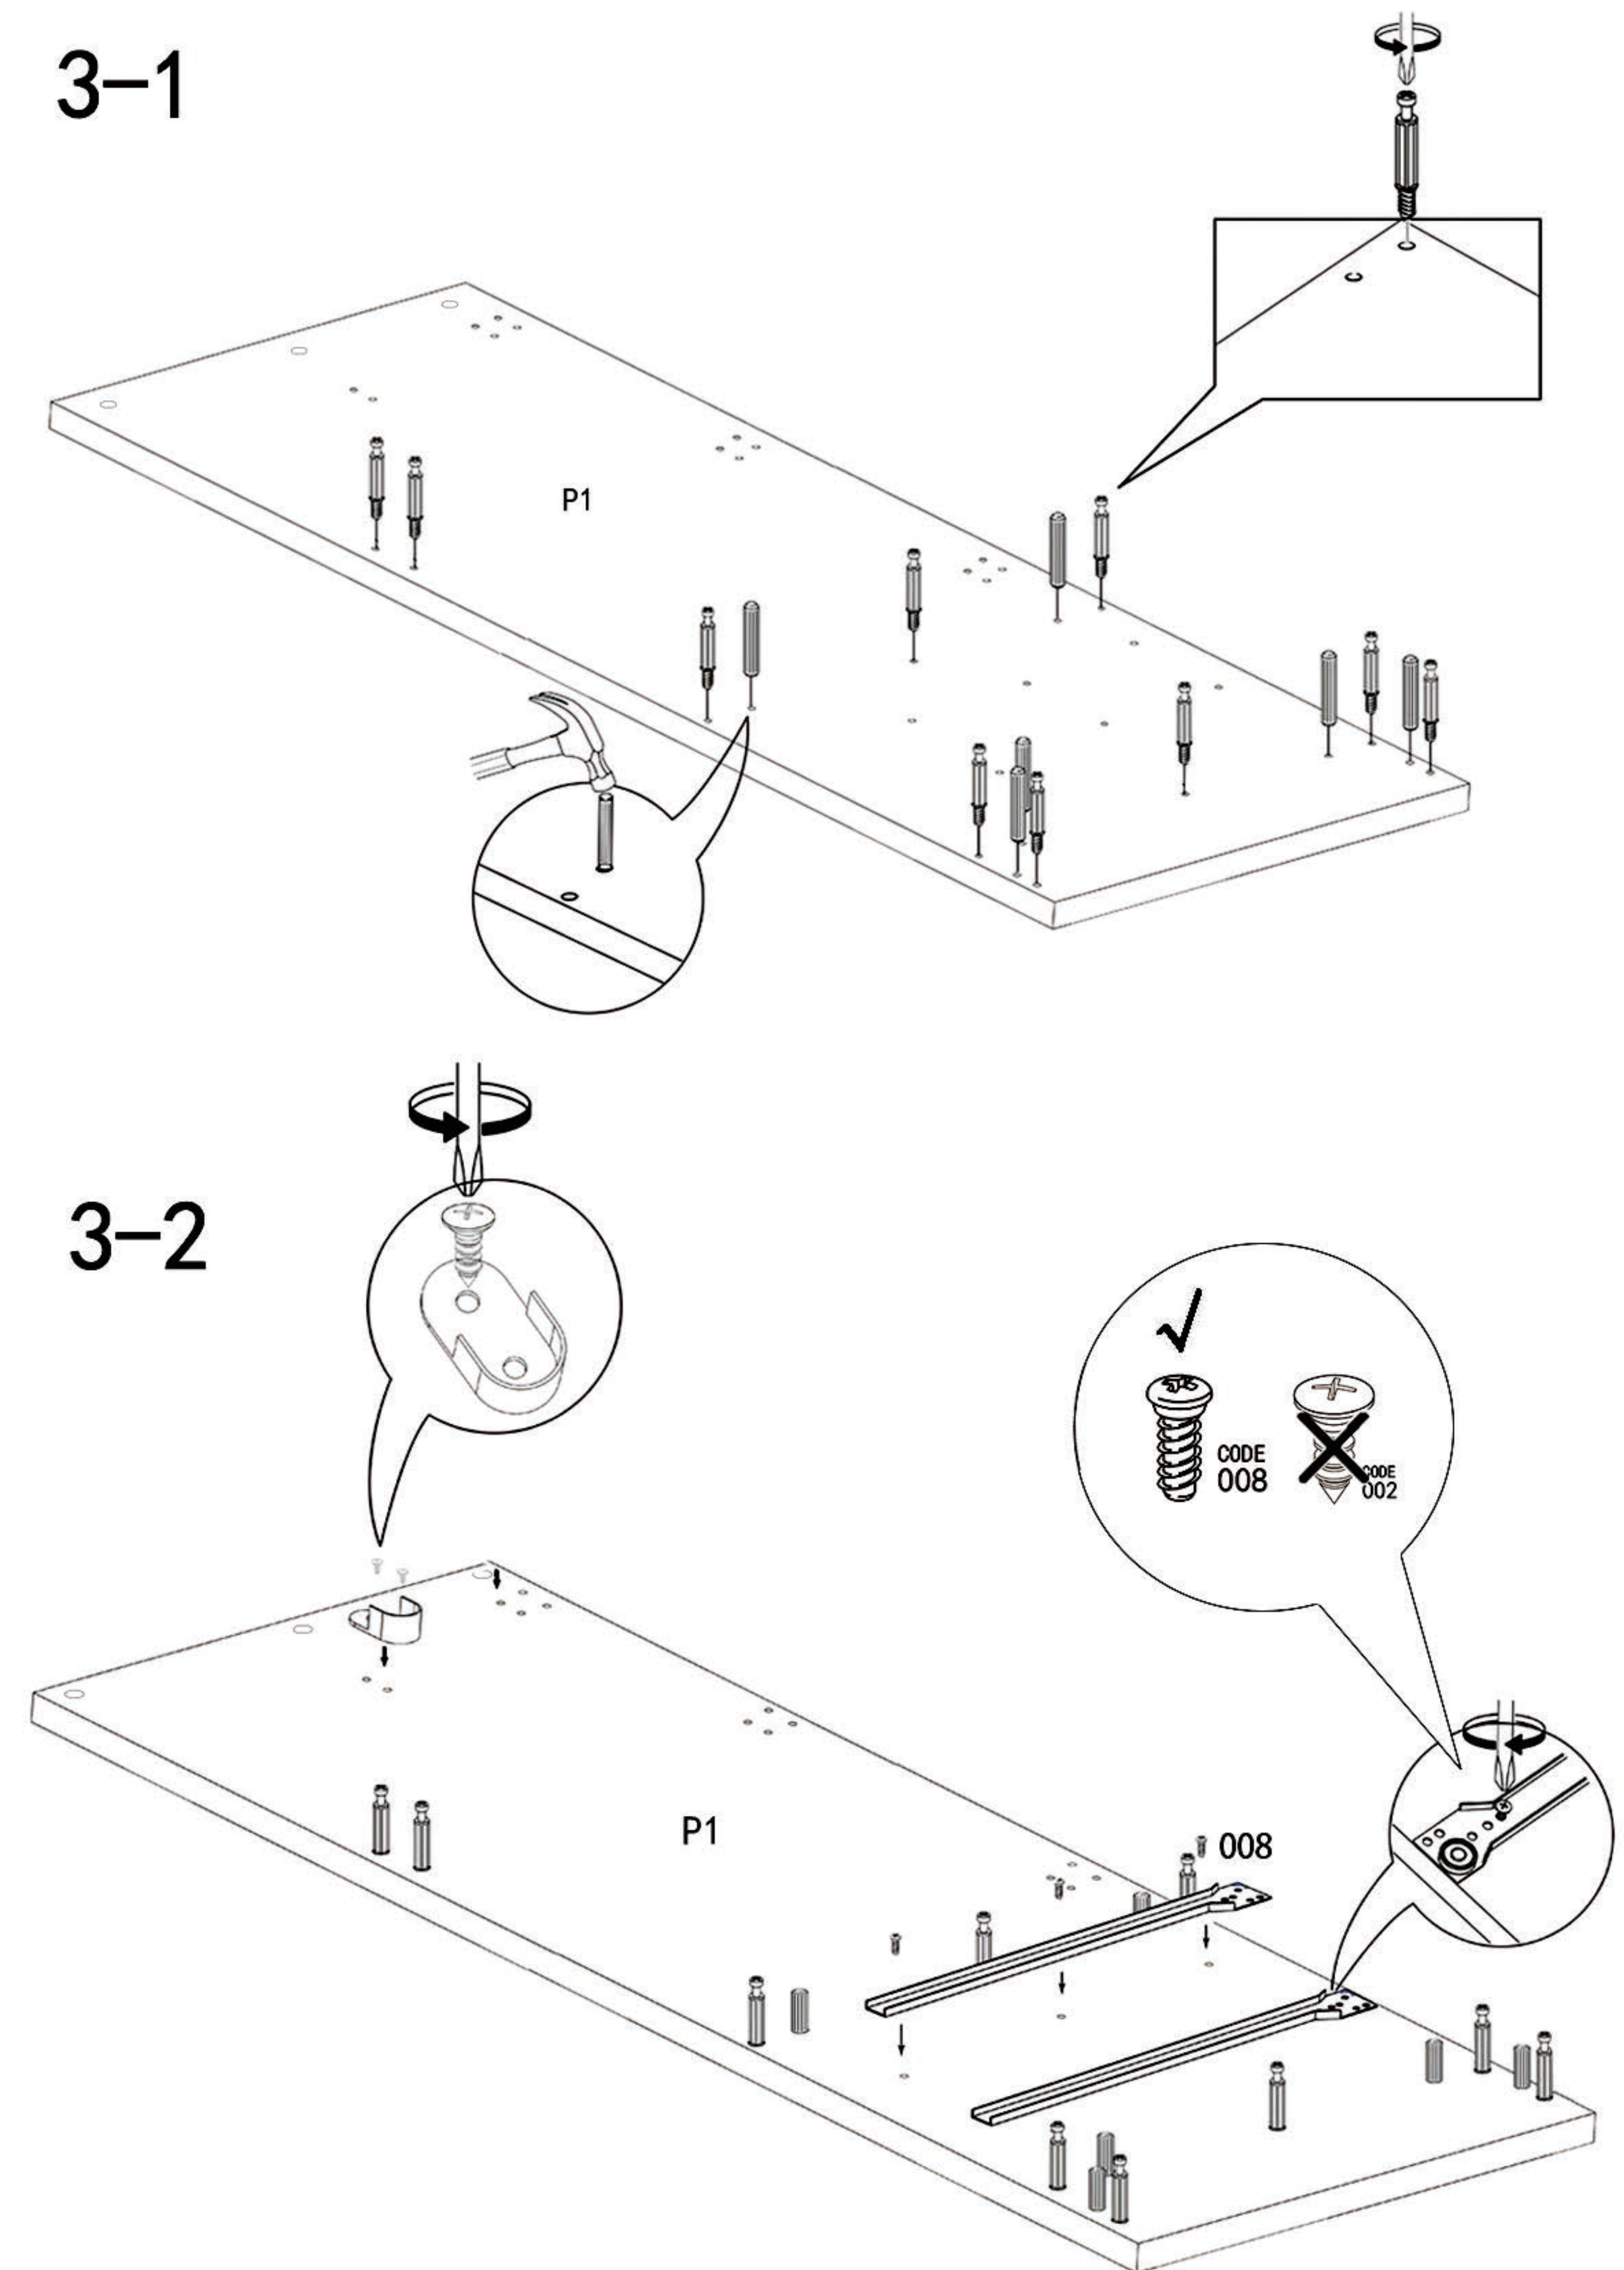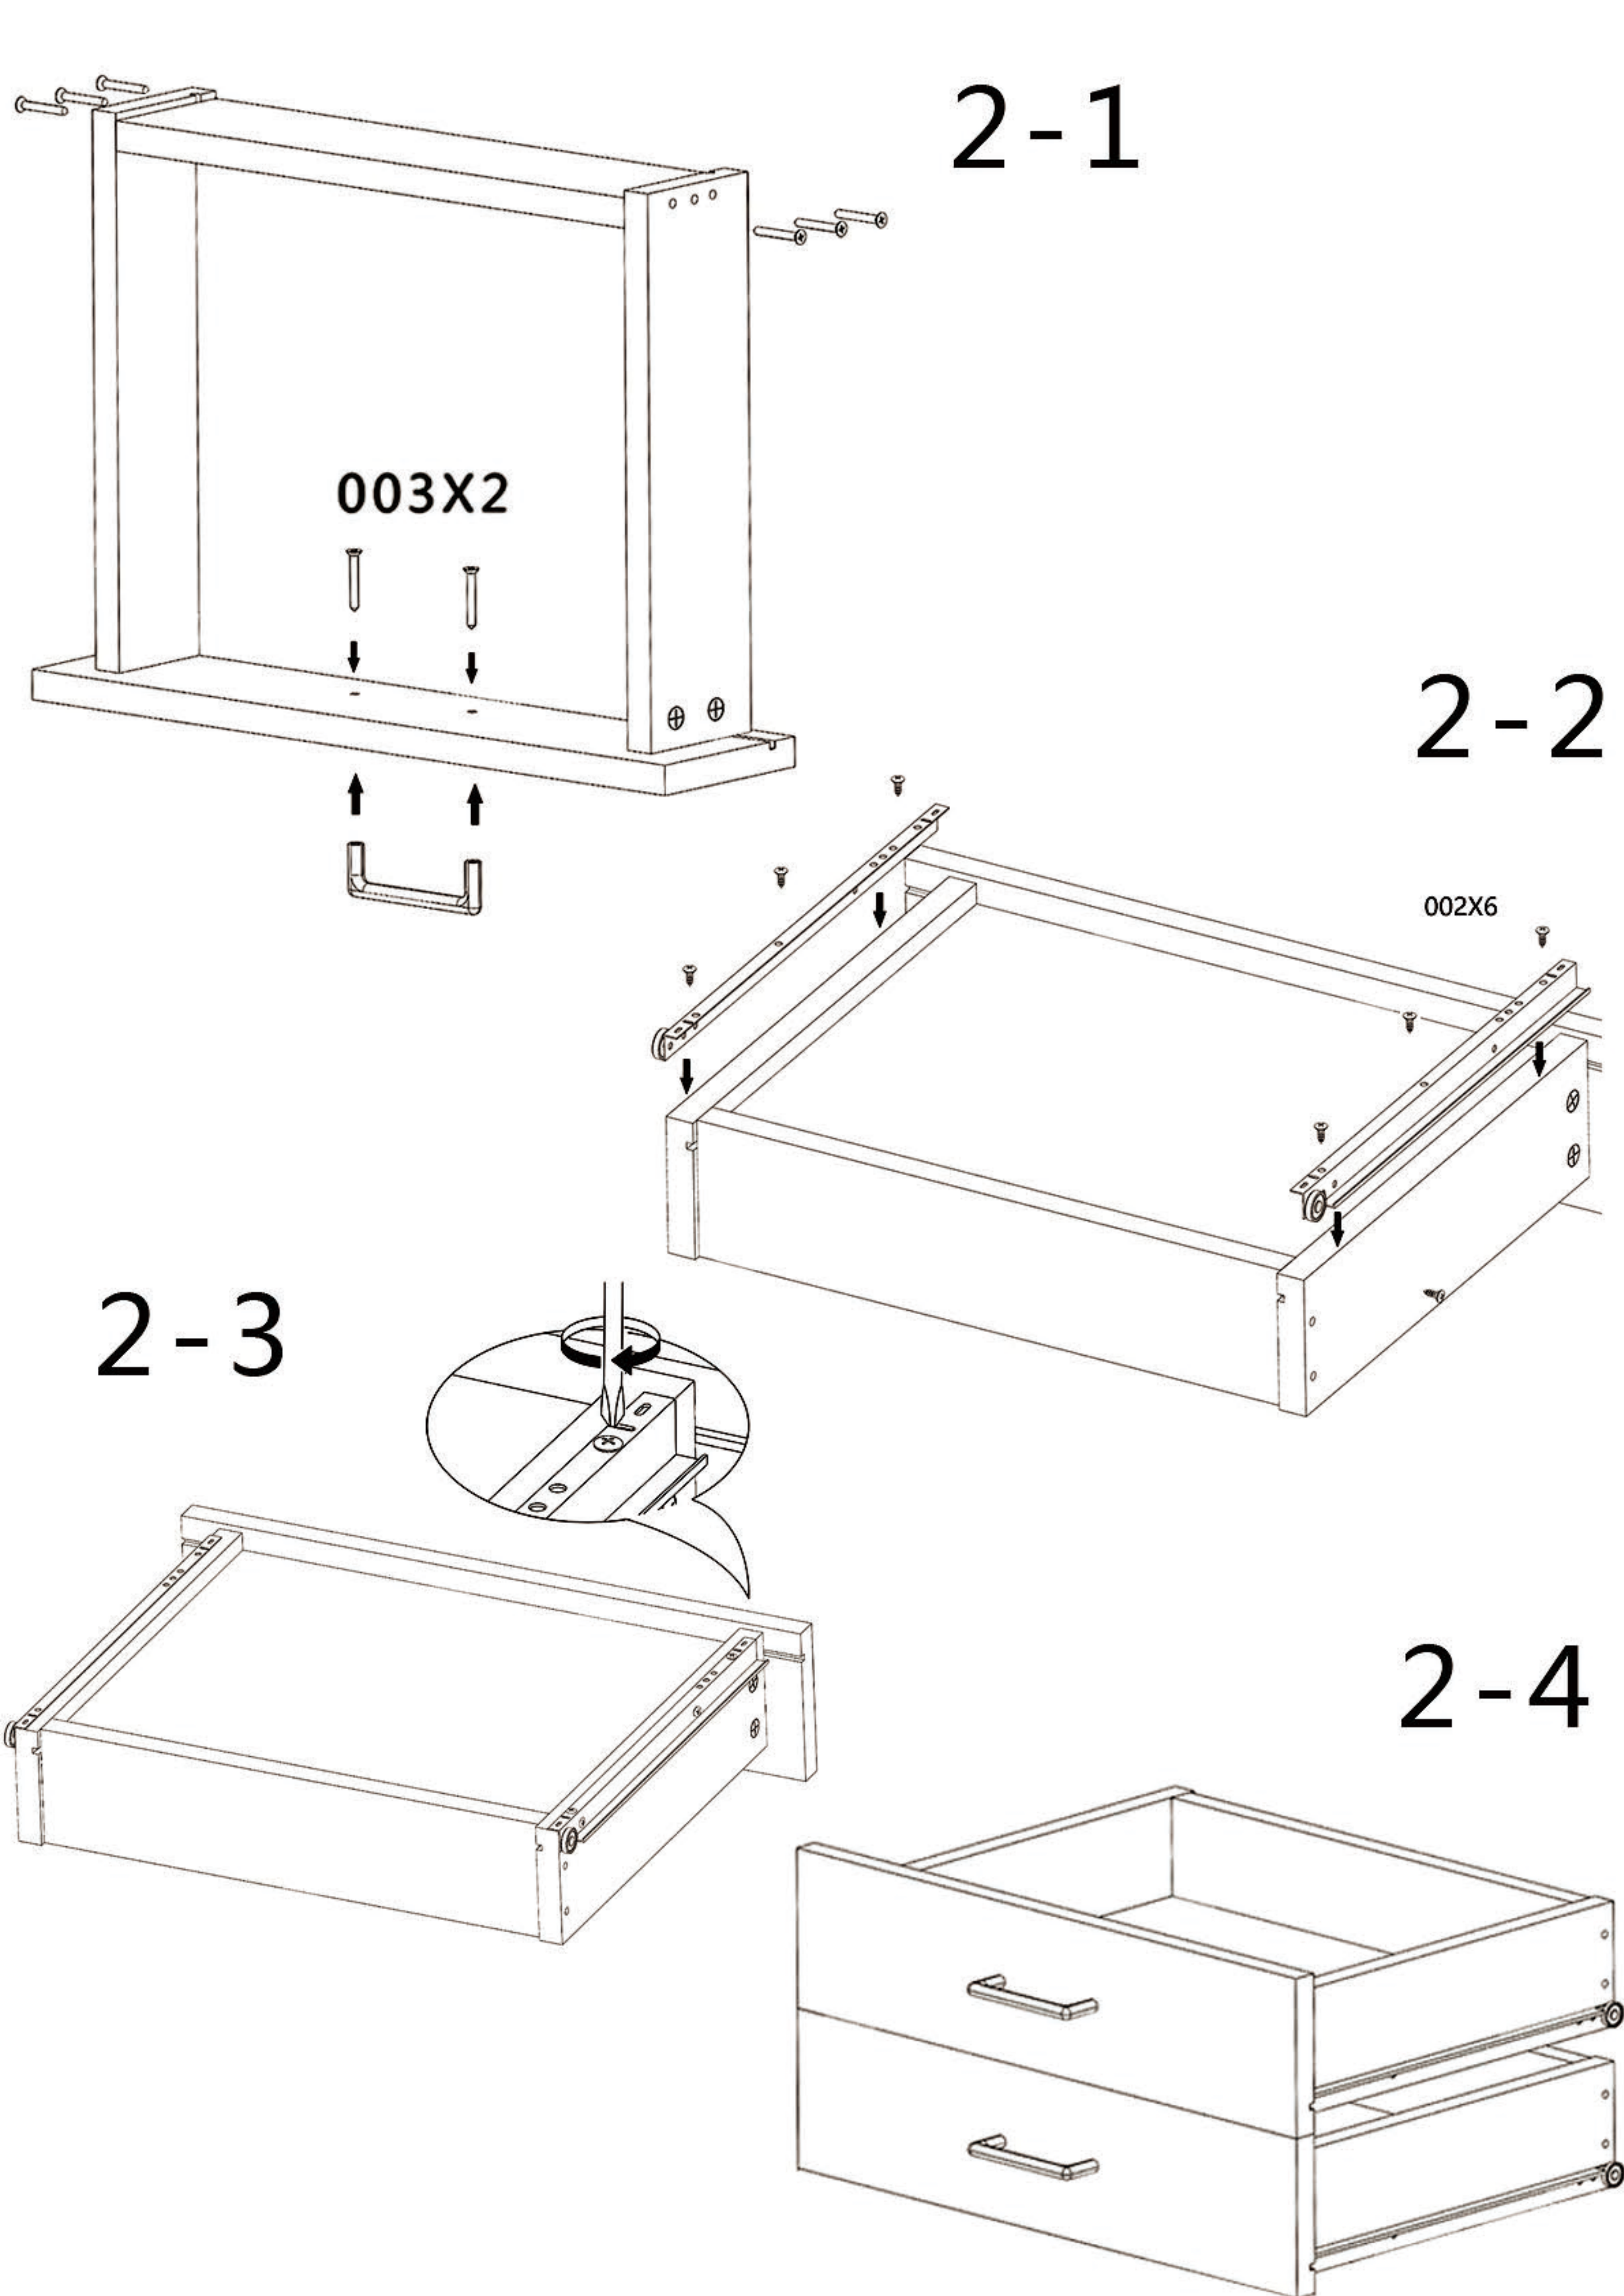


4-1

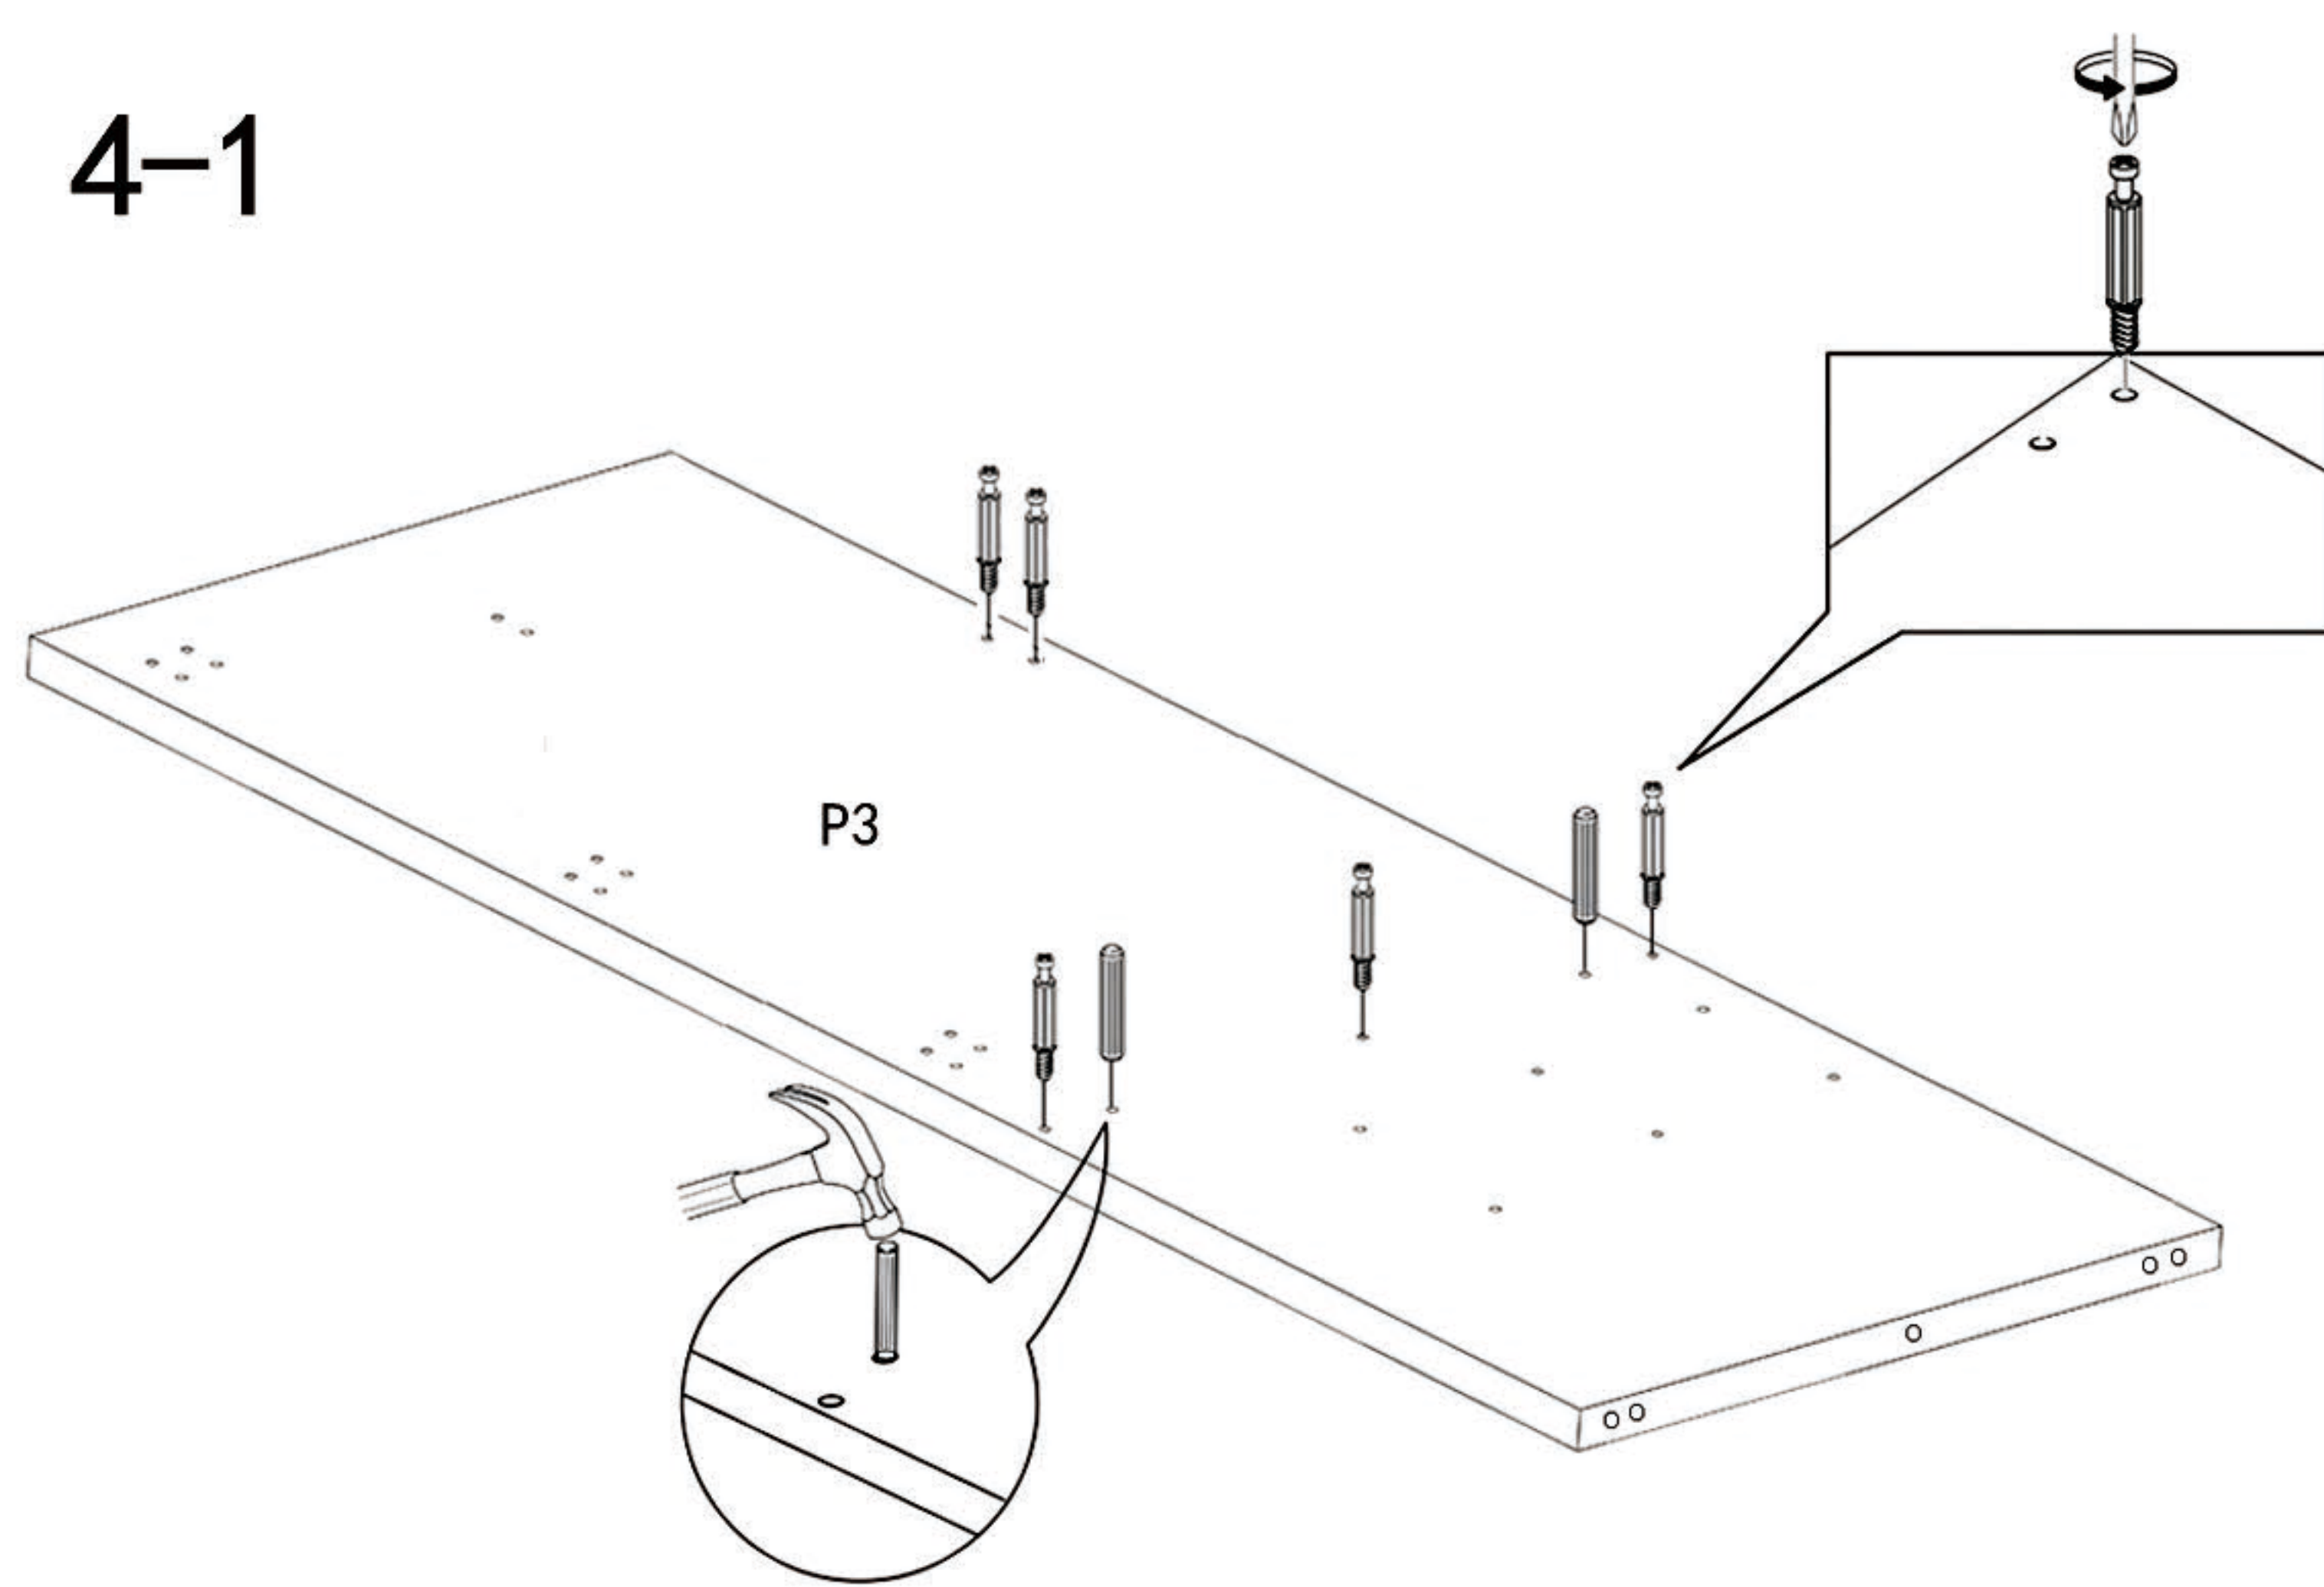


4-2

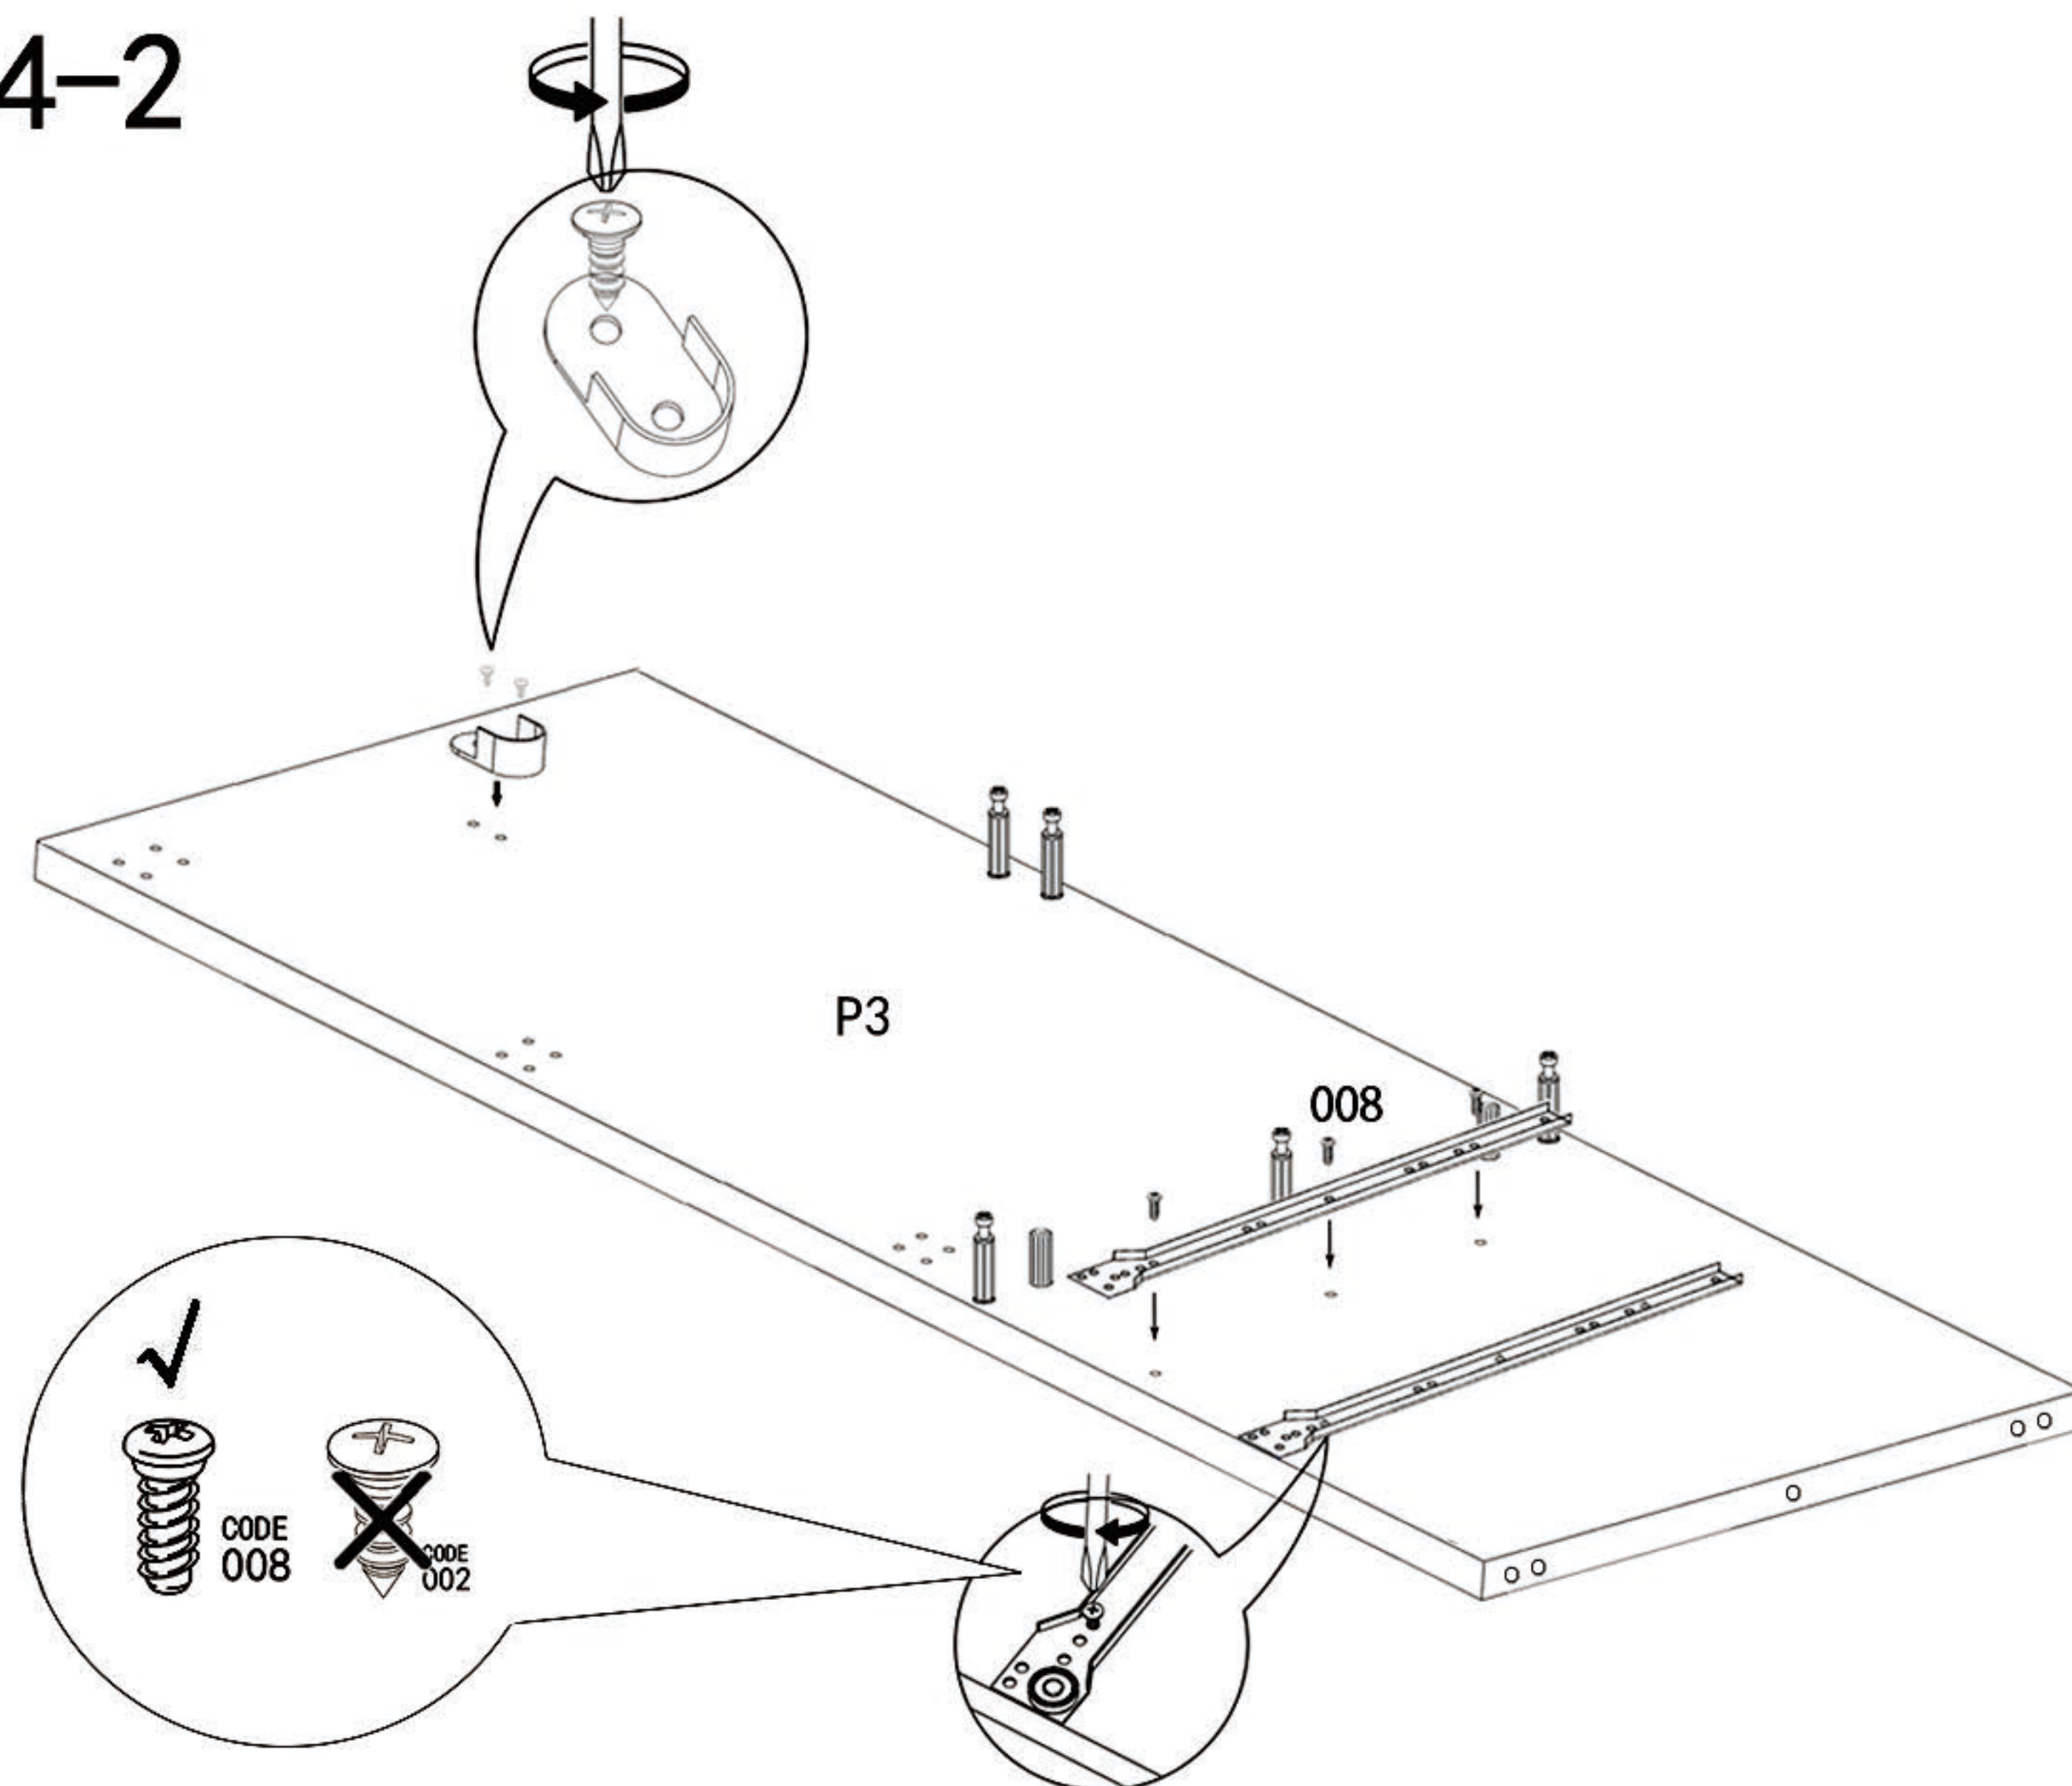


4-3

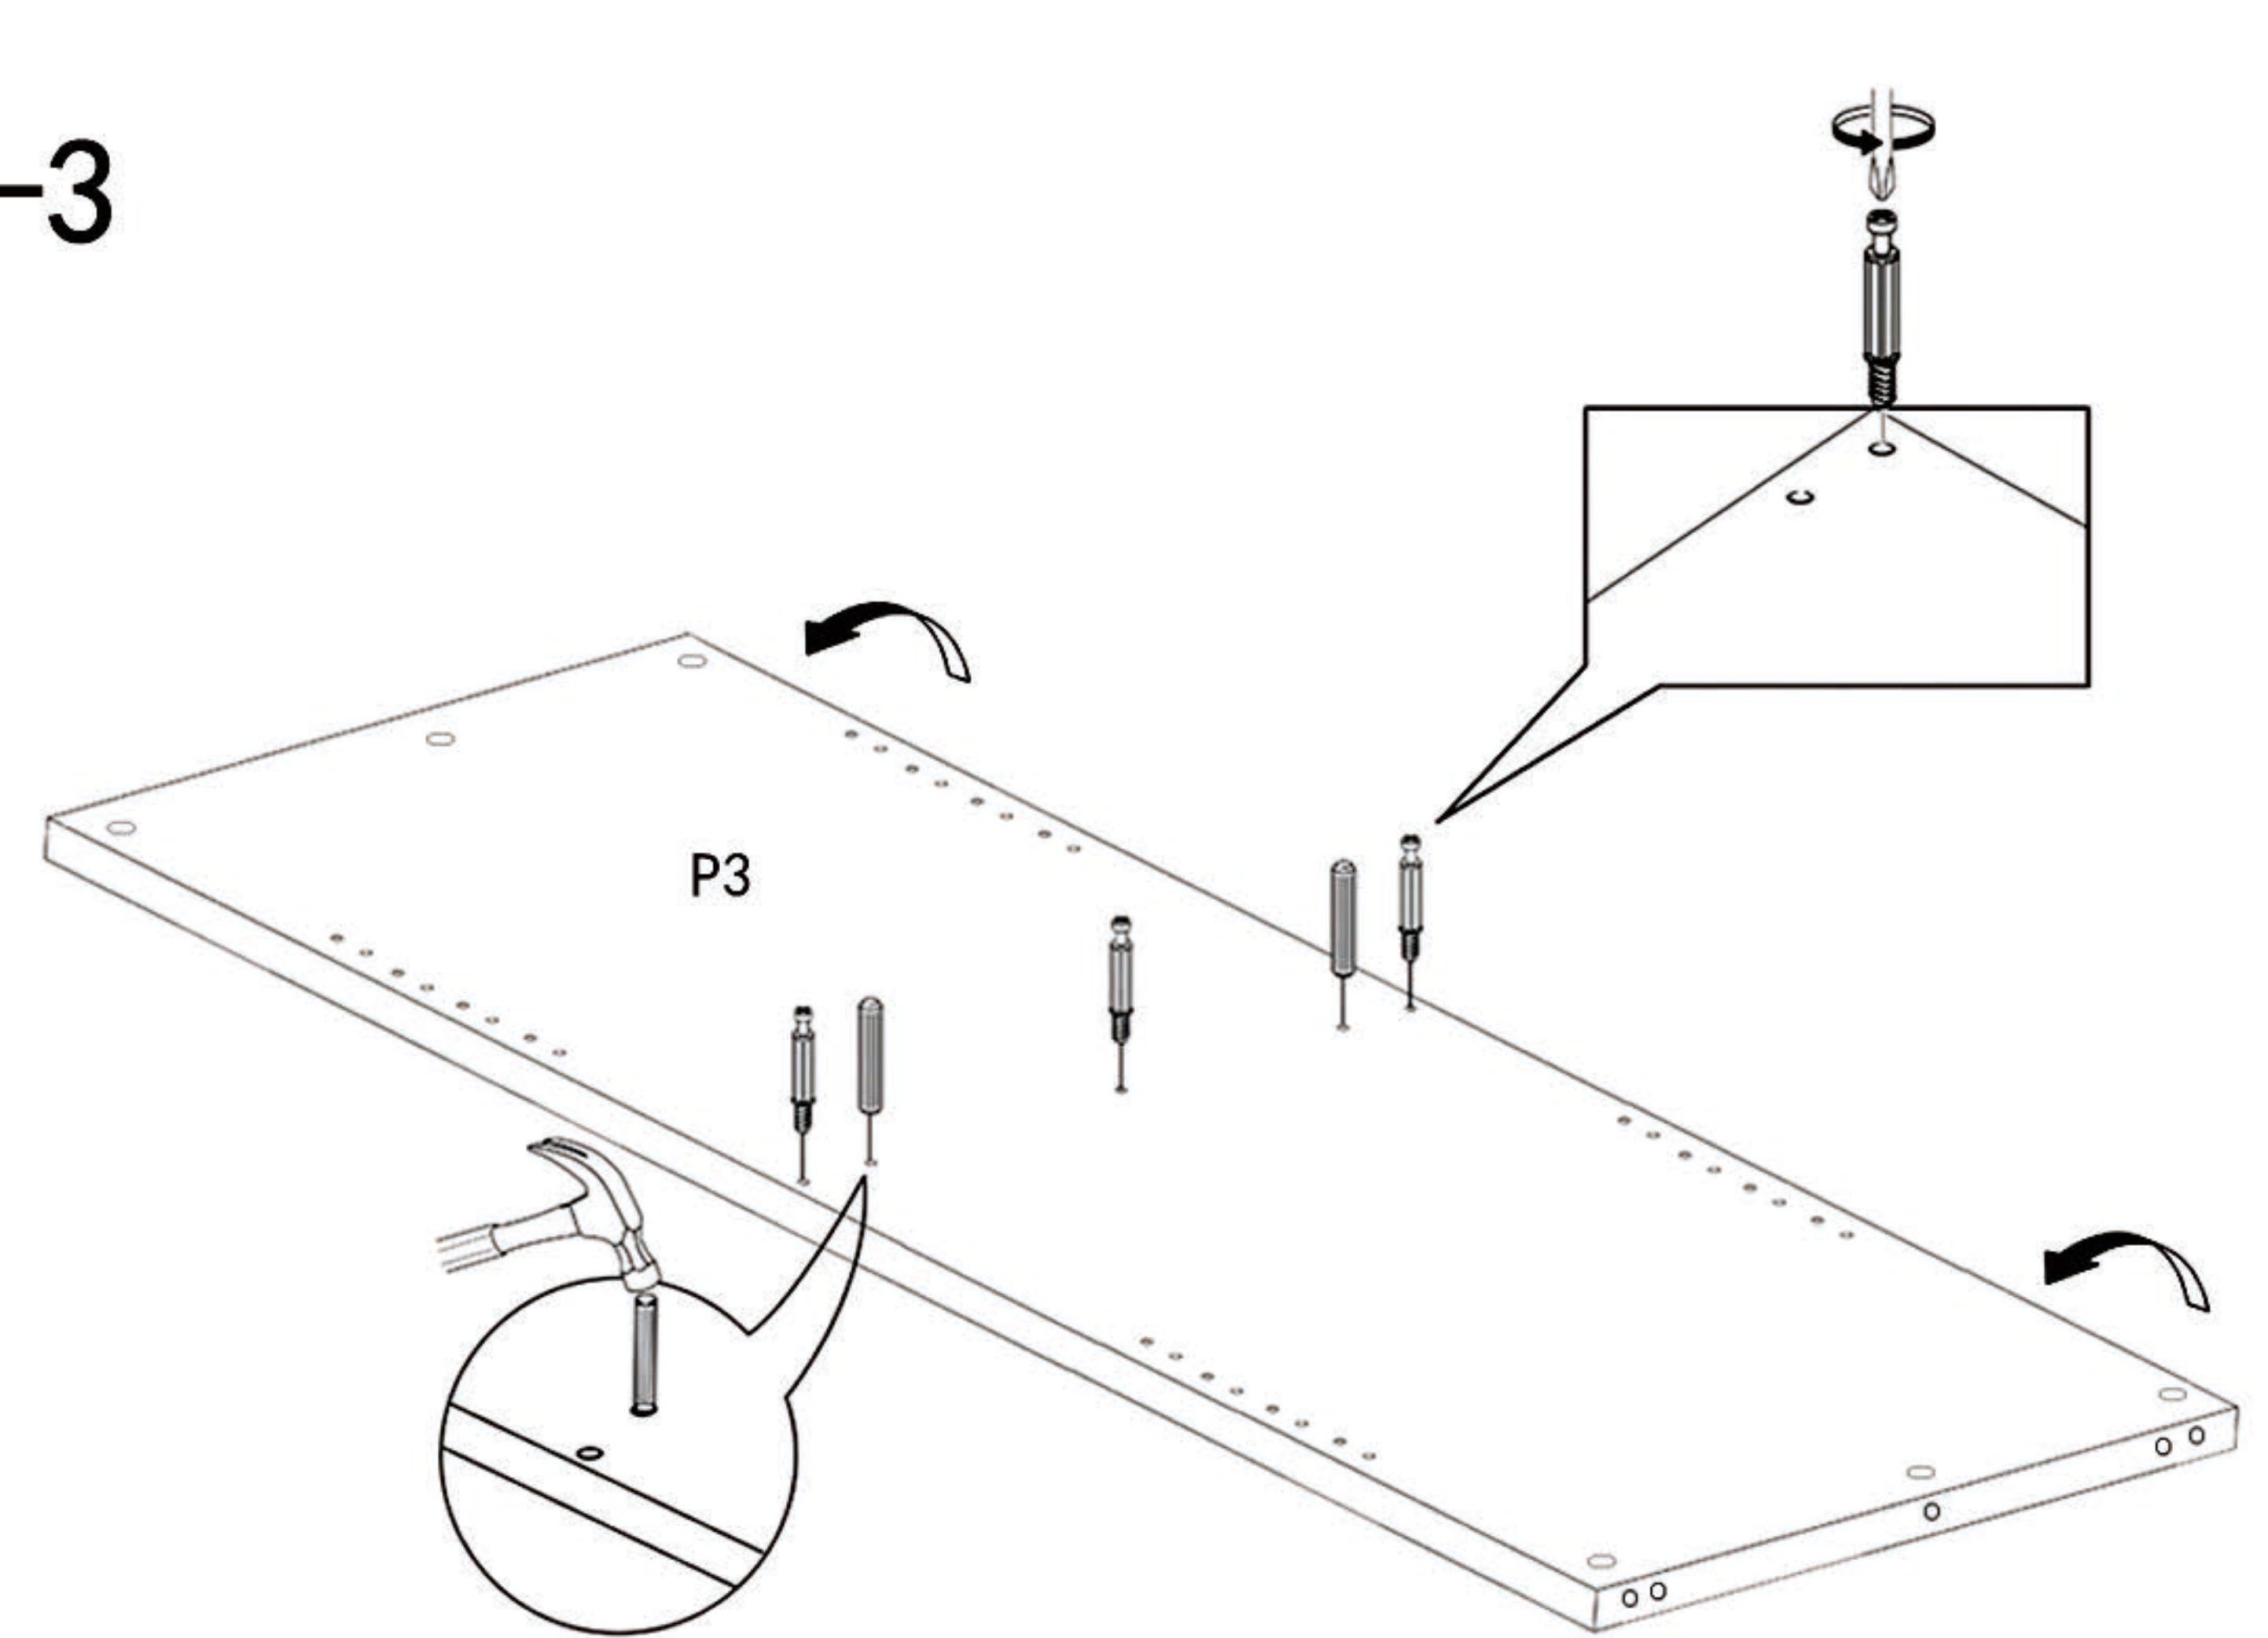


5

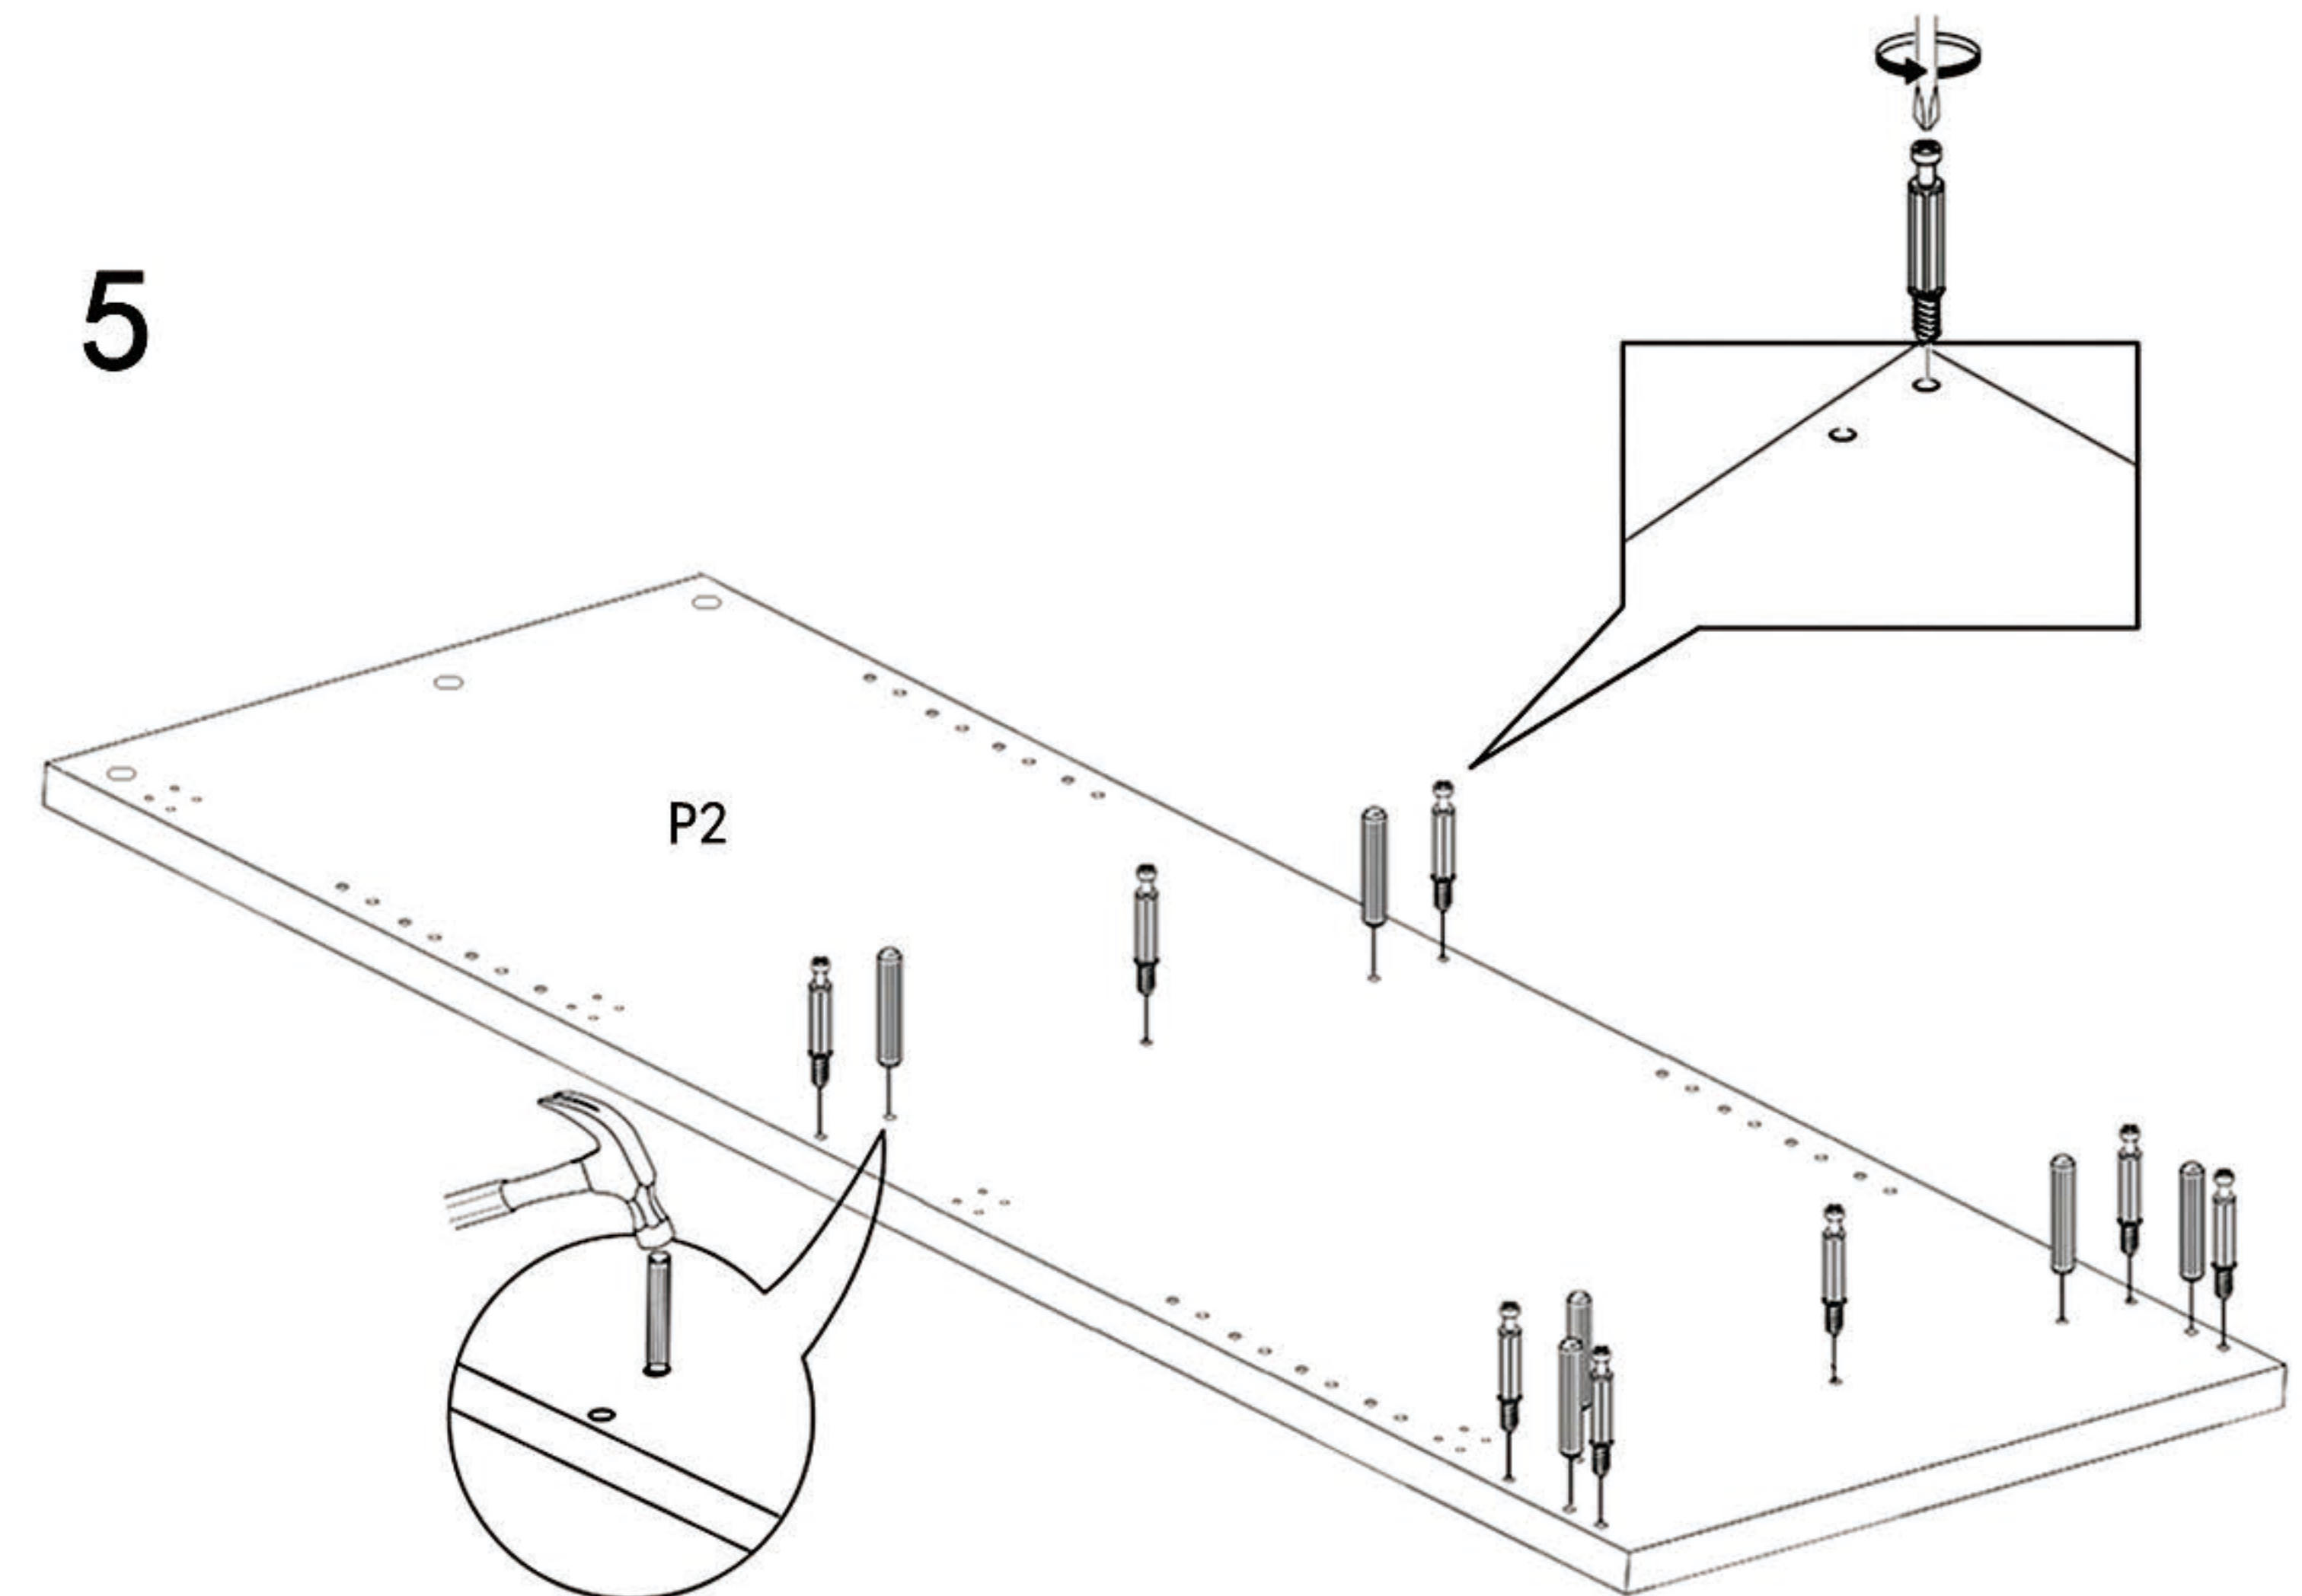


6

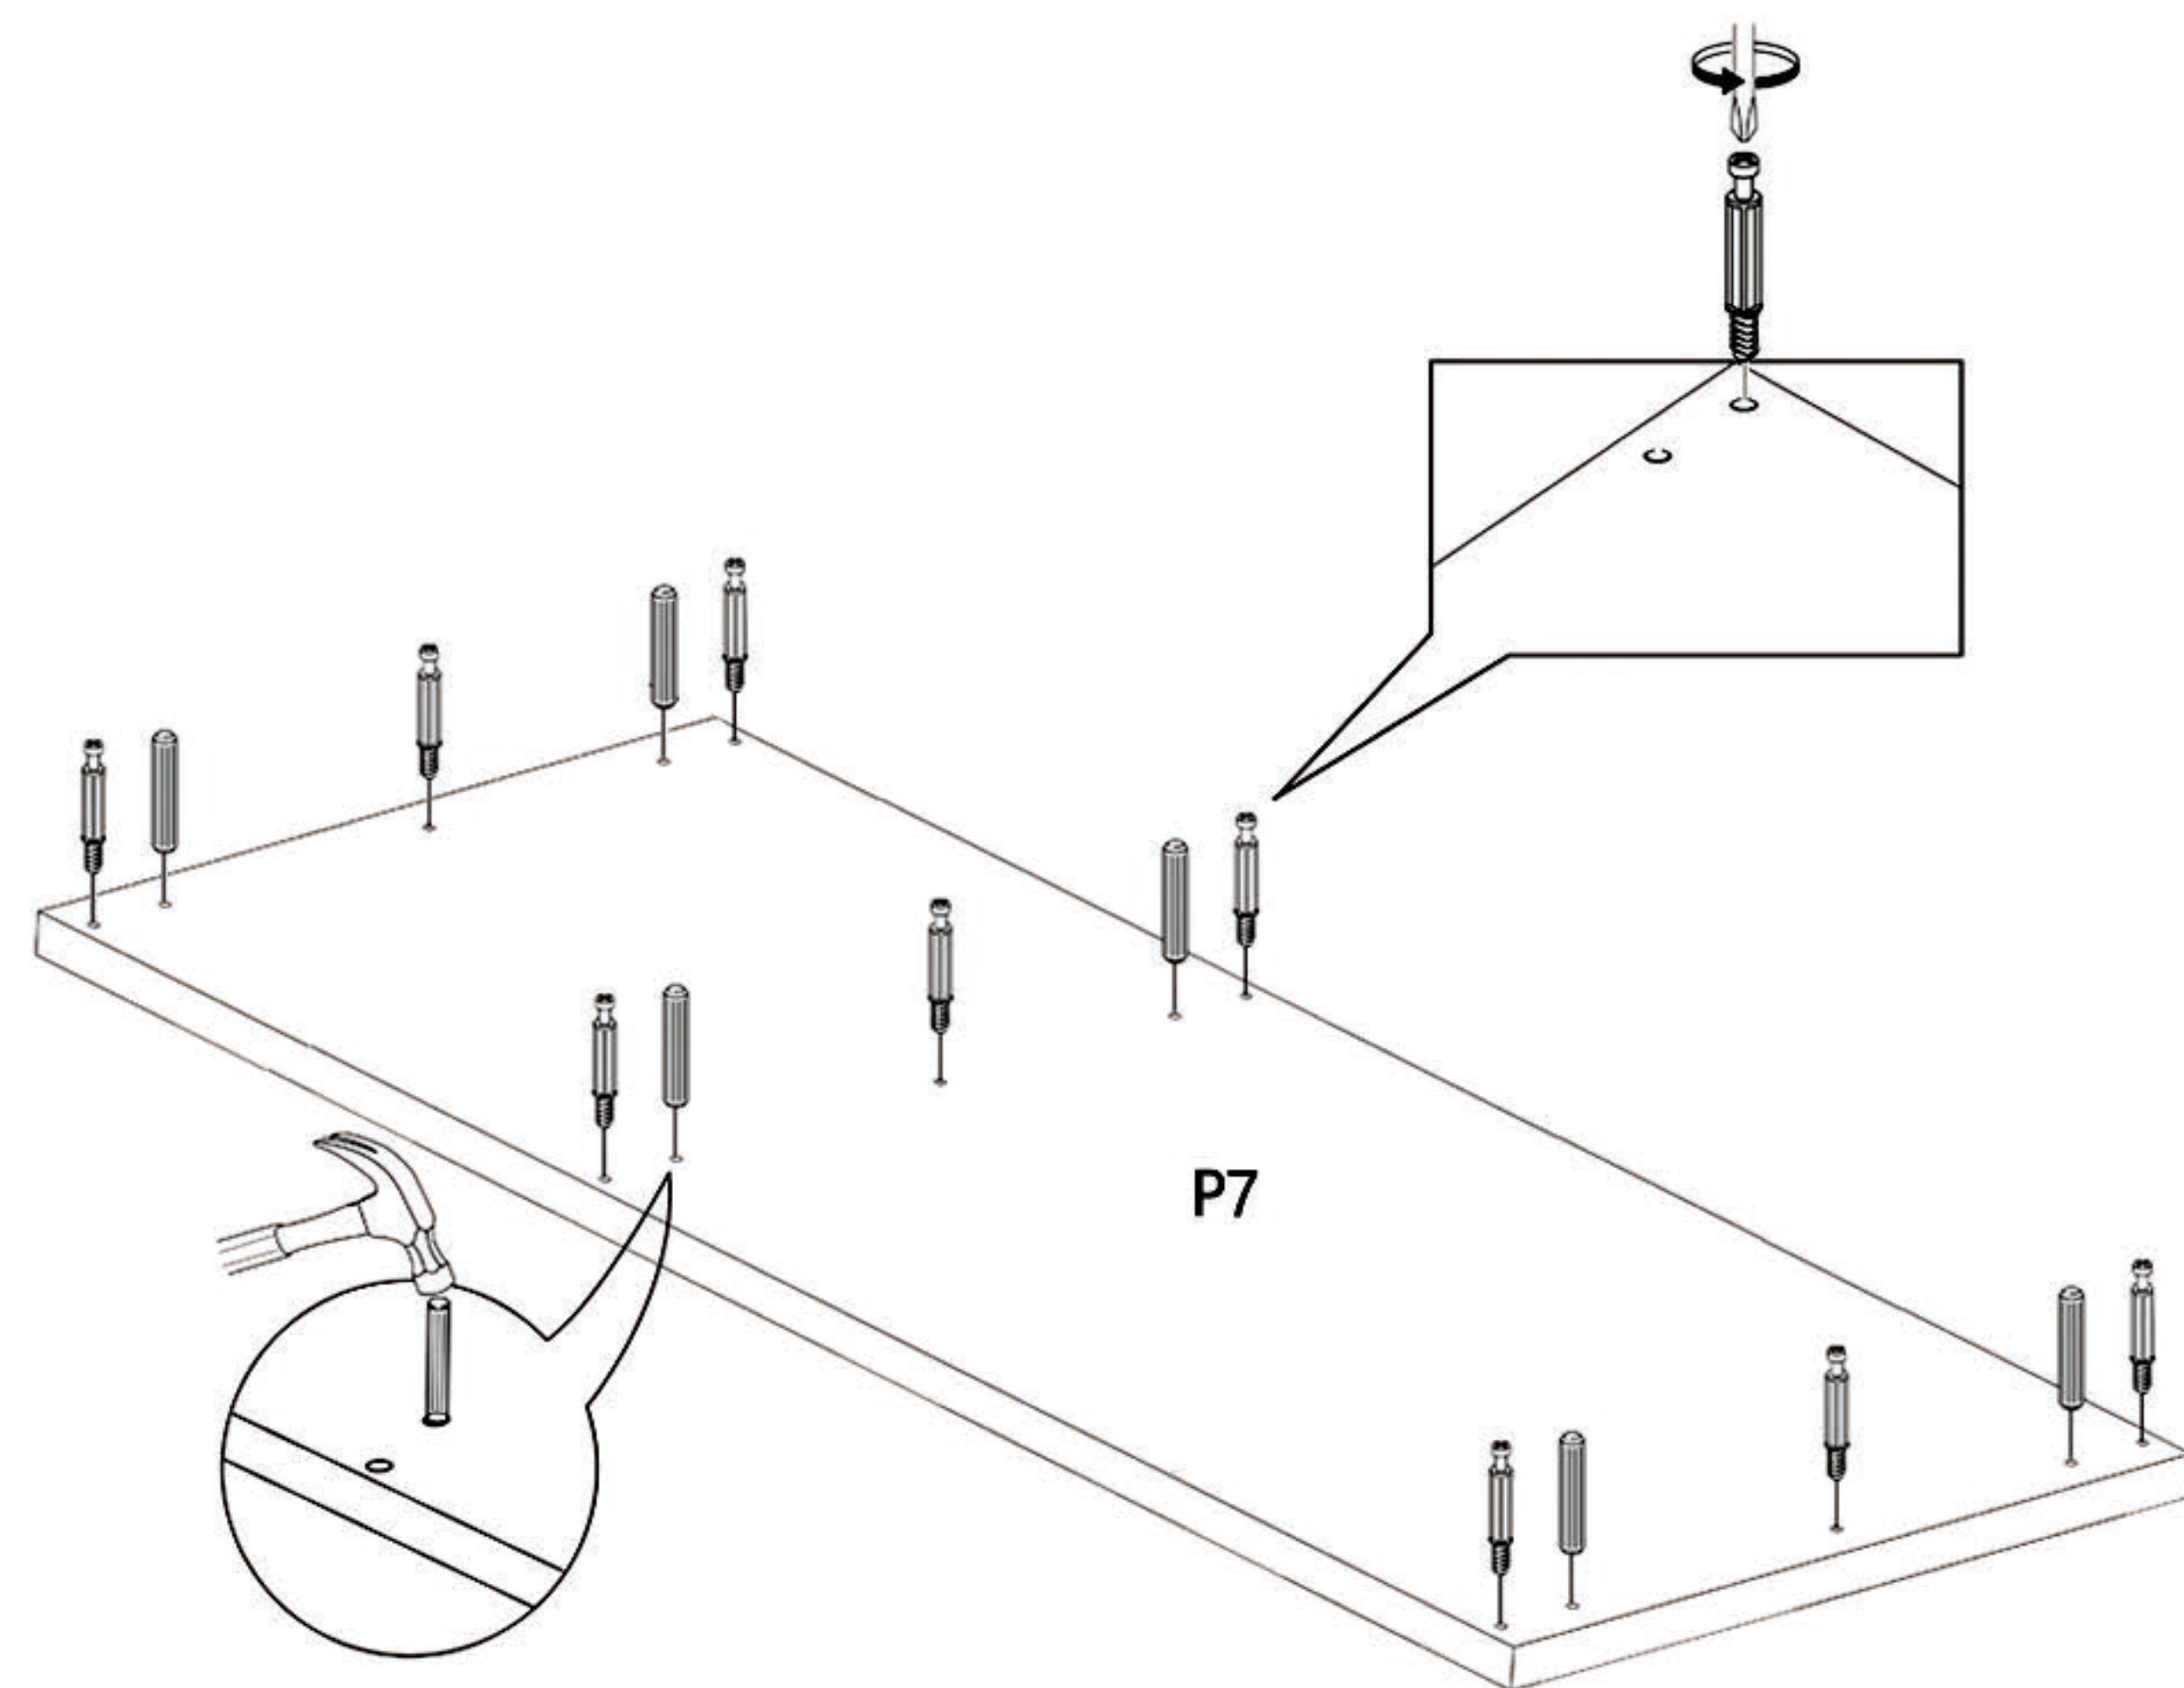


7-1

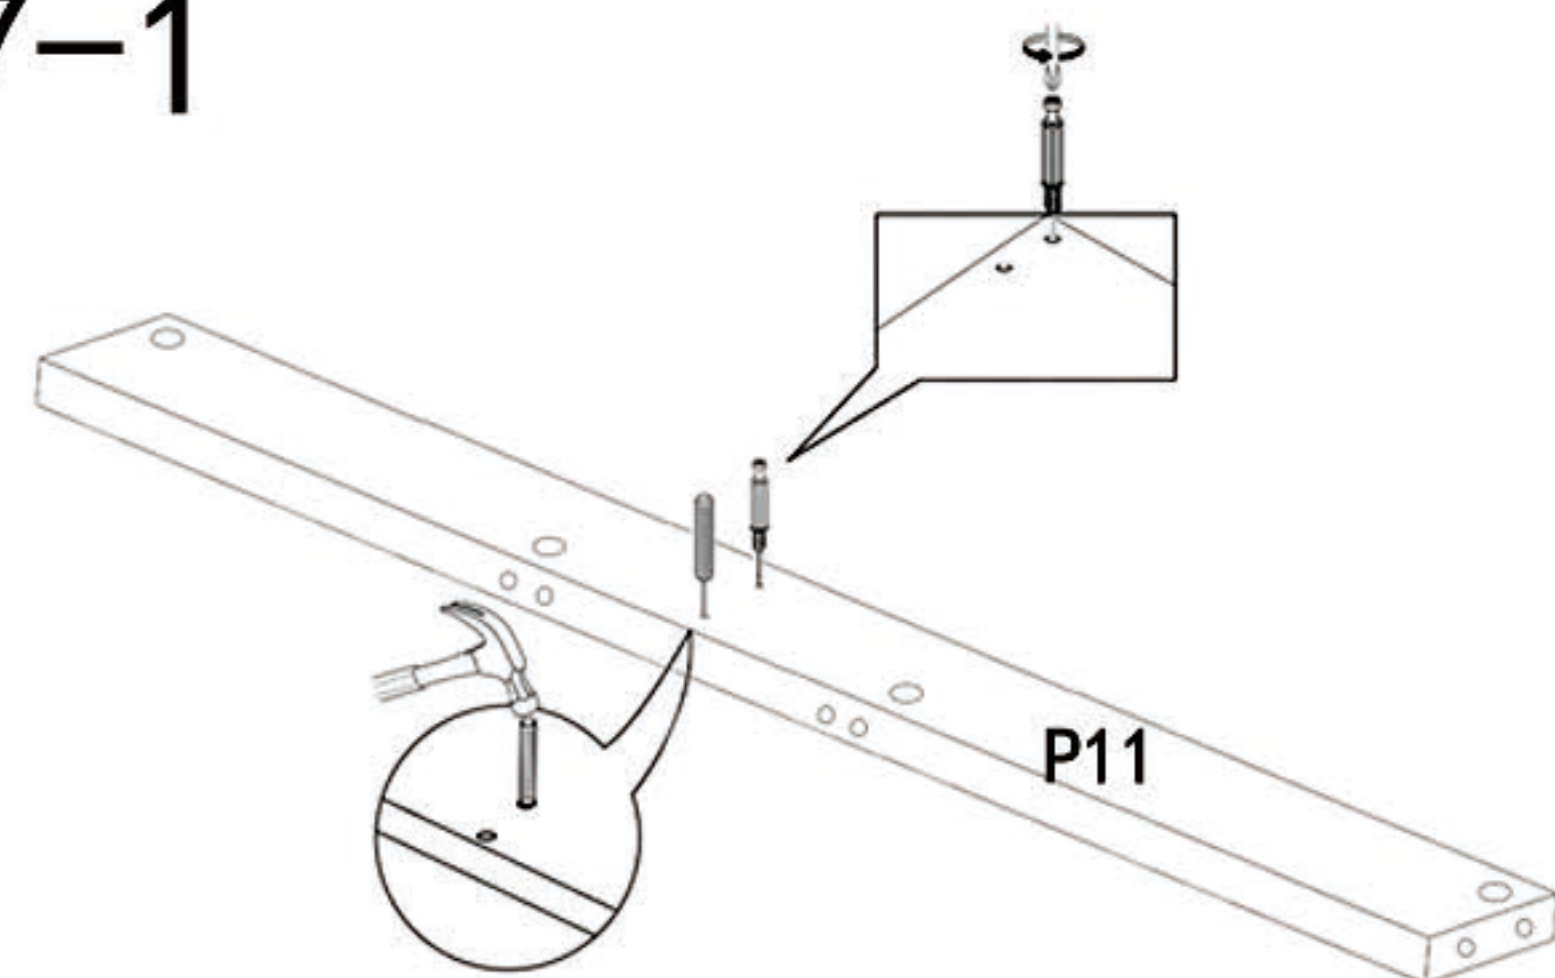


7-2

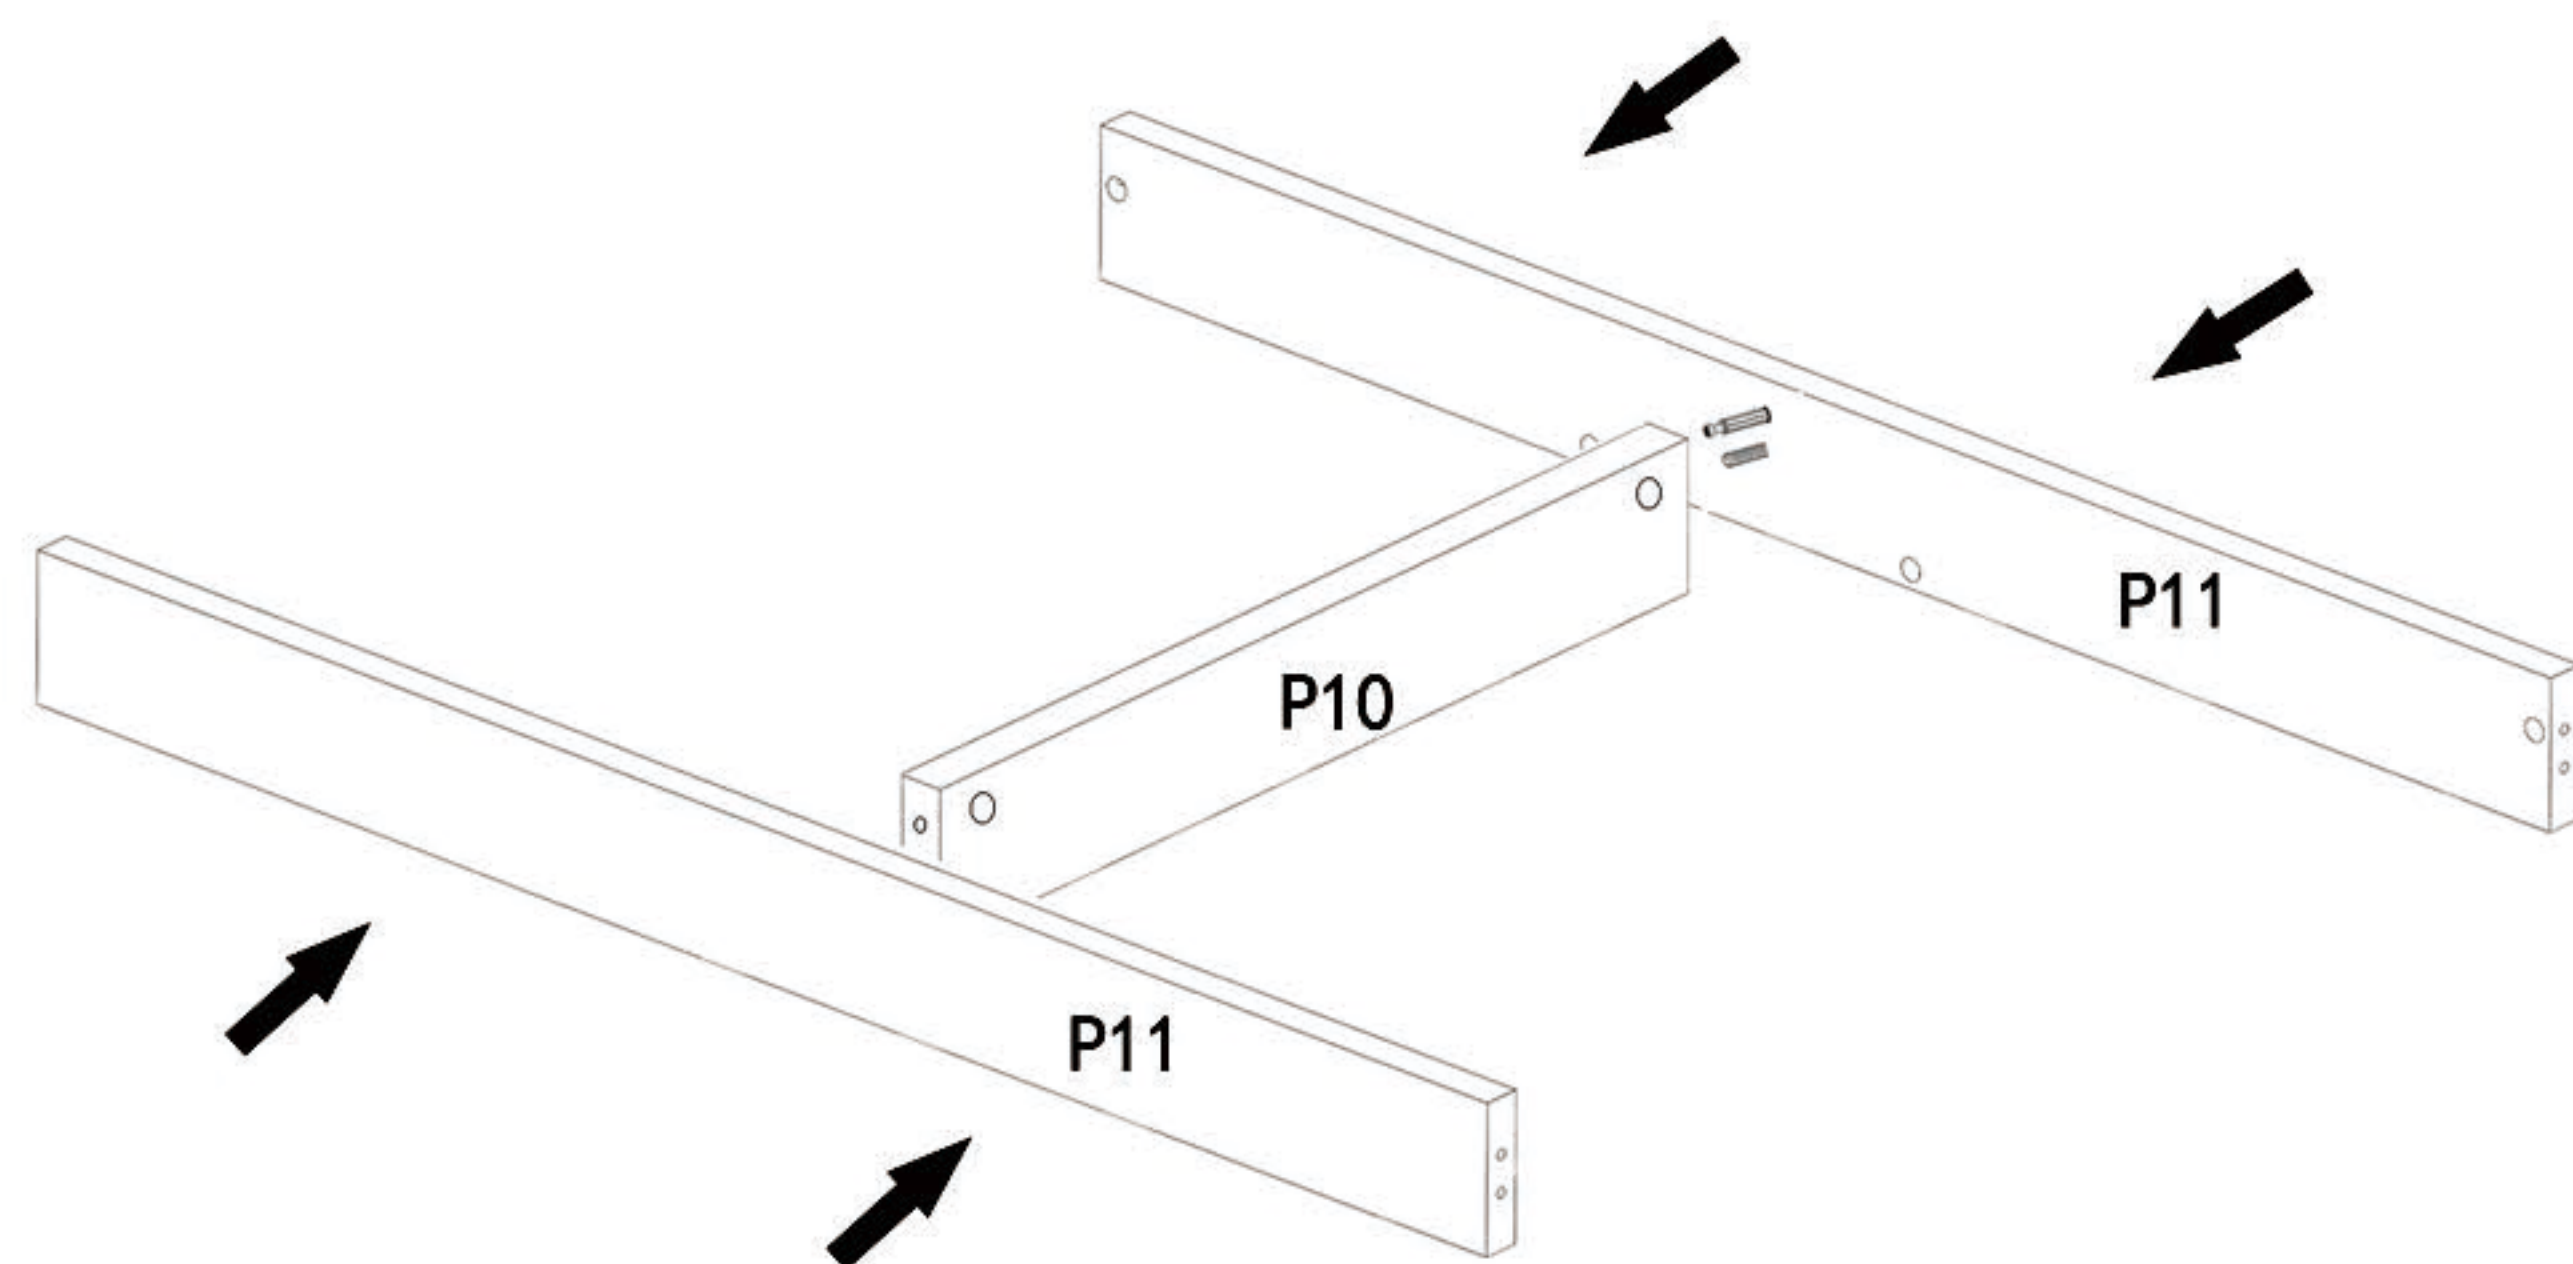


7-3

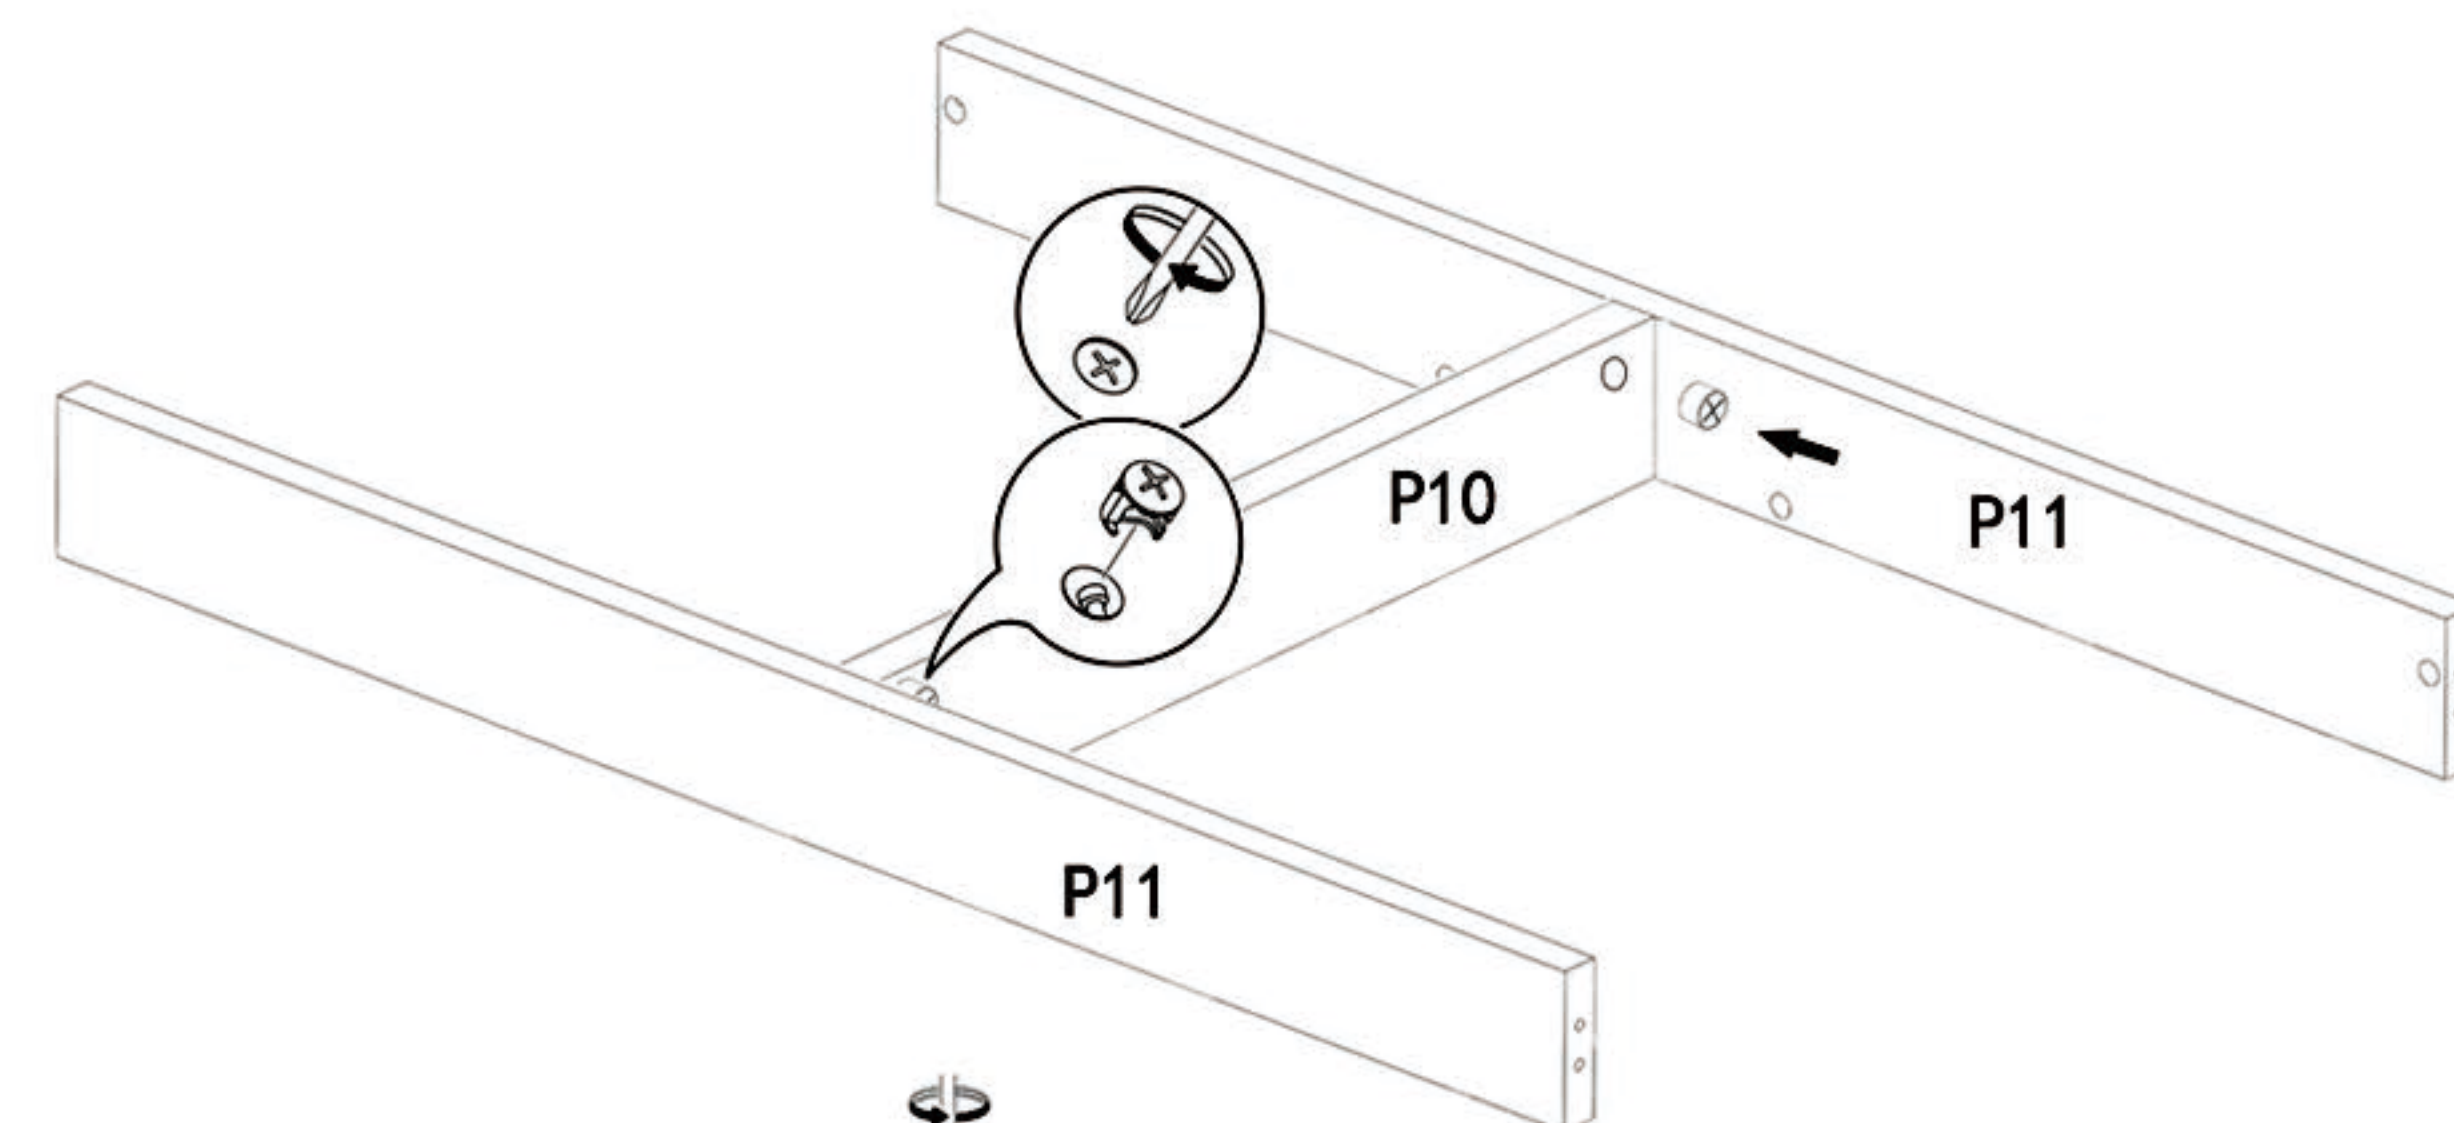


7-4

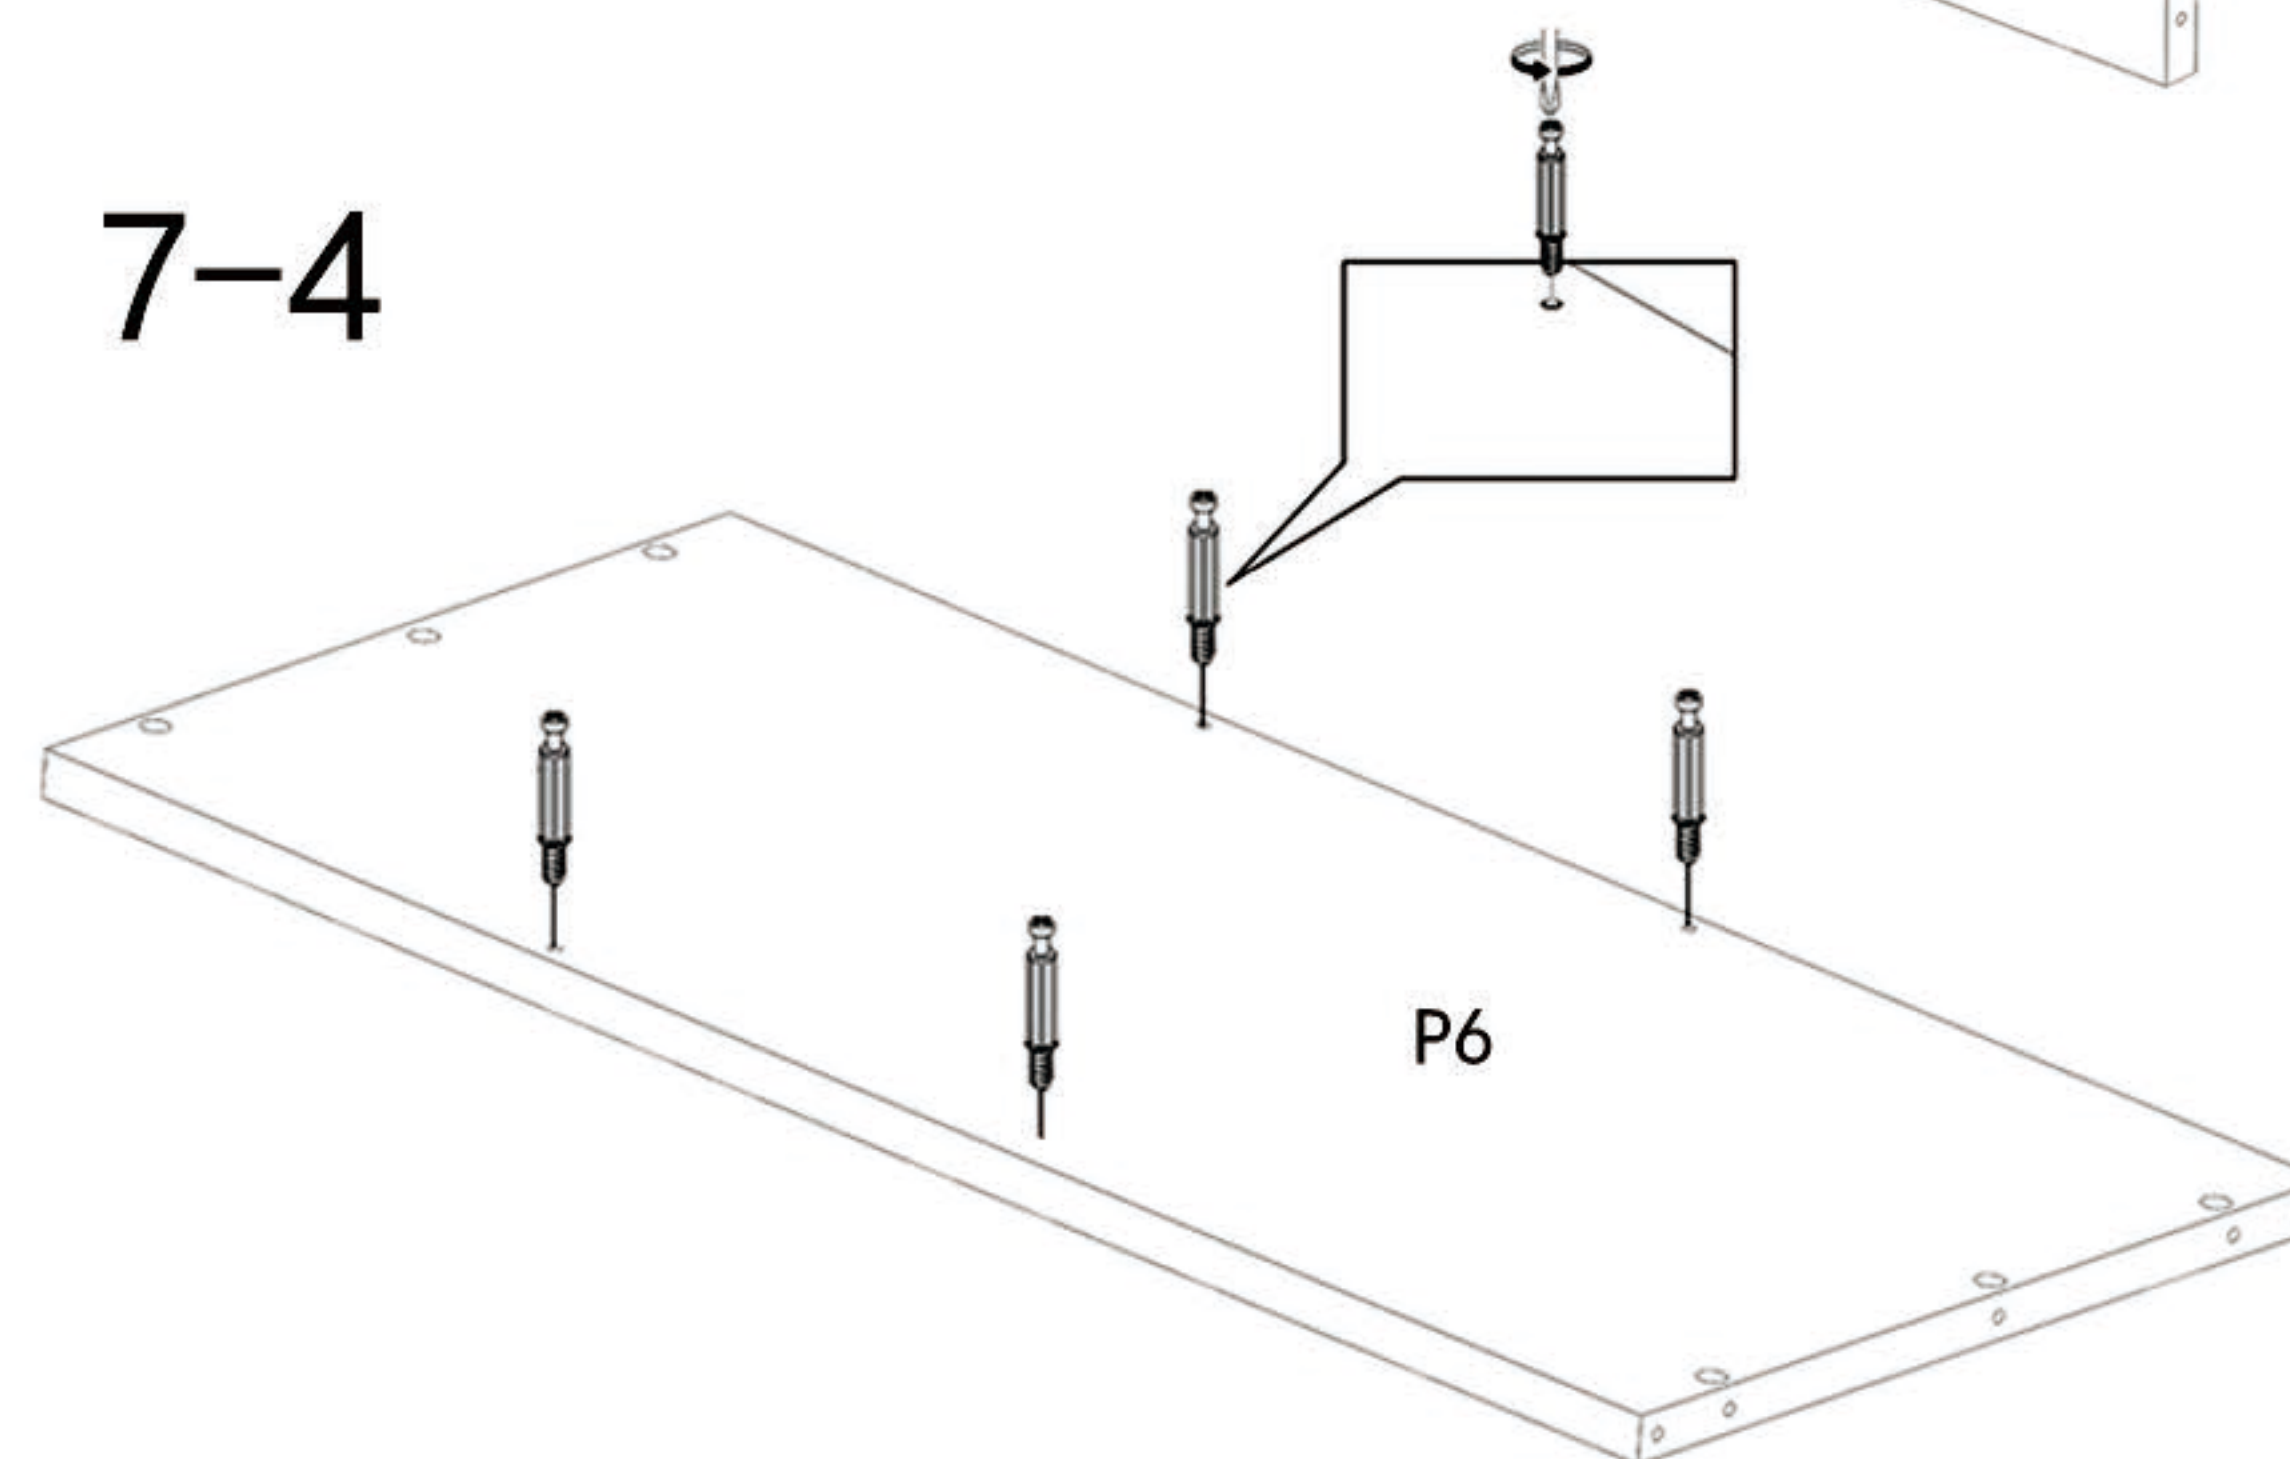


7-5

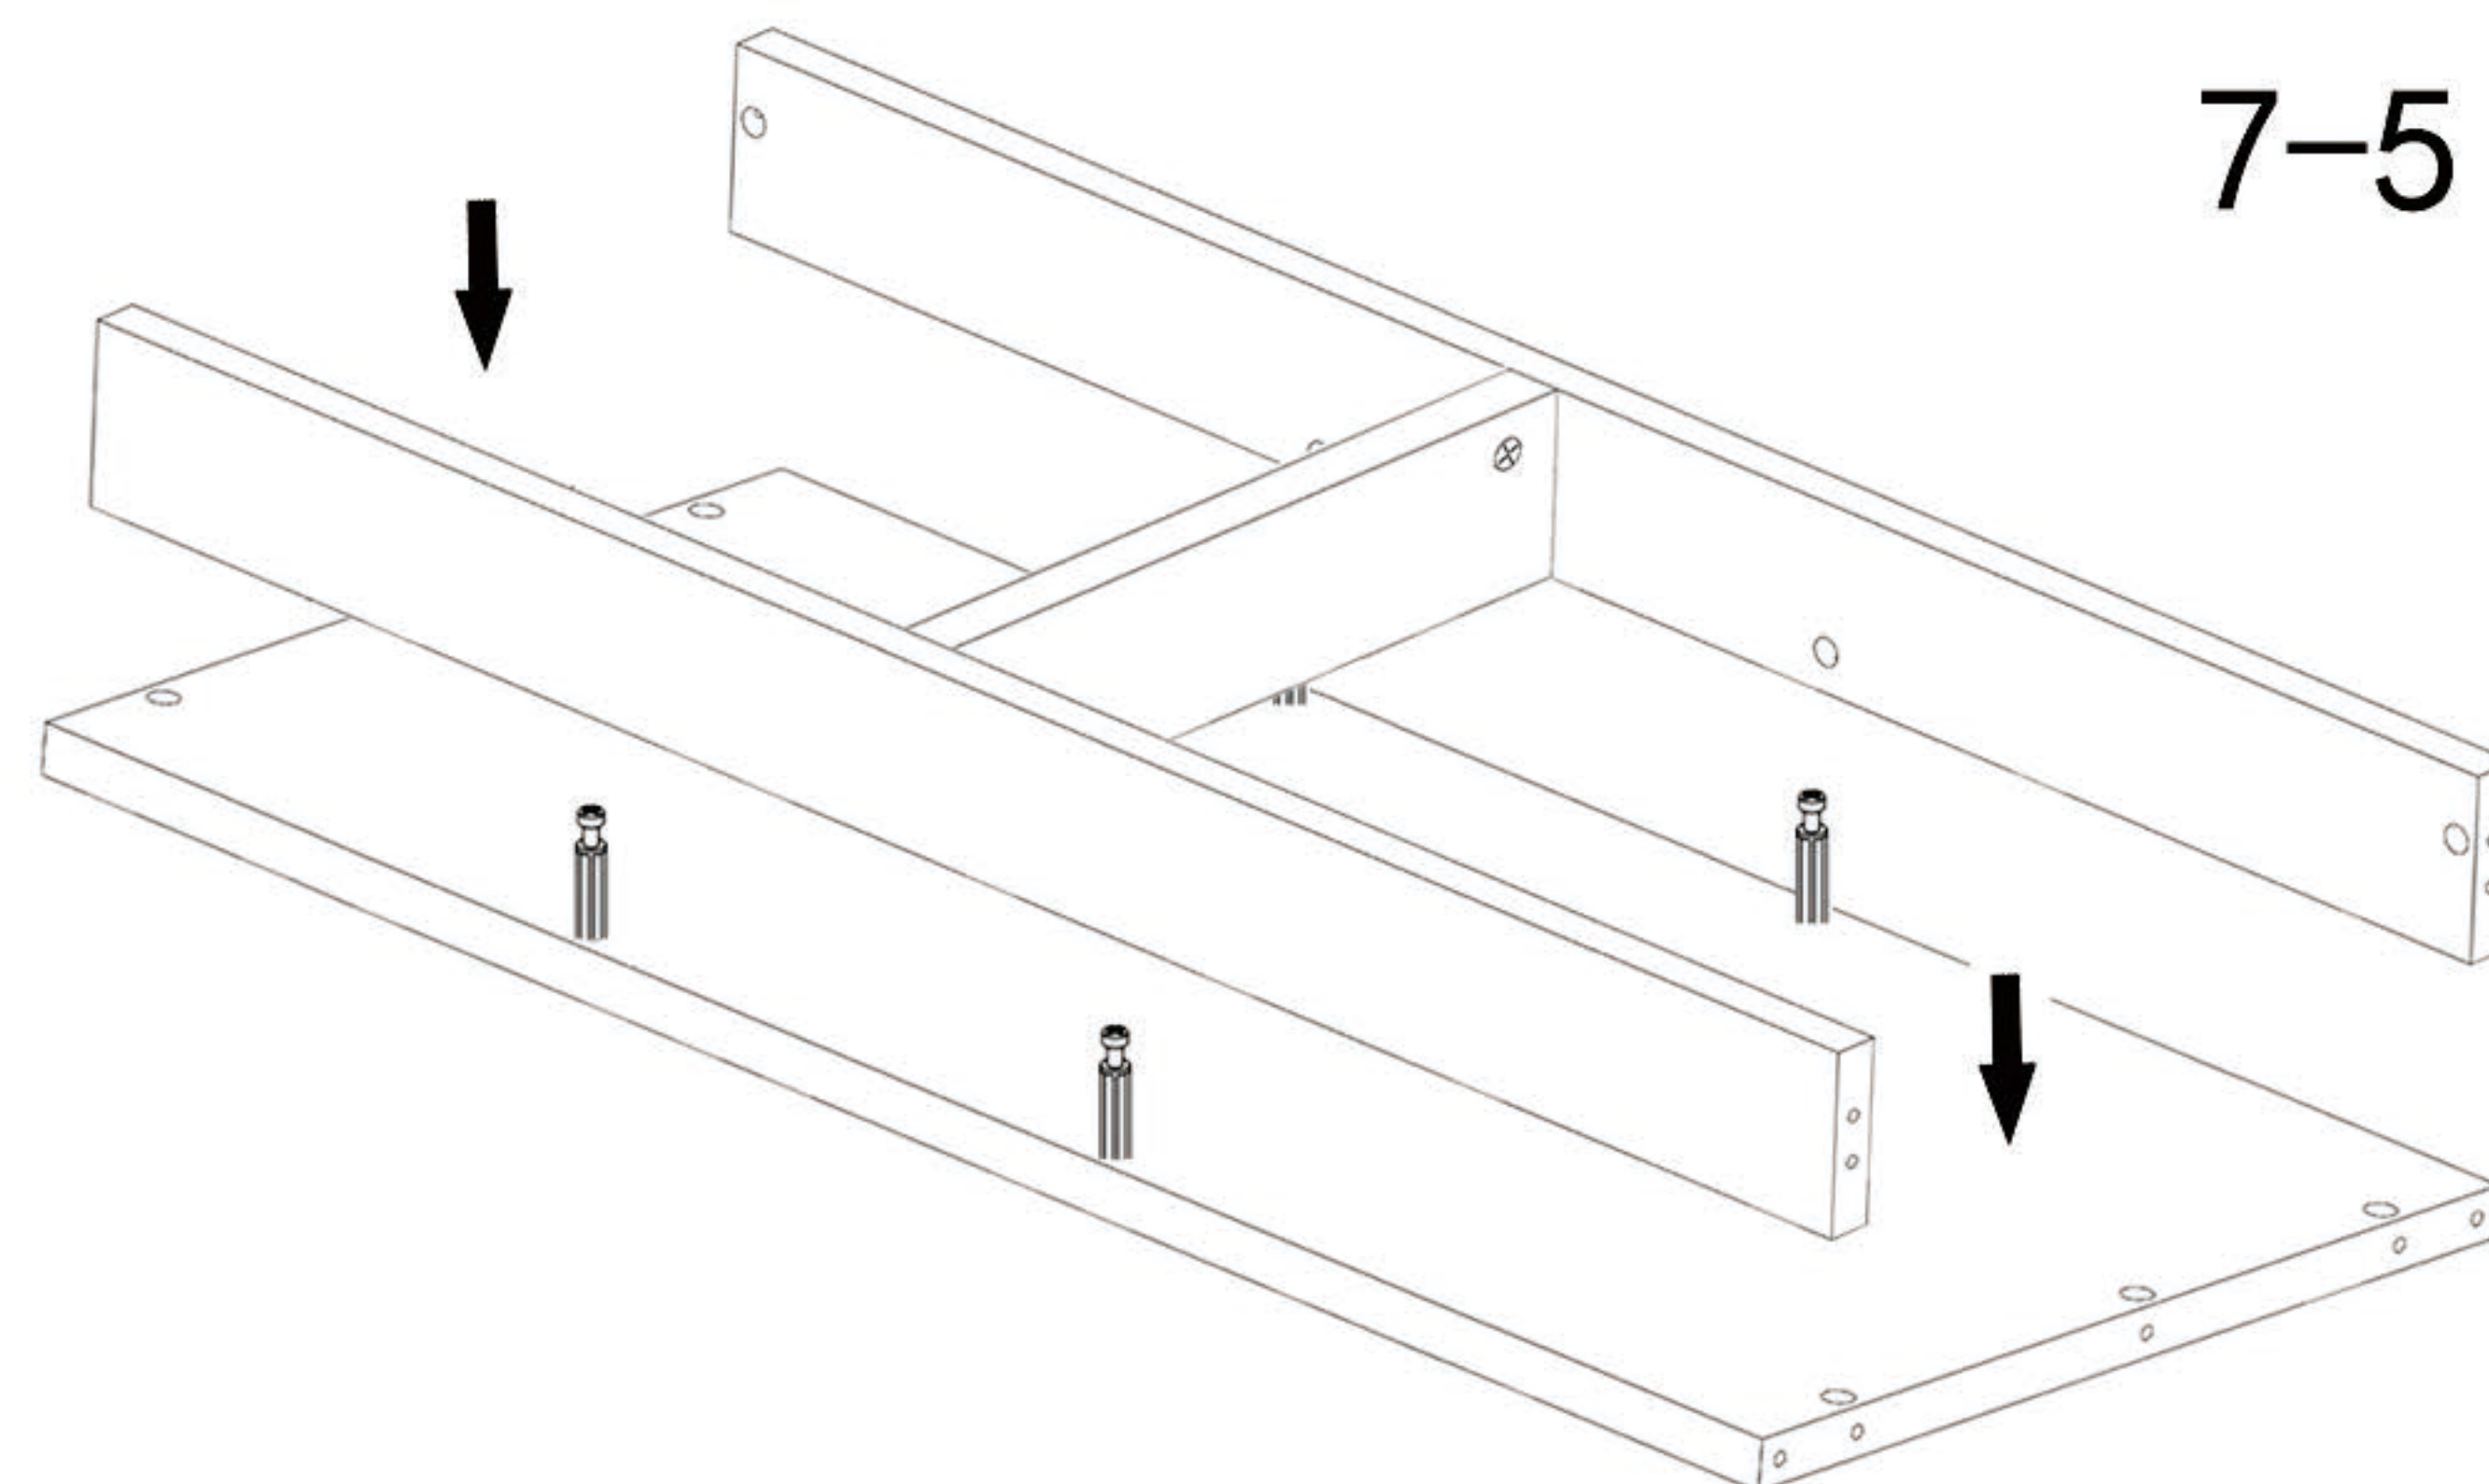


7-6

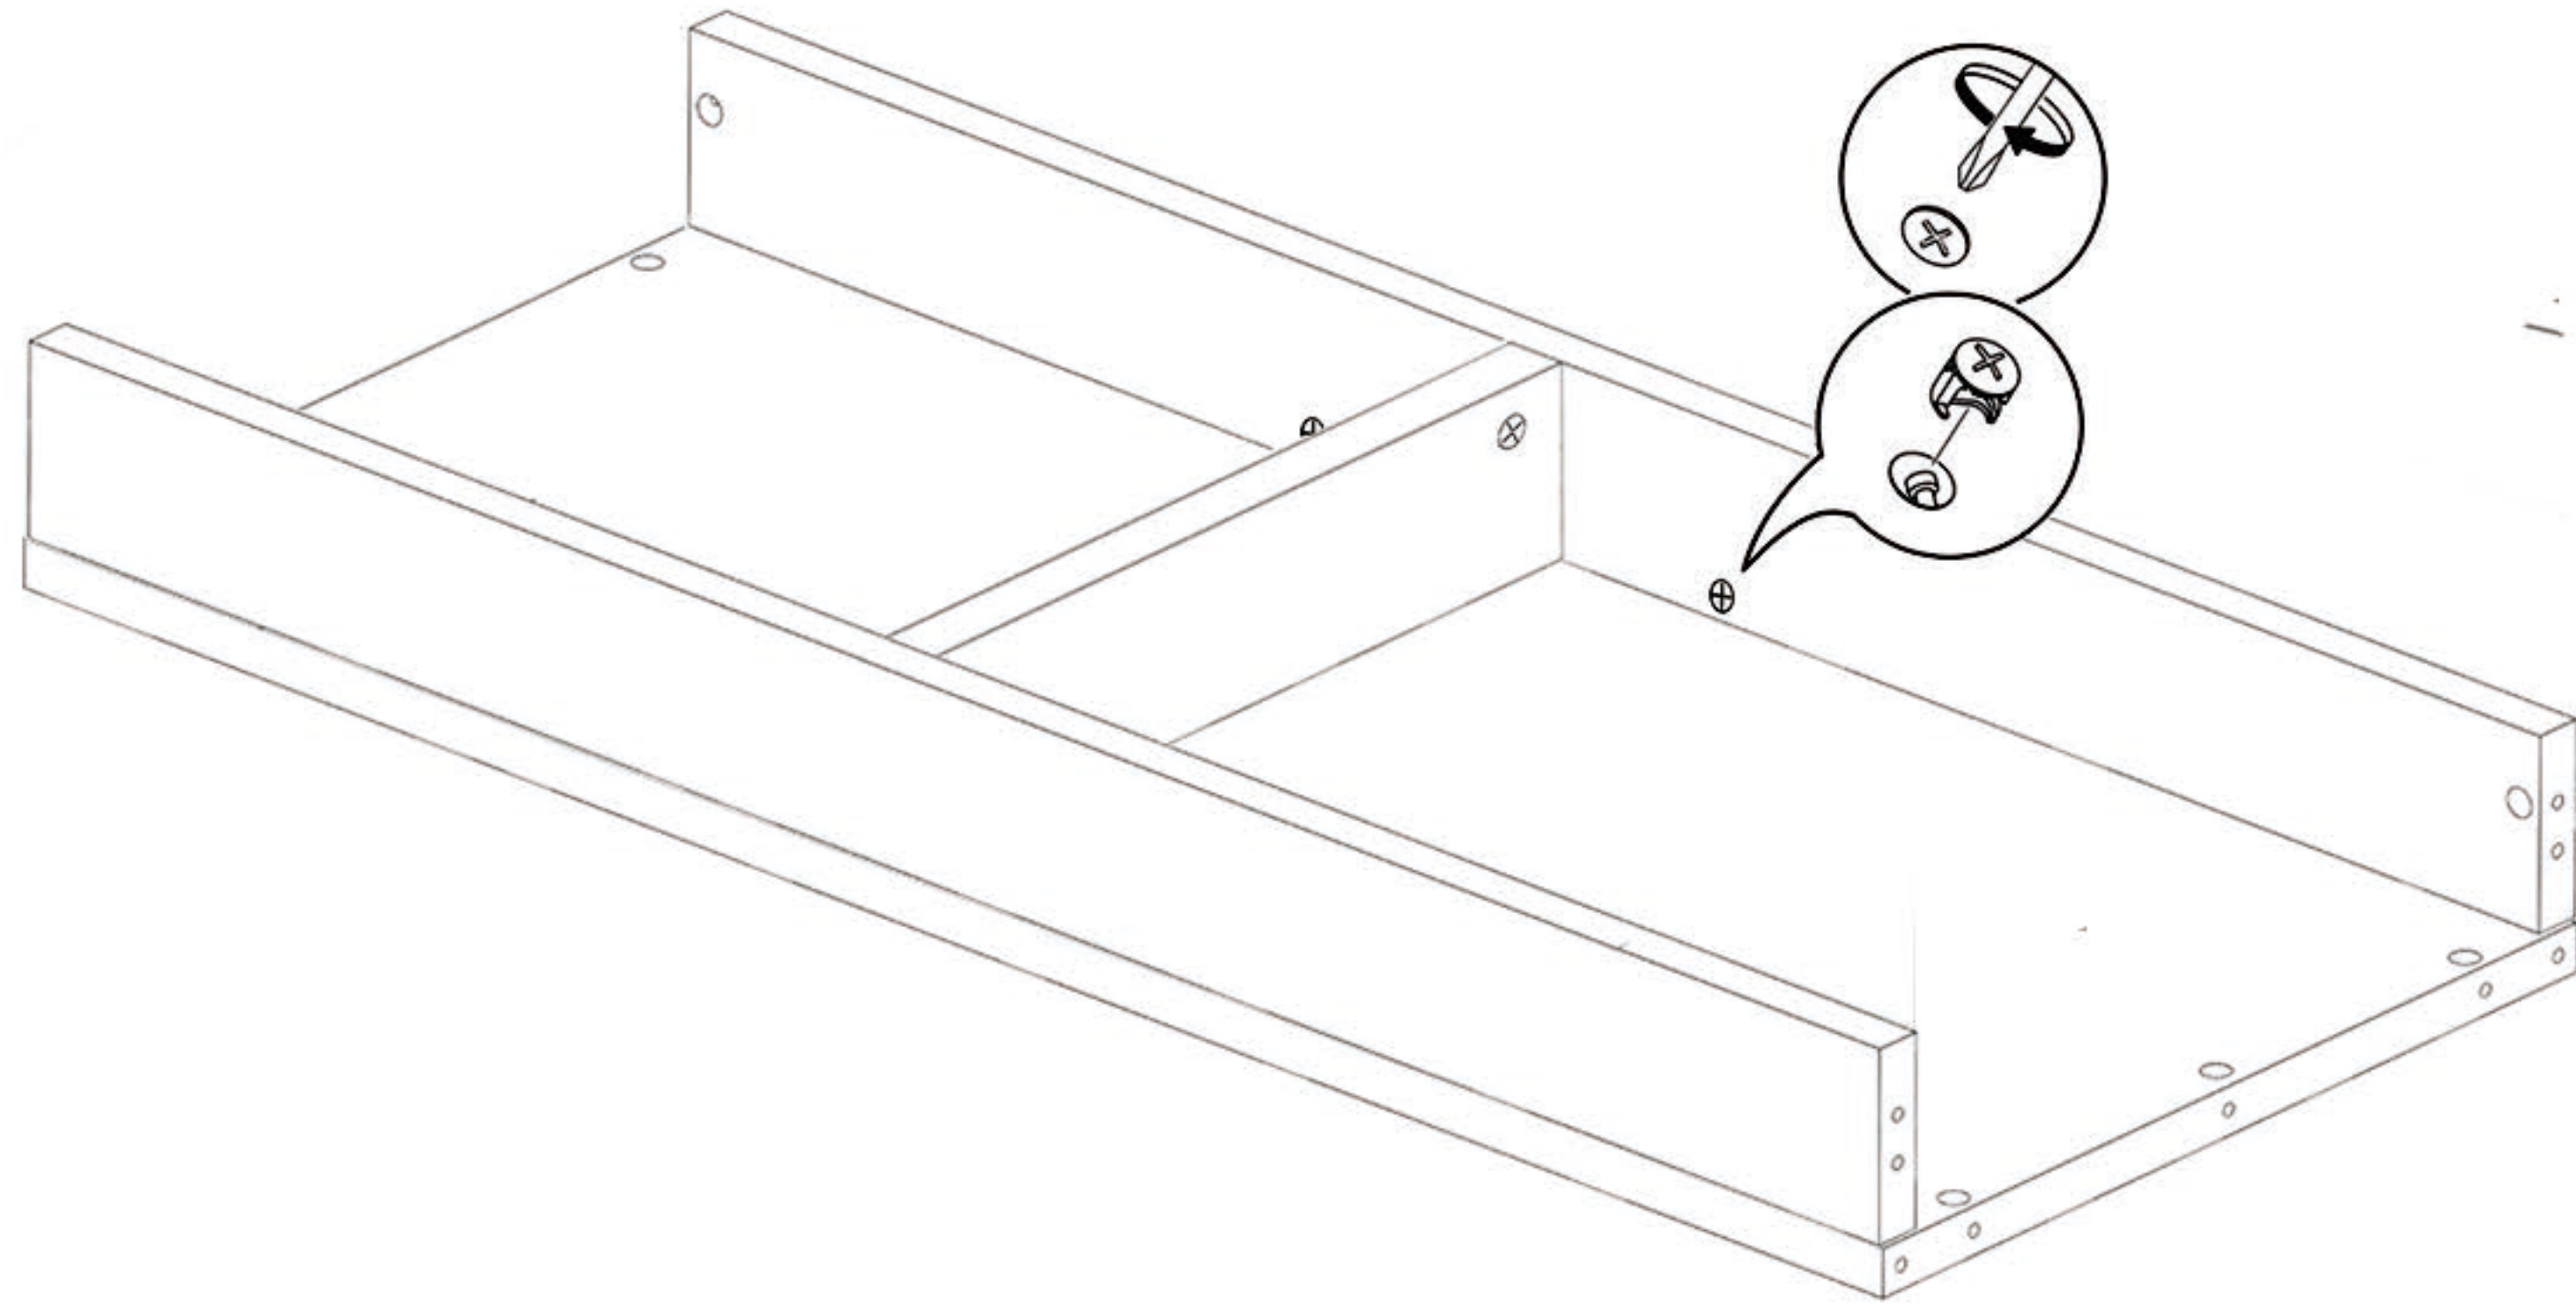


7-7

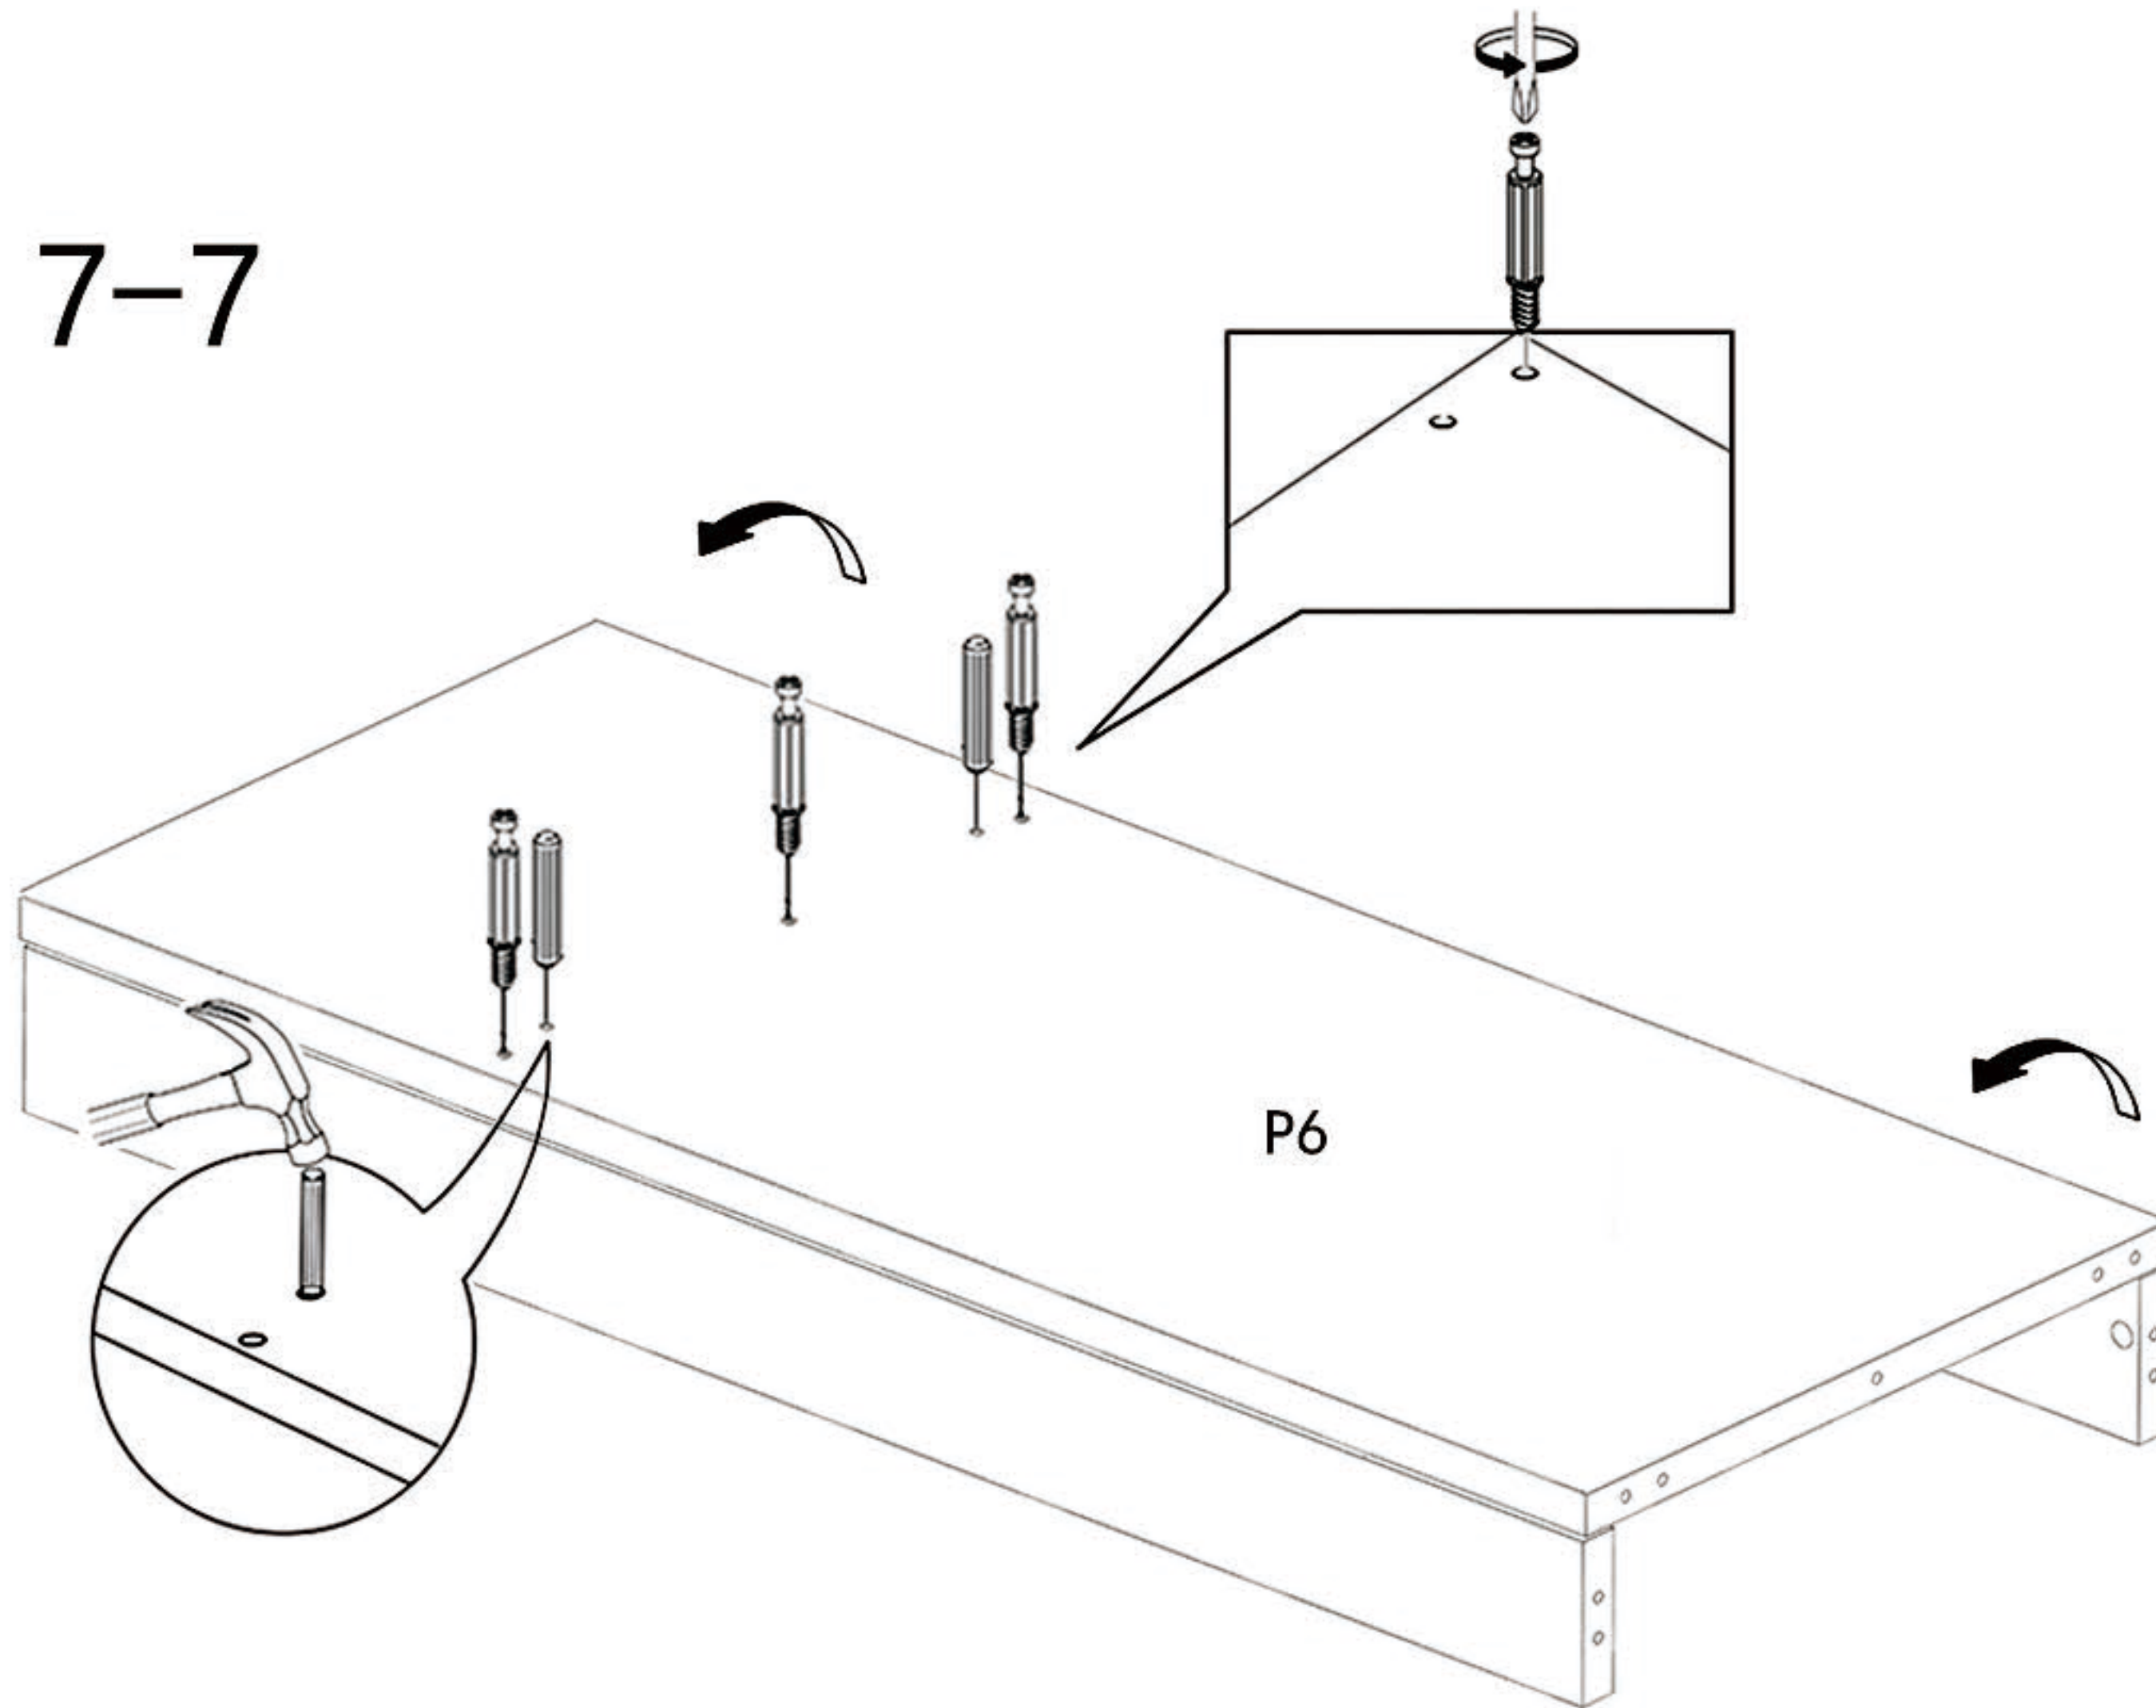



8-1

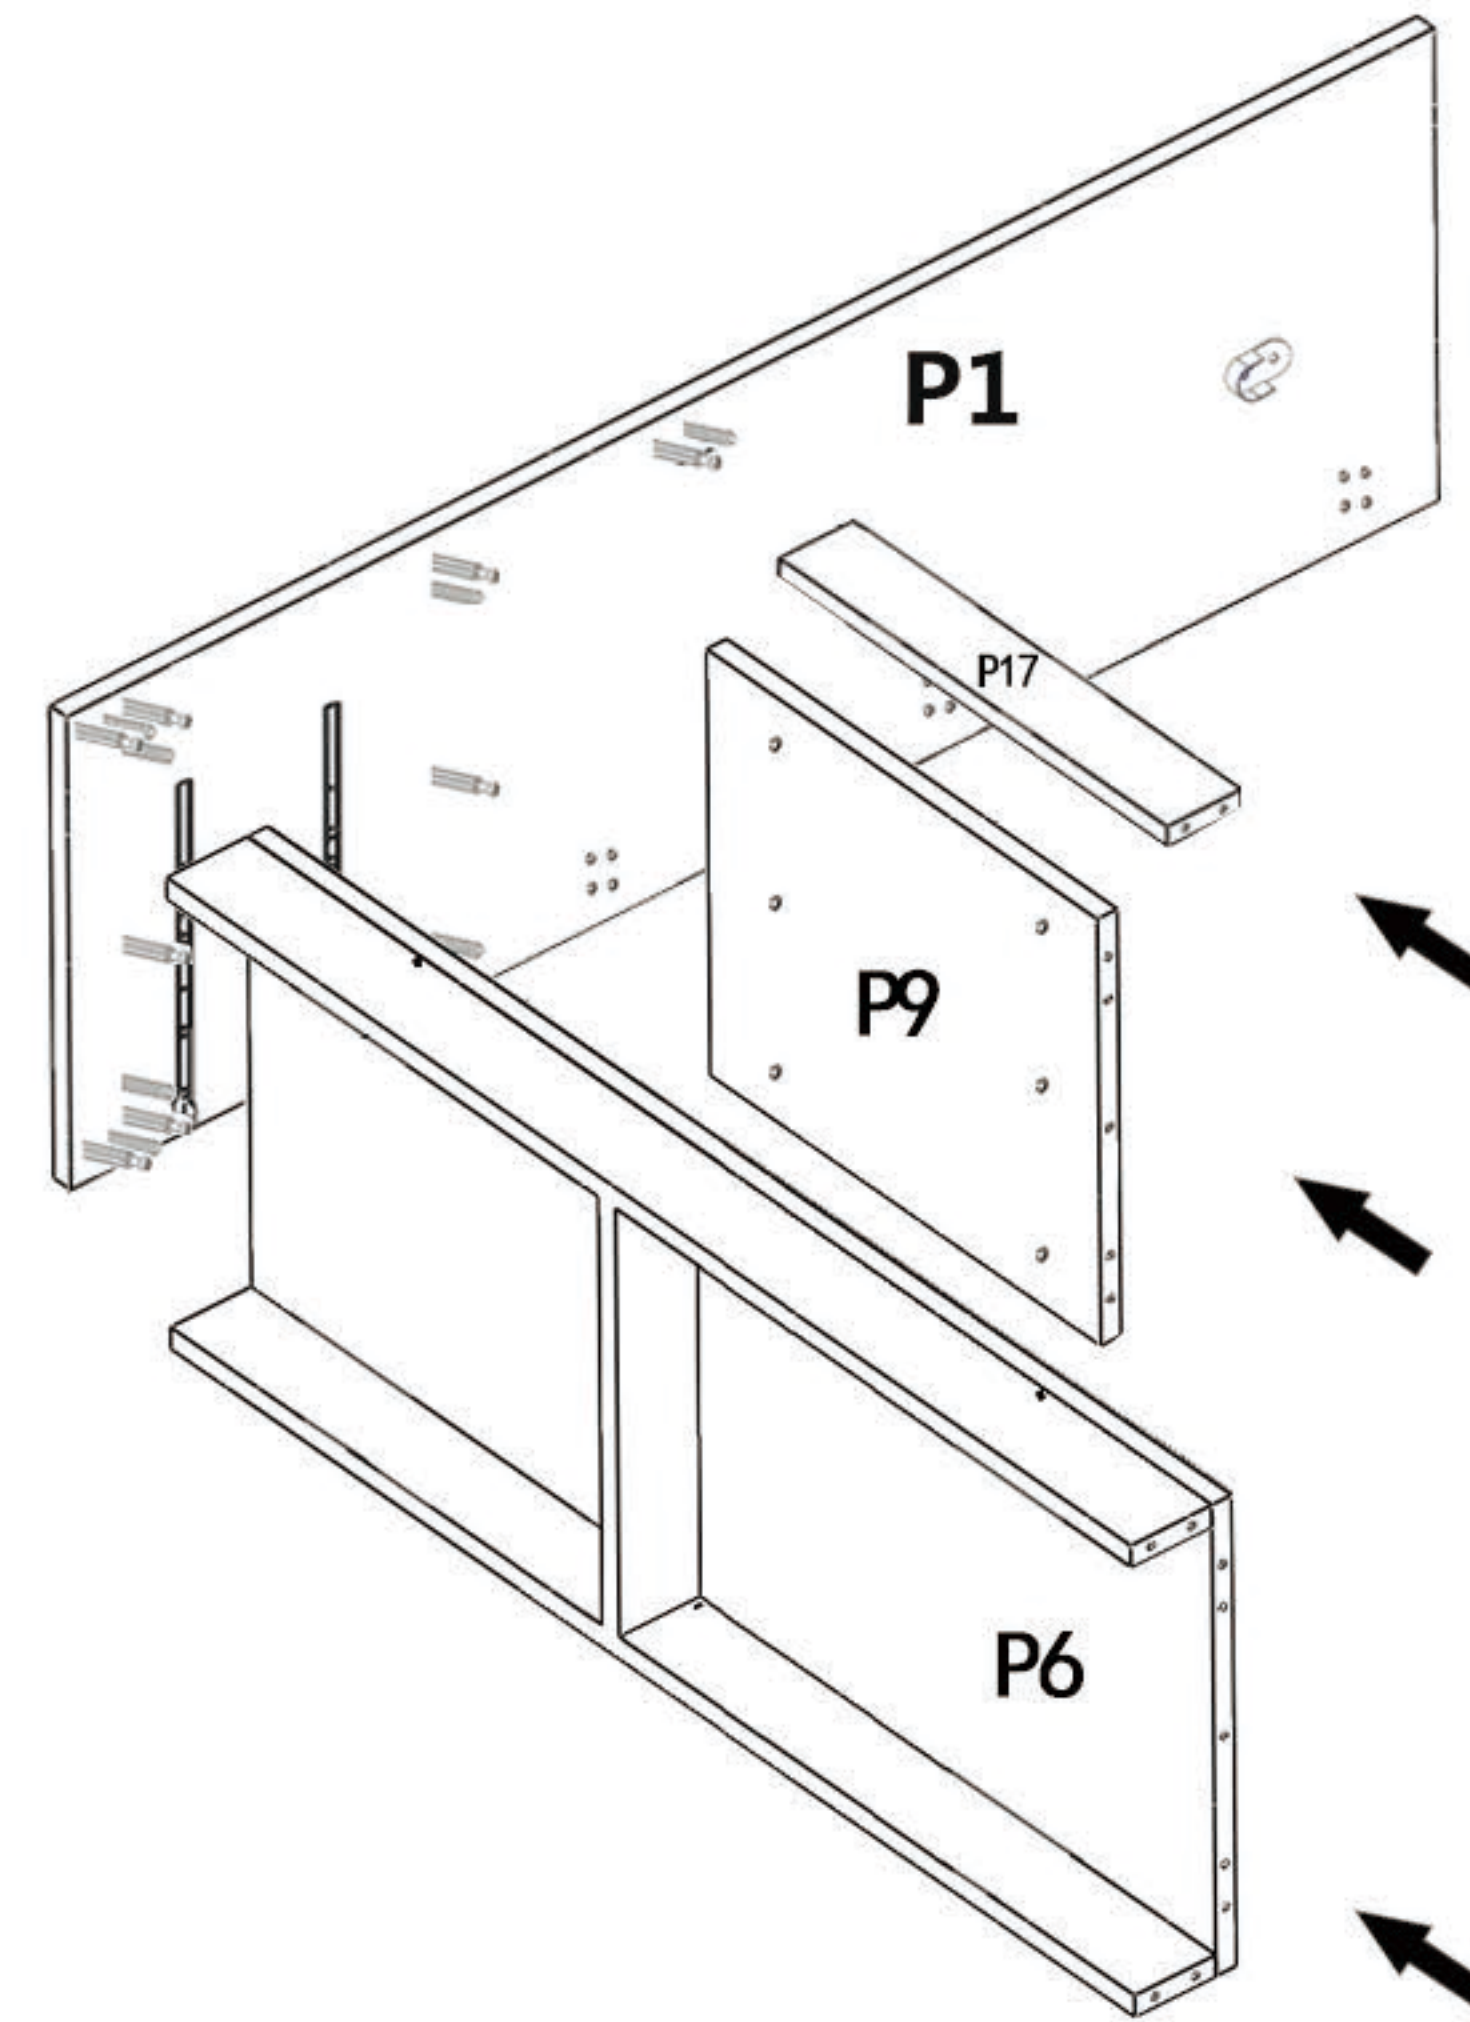



8-2

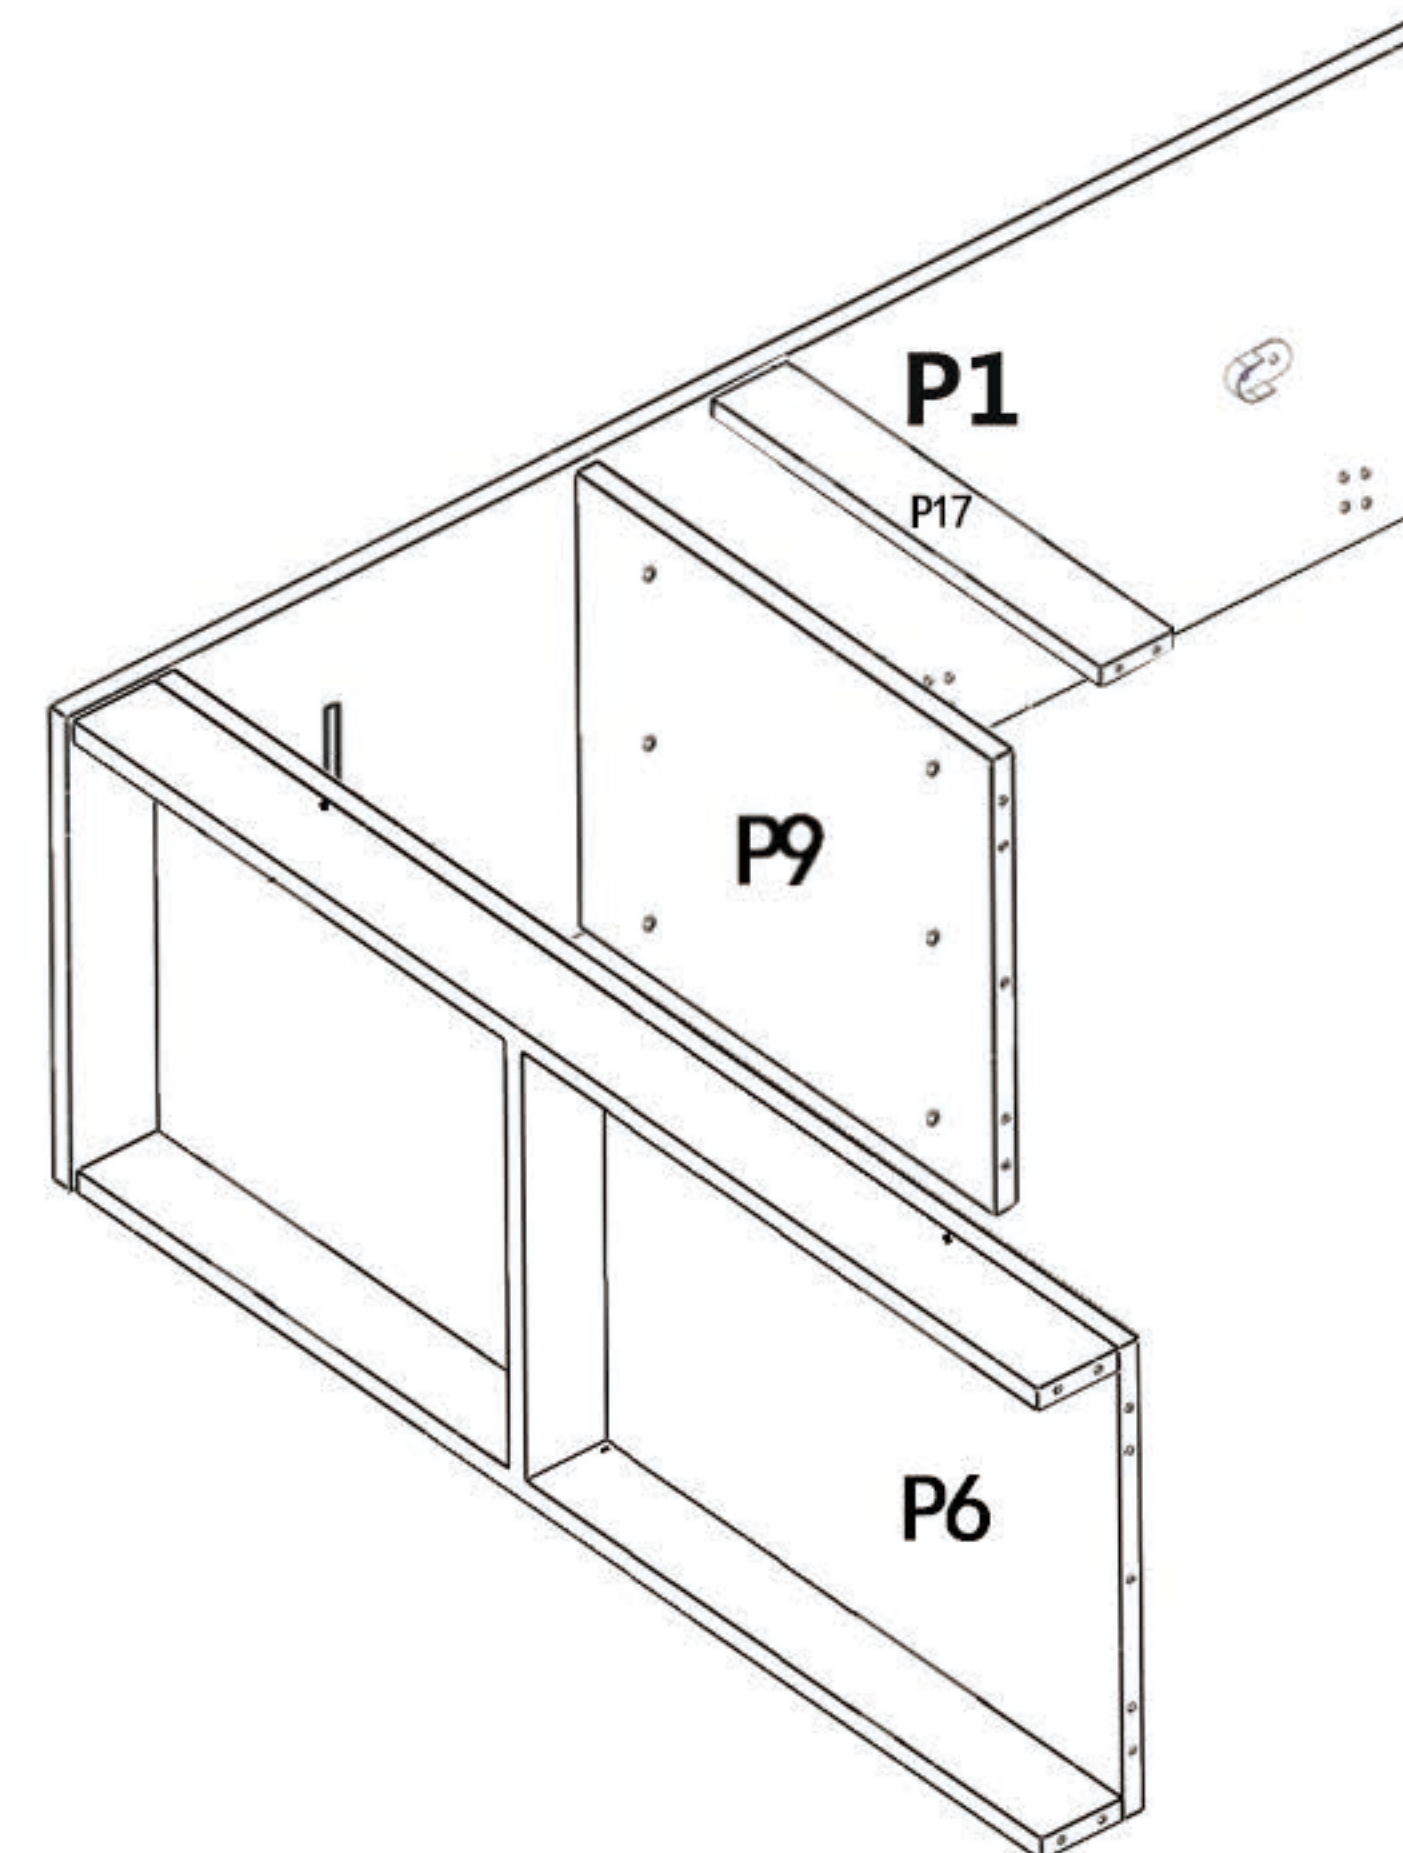



9-1

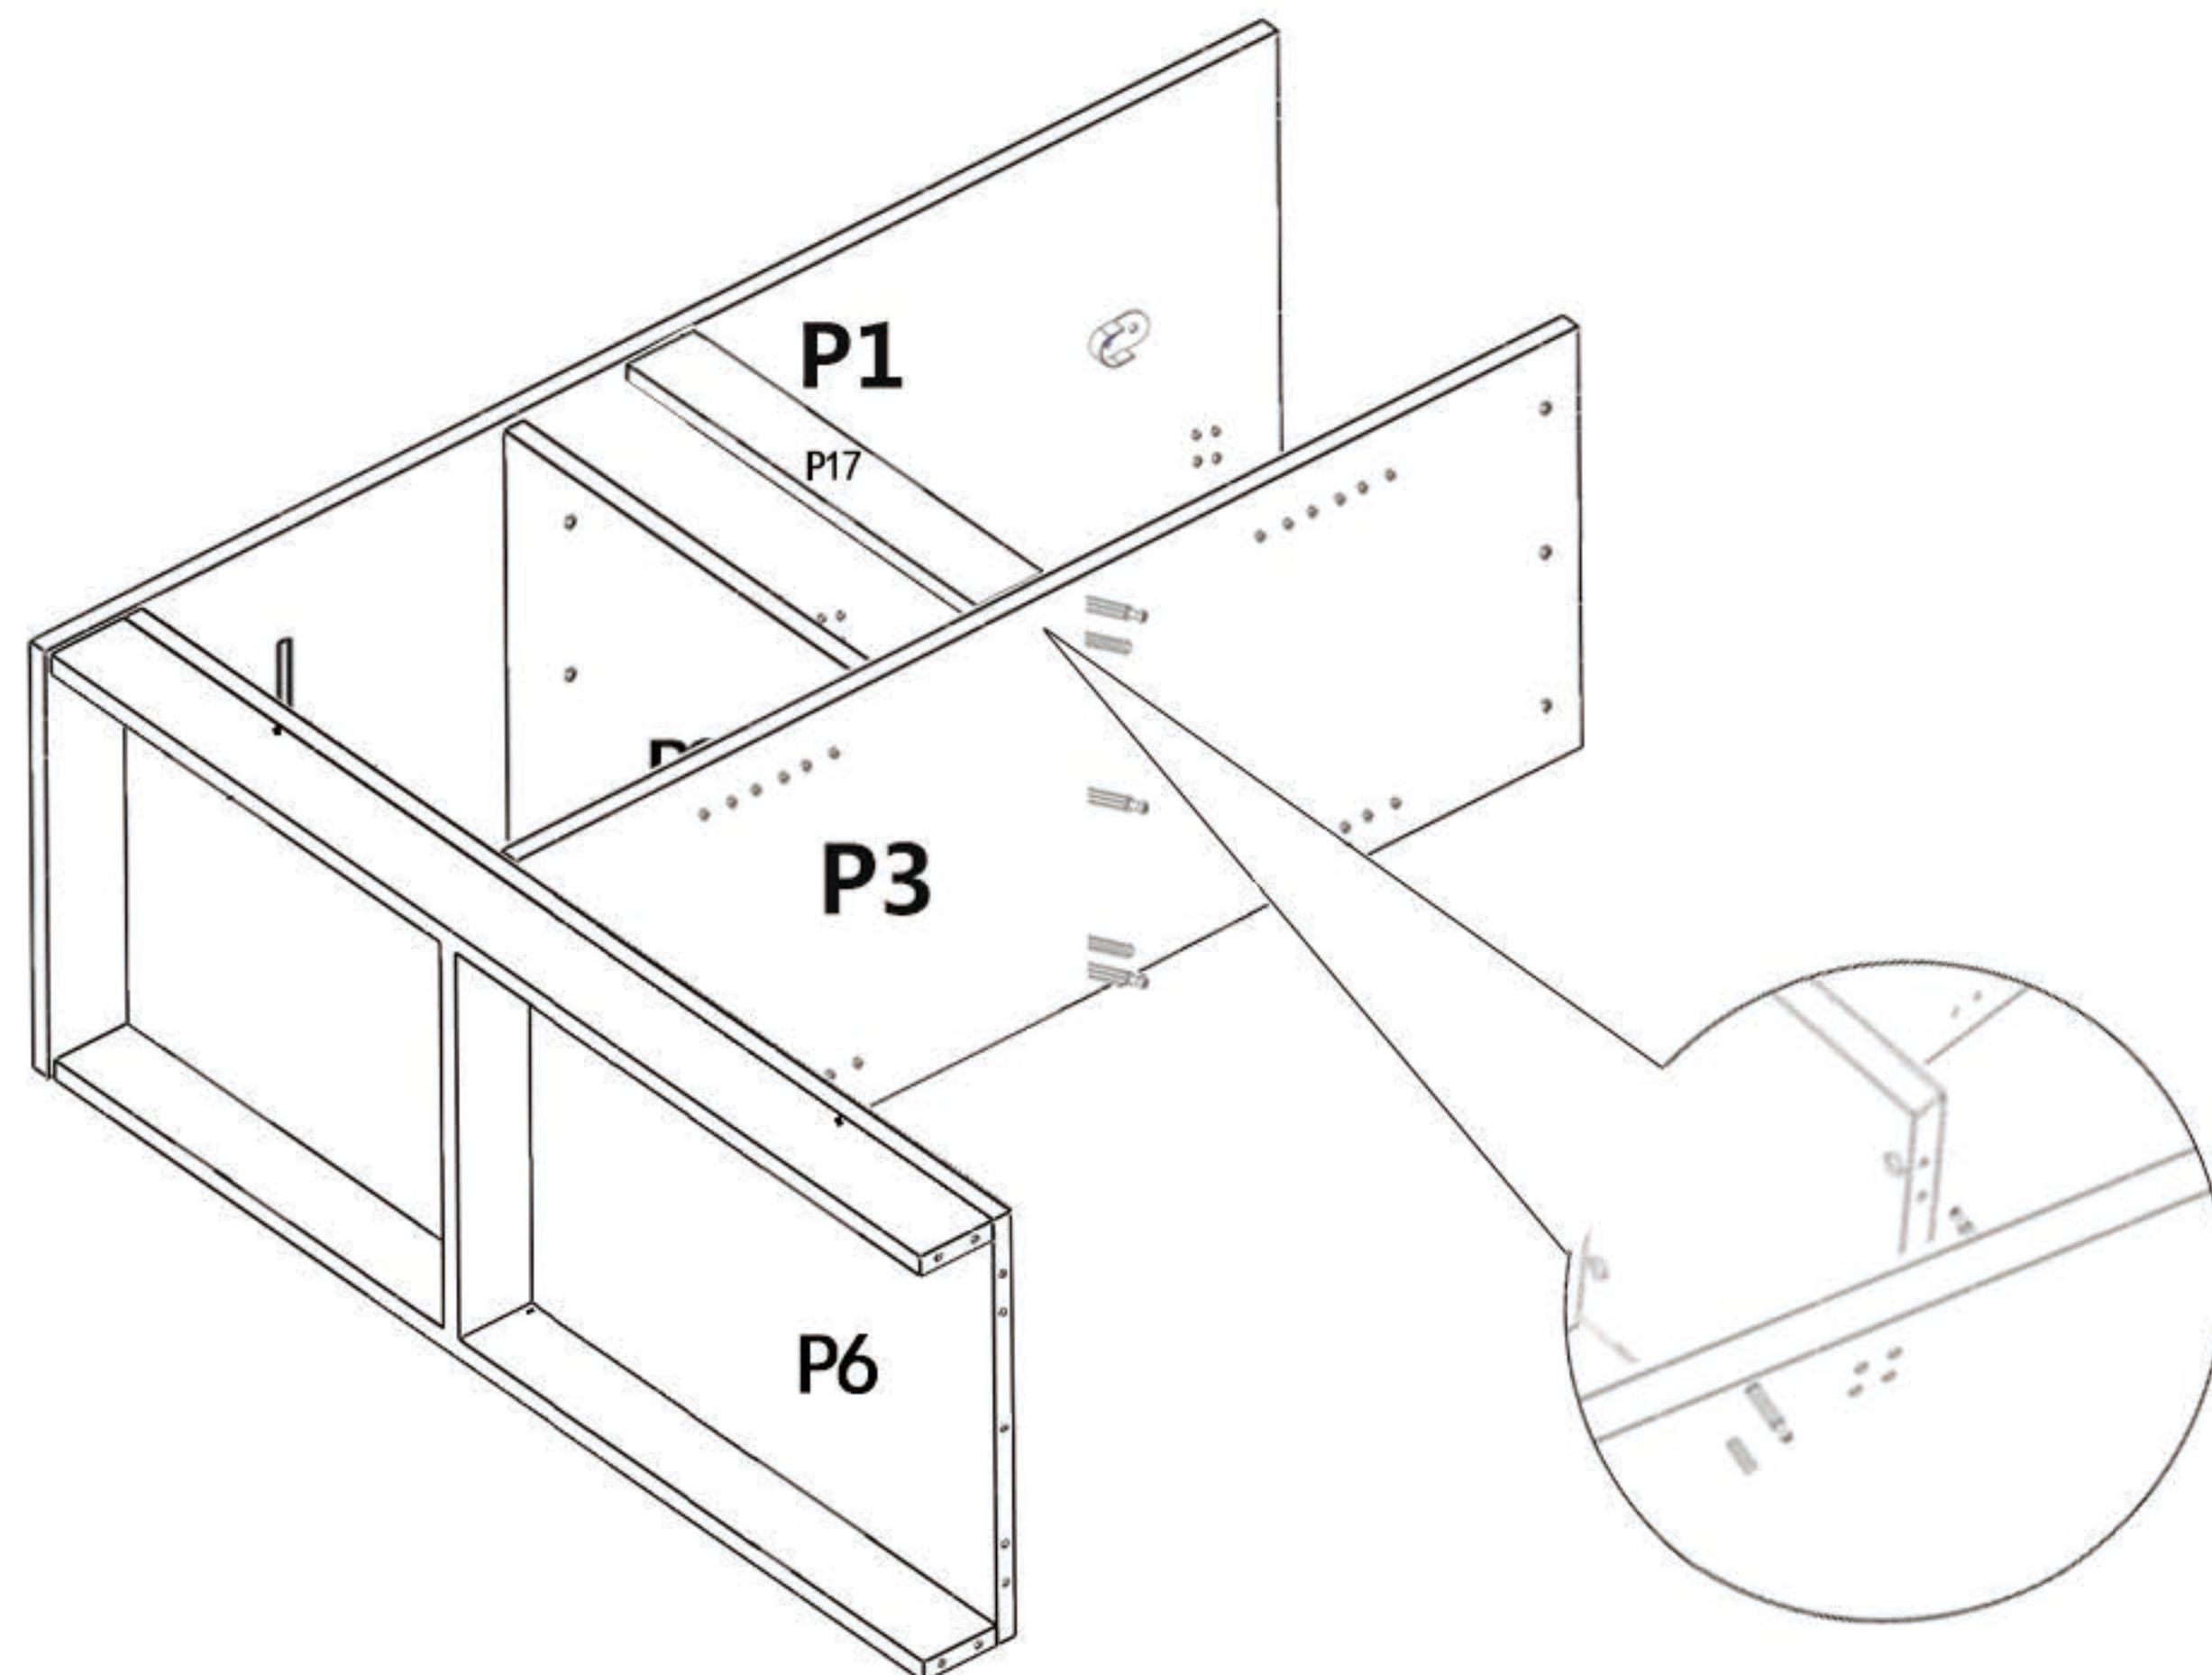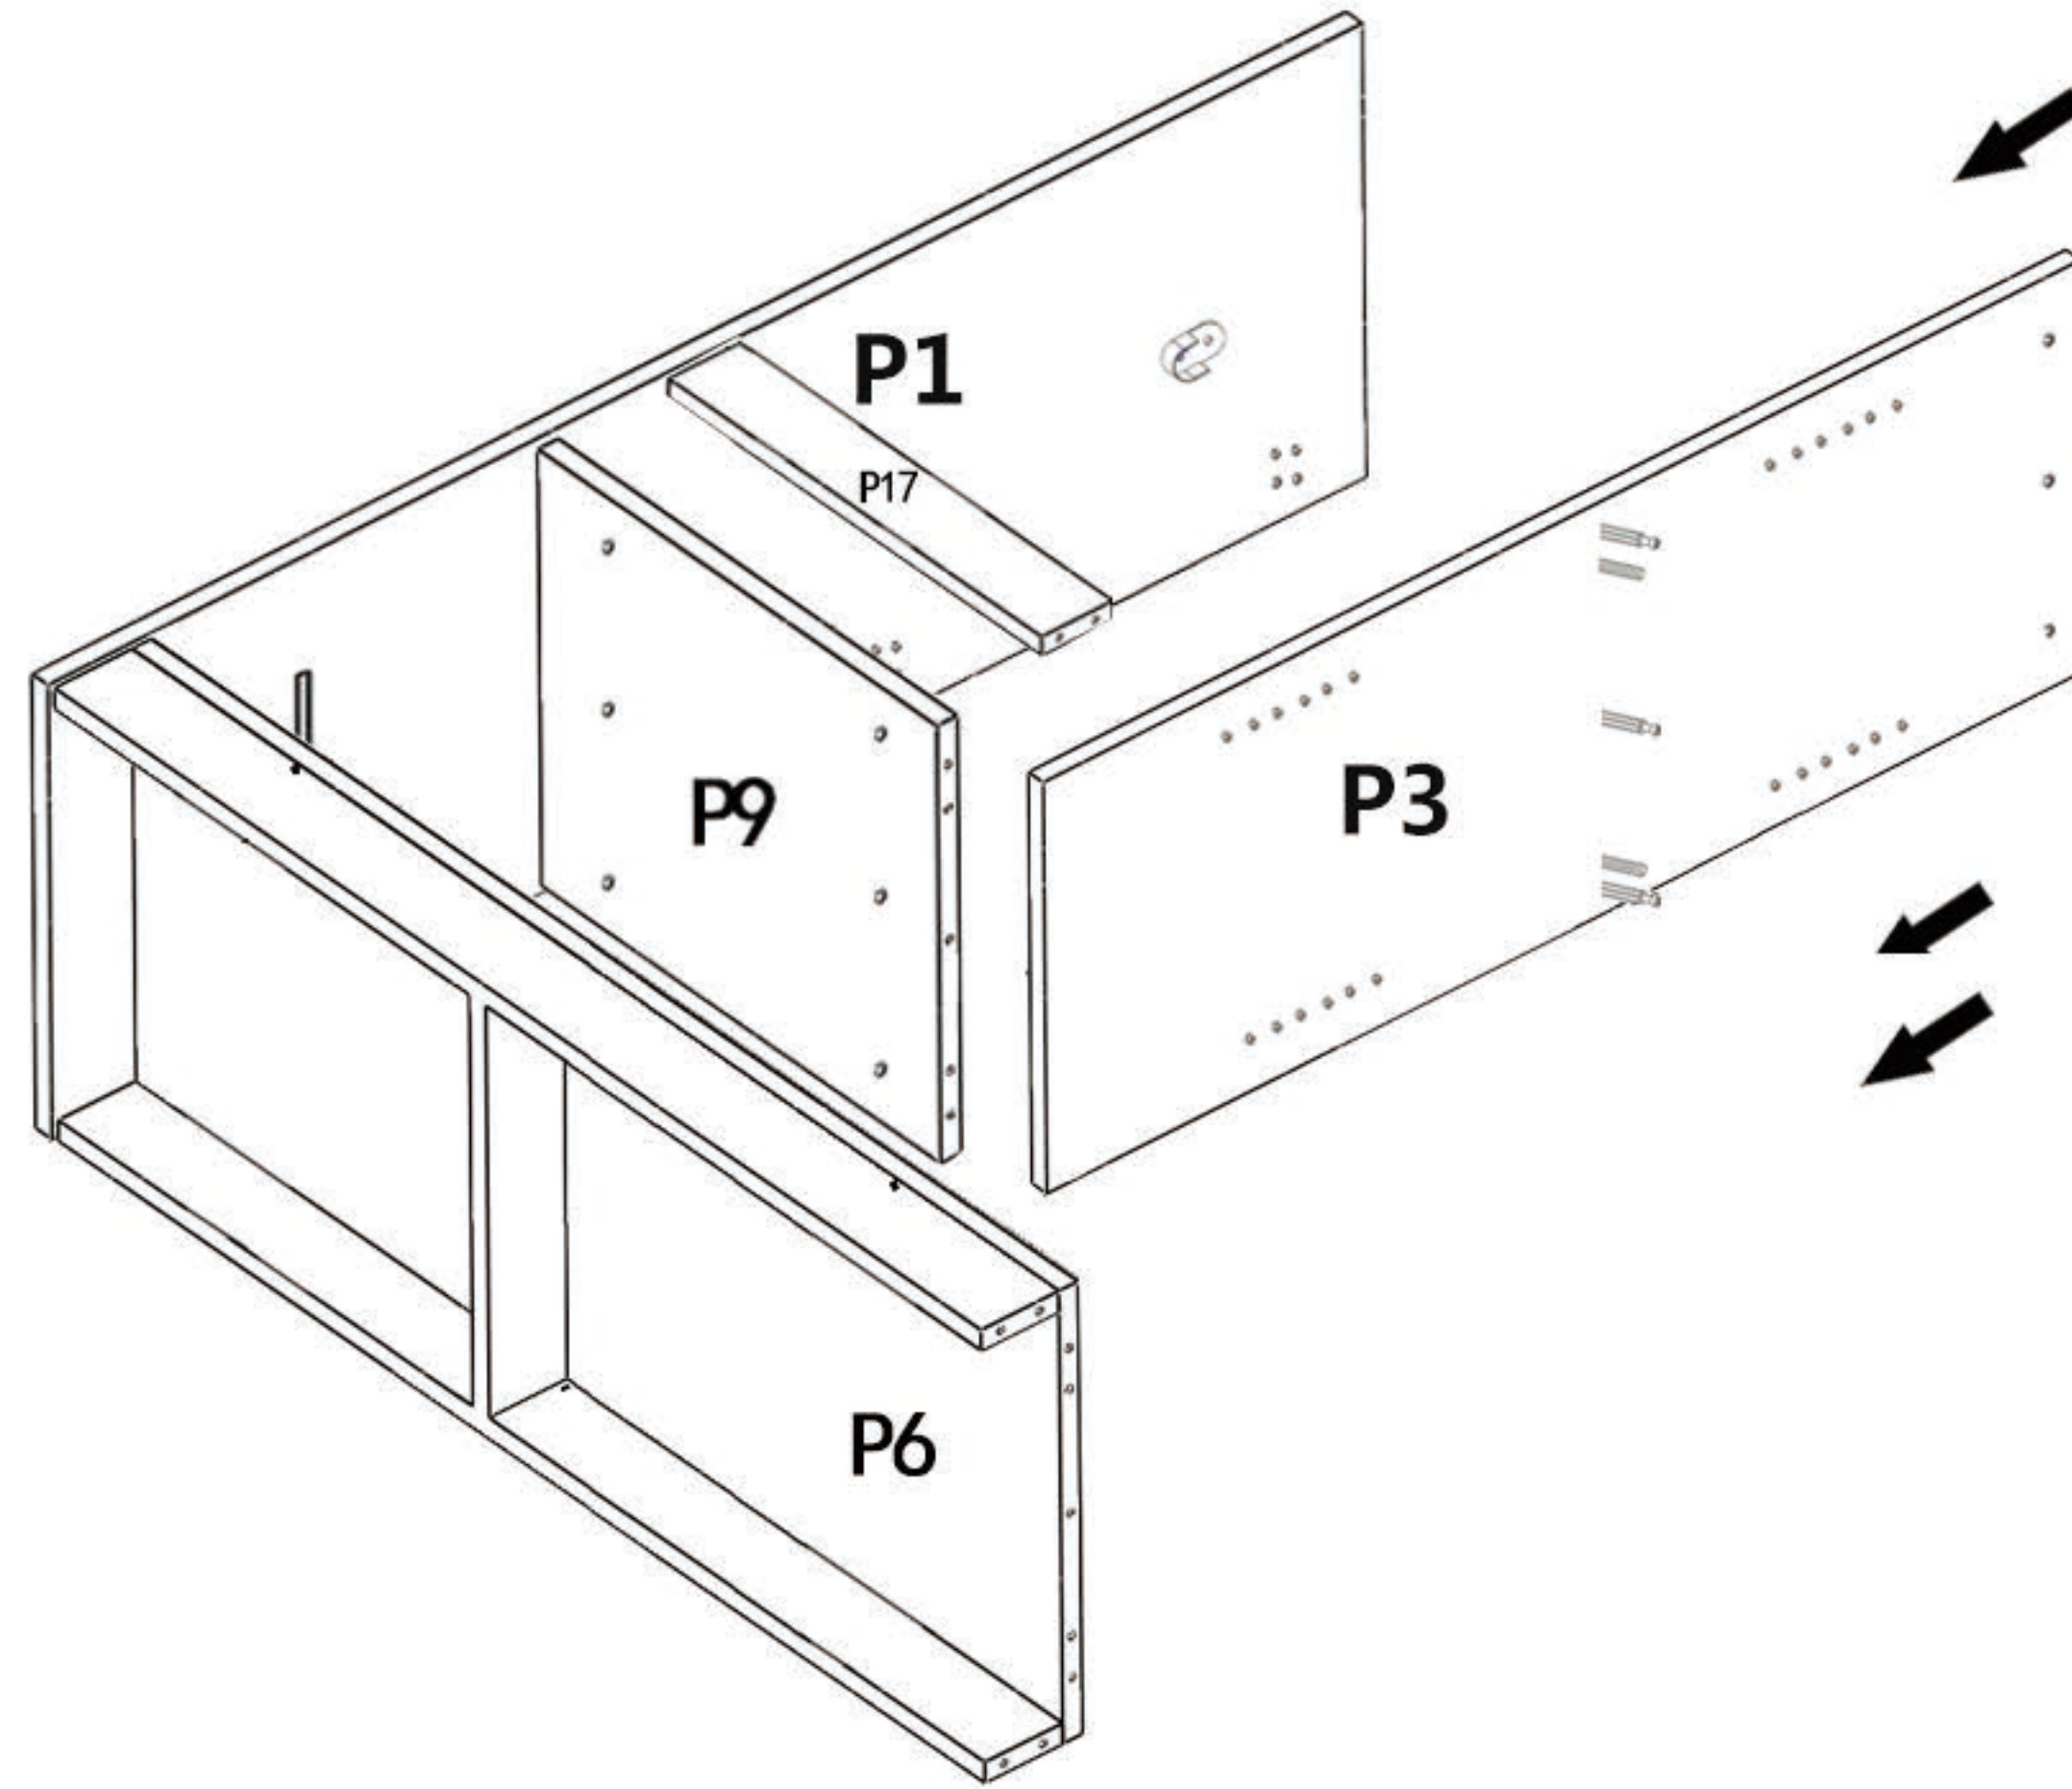



9-2

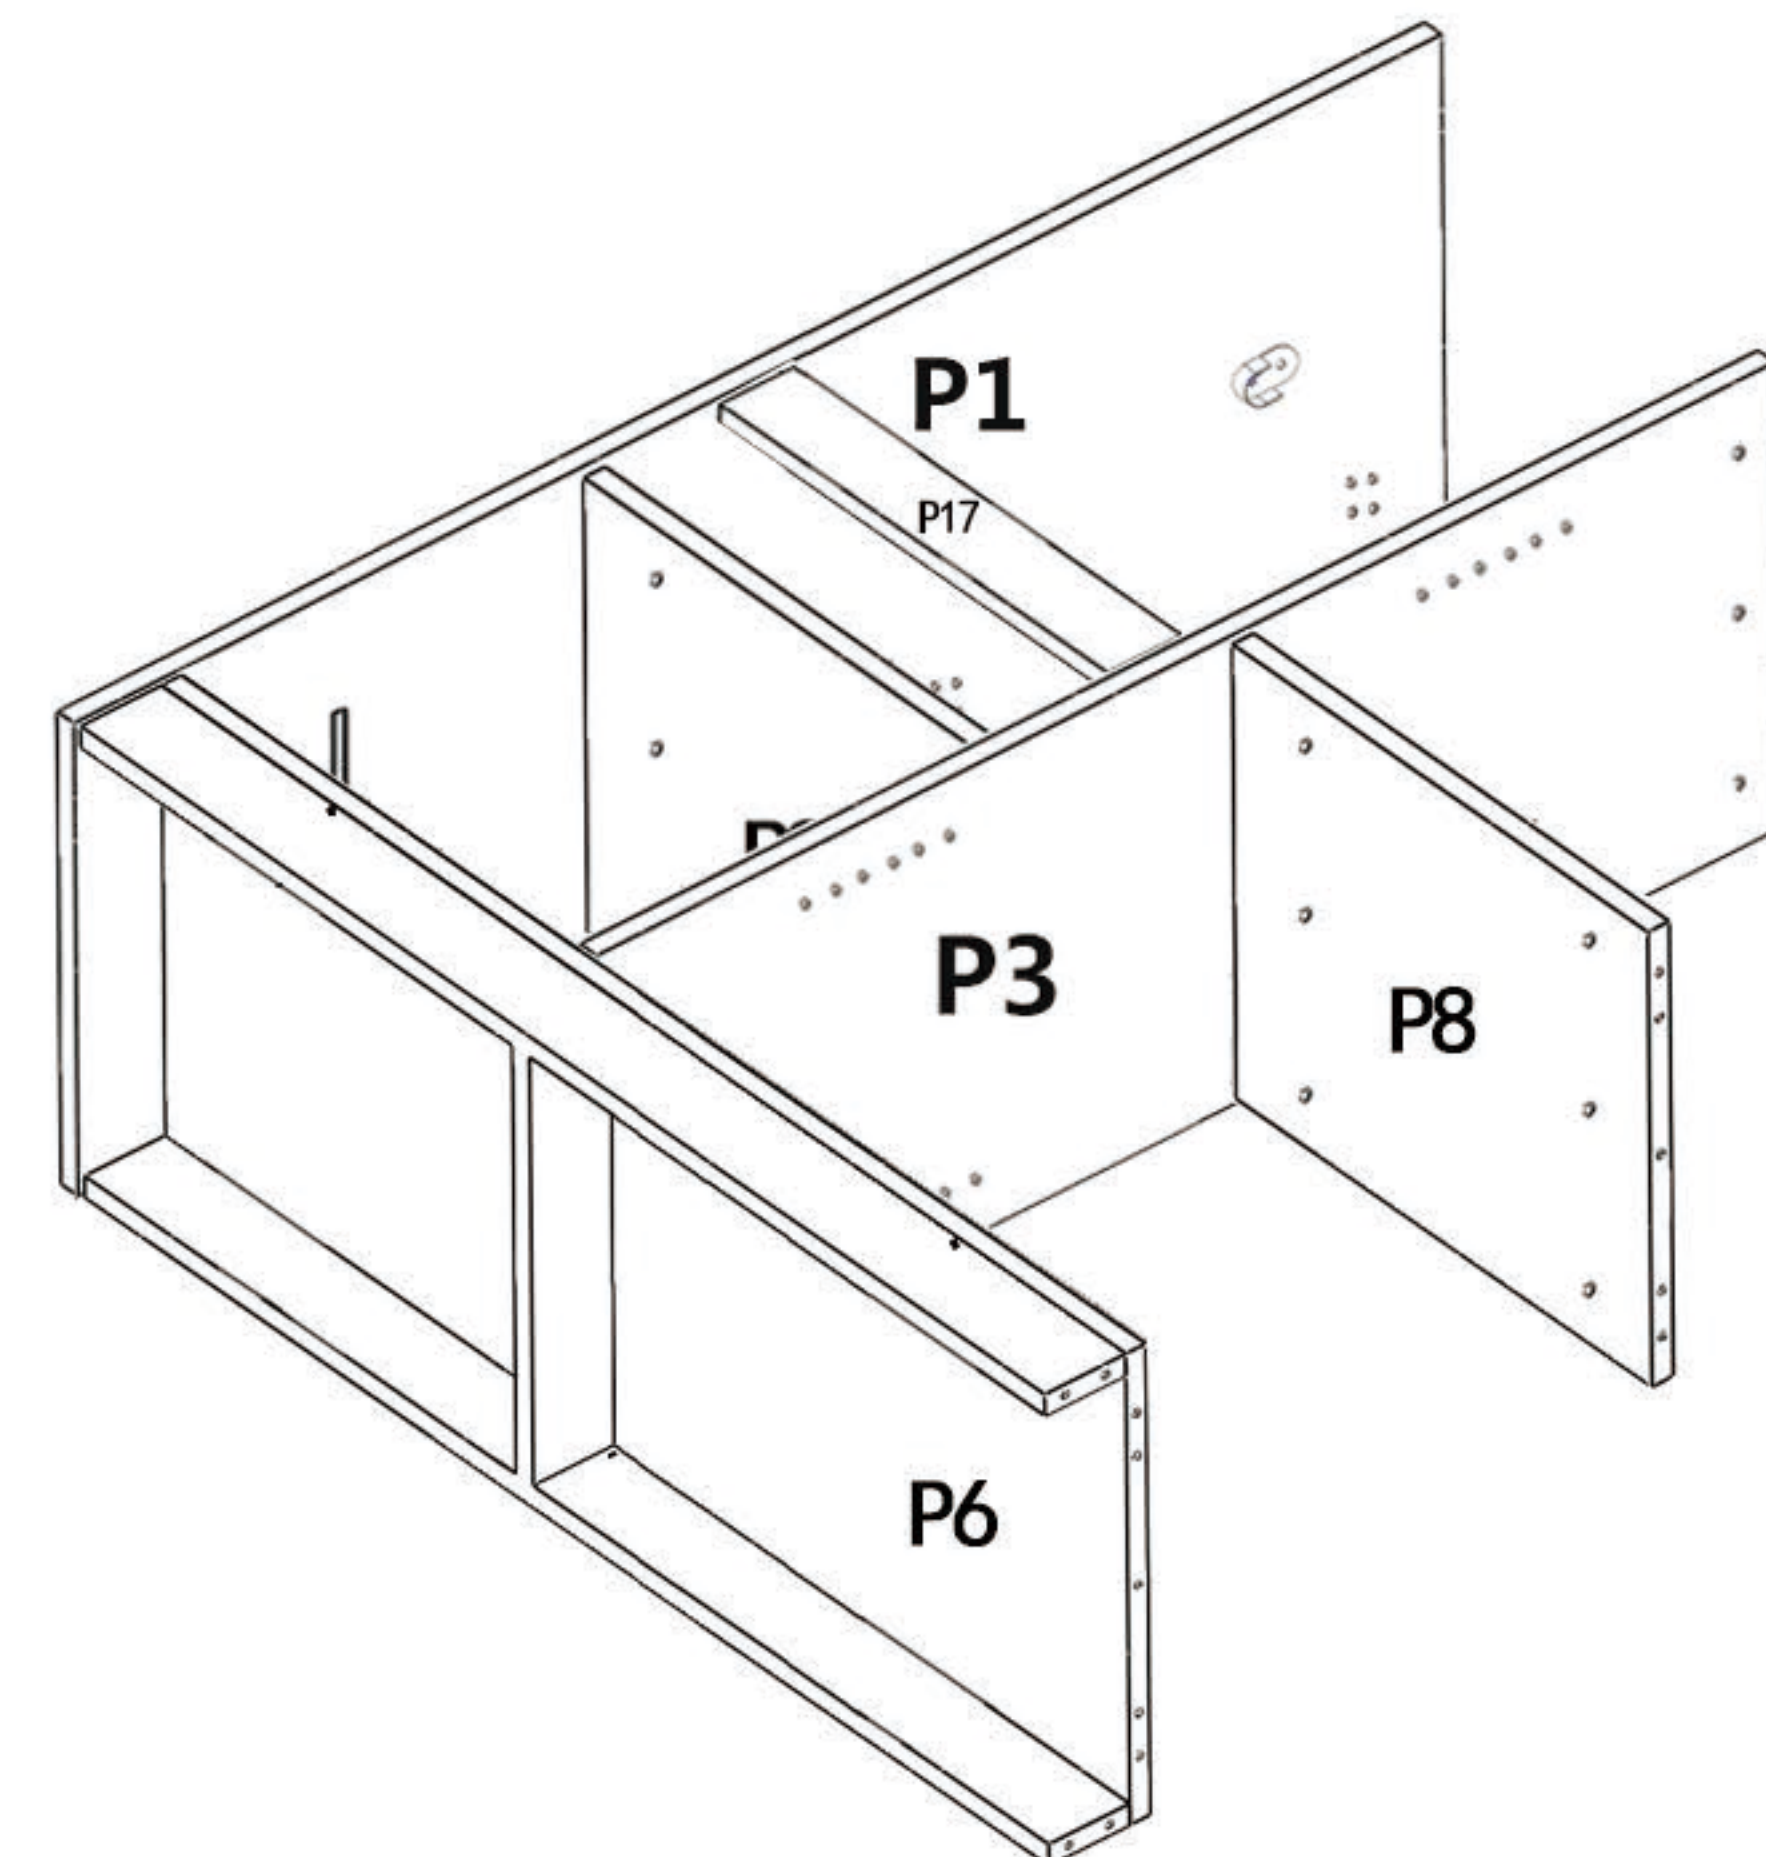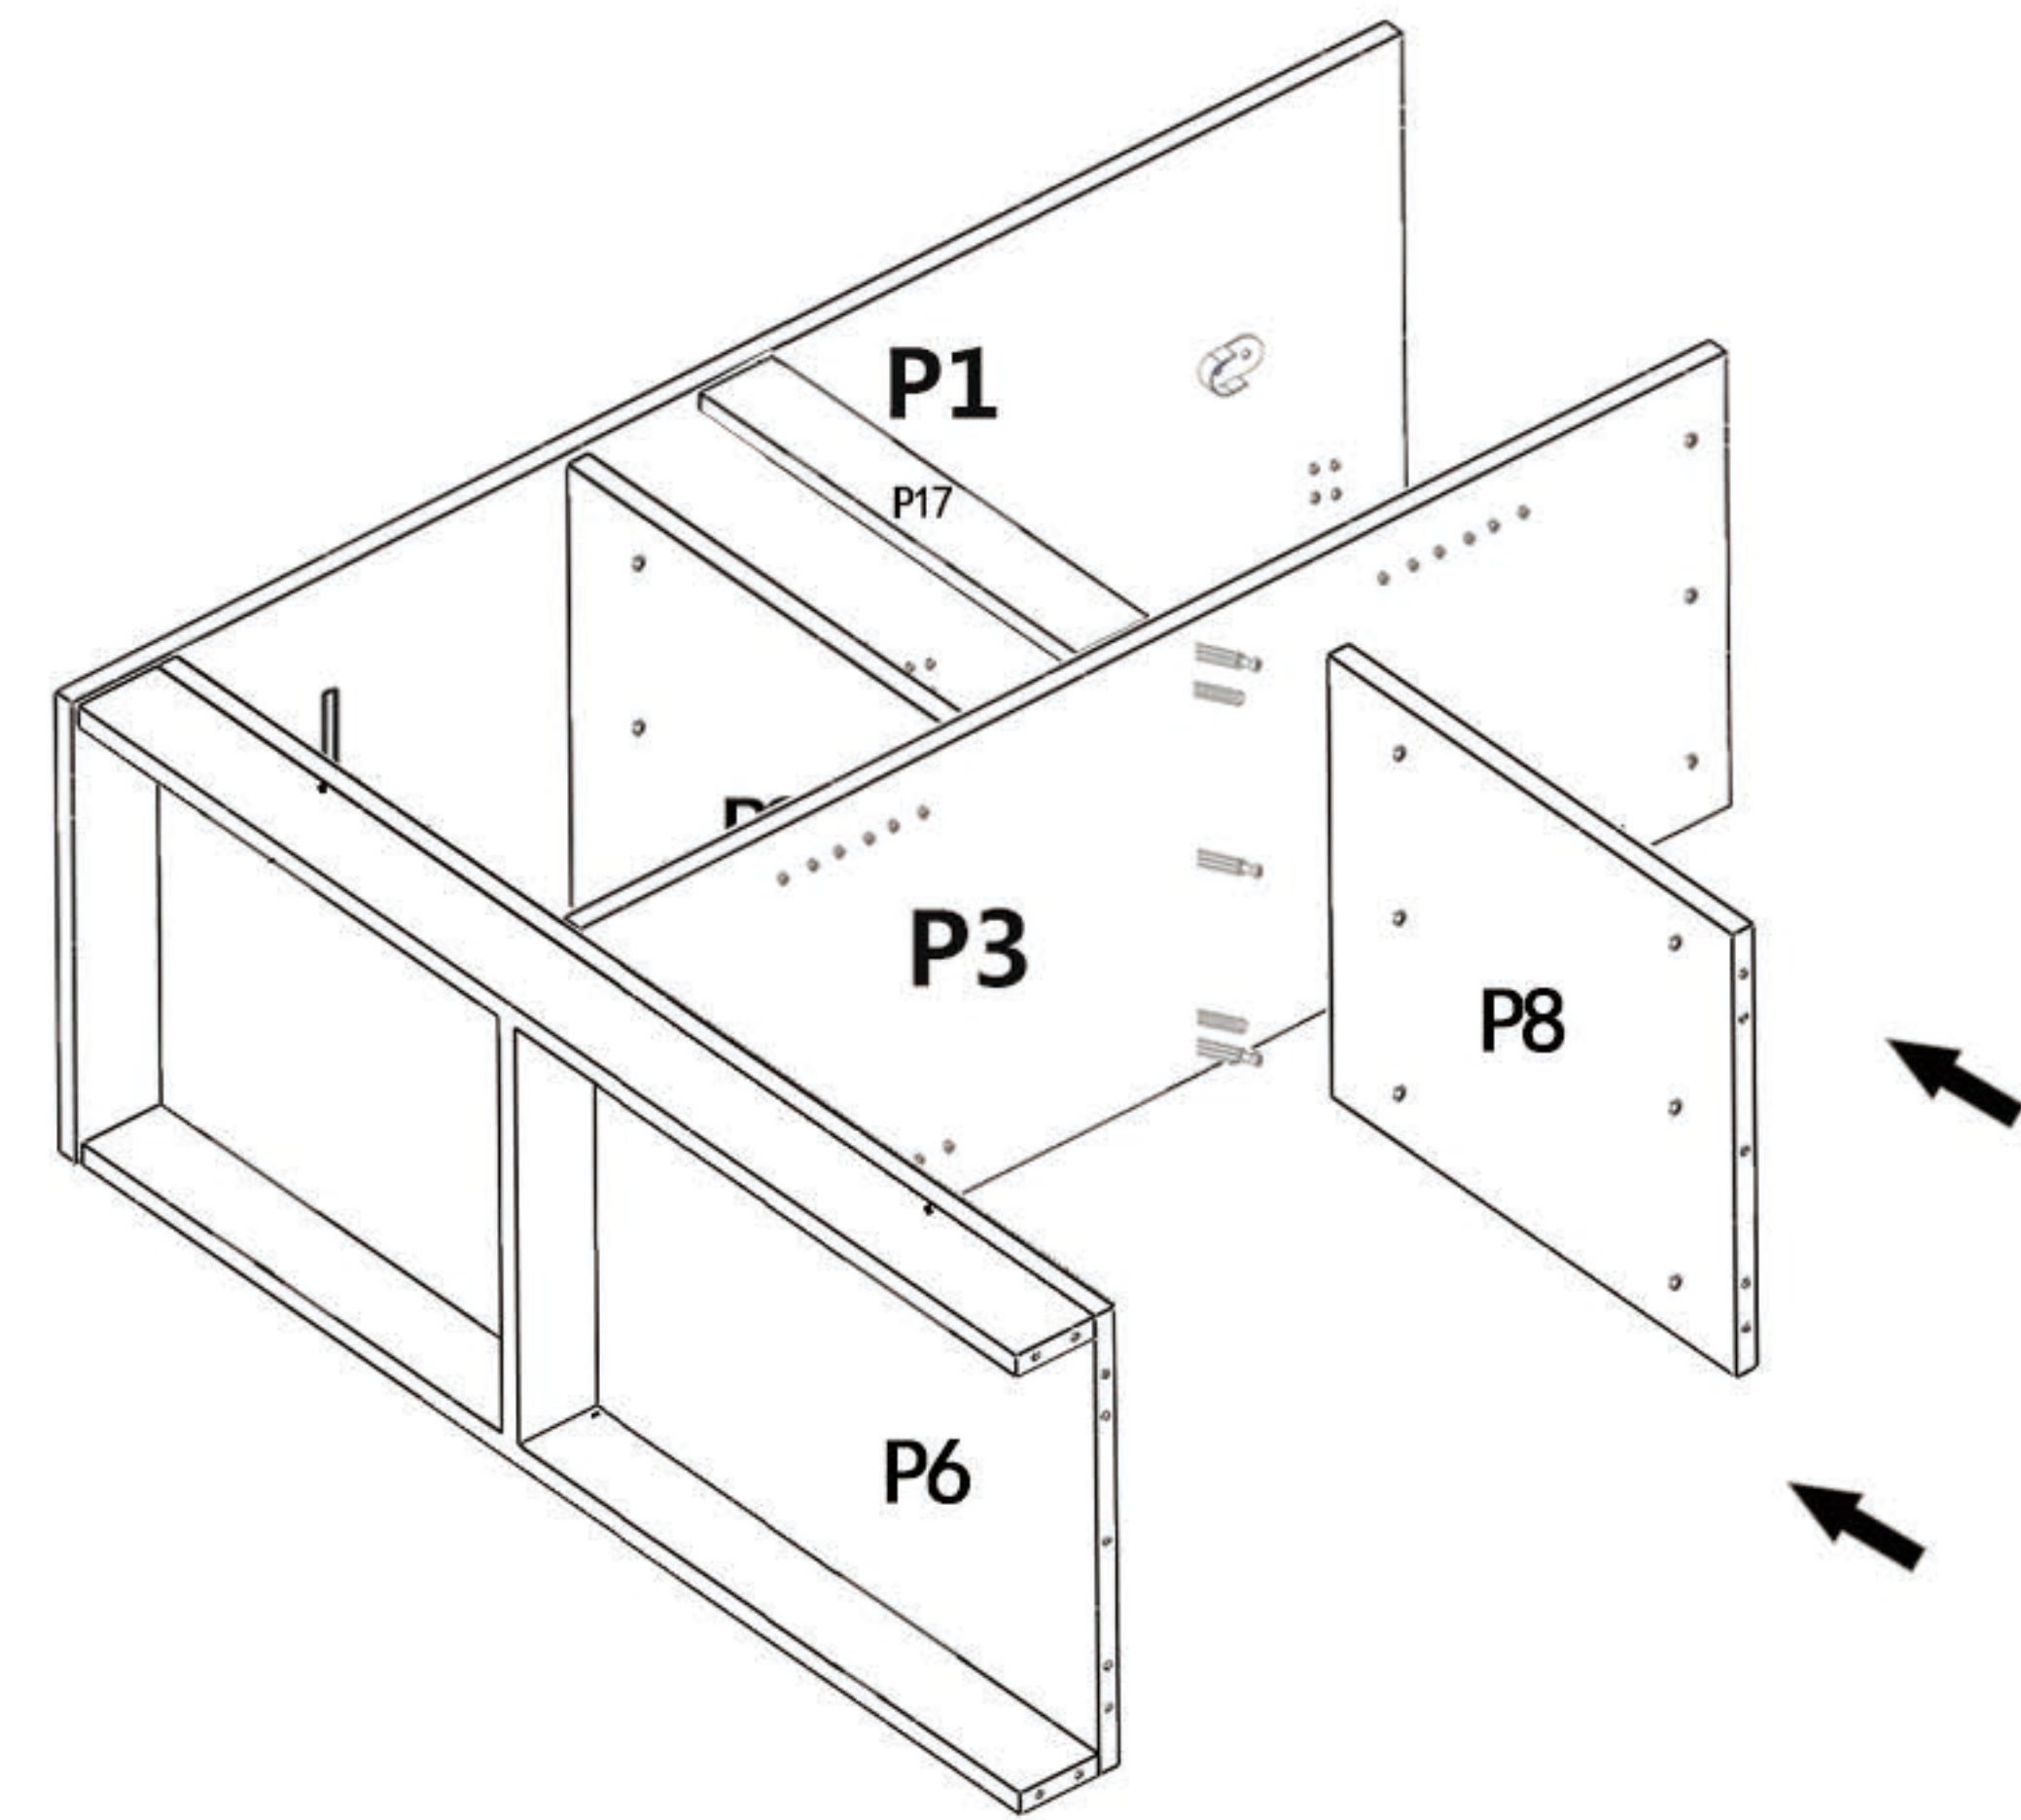


9-3

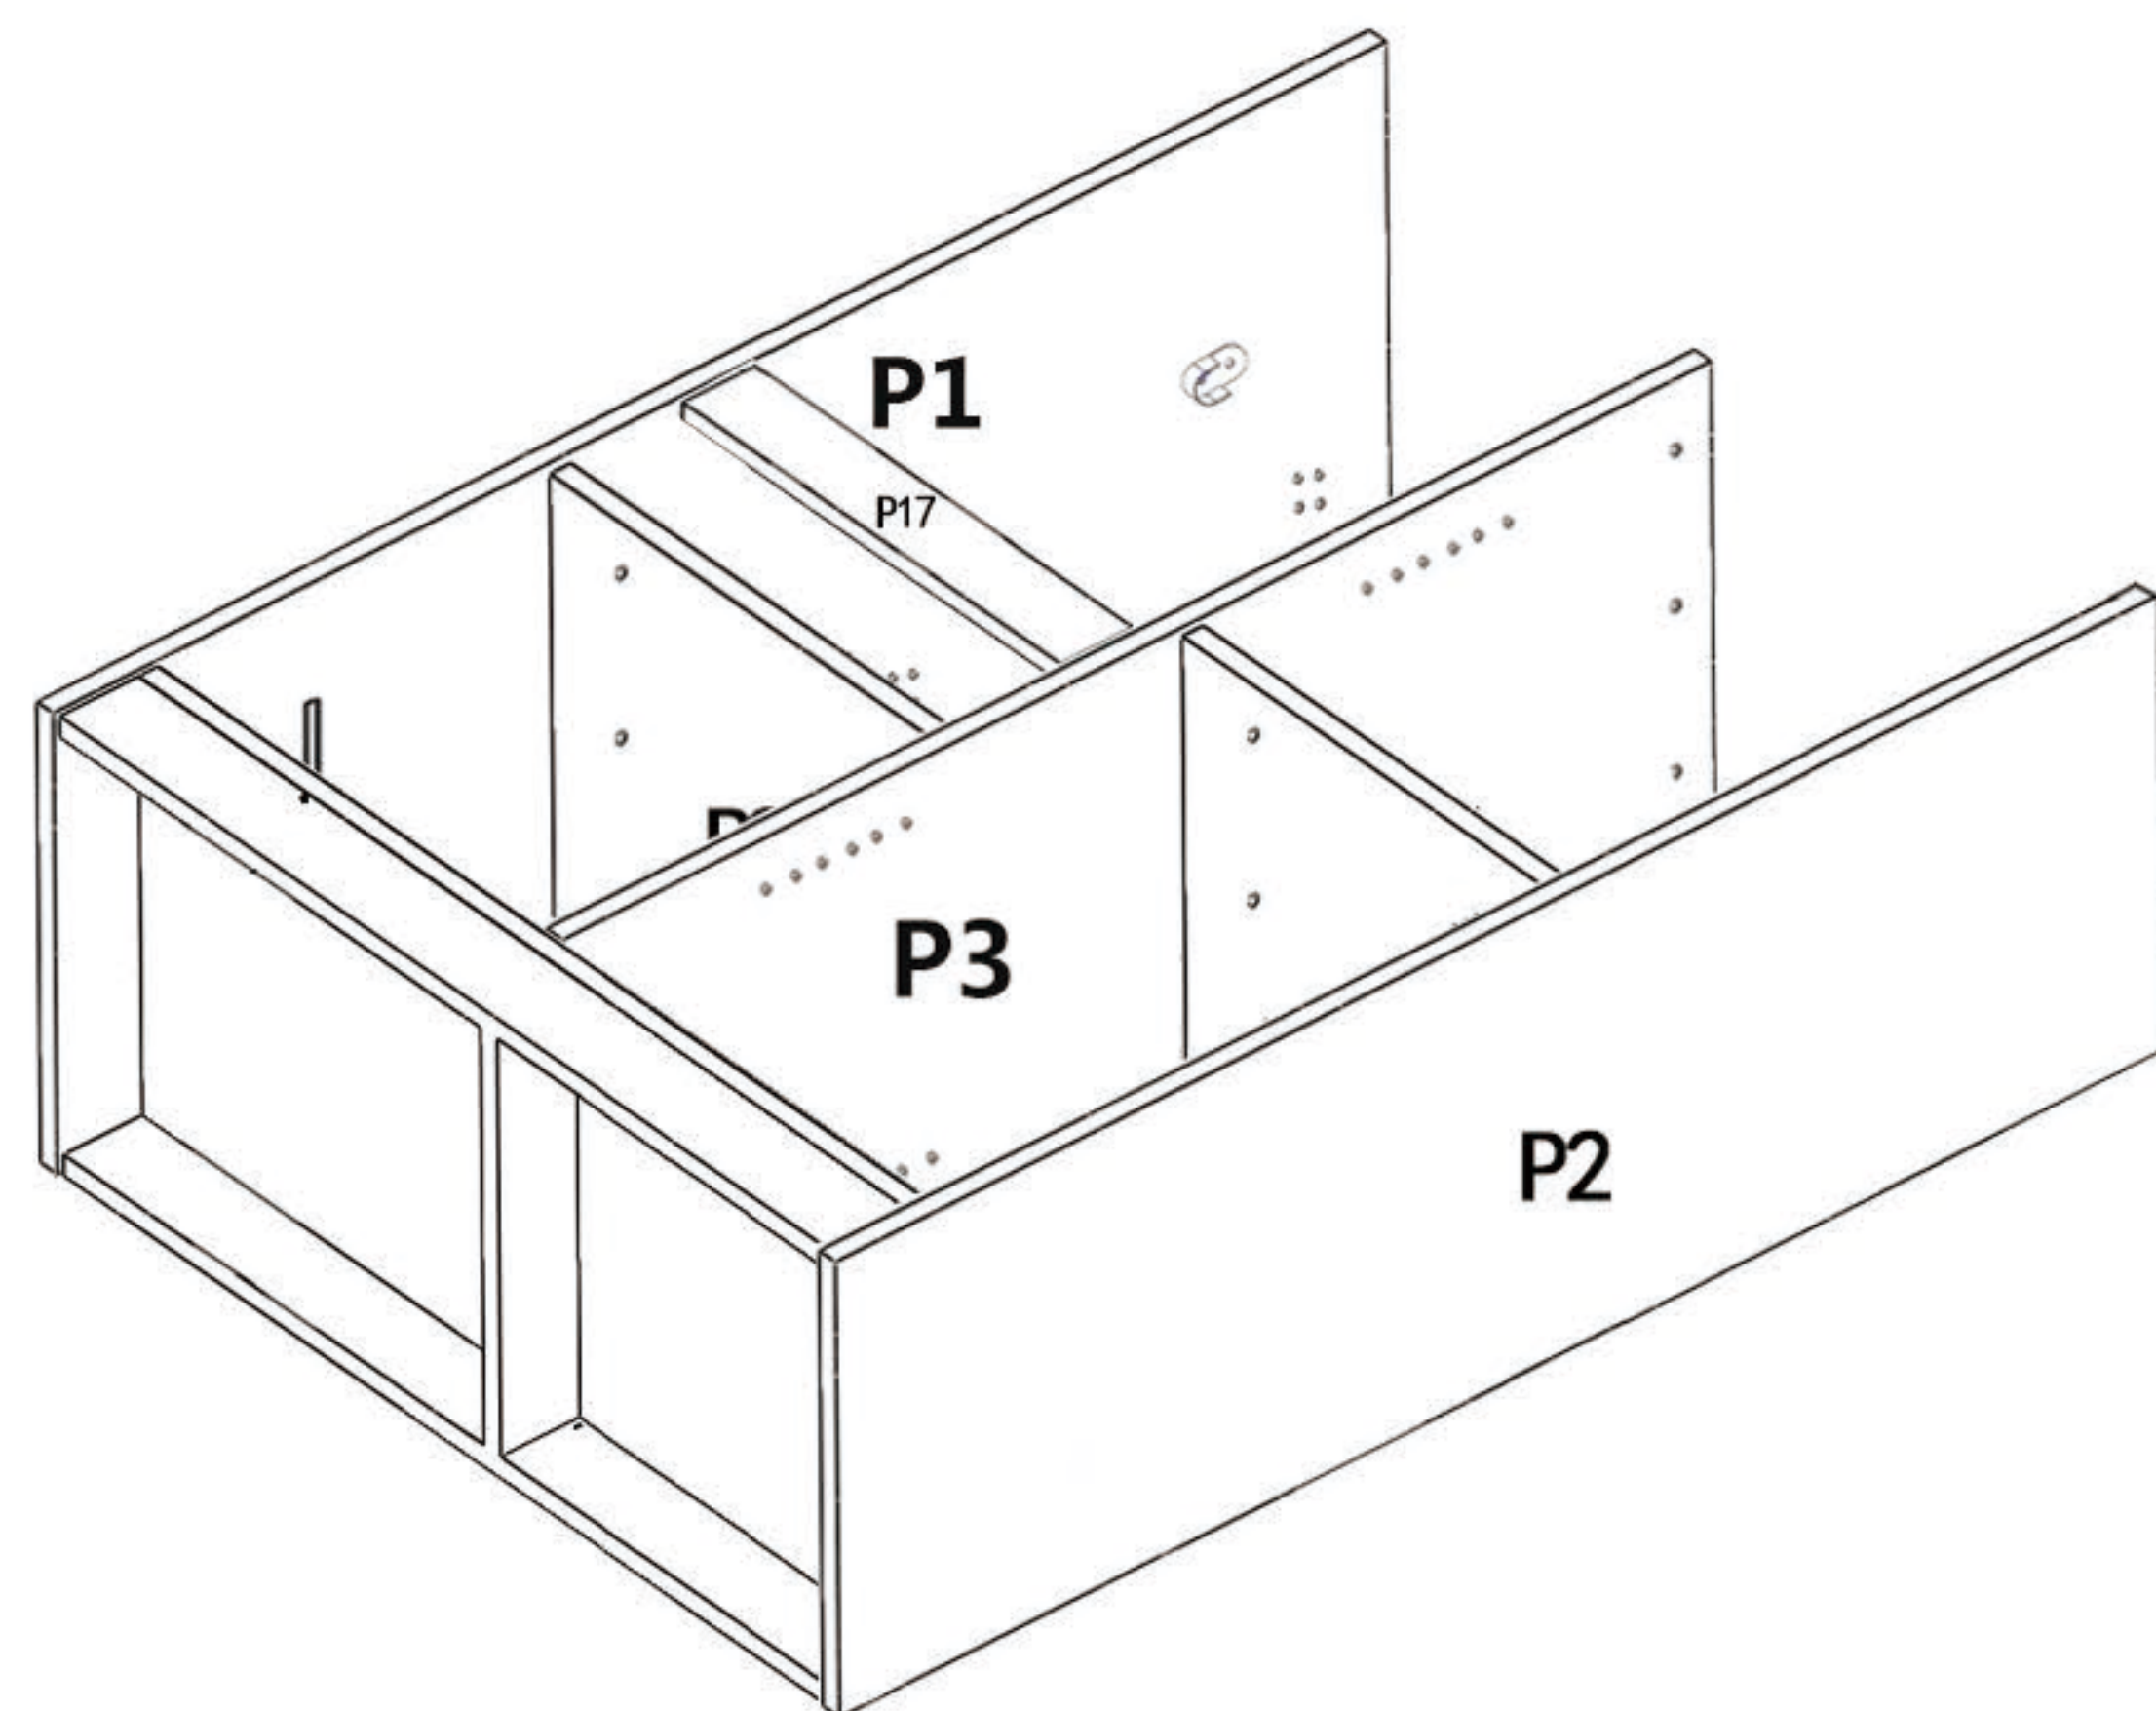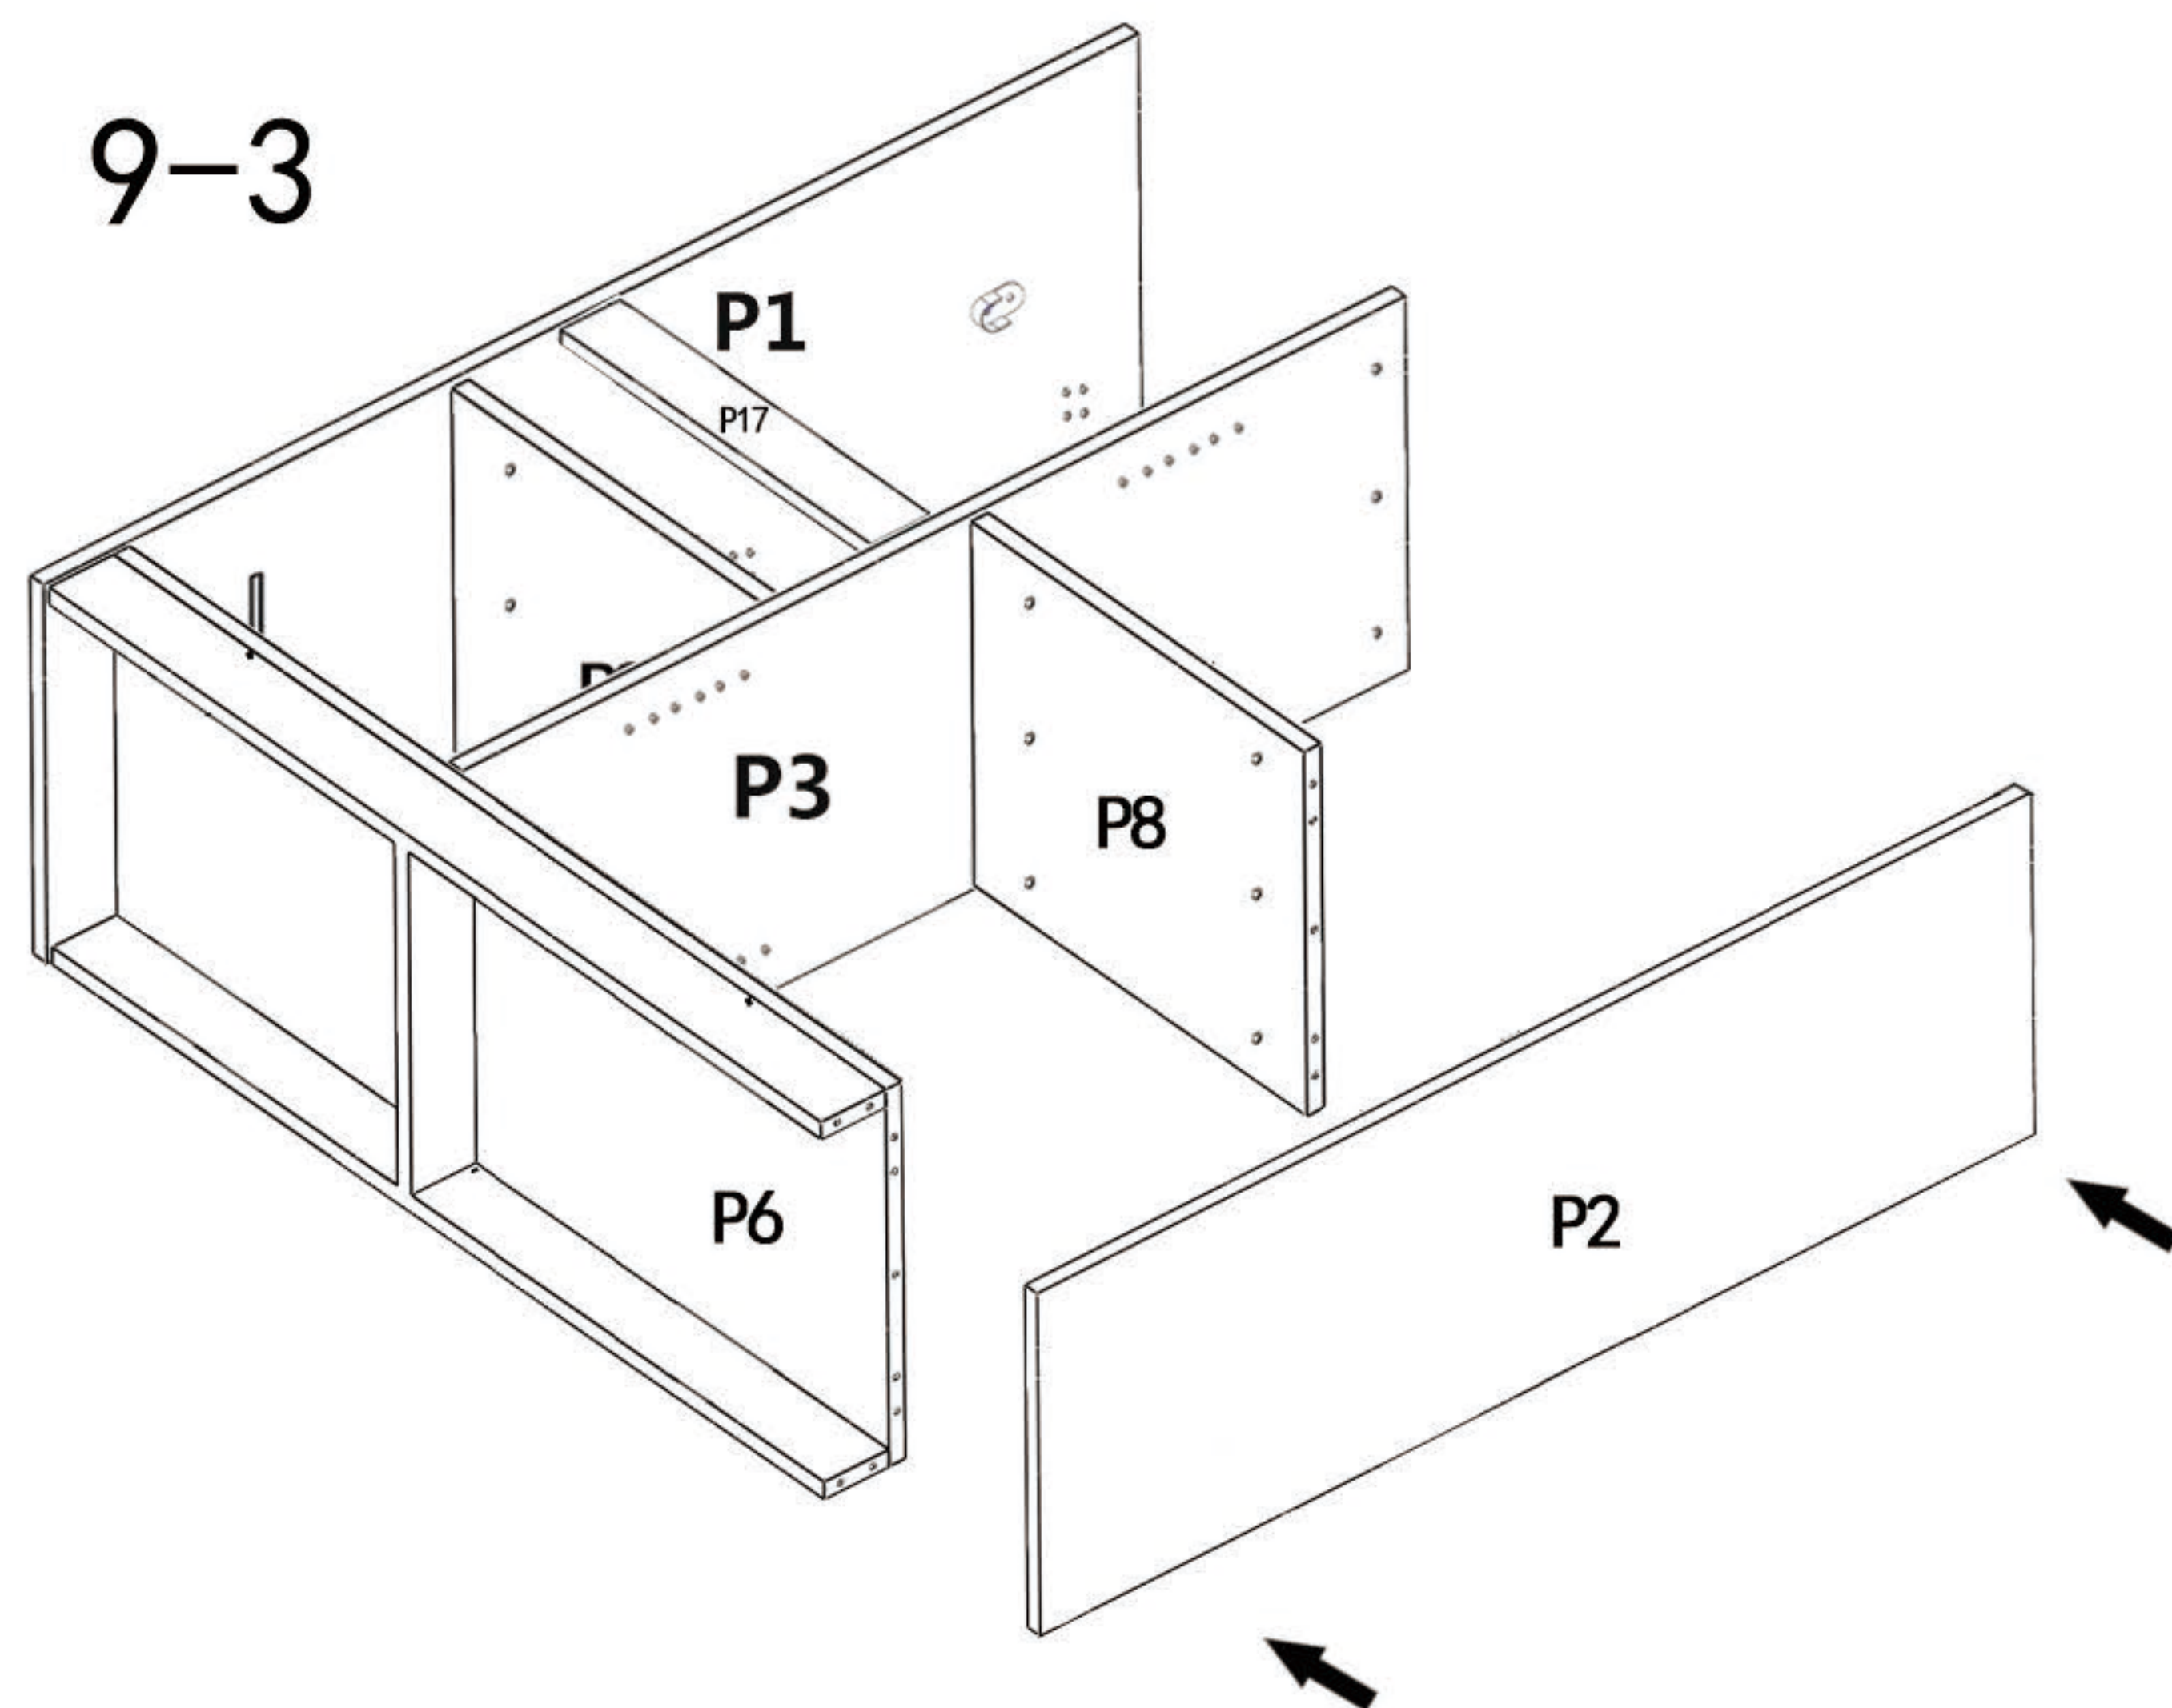

9-4

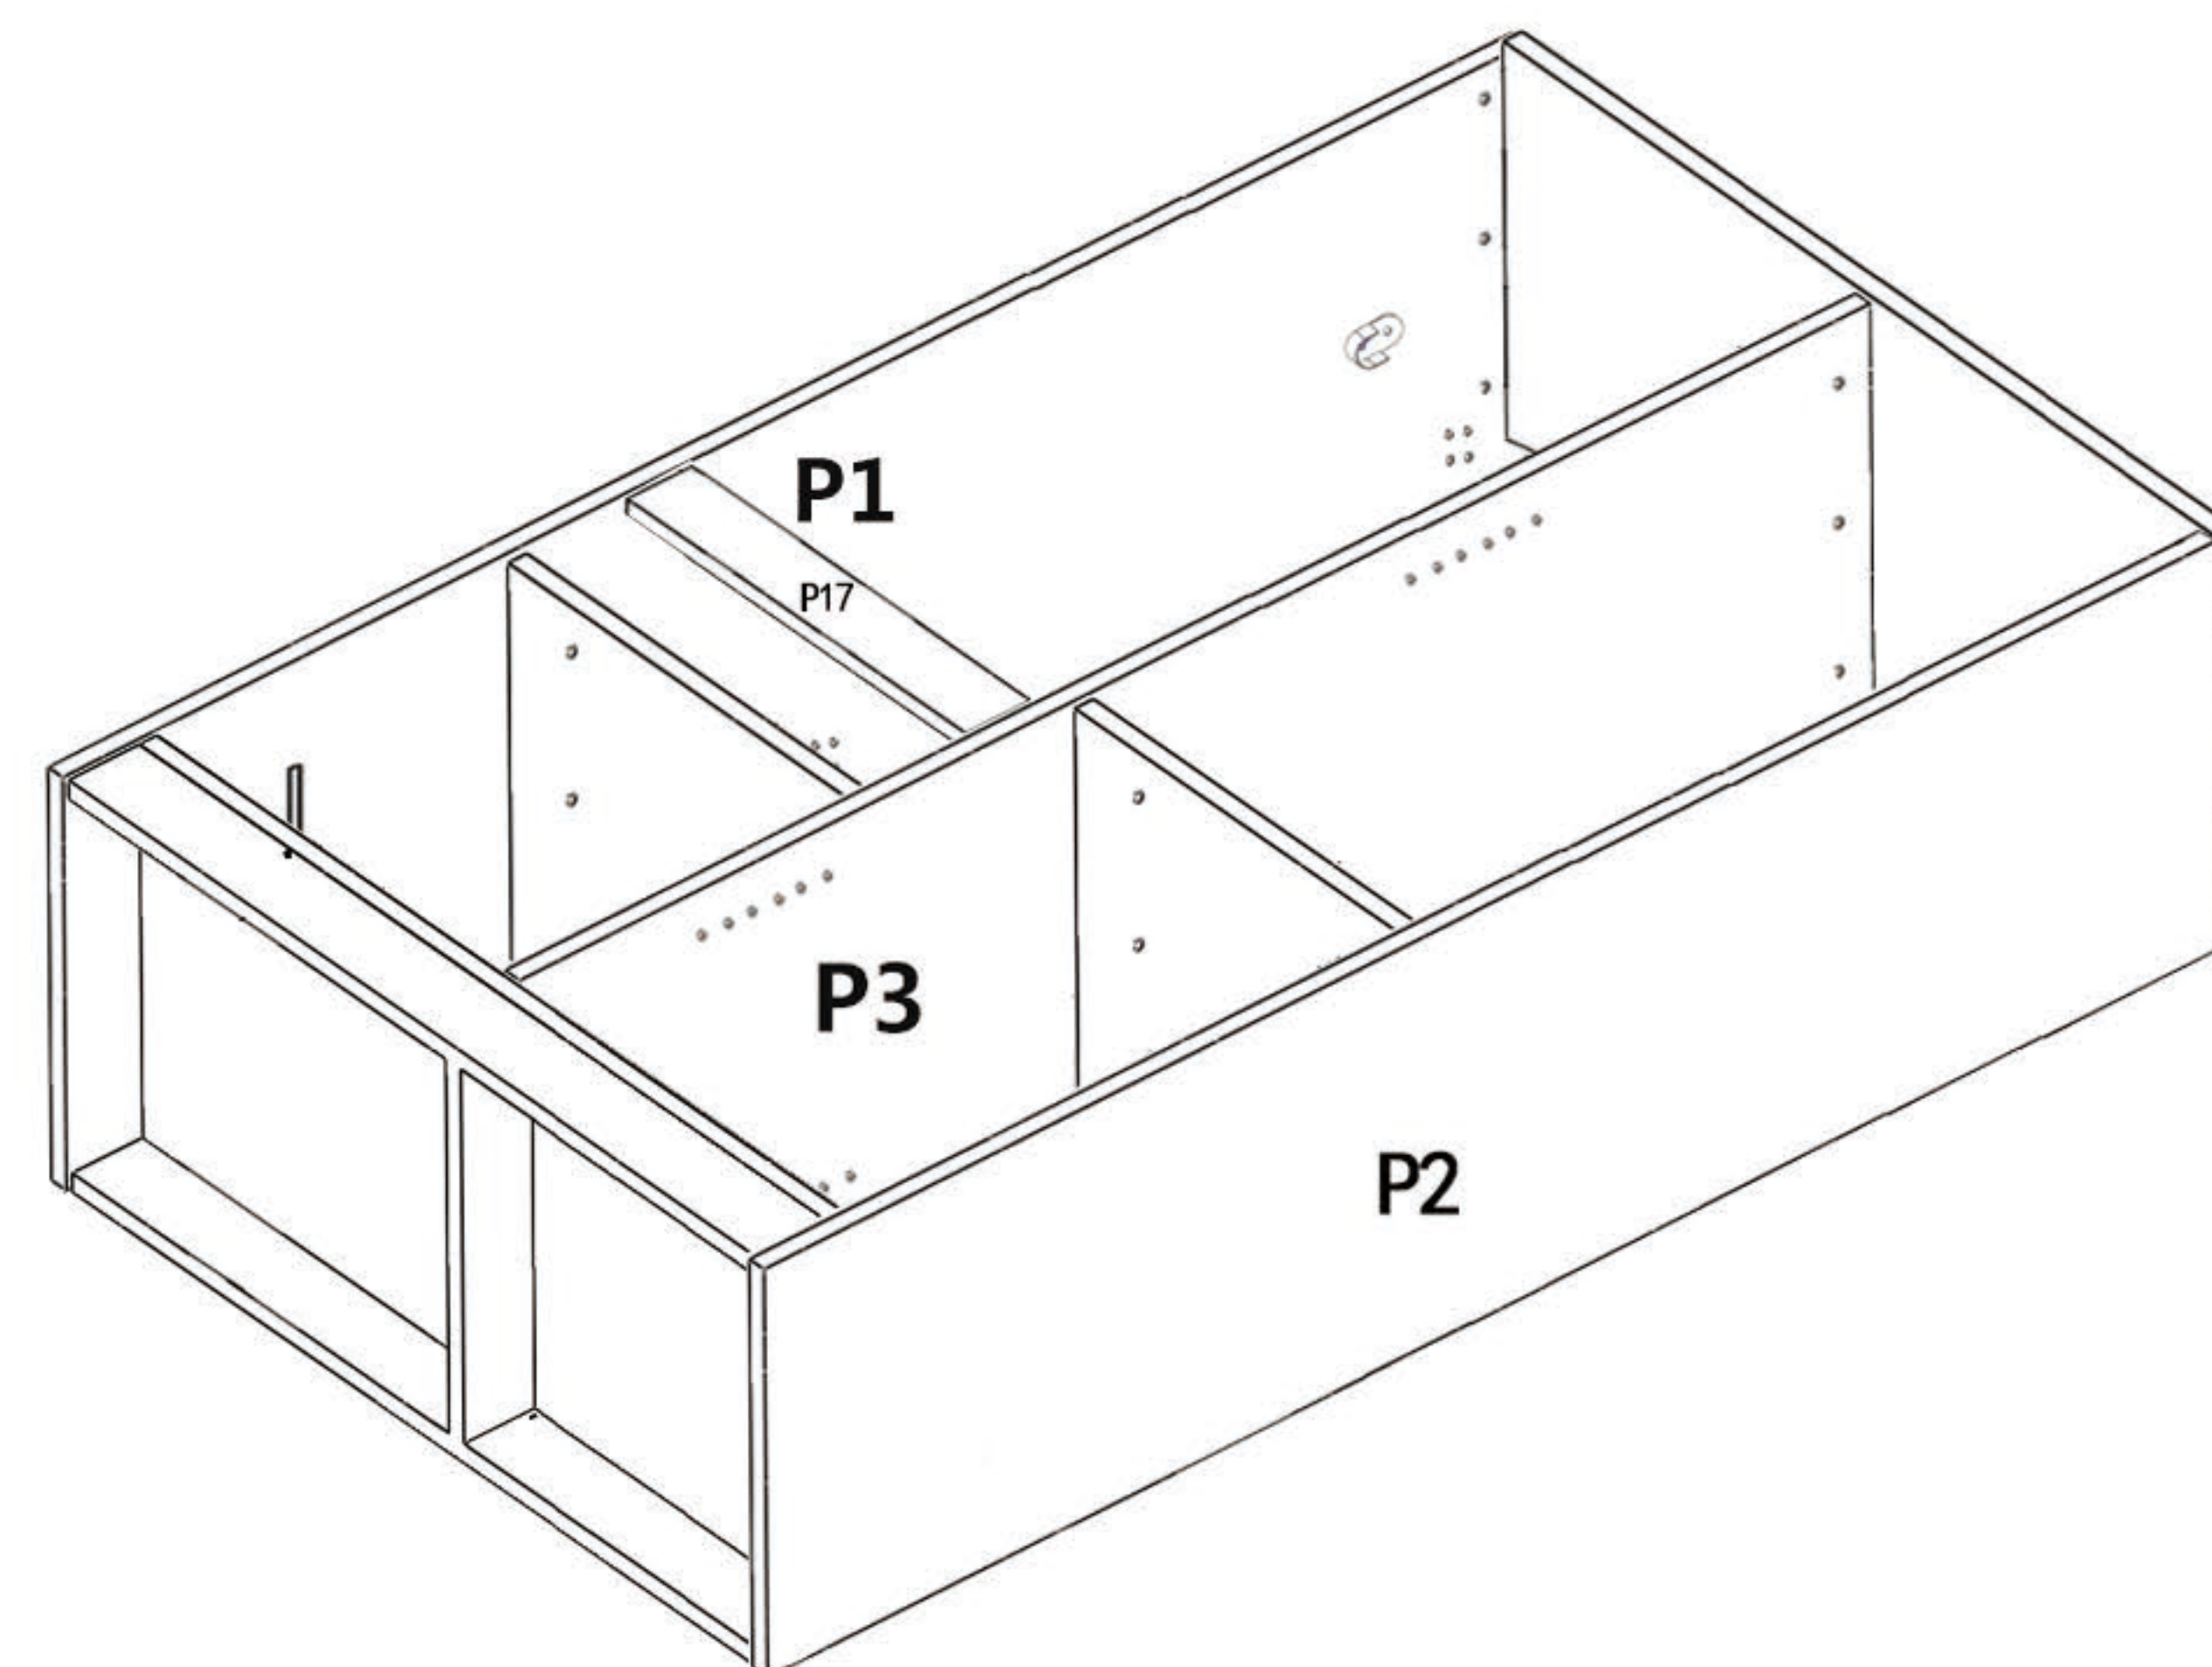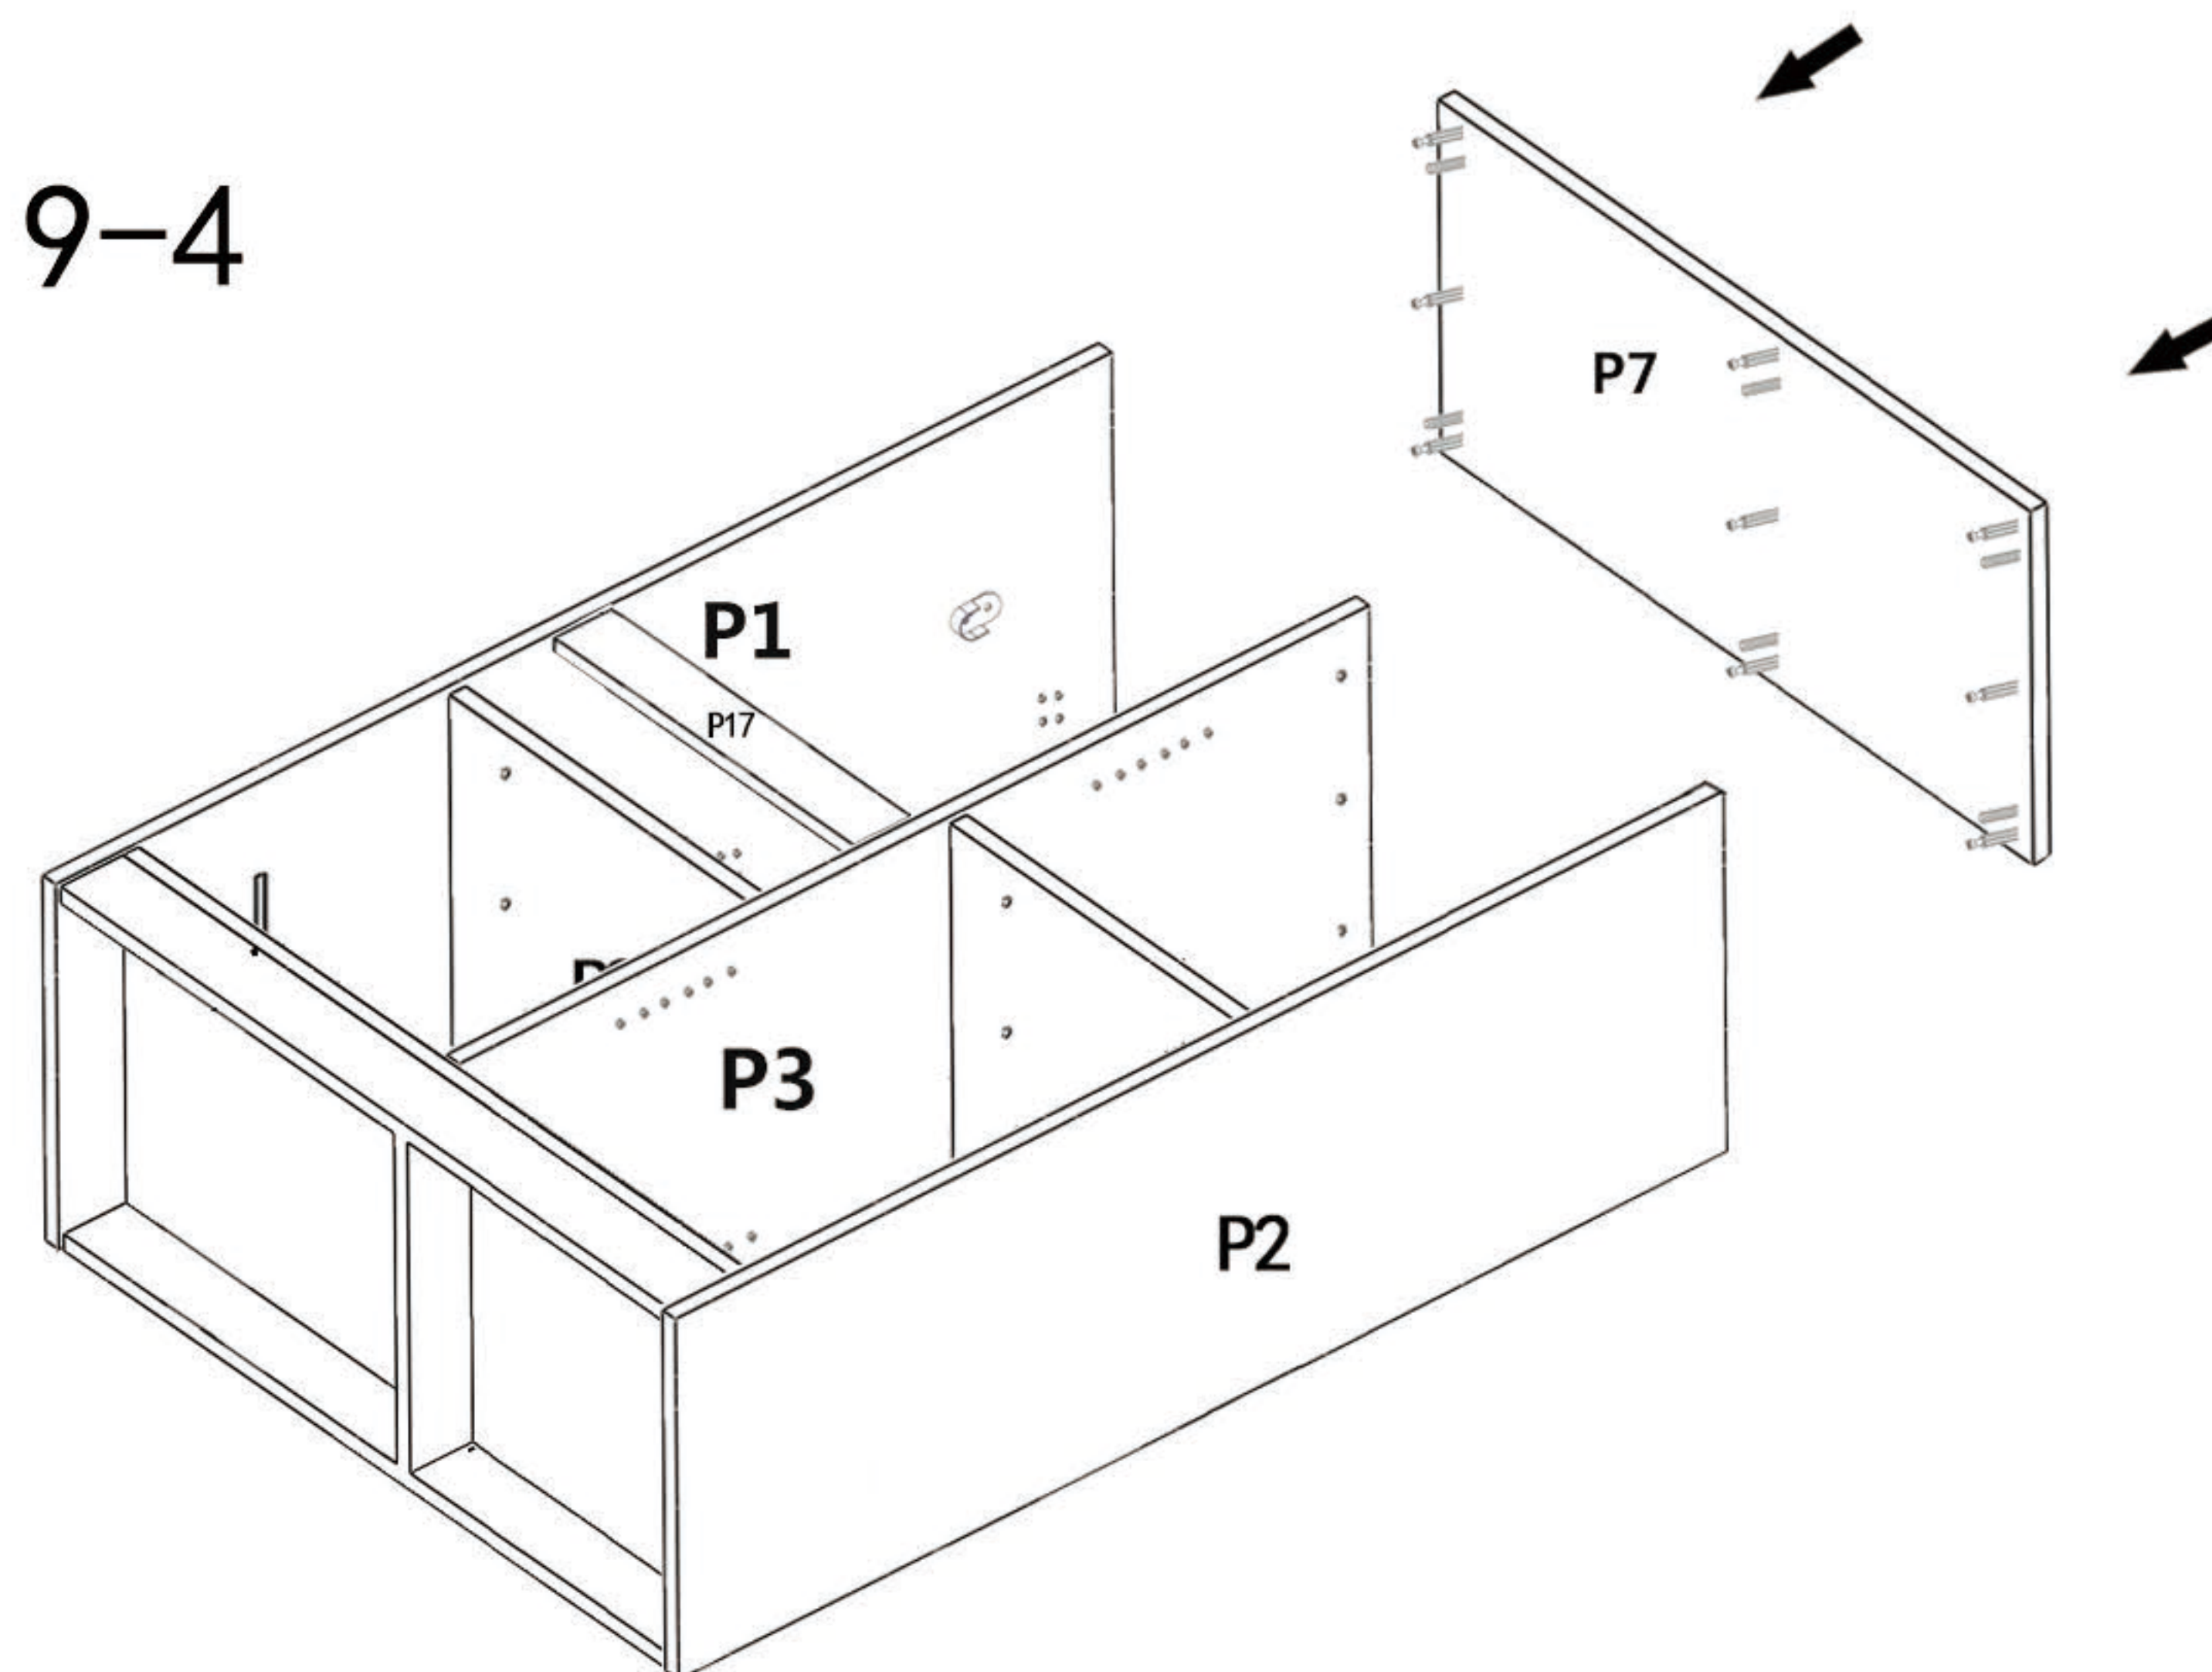


9-5

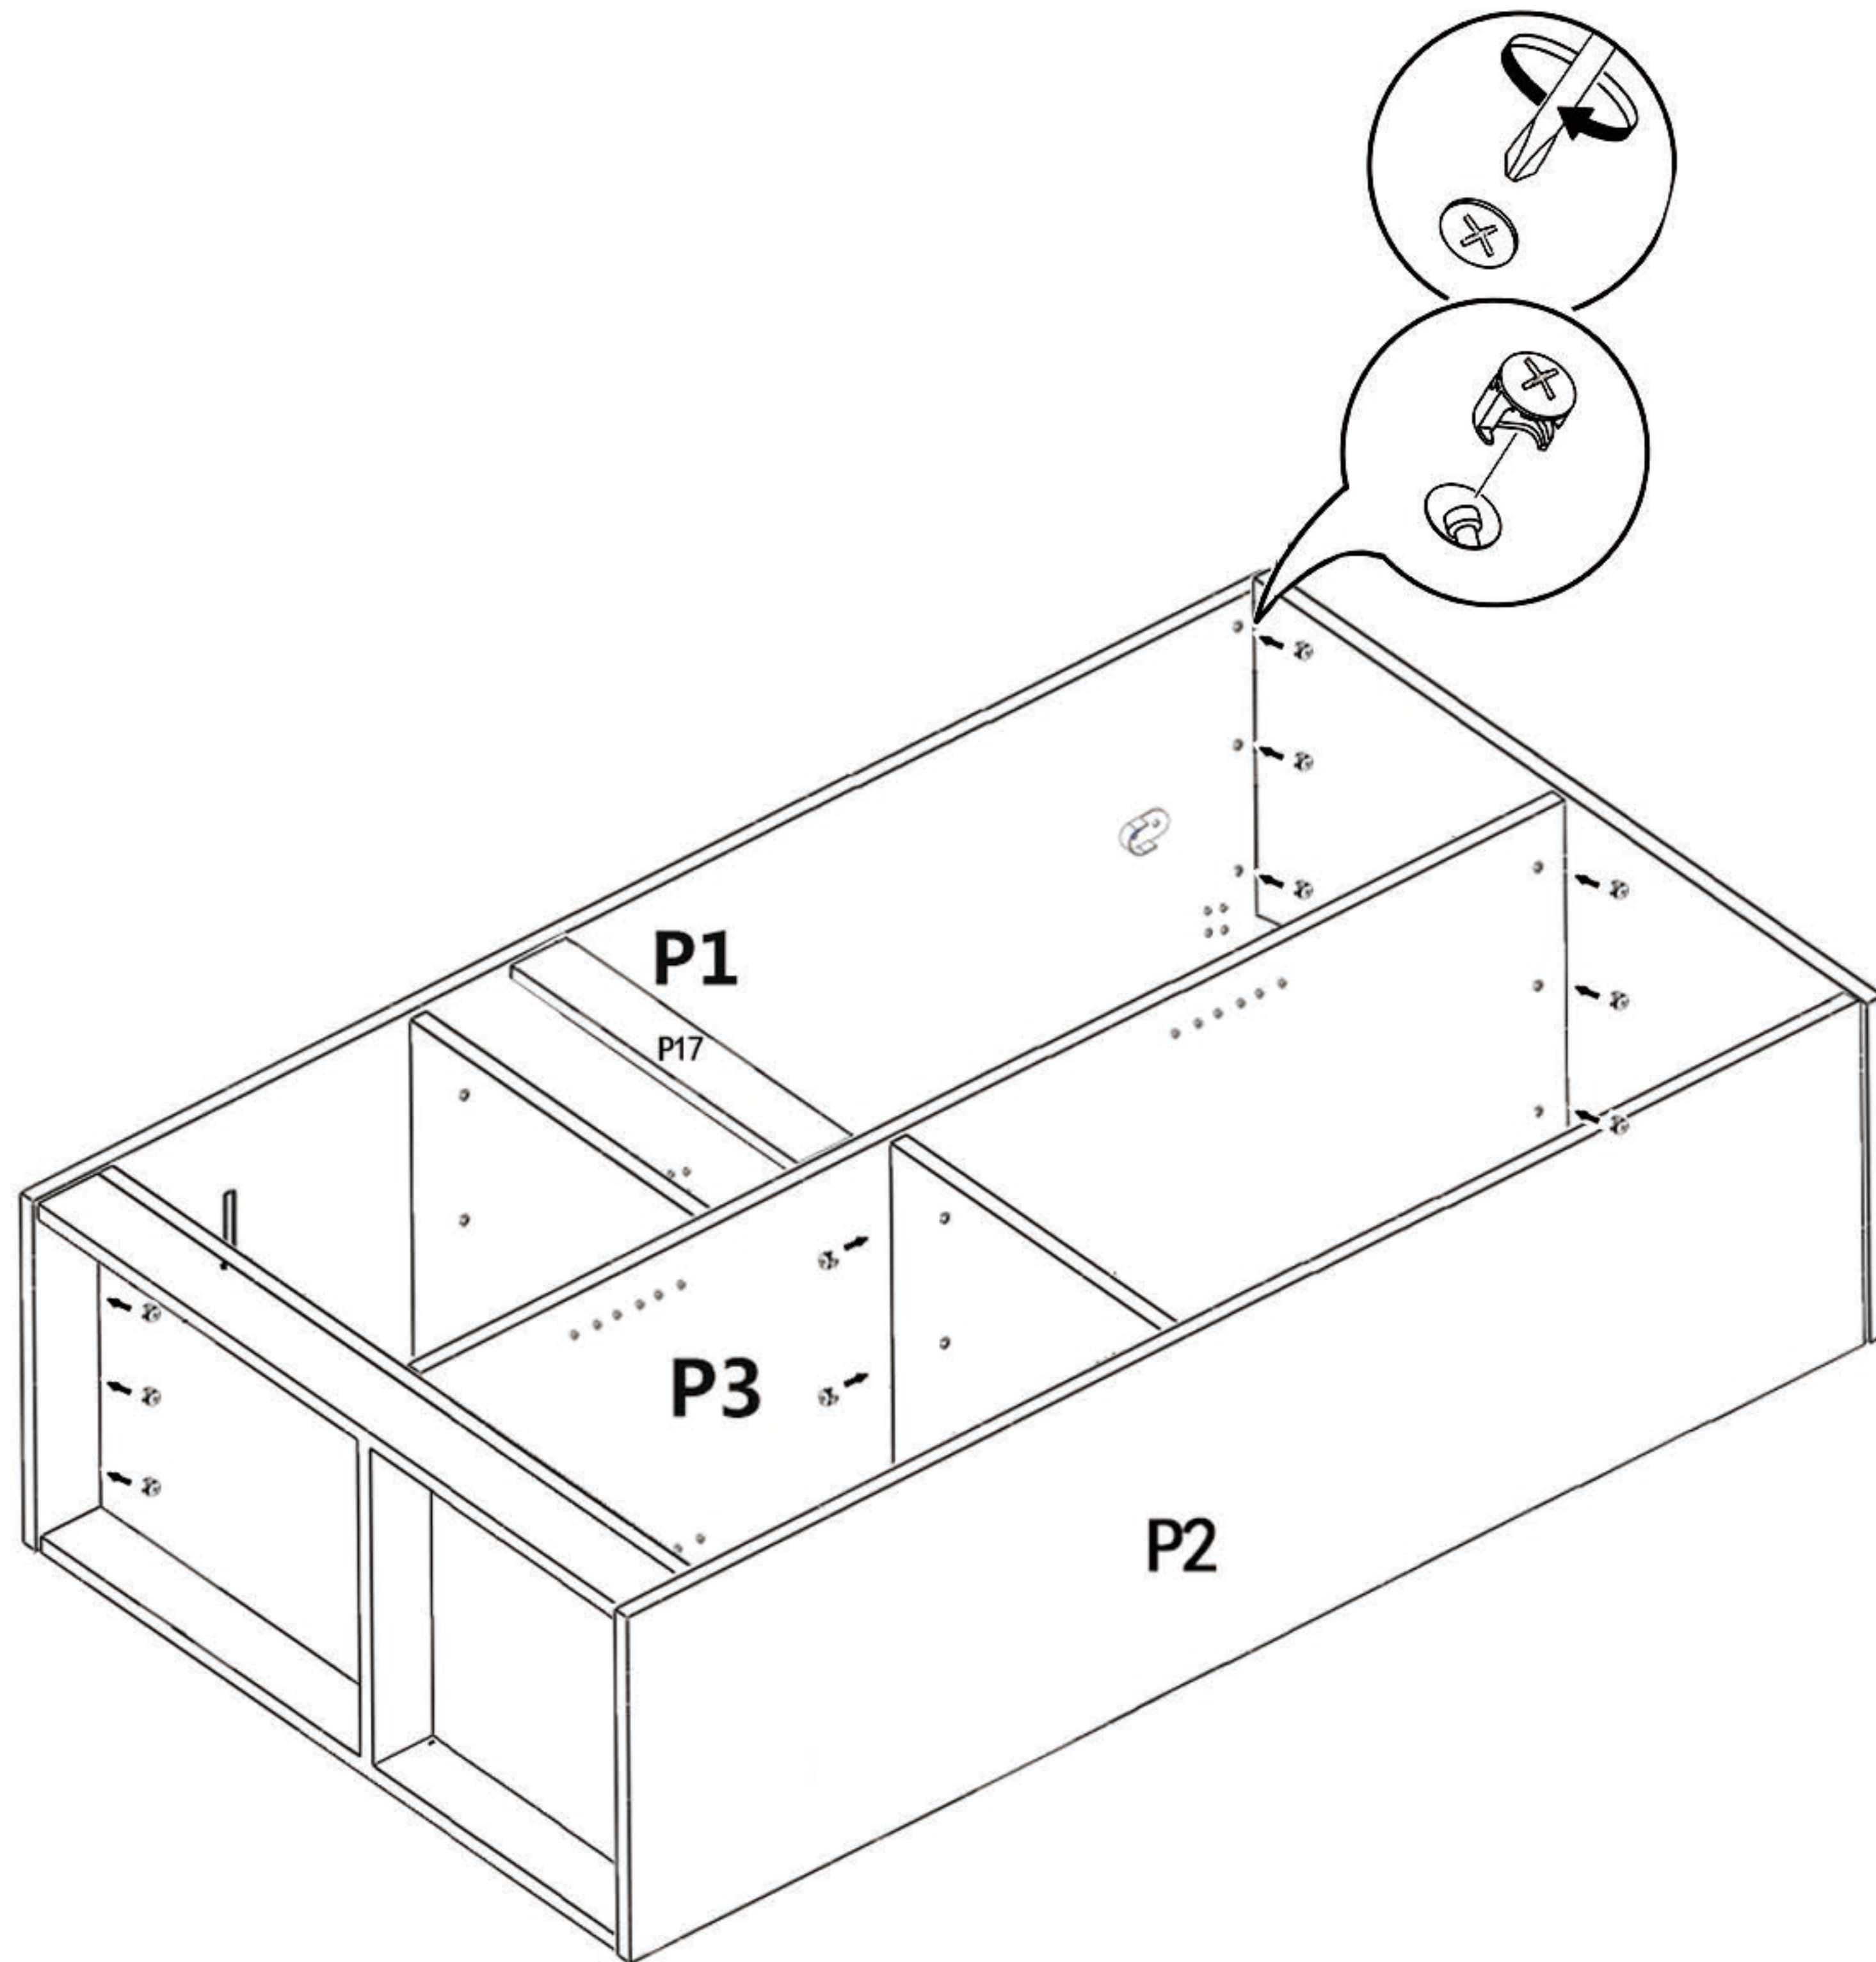


9-6

TAP THE TOP OF WARDROBE

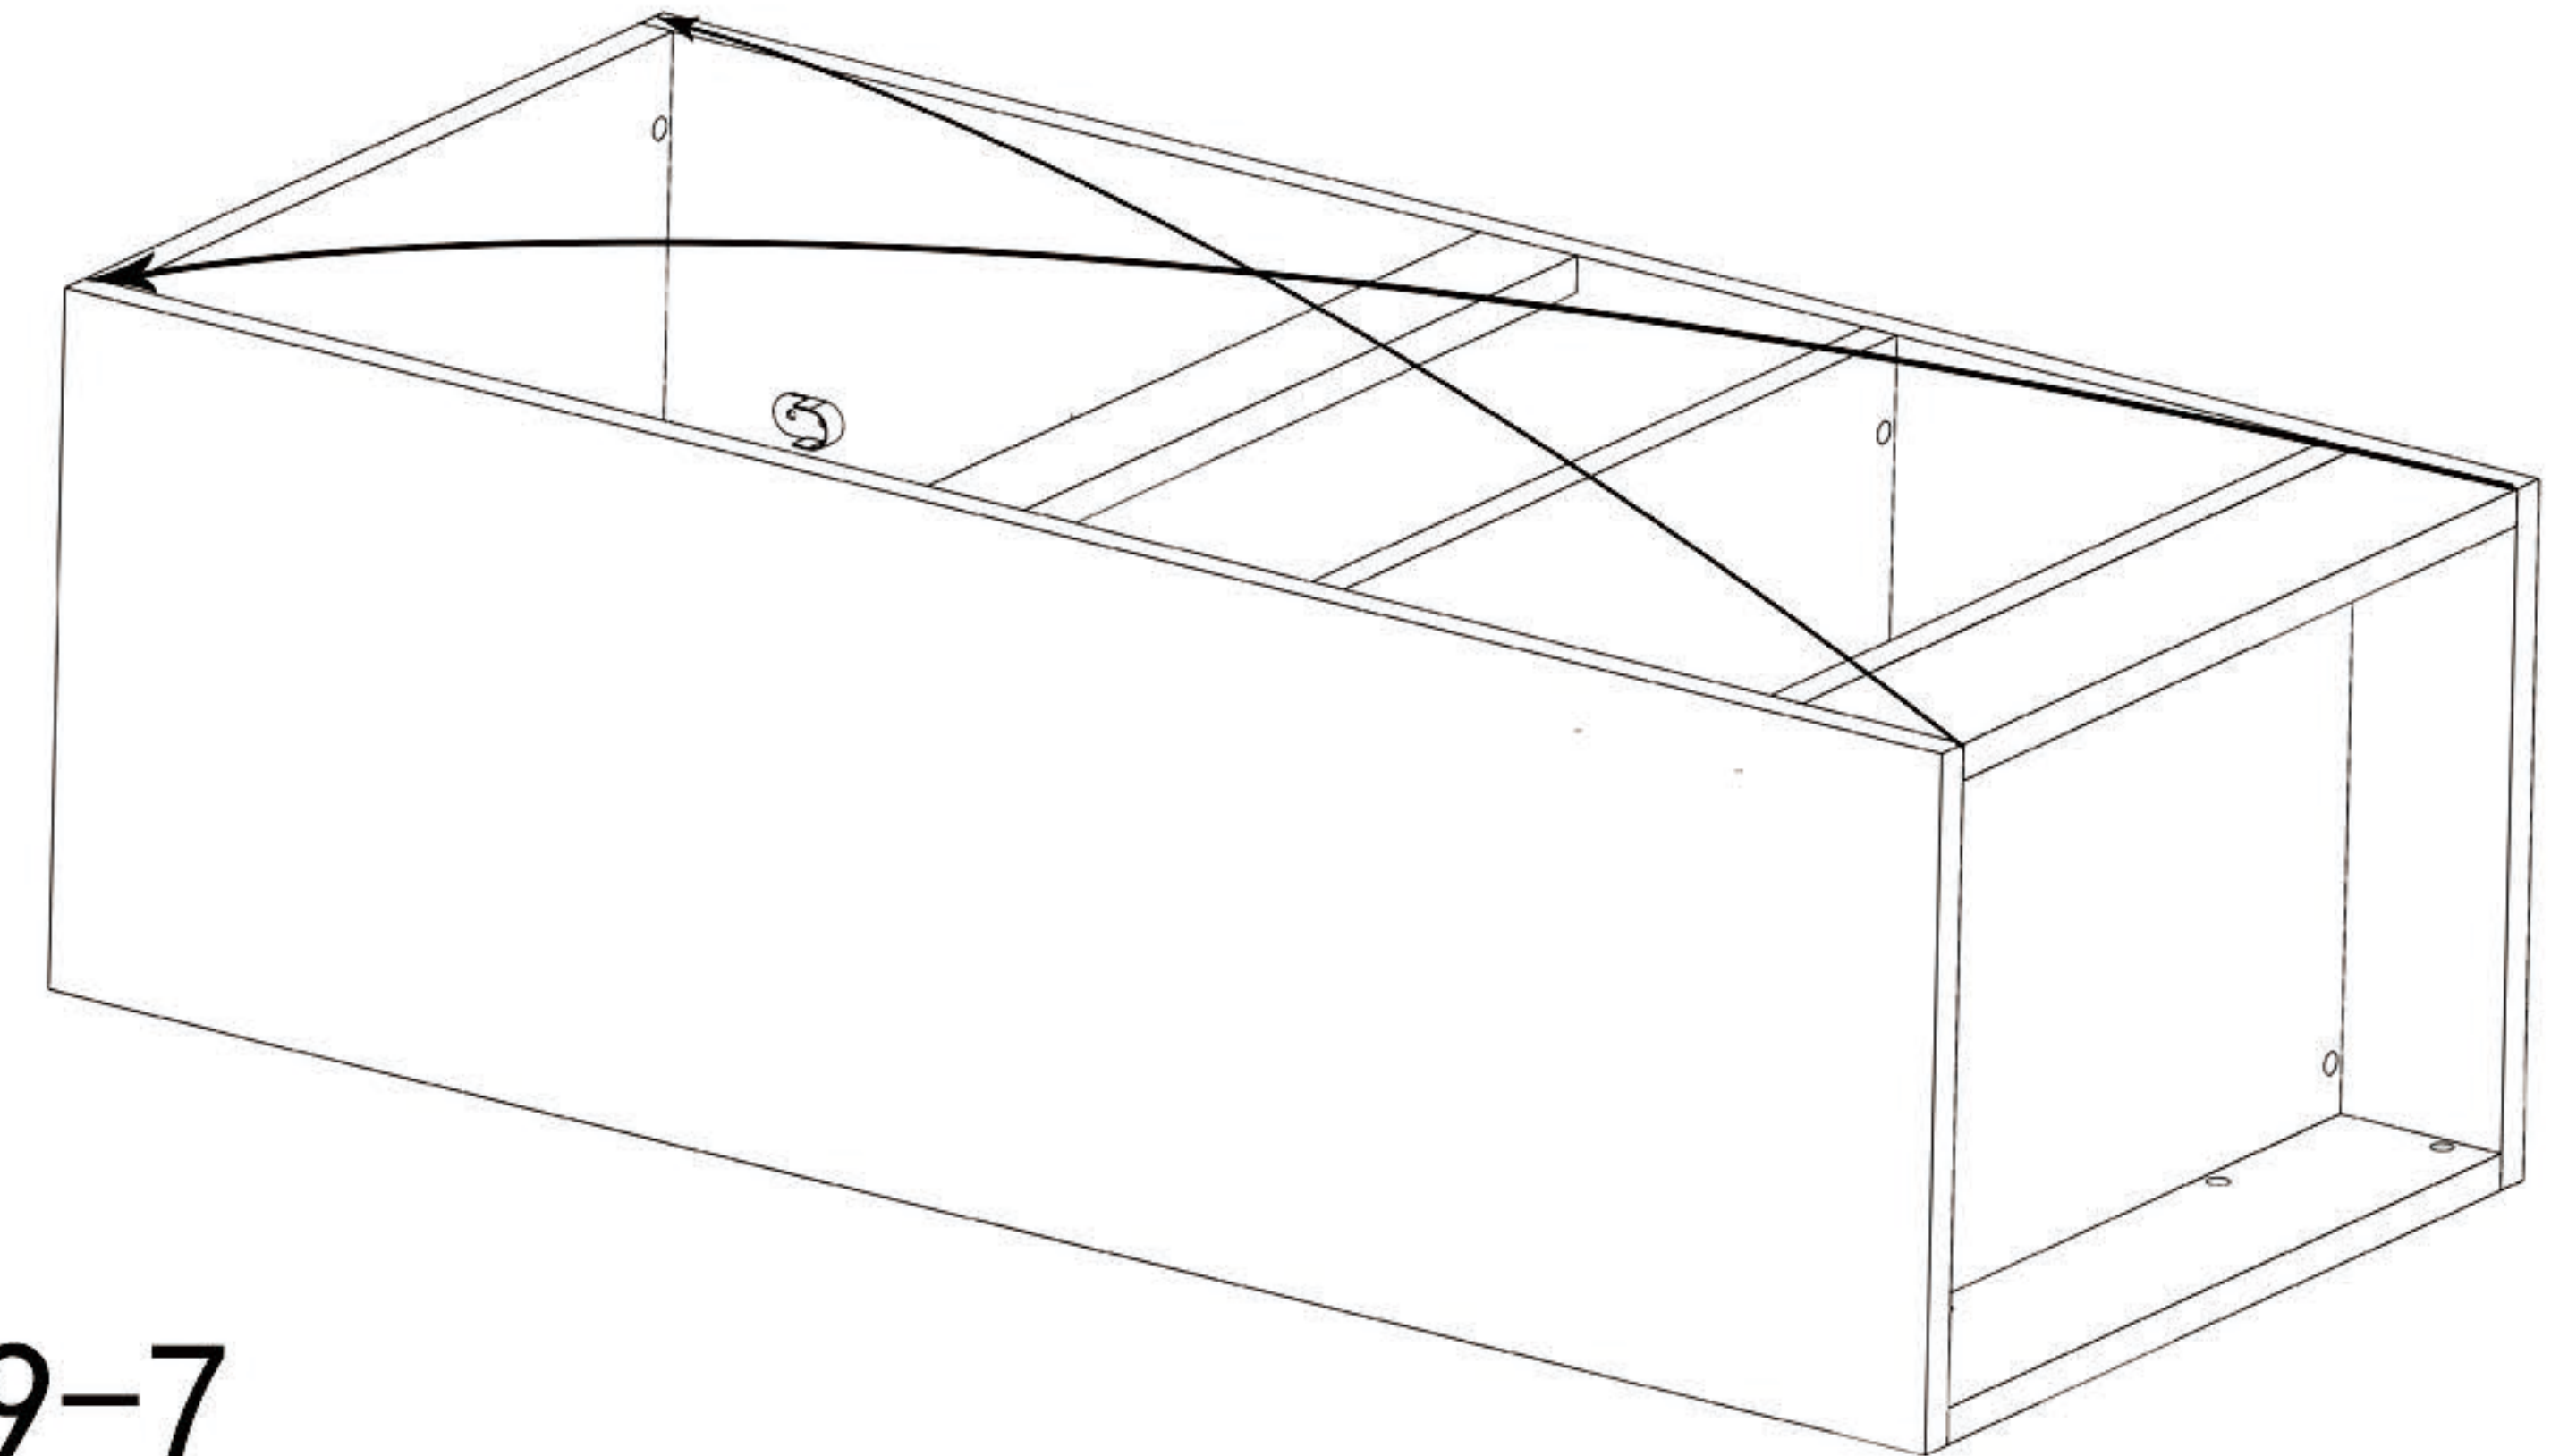


9-7


MEASURE DIAGONAL BY
RULER MAKE THEM EQUAL

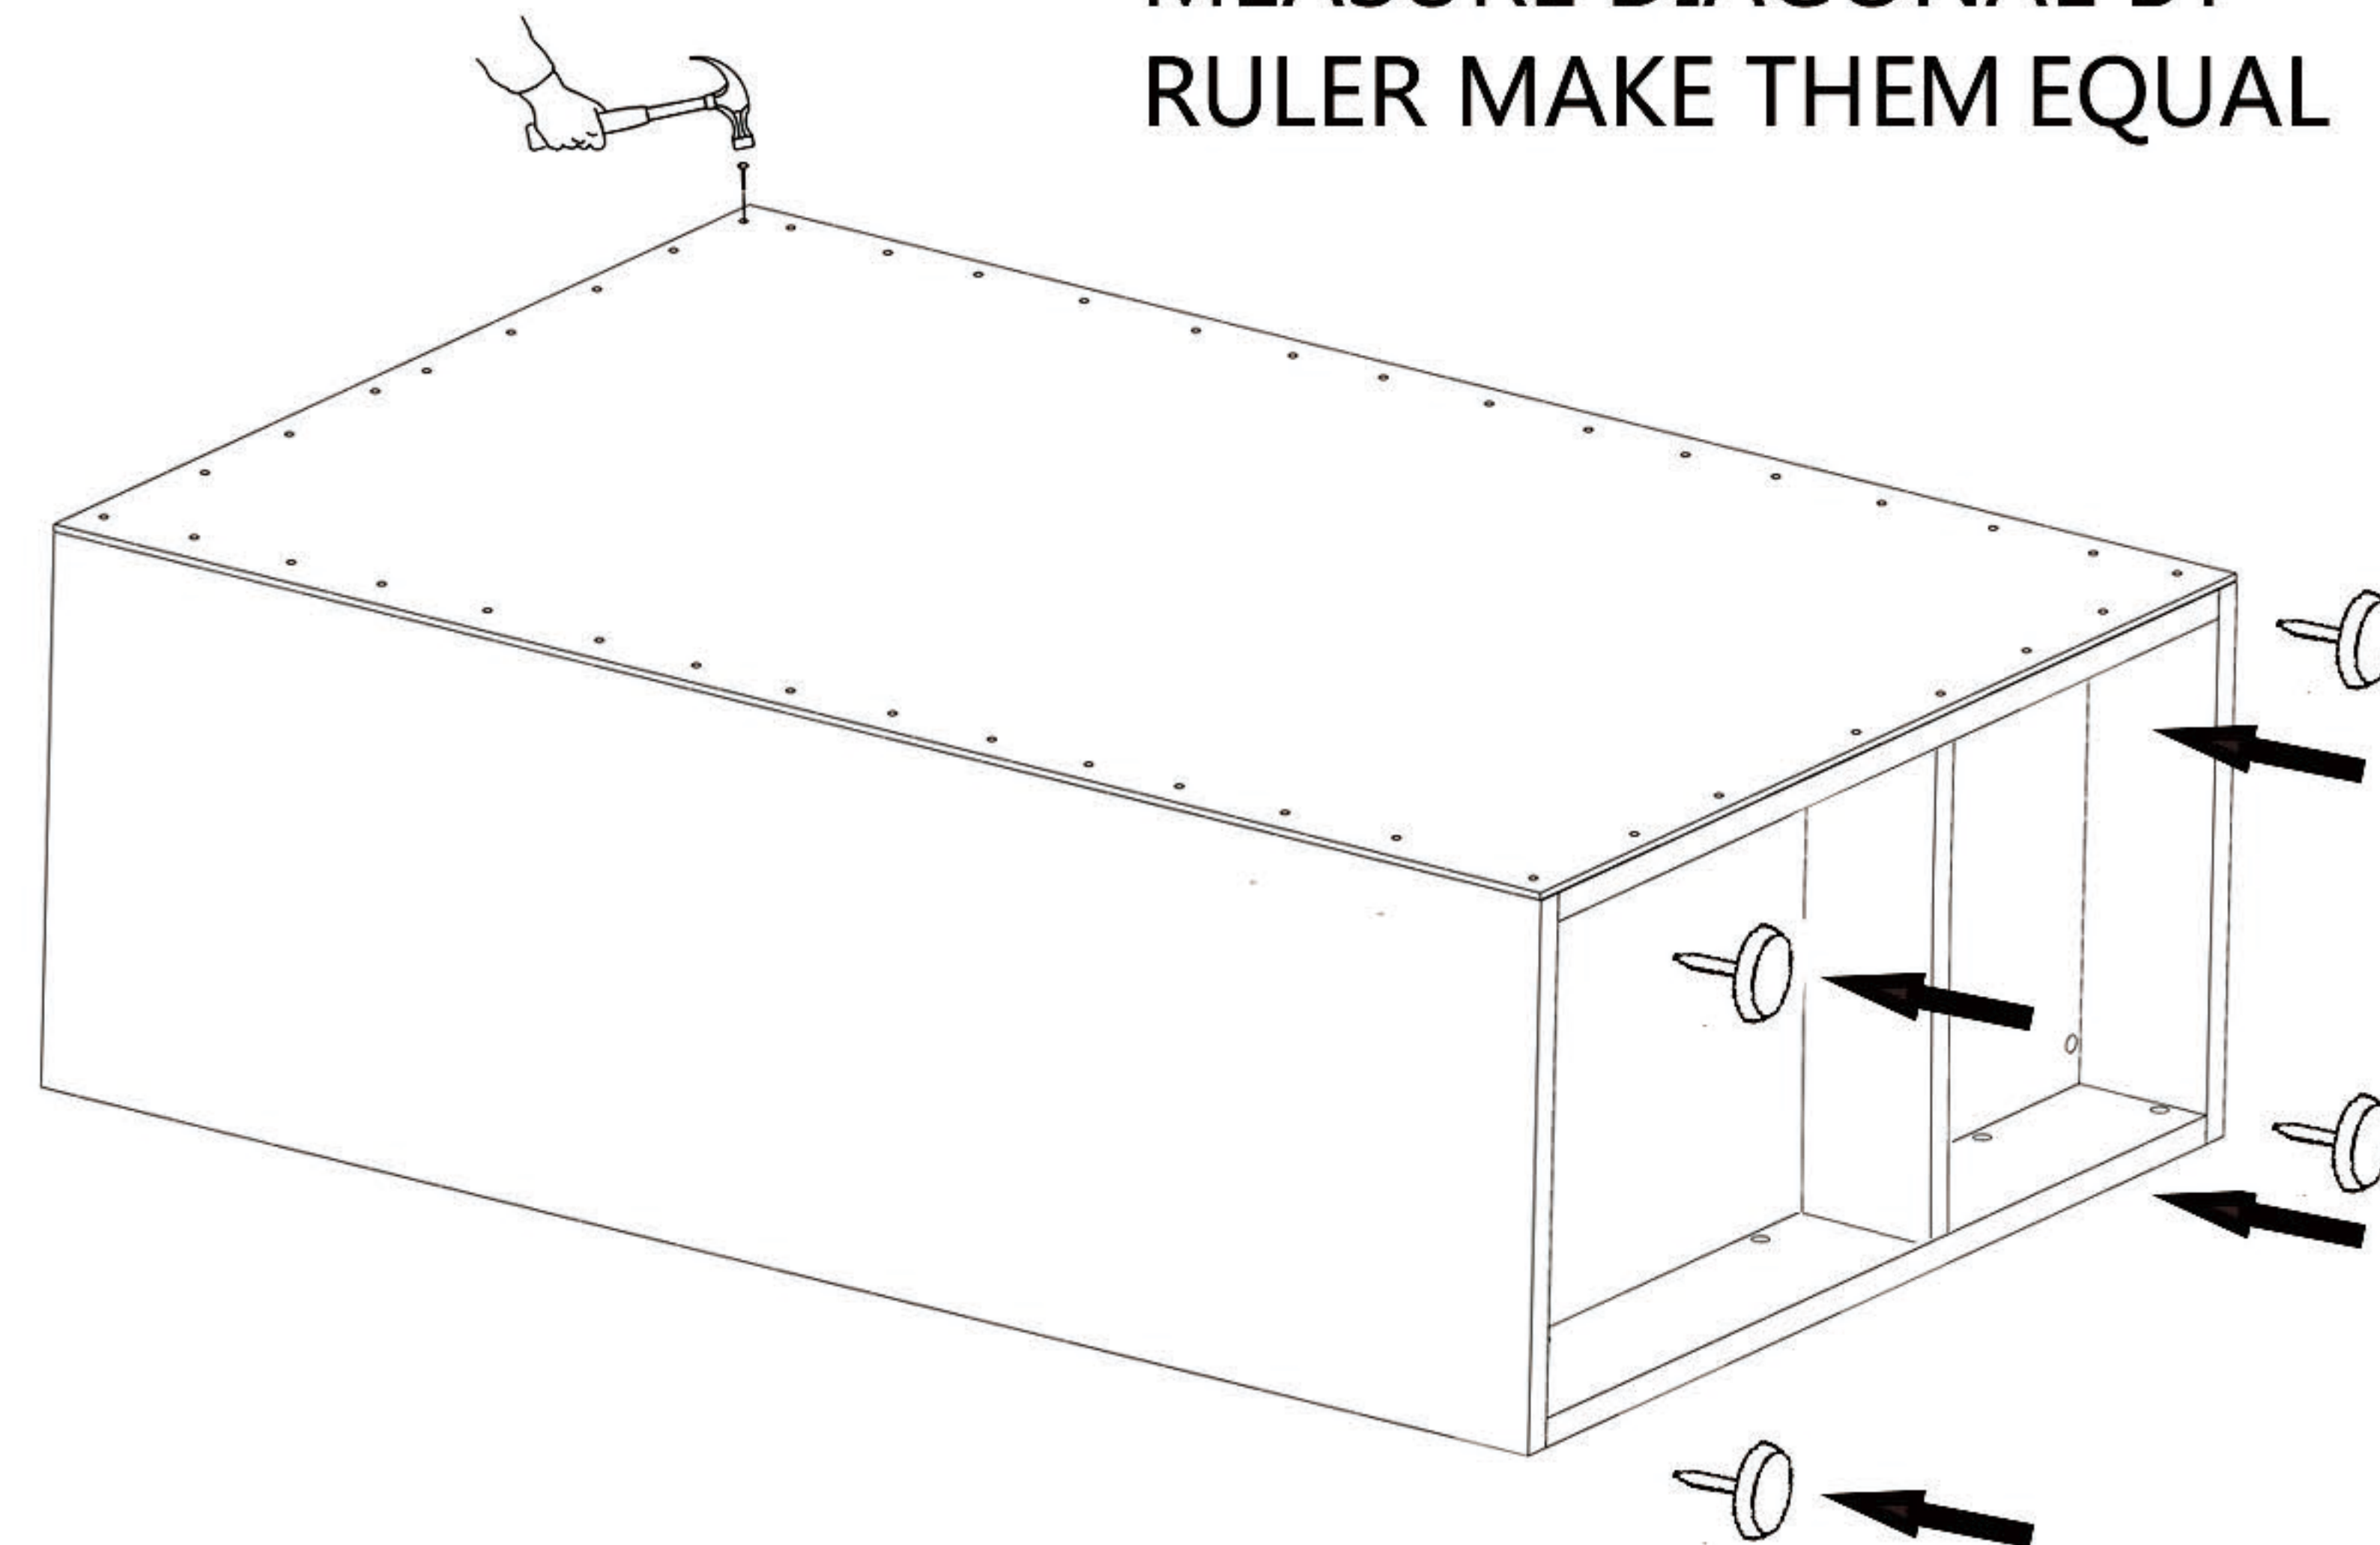


10-1

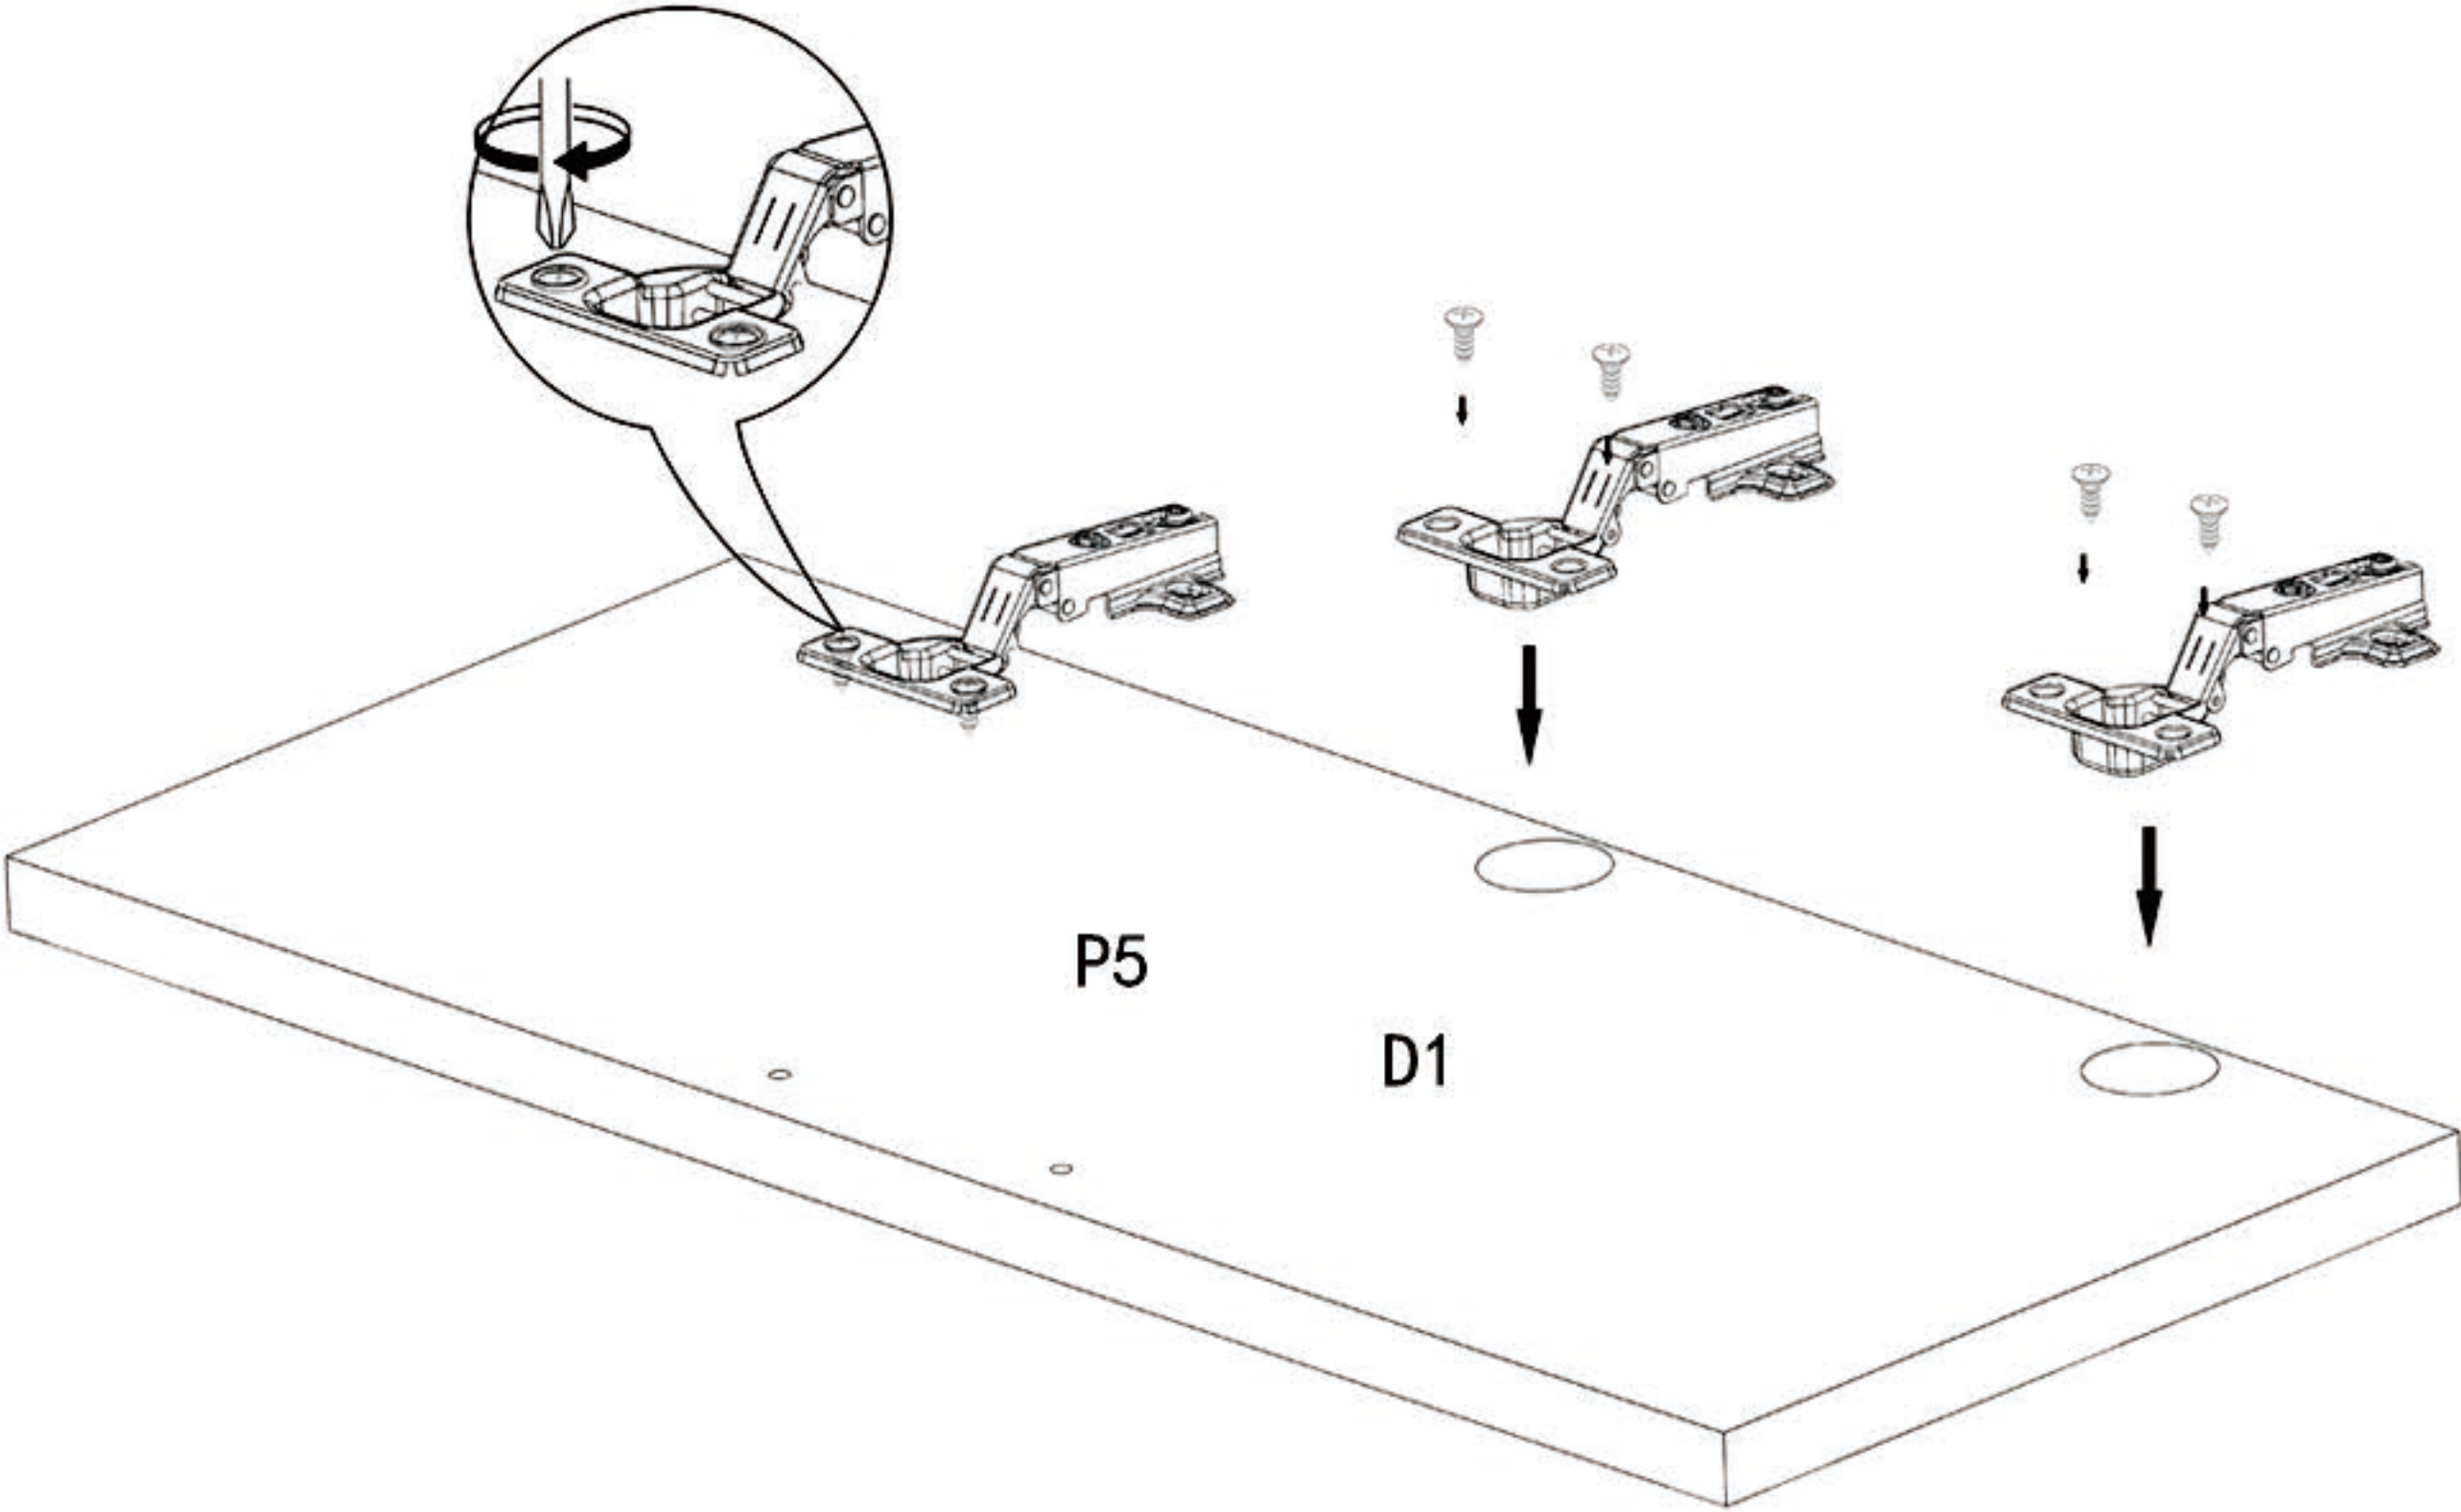


10-2

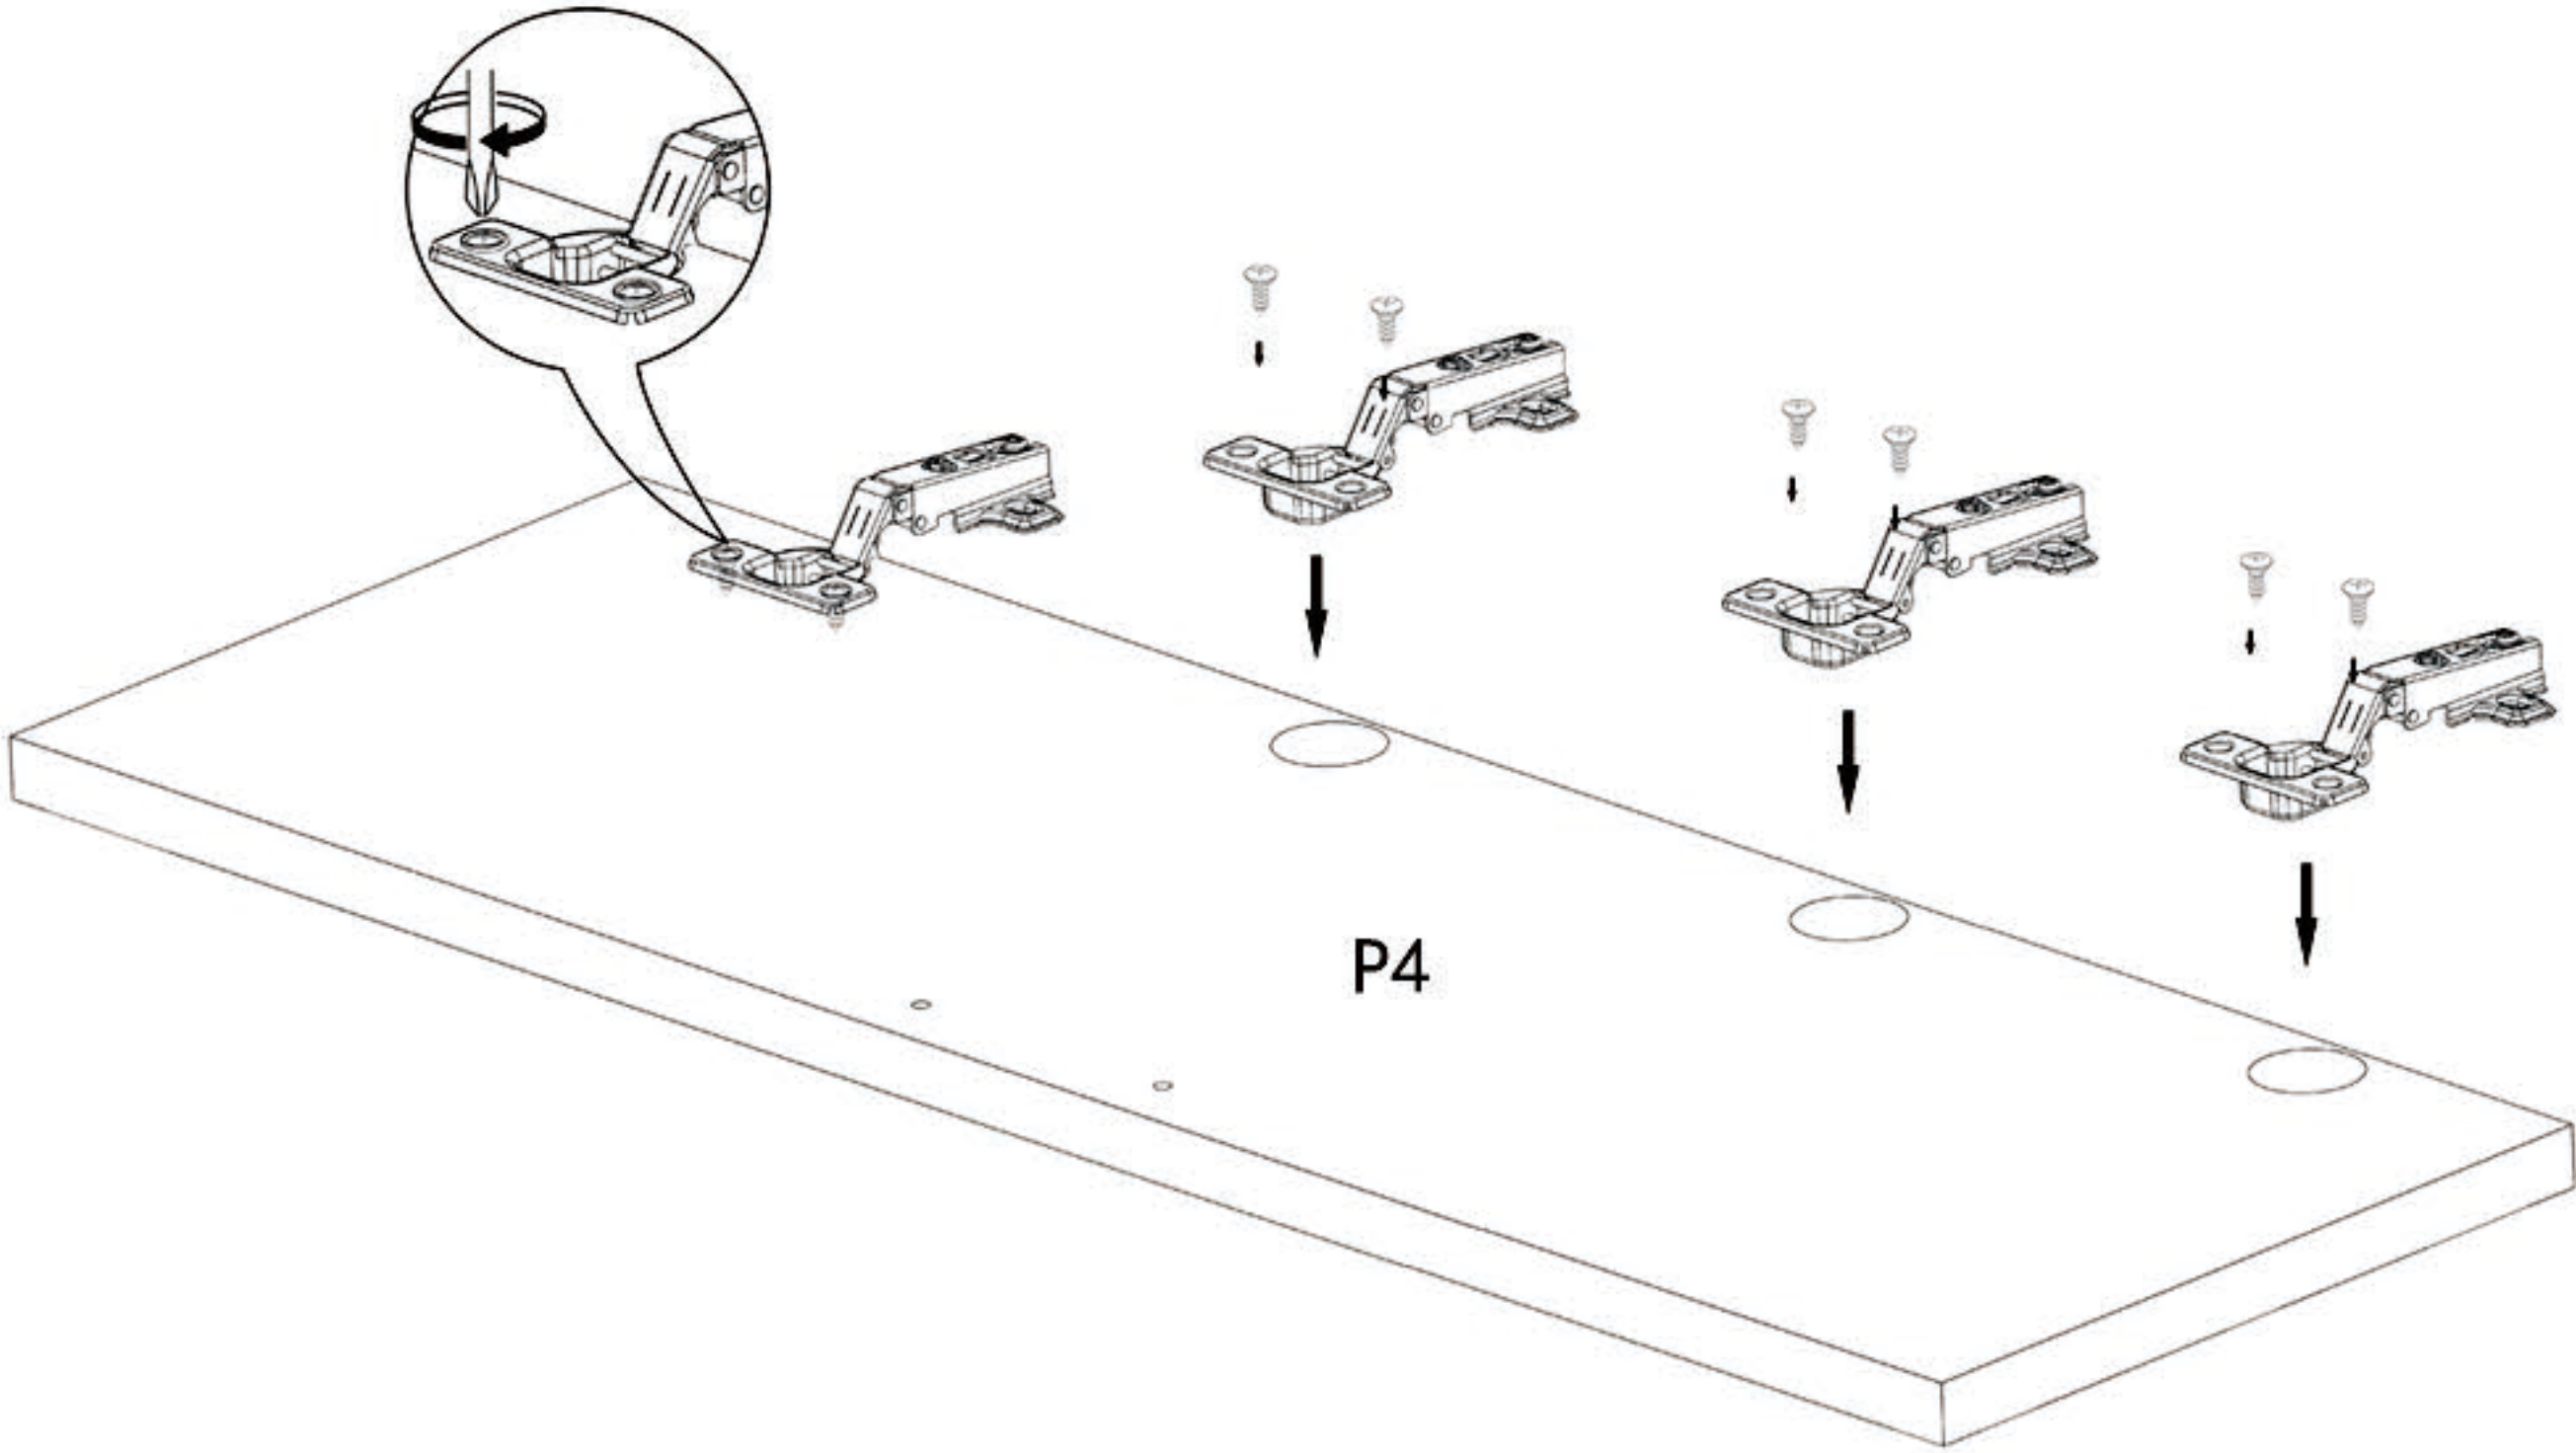


10-3

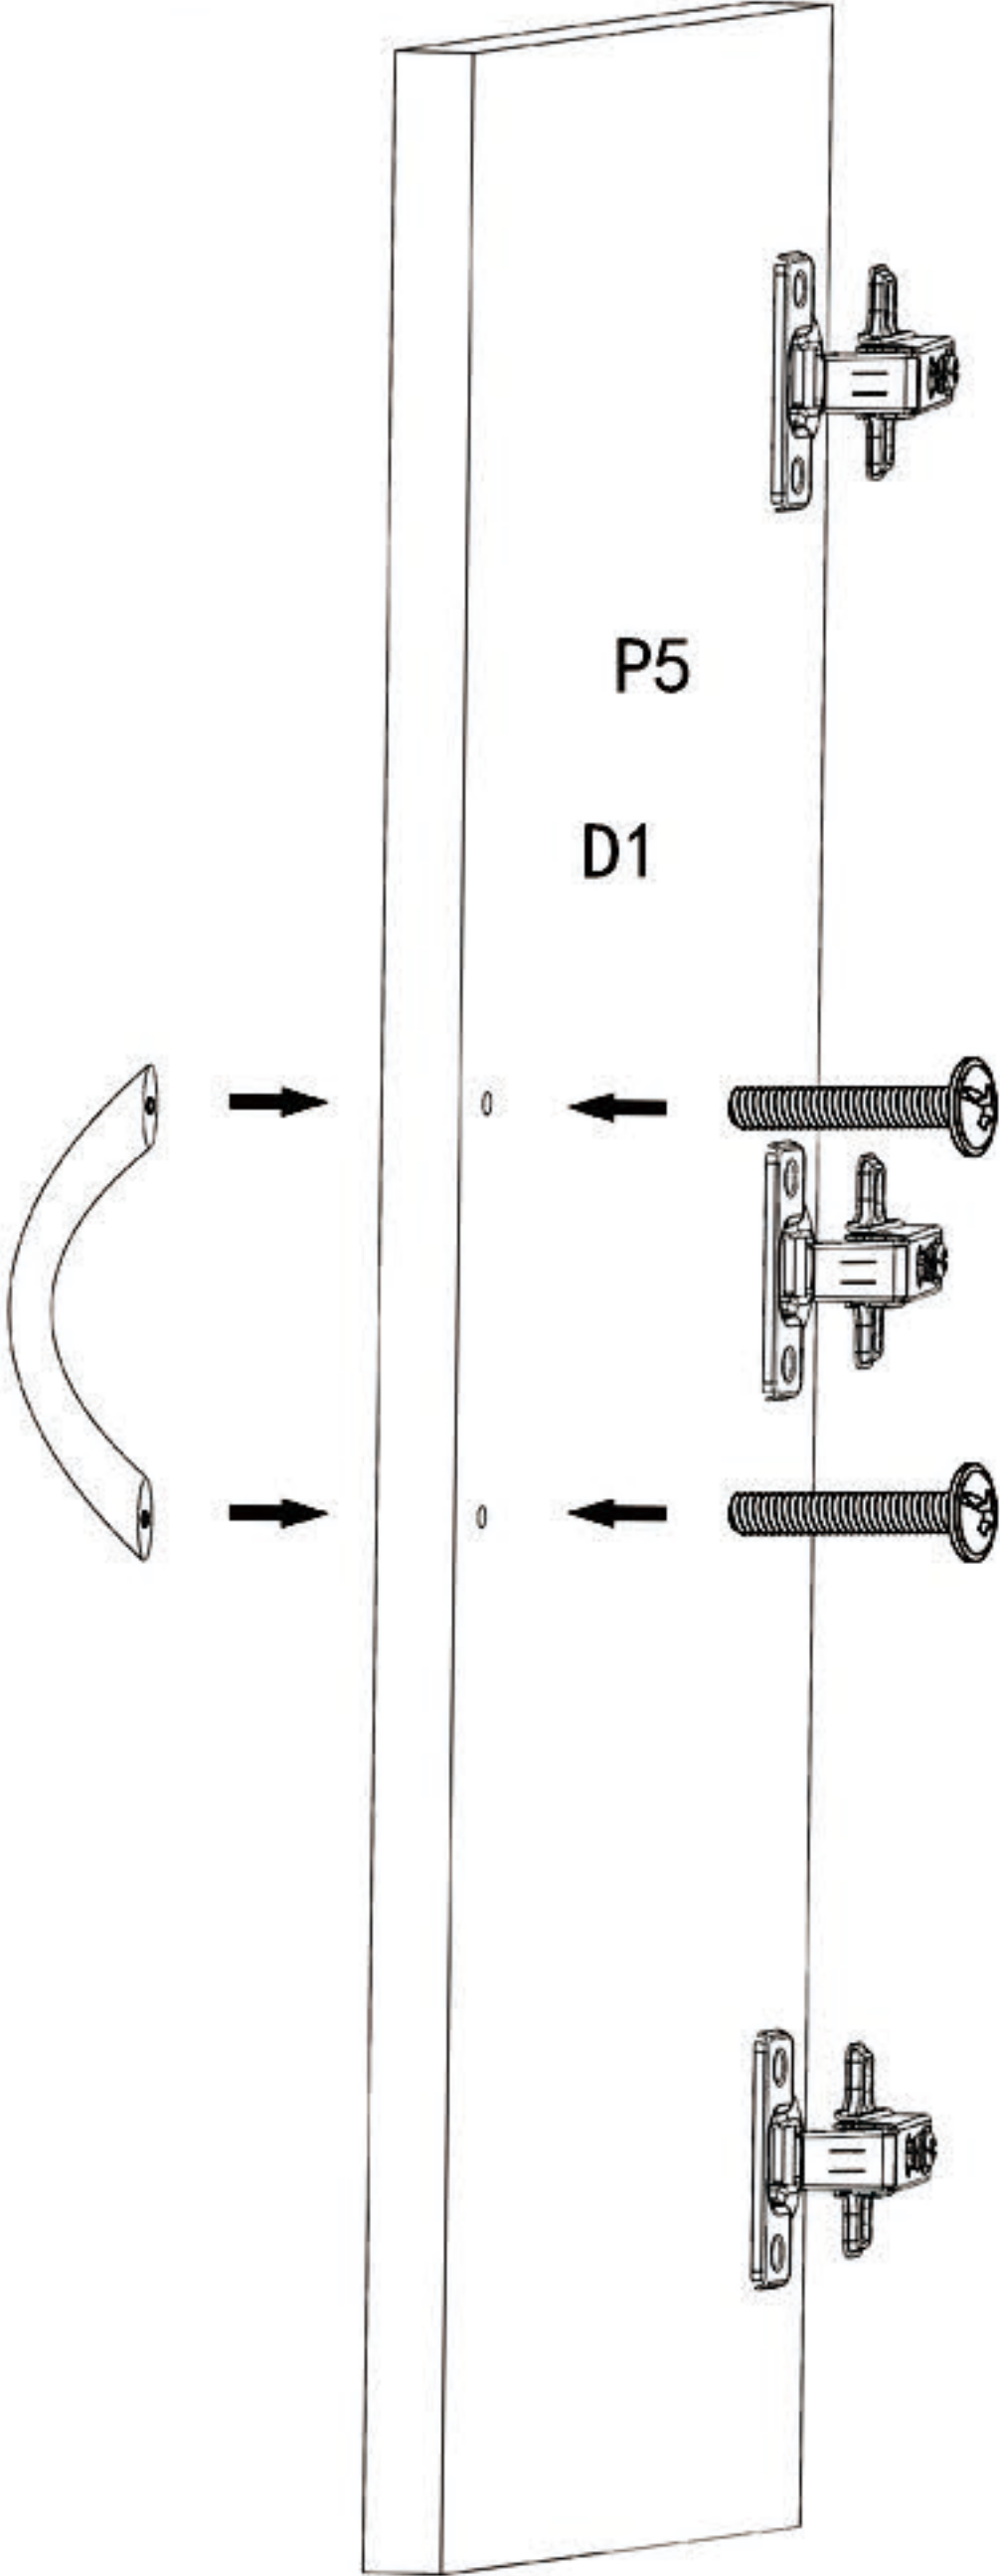


10-4

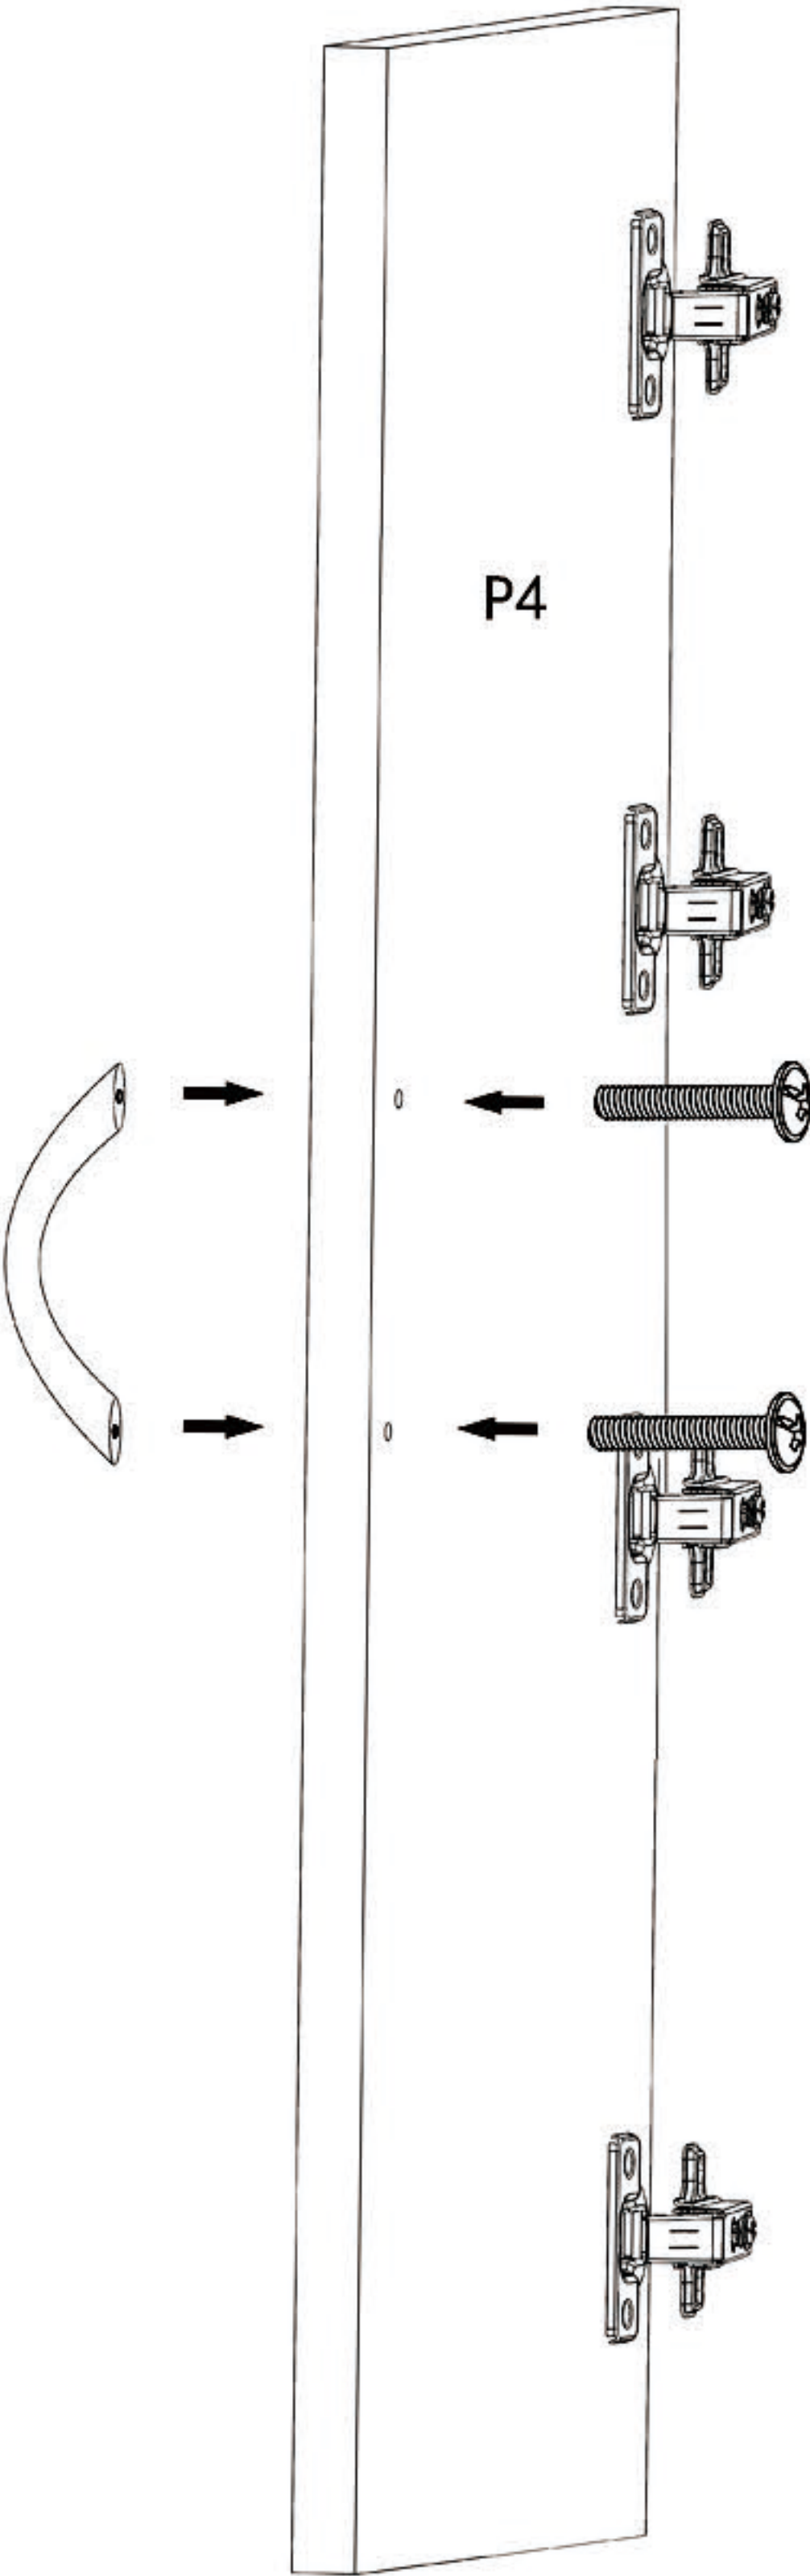


11-1

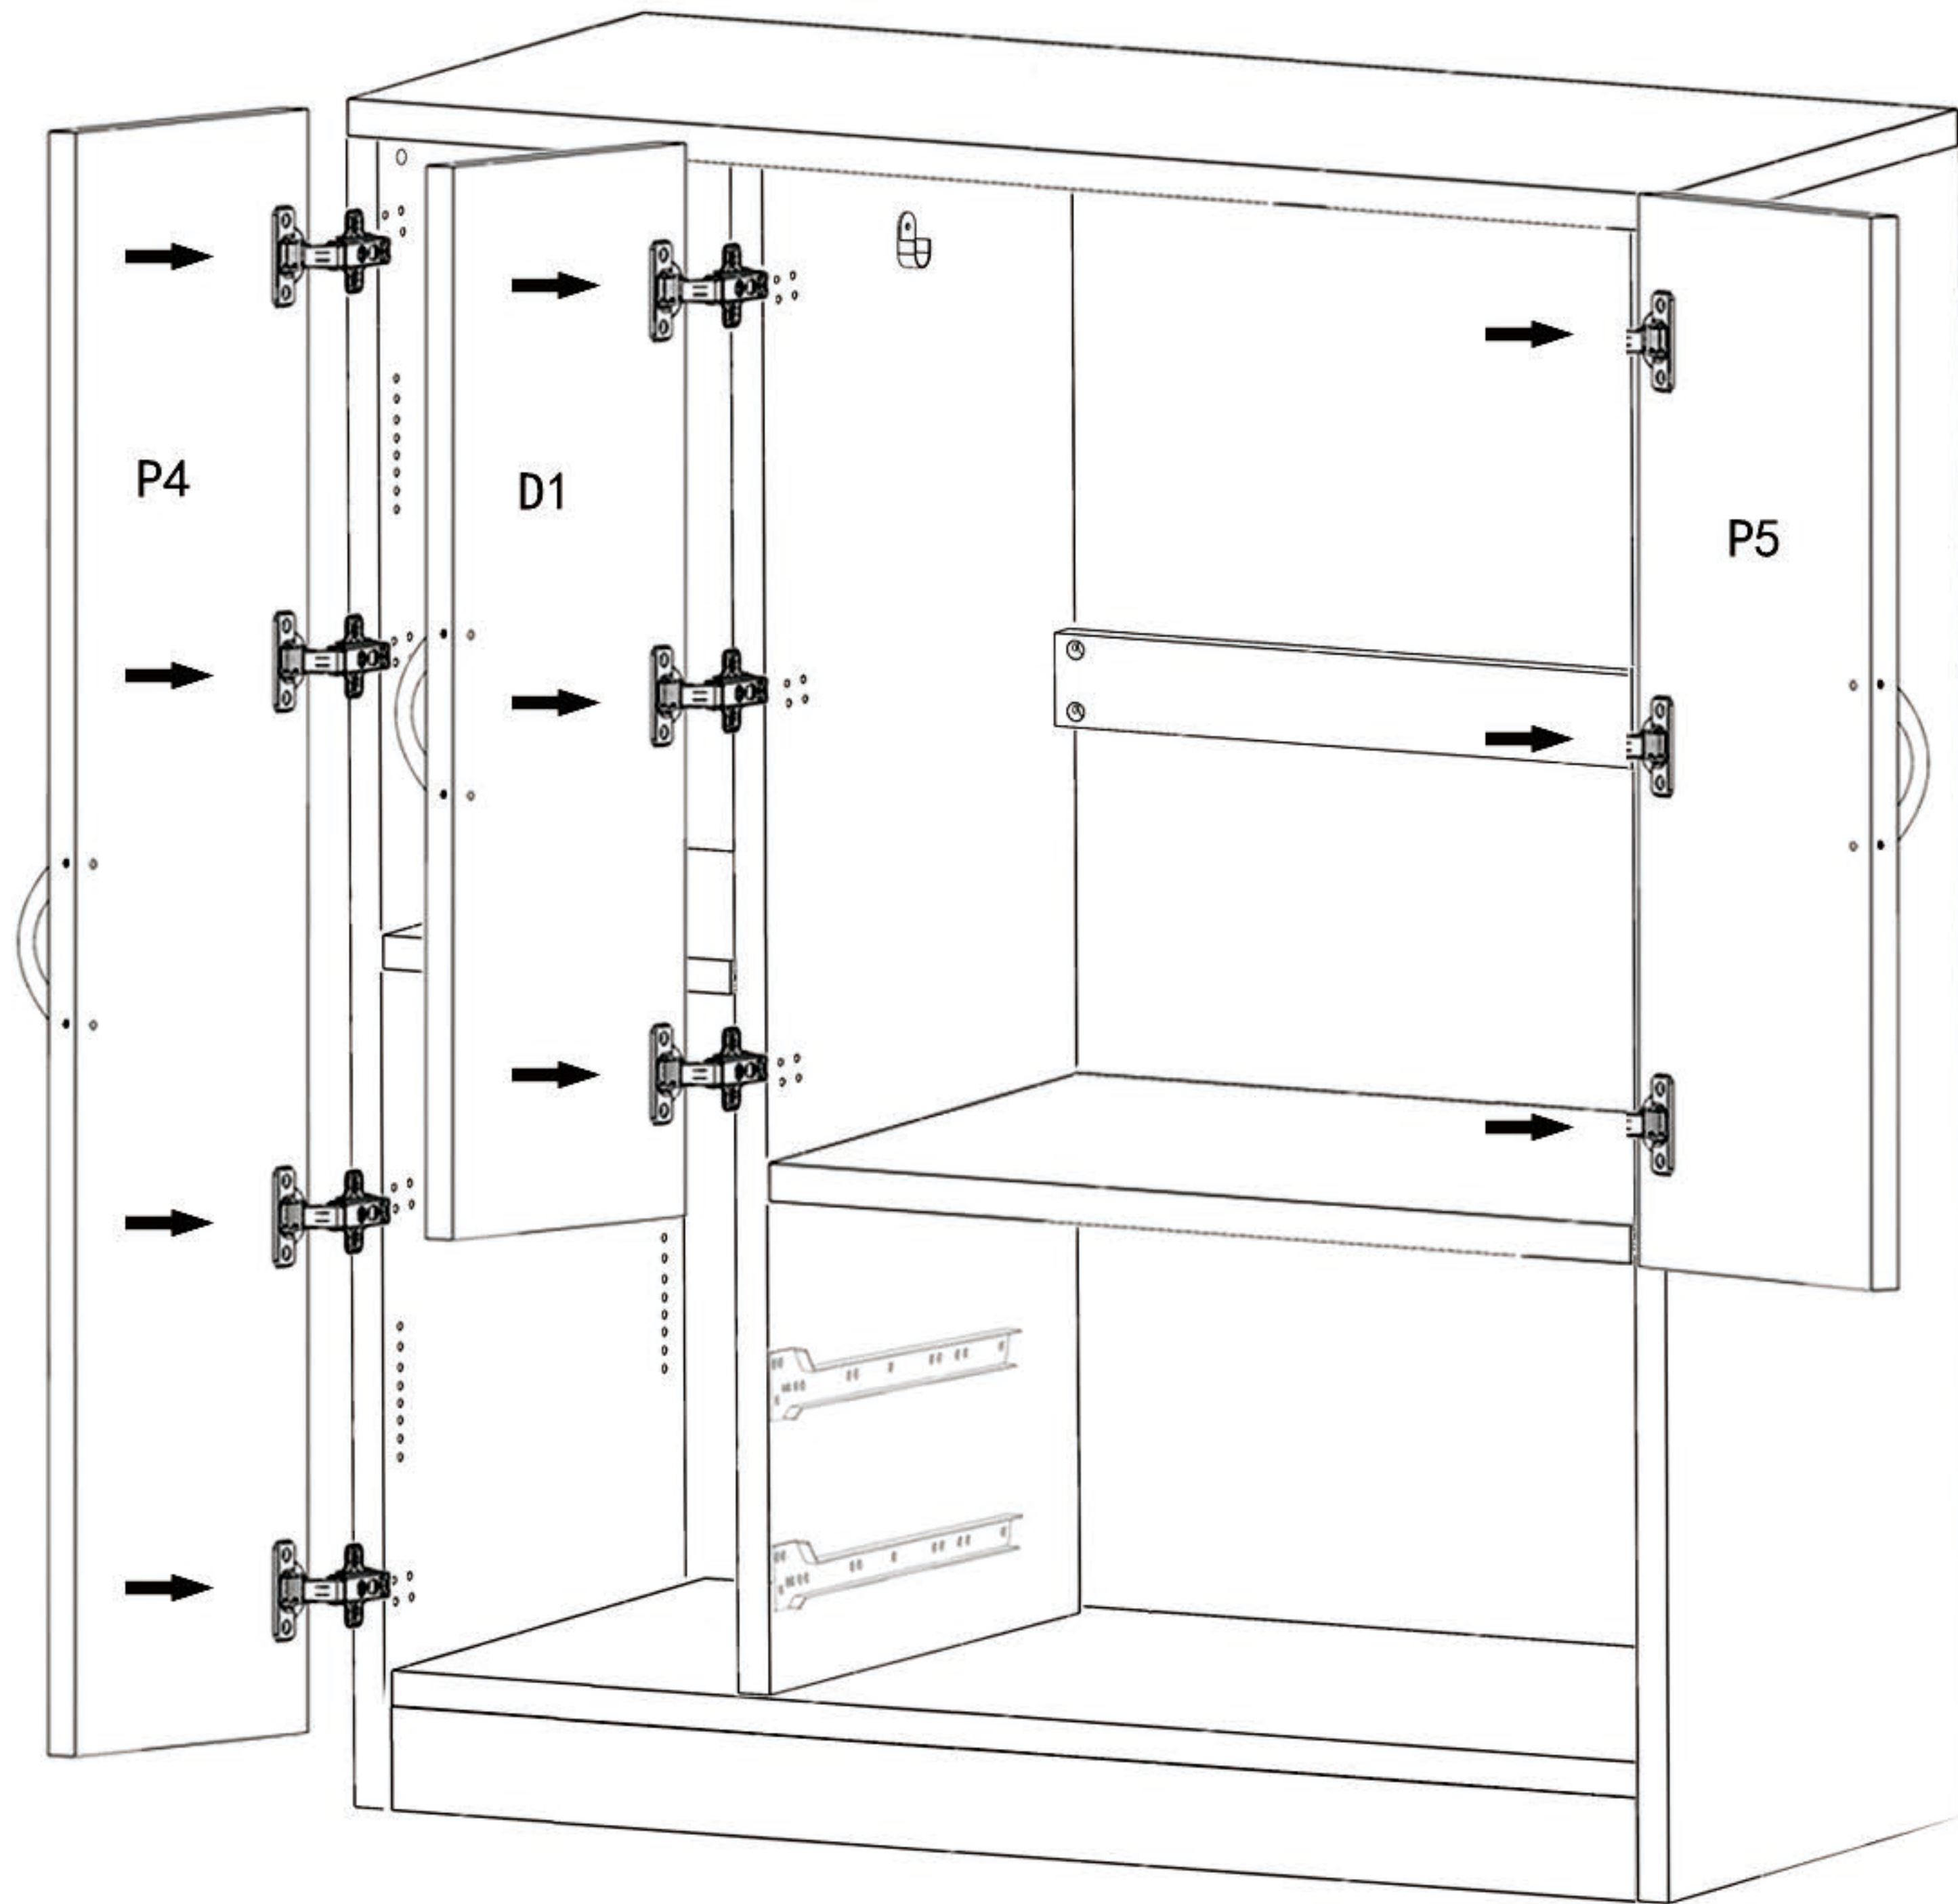


11-2

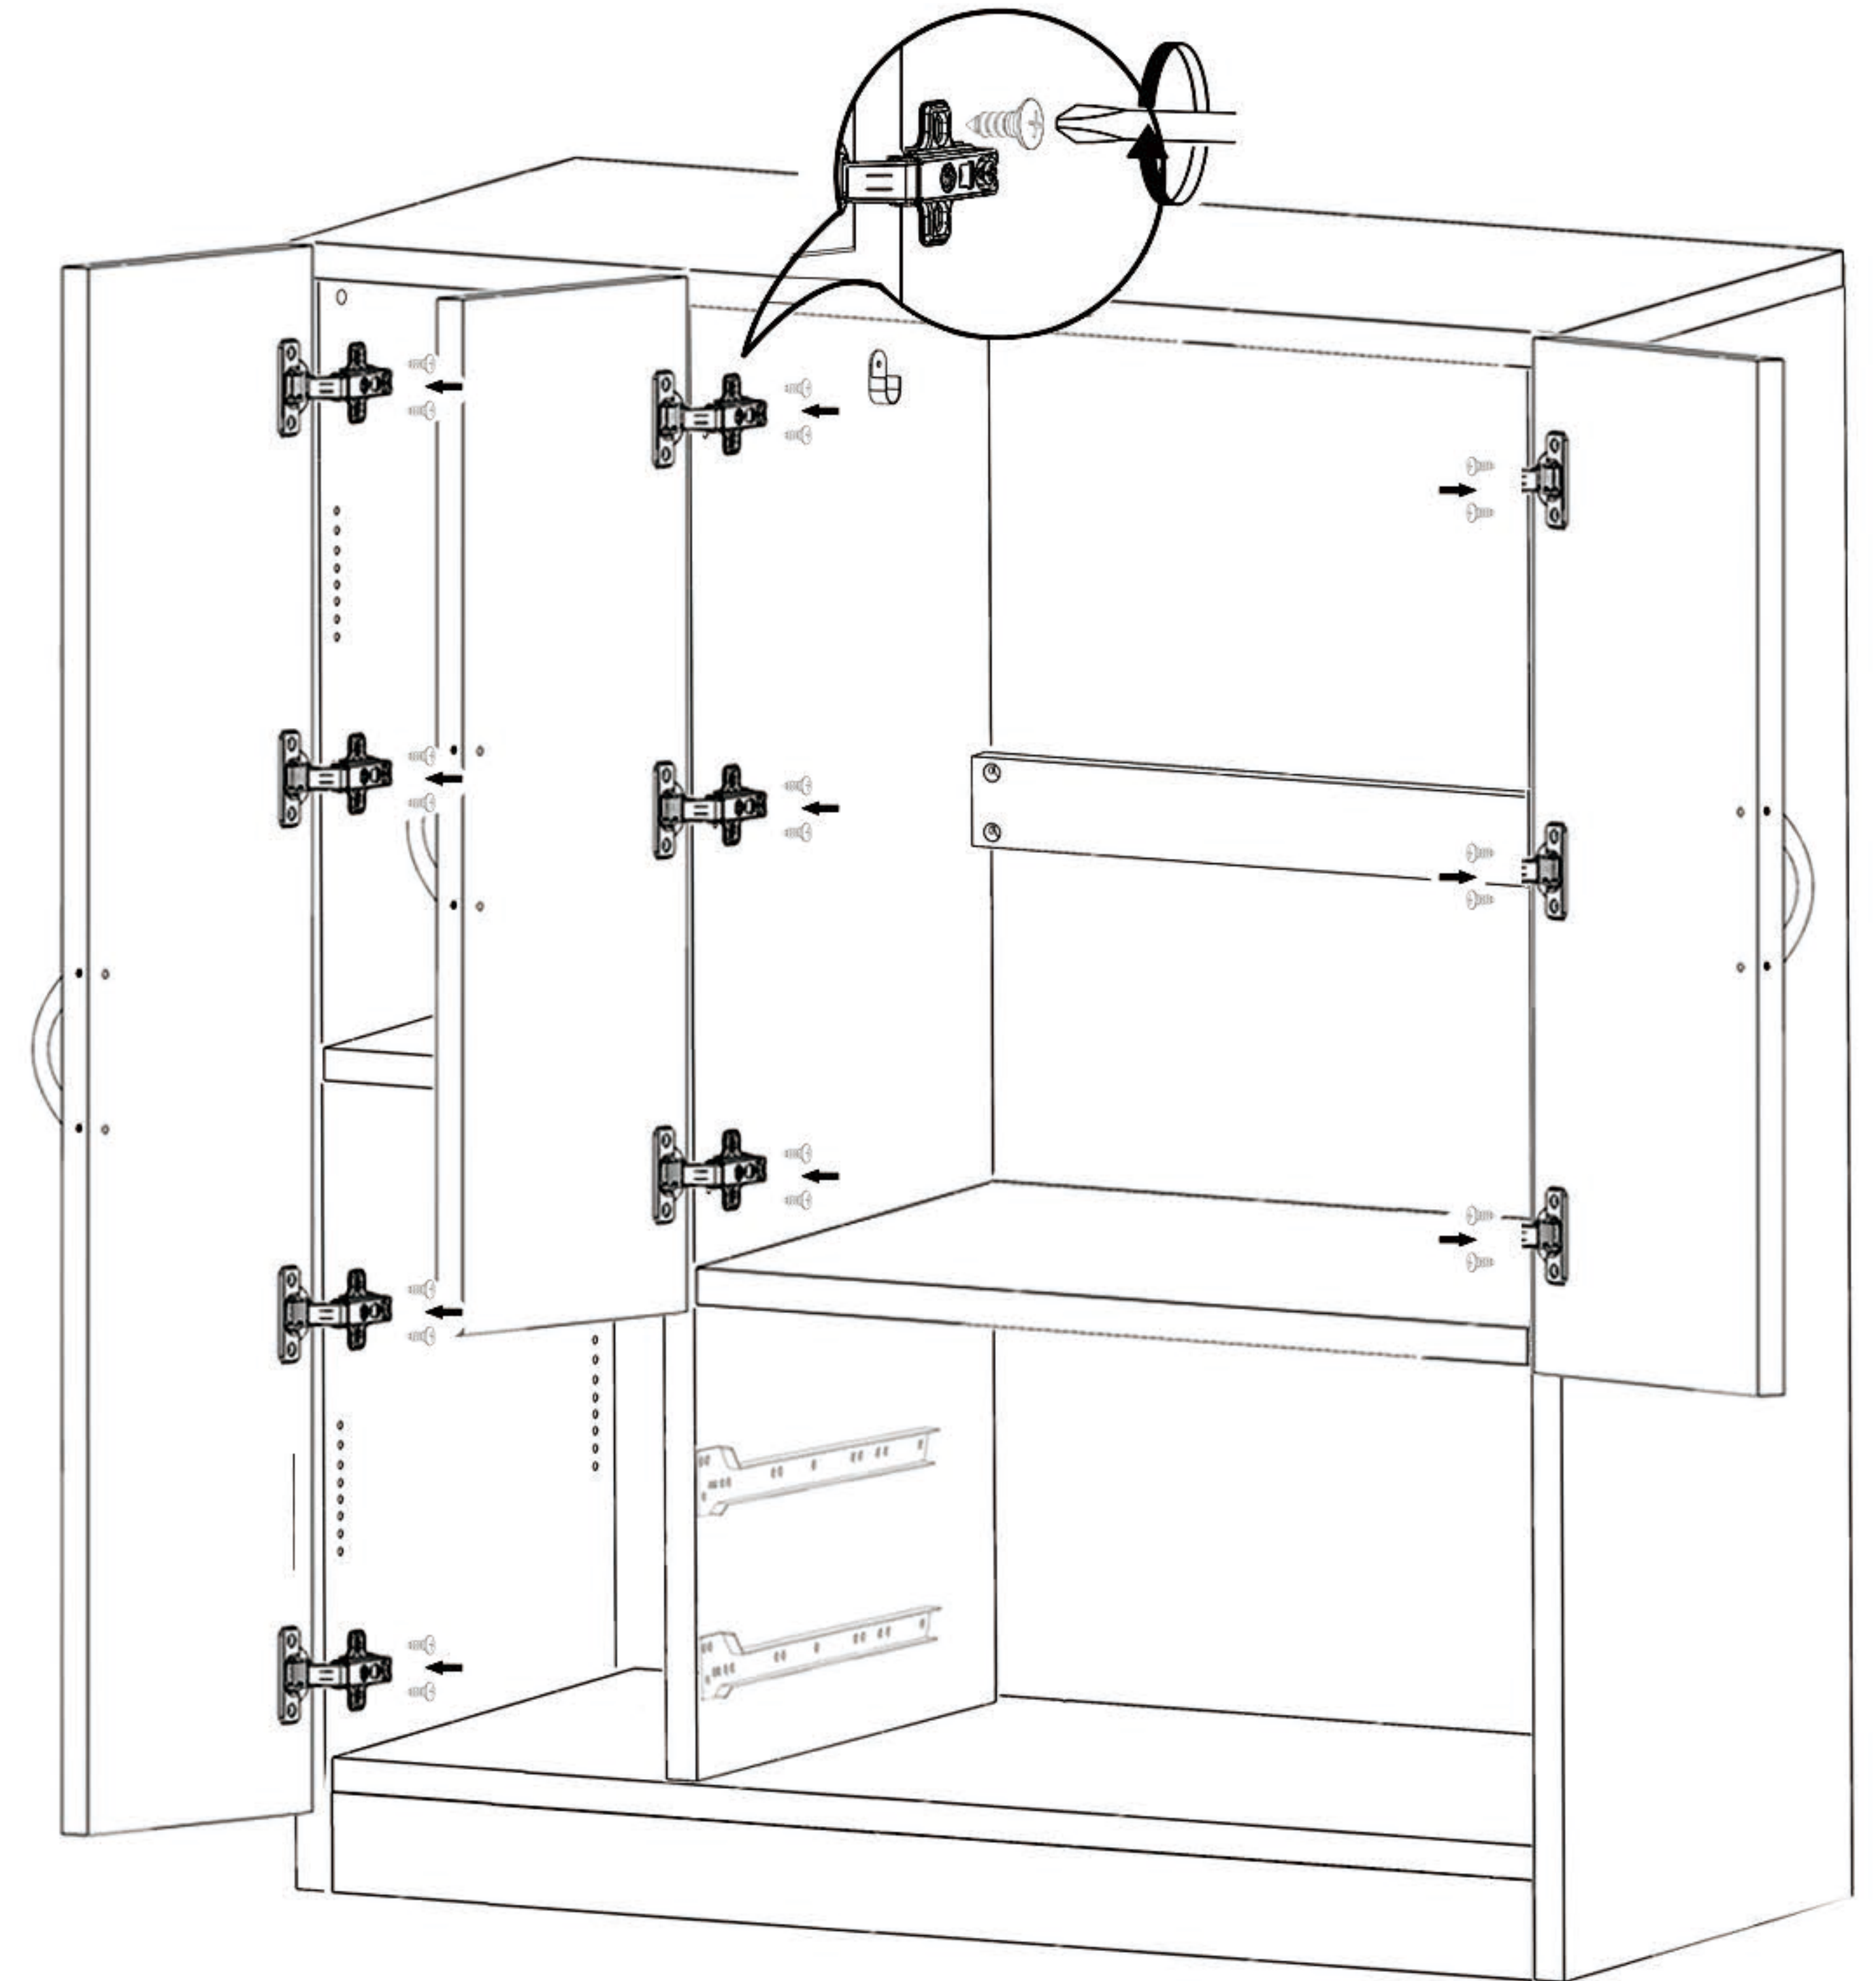

11-3

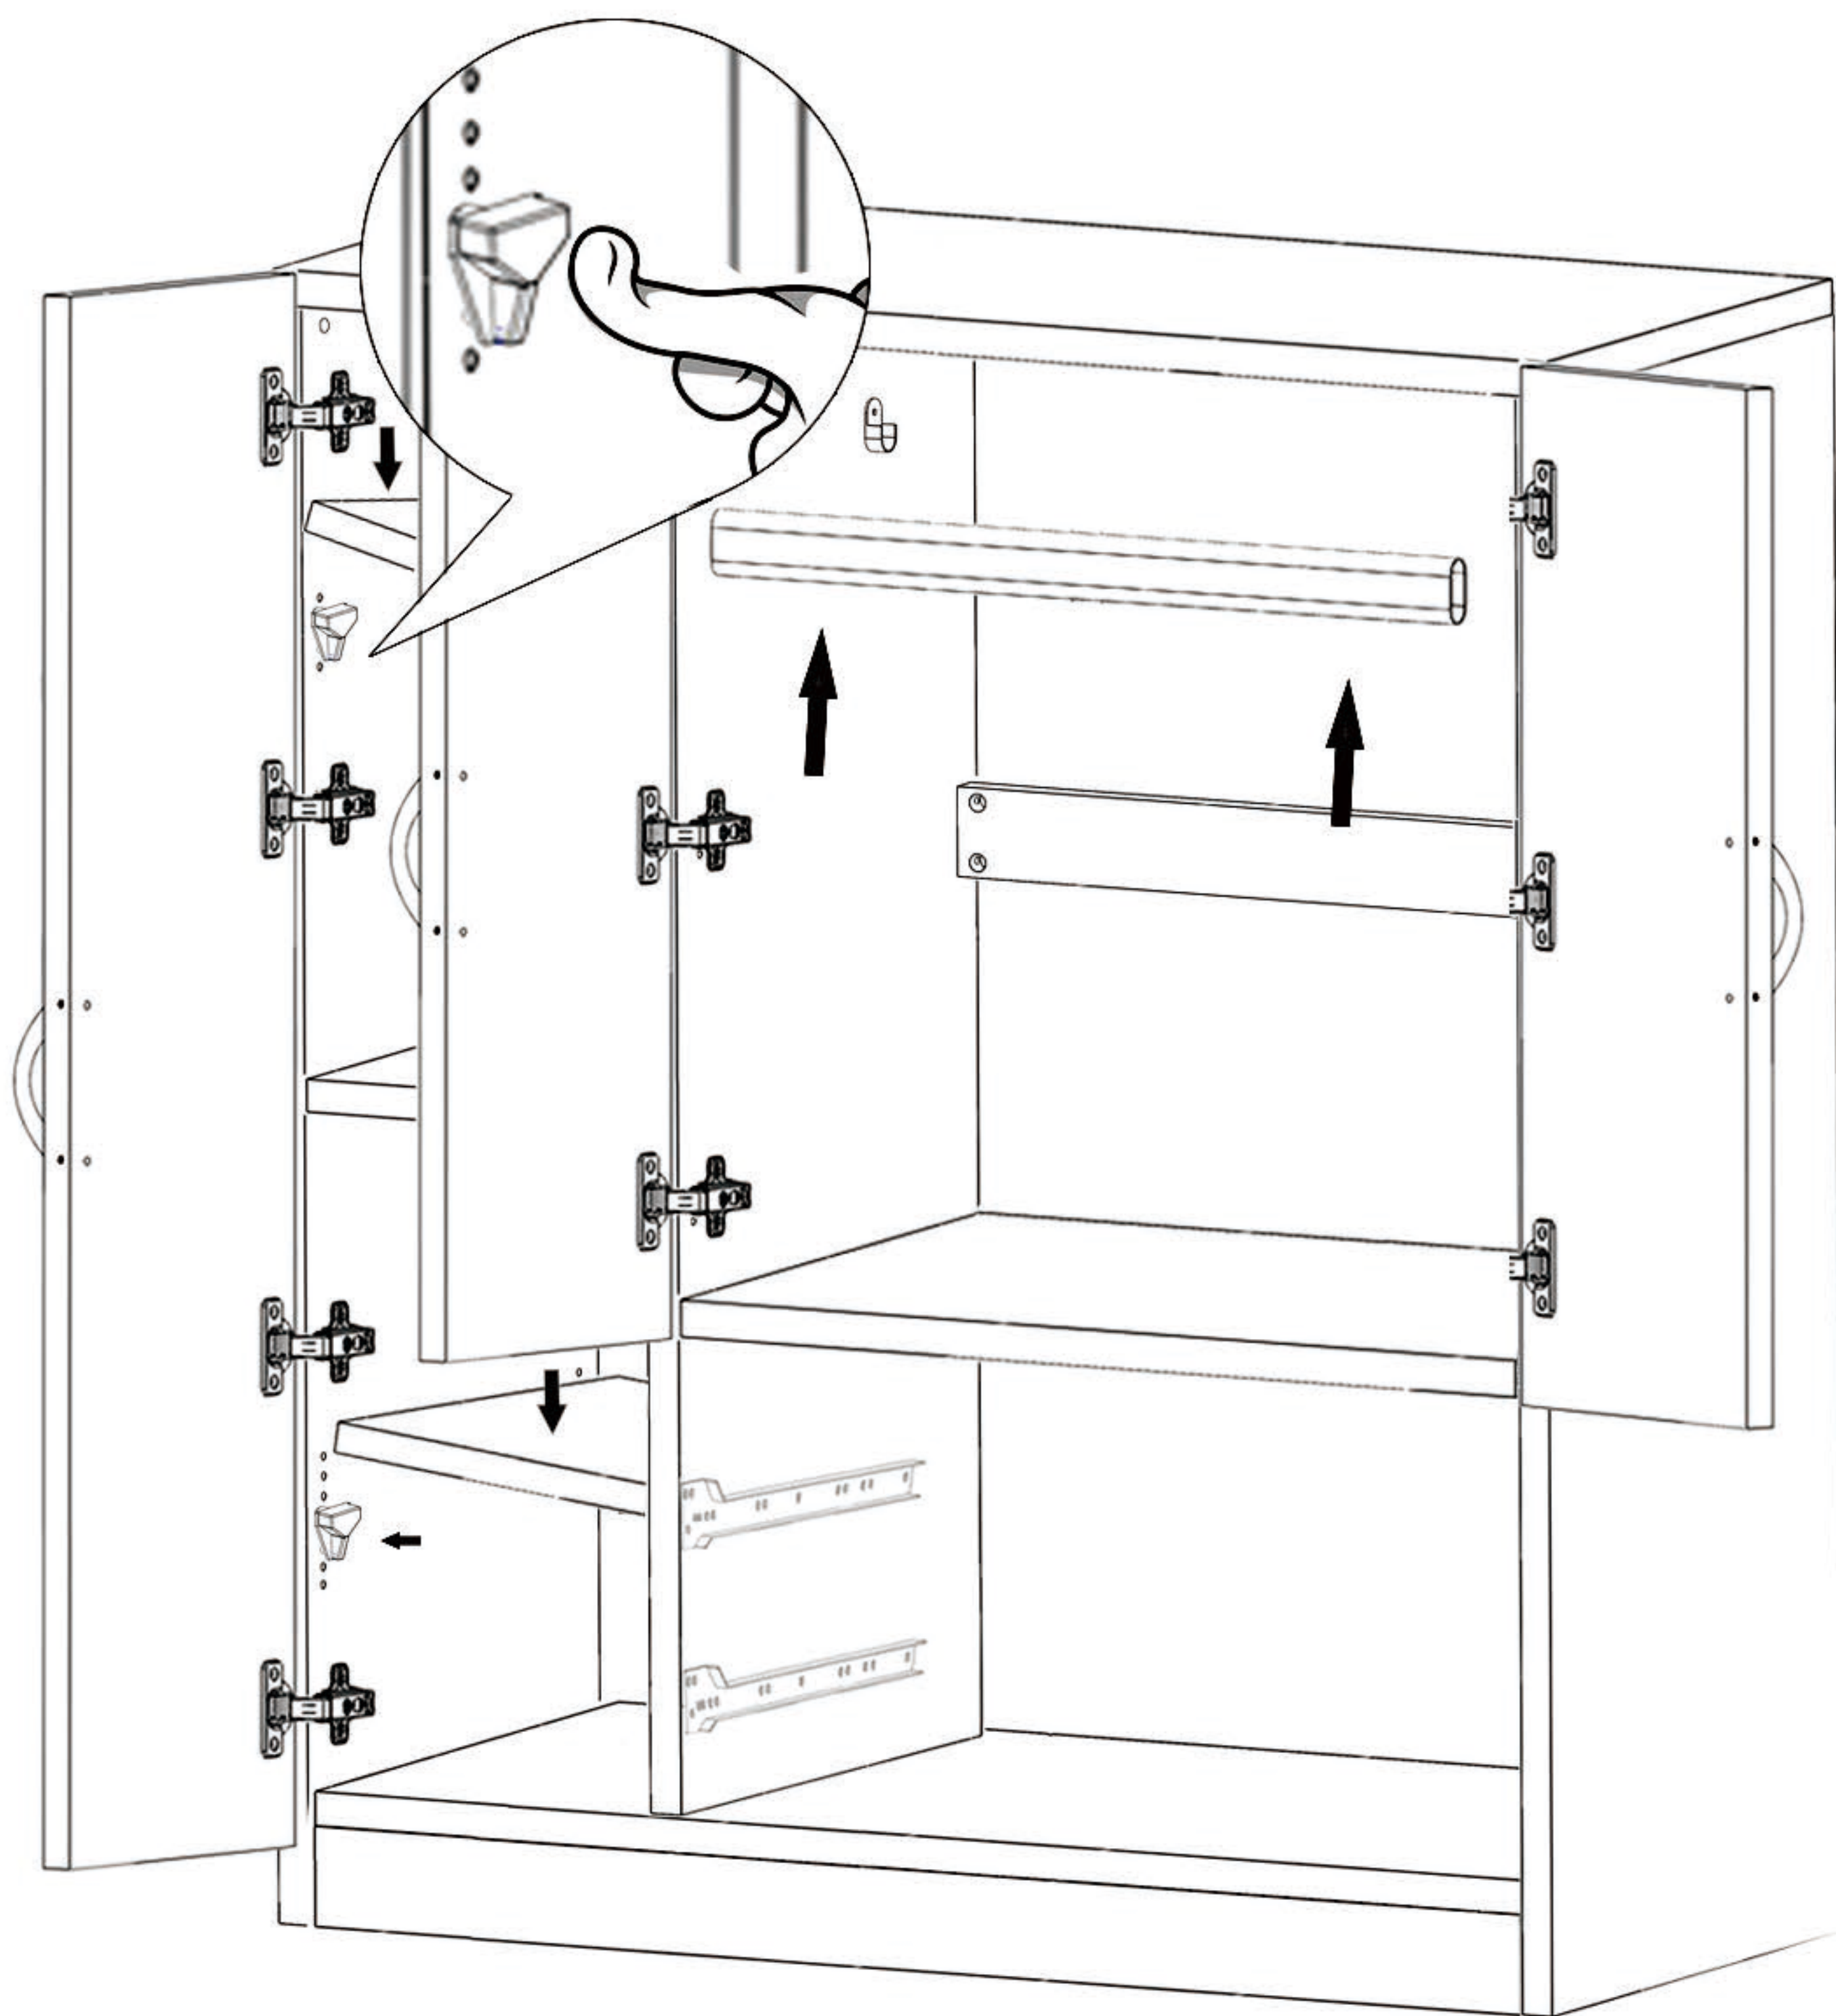


12

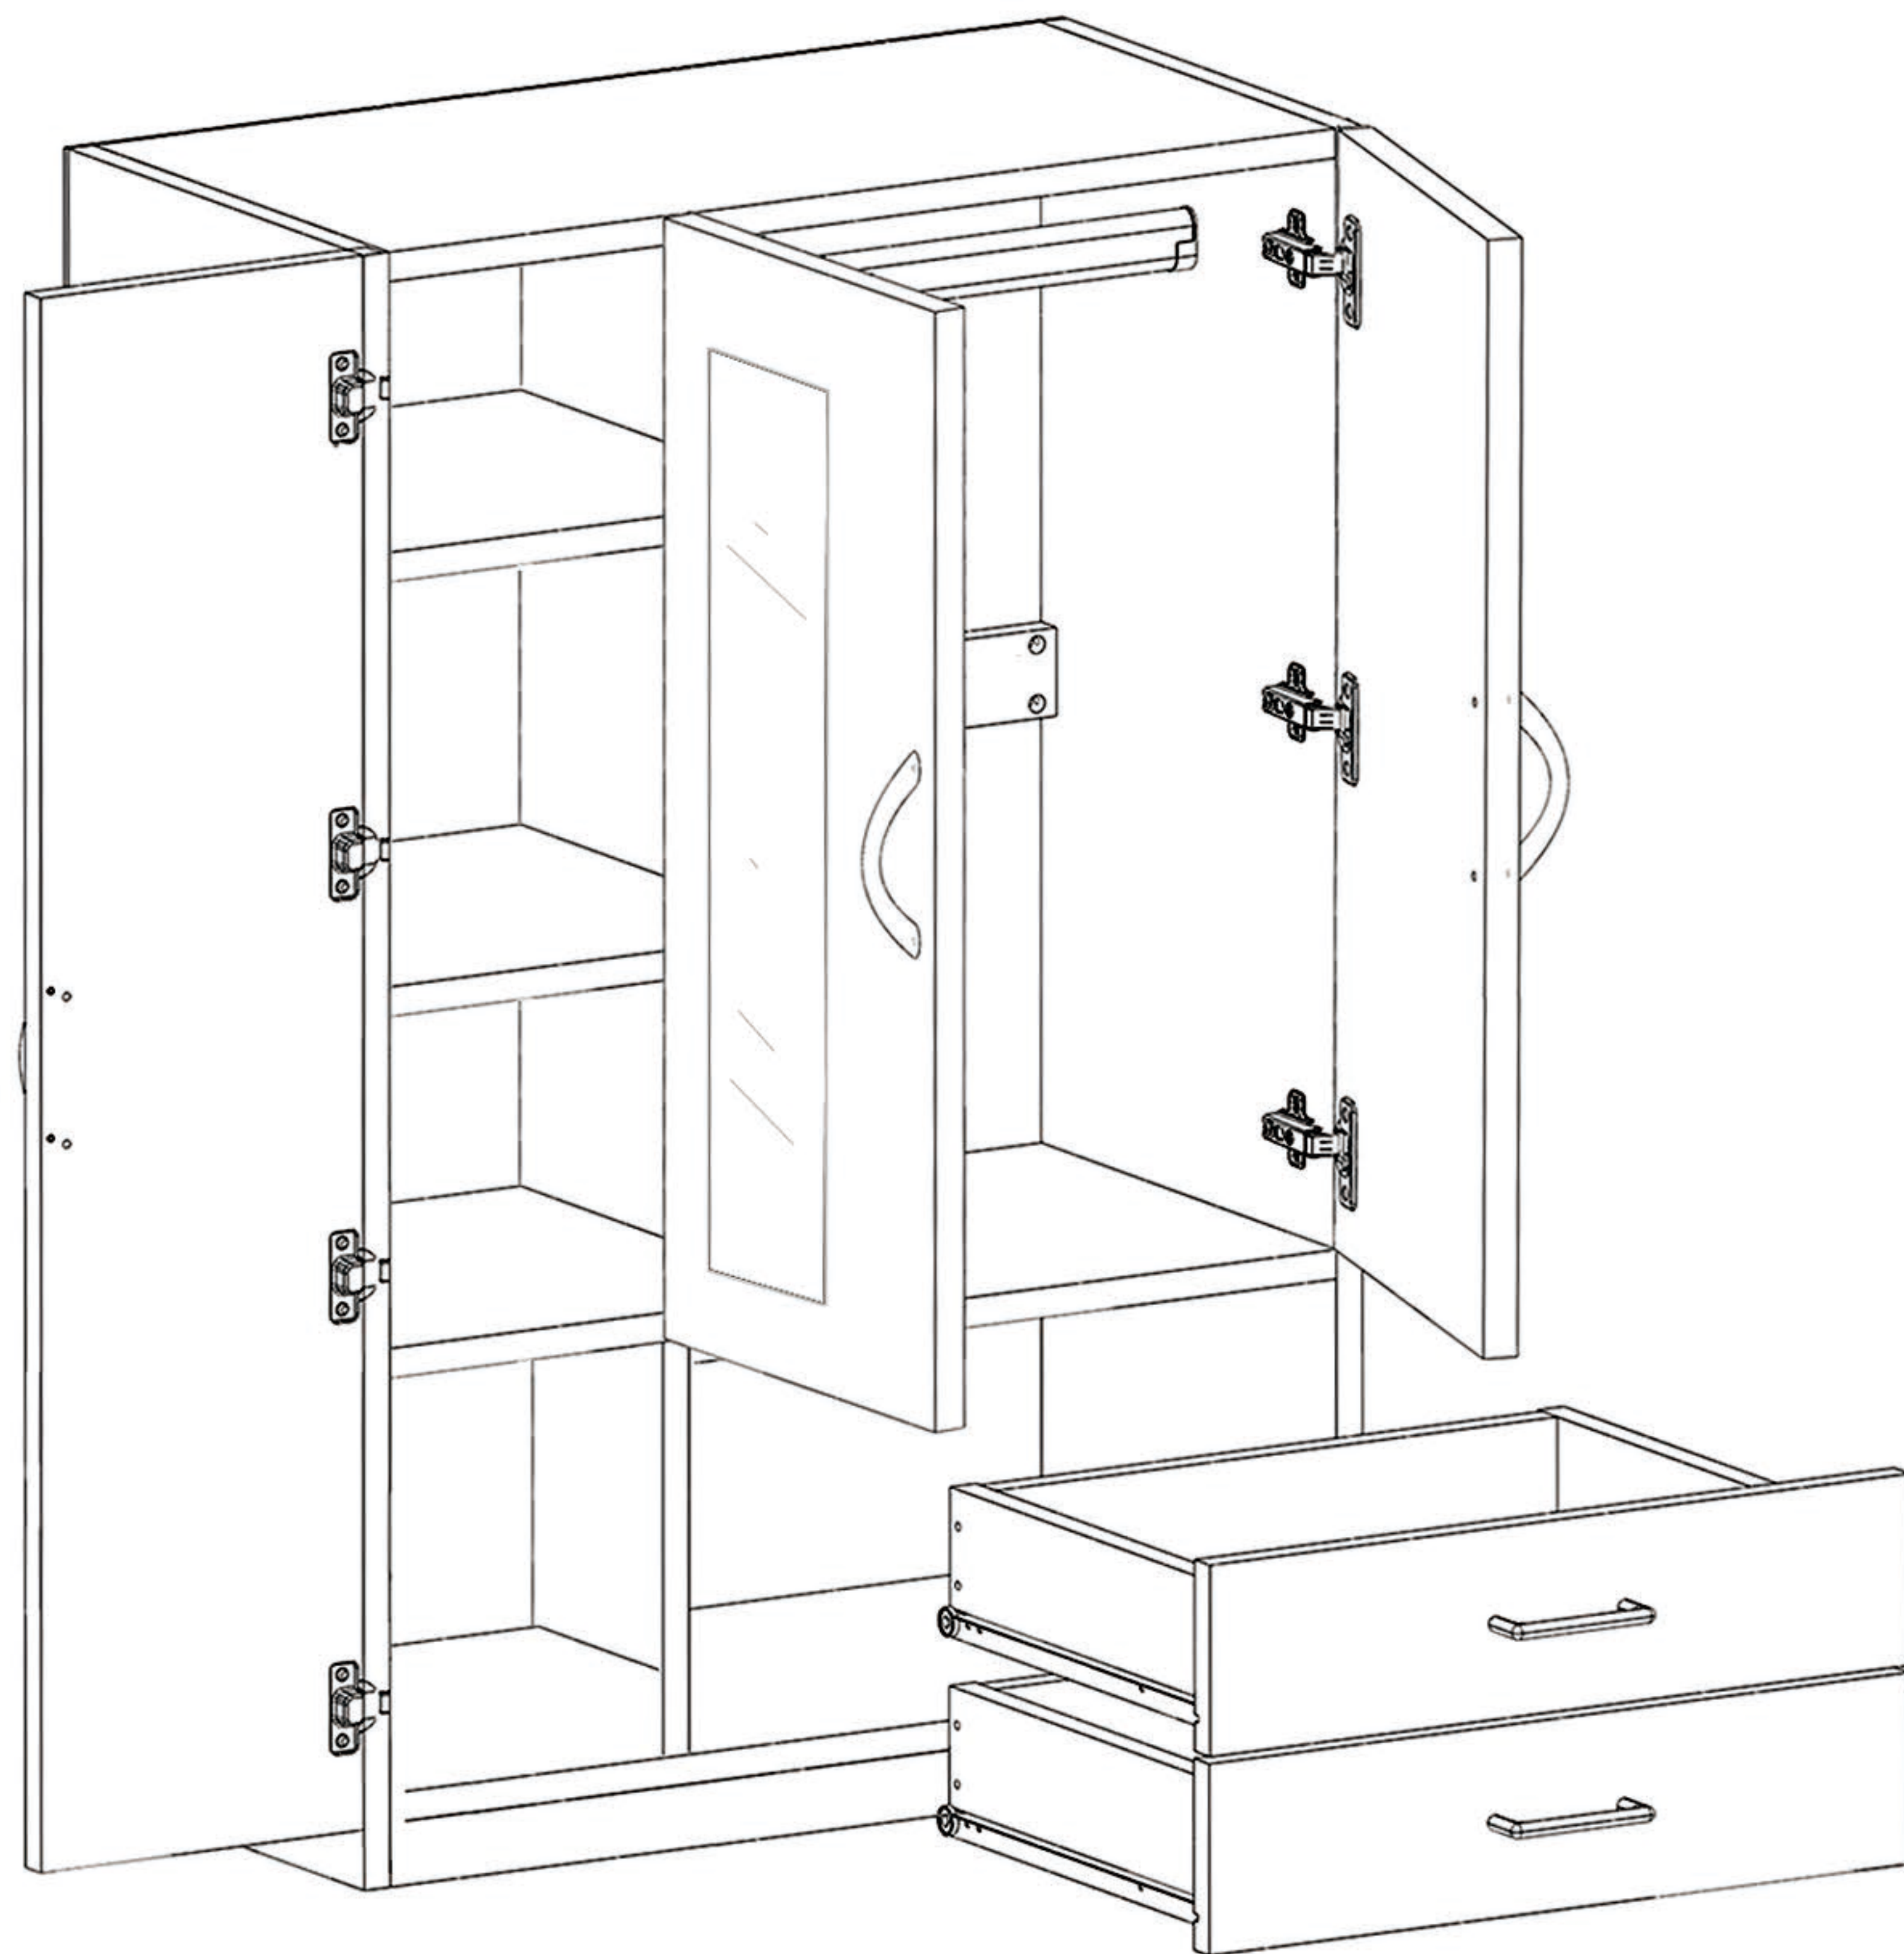

TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door.

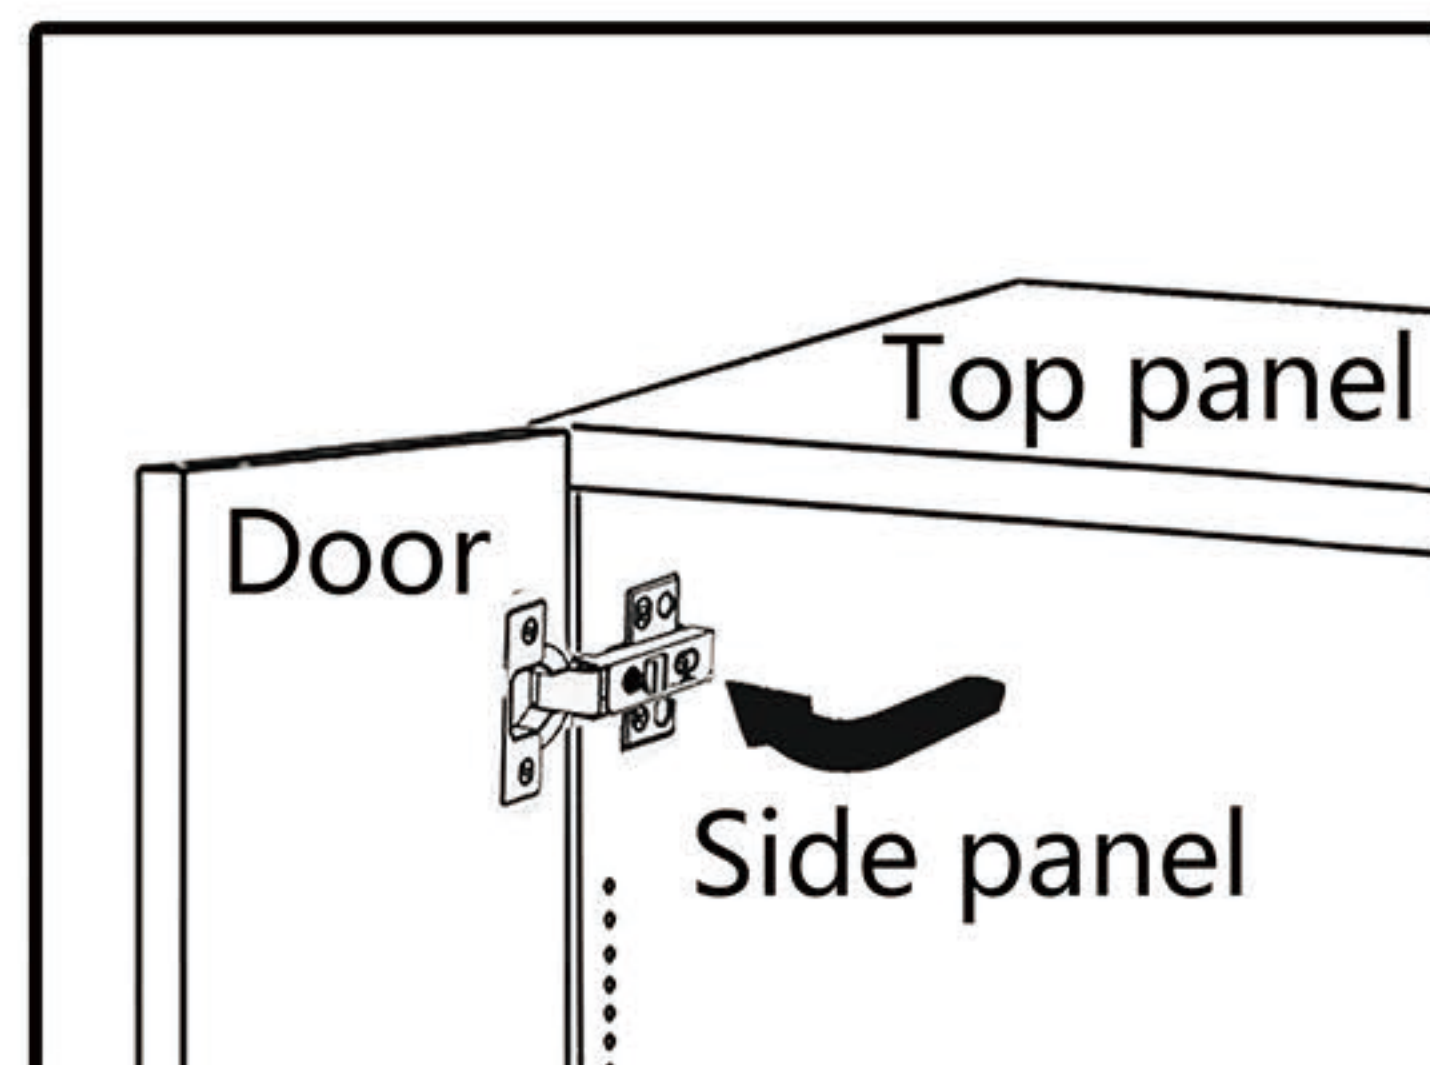


STEP 2

Adjust the gap between door panel and side panel

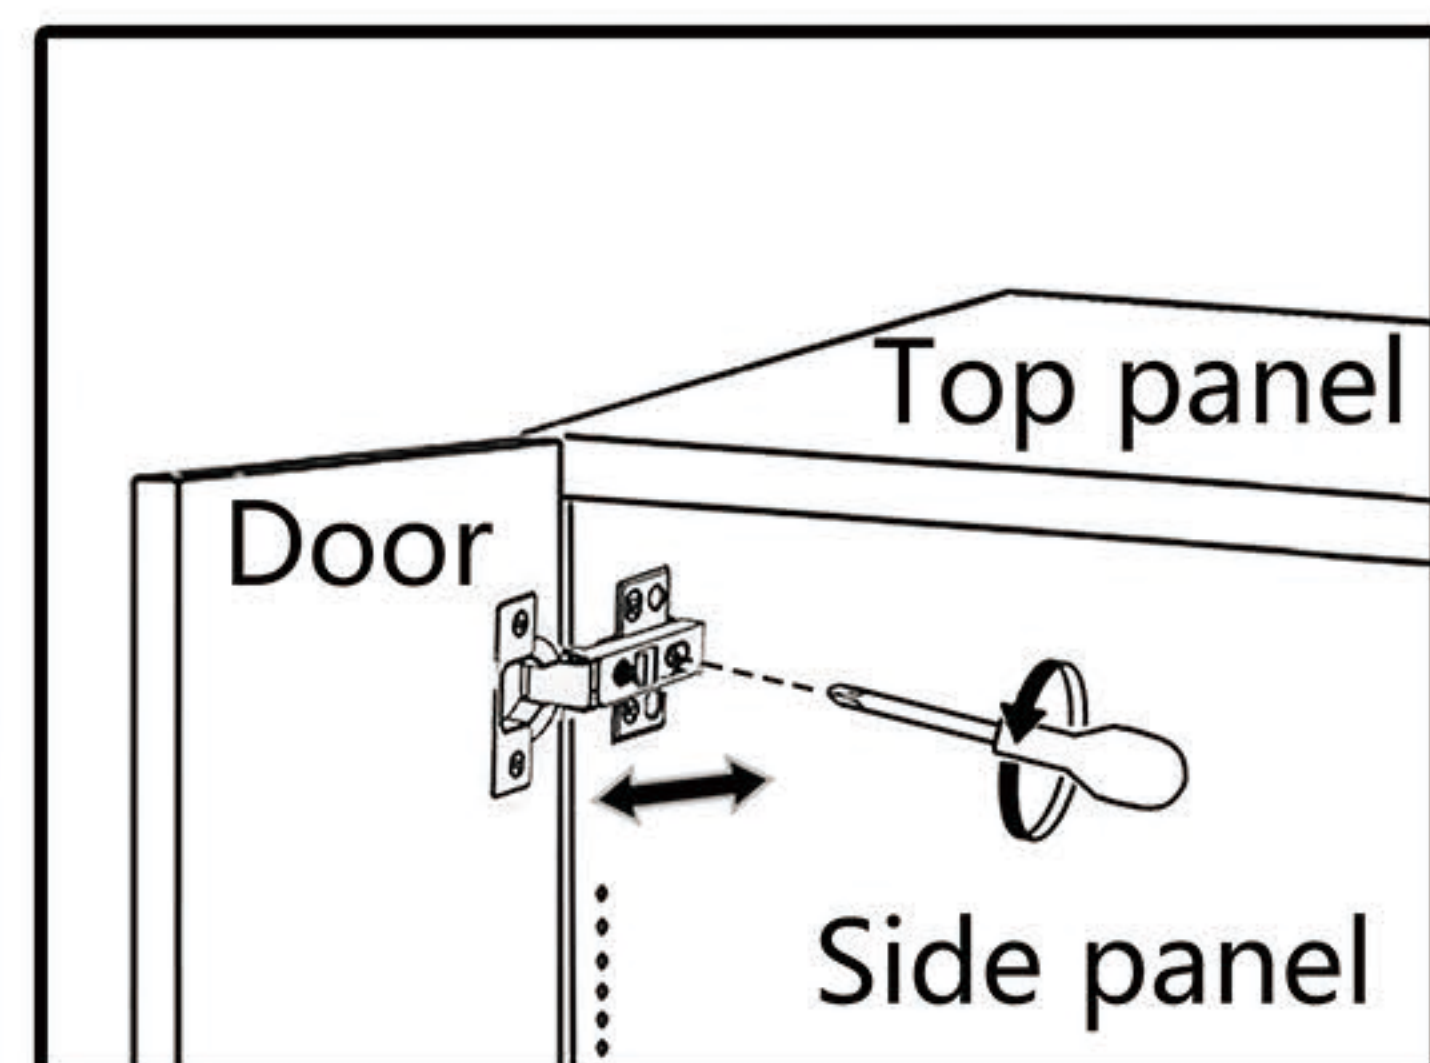


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

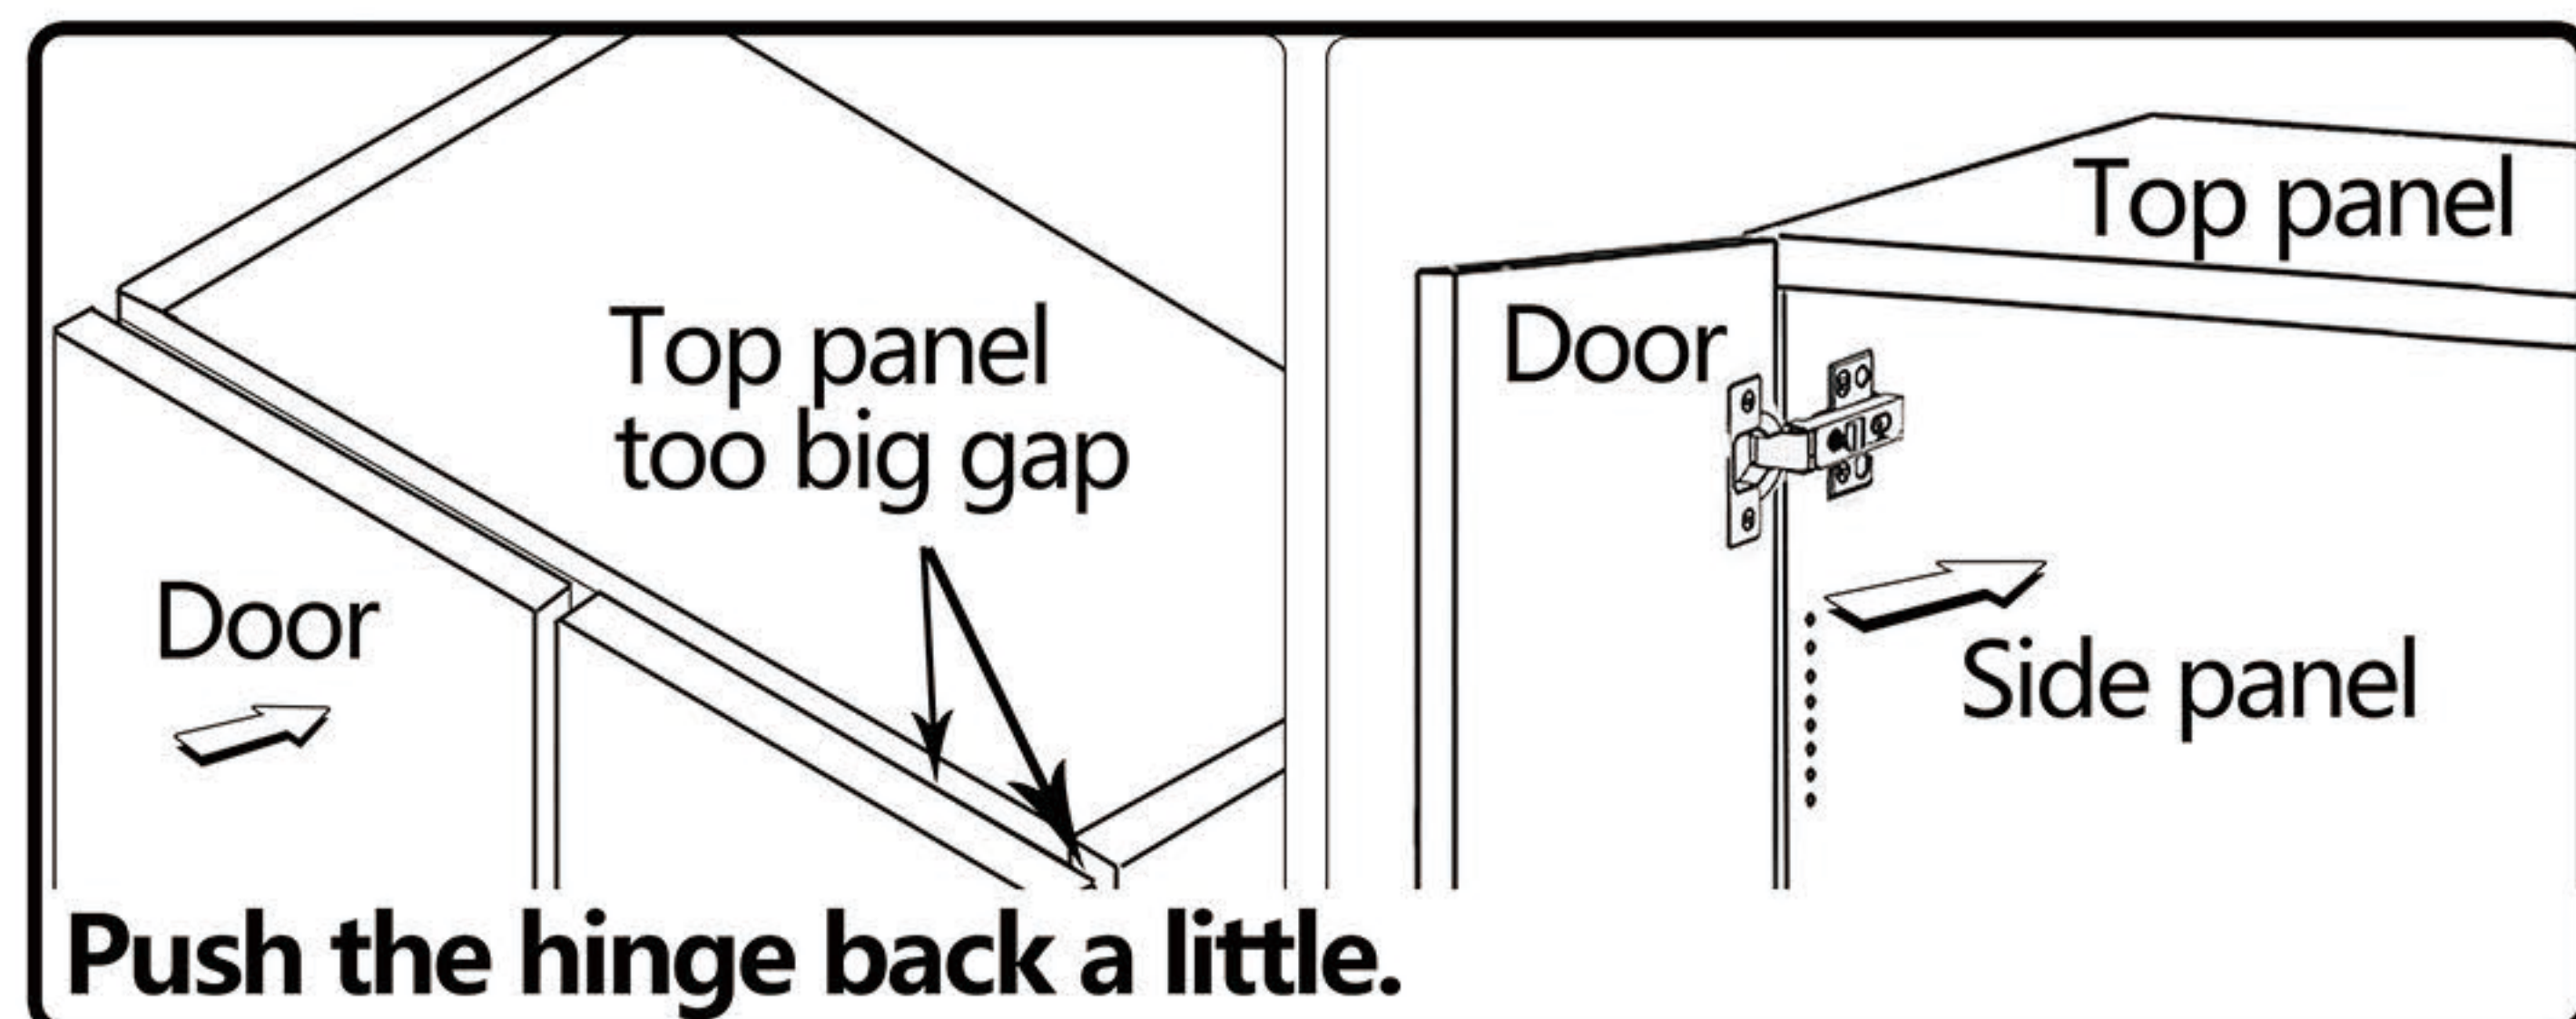

STEP 2b MOVE DOOR OUT

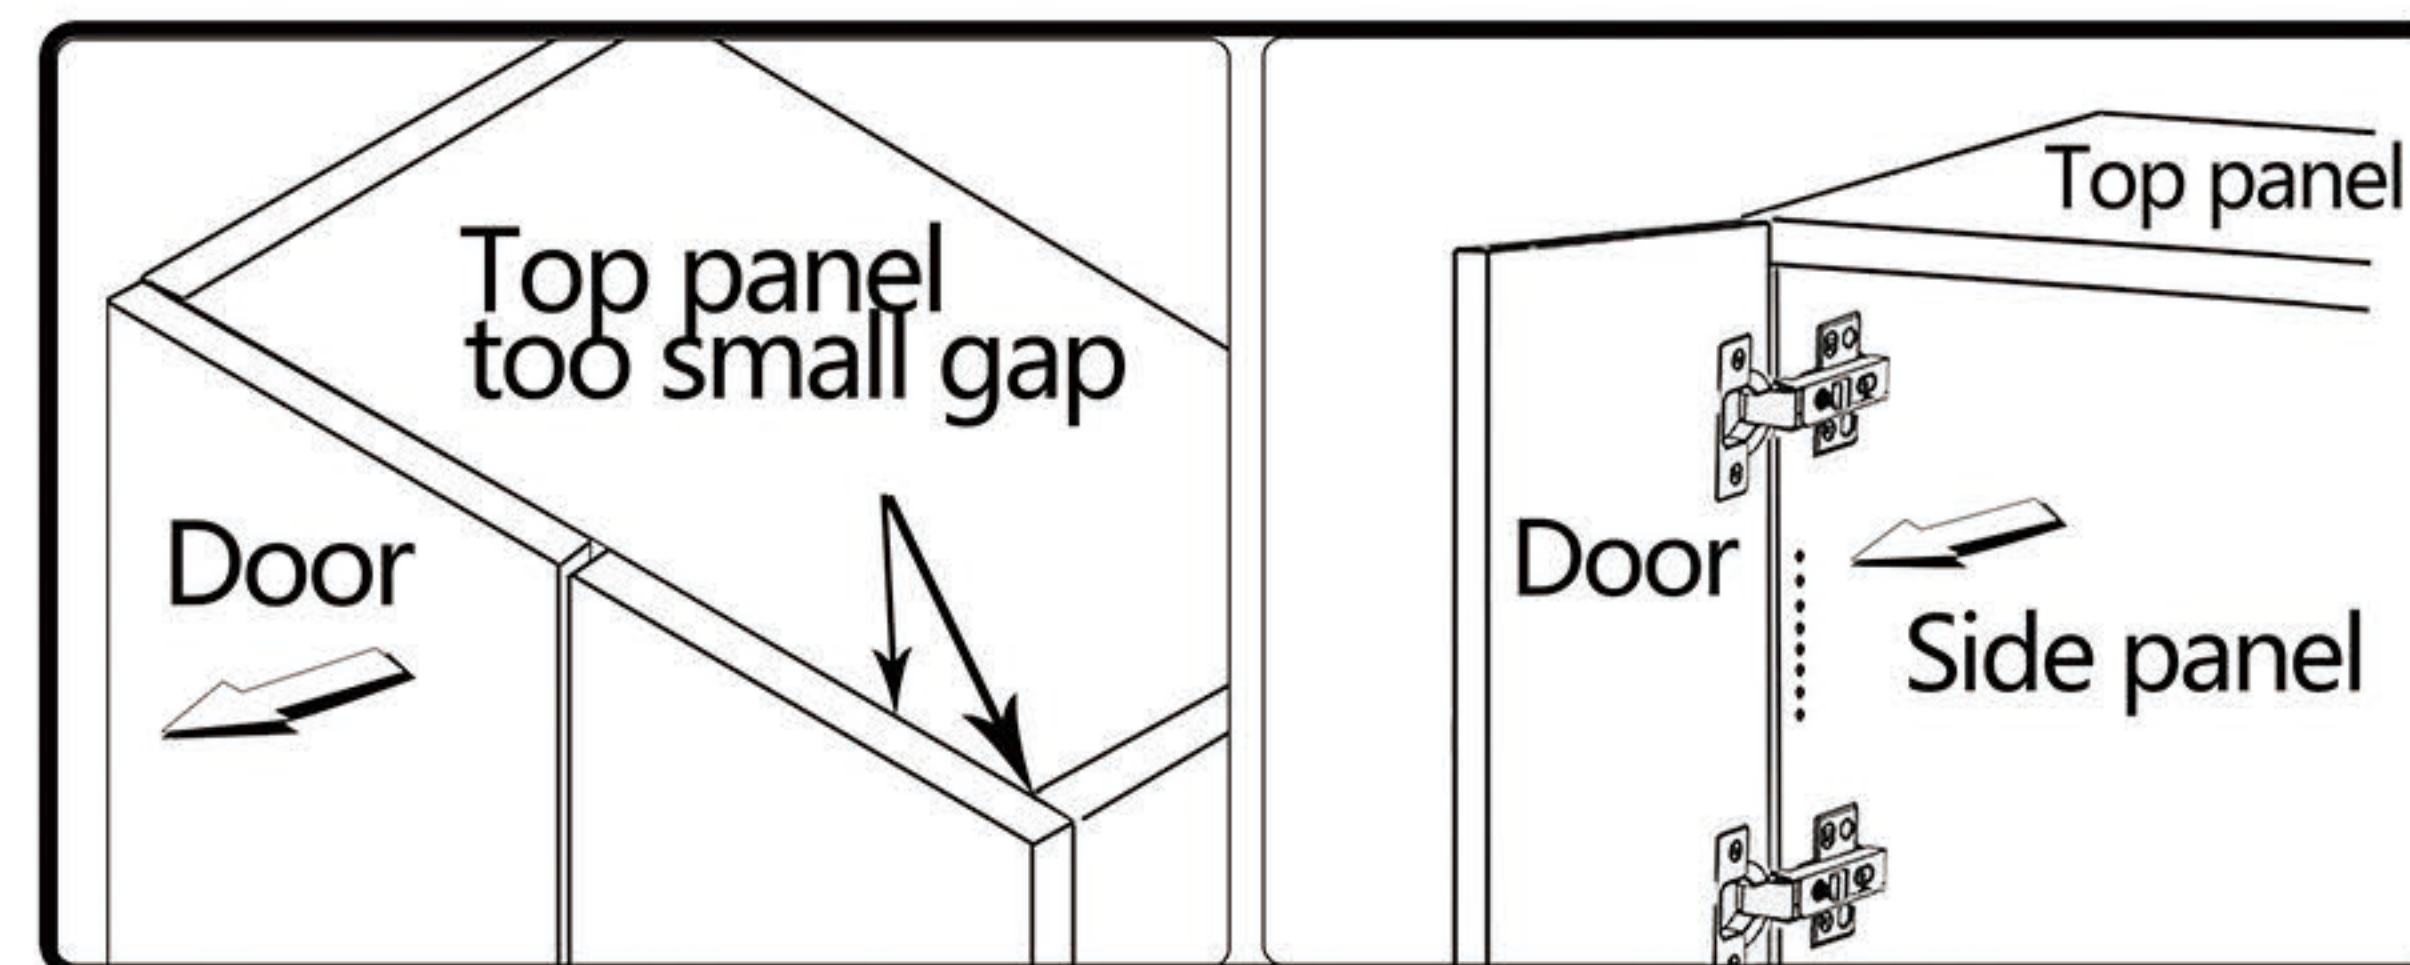


Push the hinge forward a little.


STEP 3

To adjust the gap between two door

Loosen or tighten the screw indicated a little to adjust the gap between doors and panels (see step 3a & step 3b).

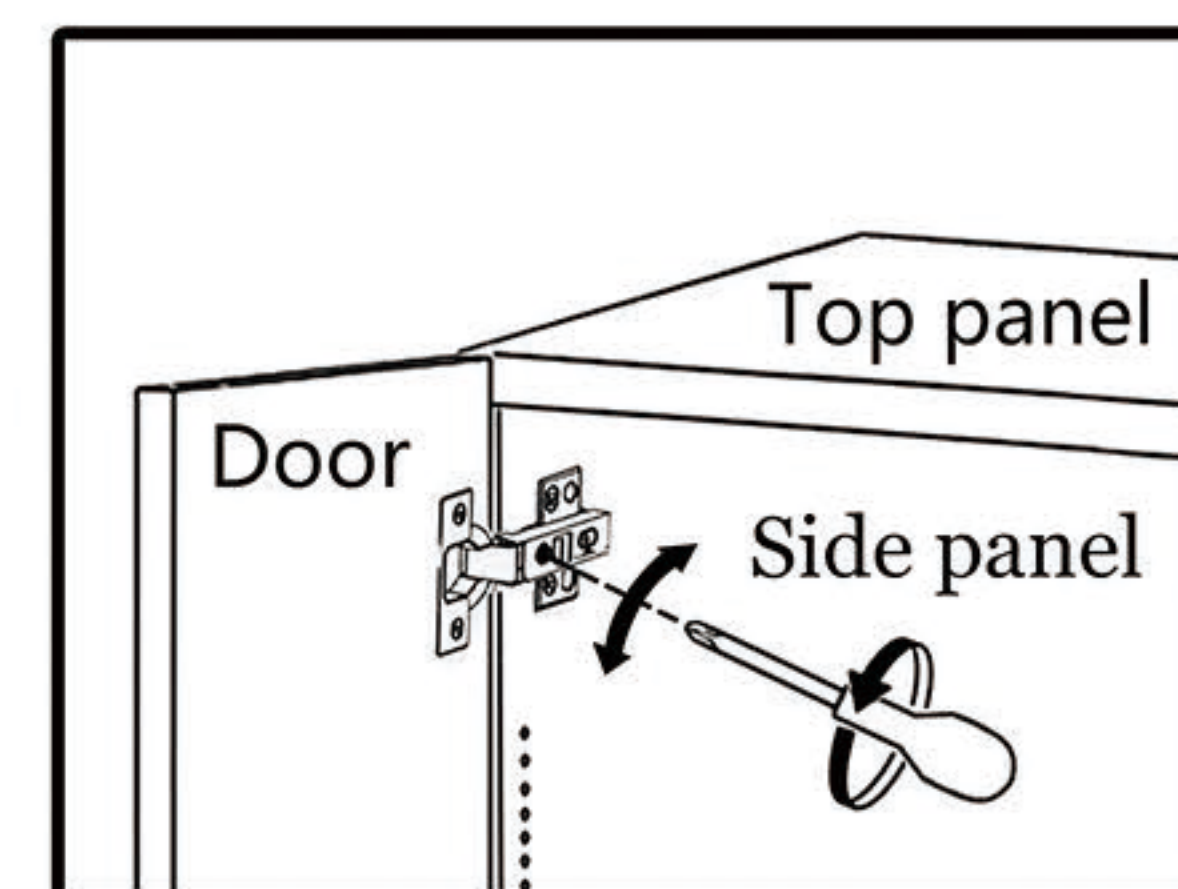

STEP 3a MOVE DOOR RIGHT

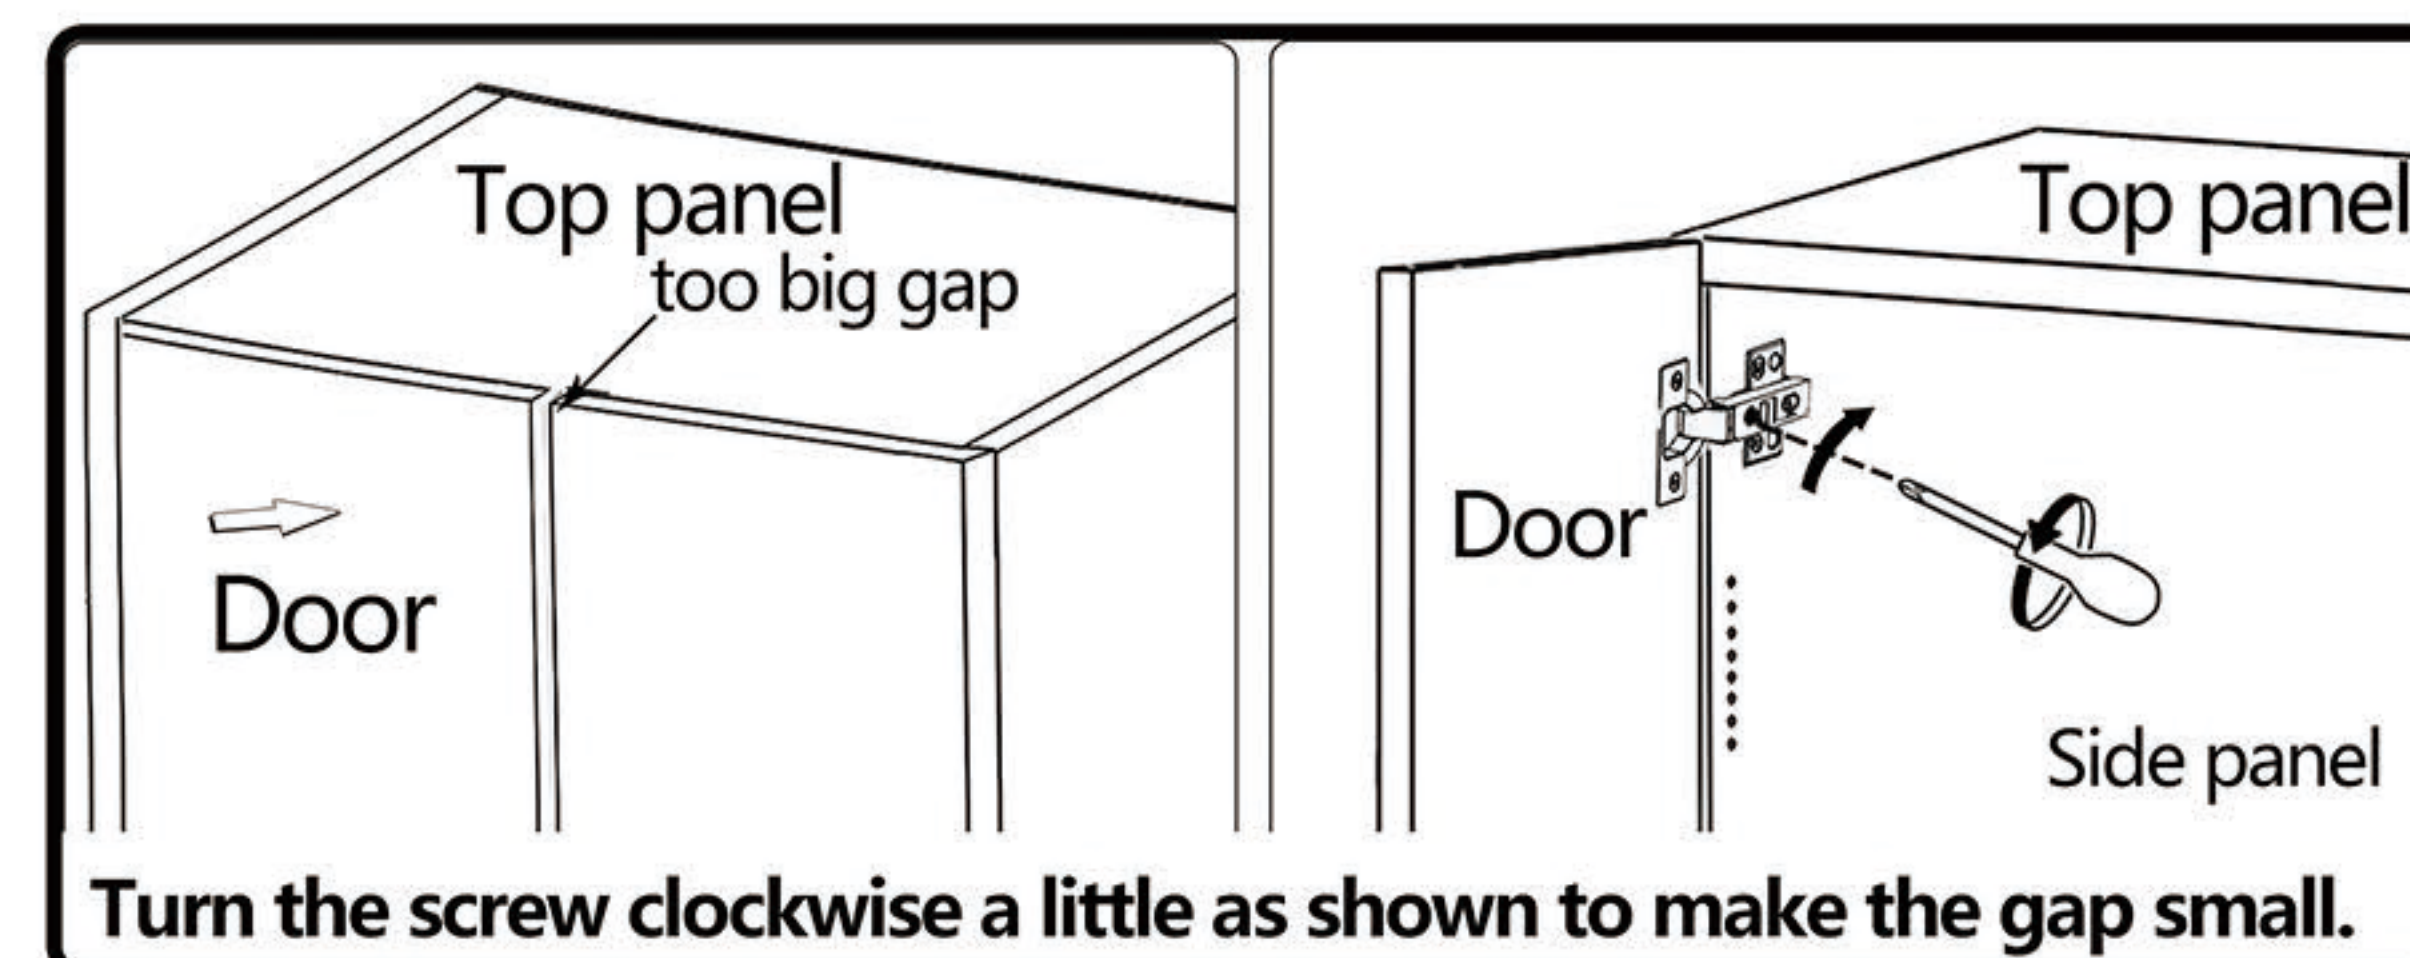

STEP 3b MOVE DOOR LEFT

