


Step 1

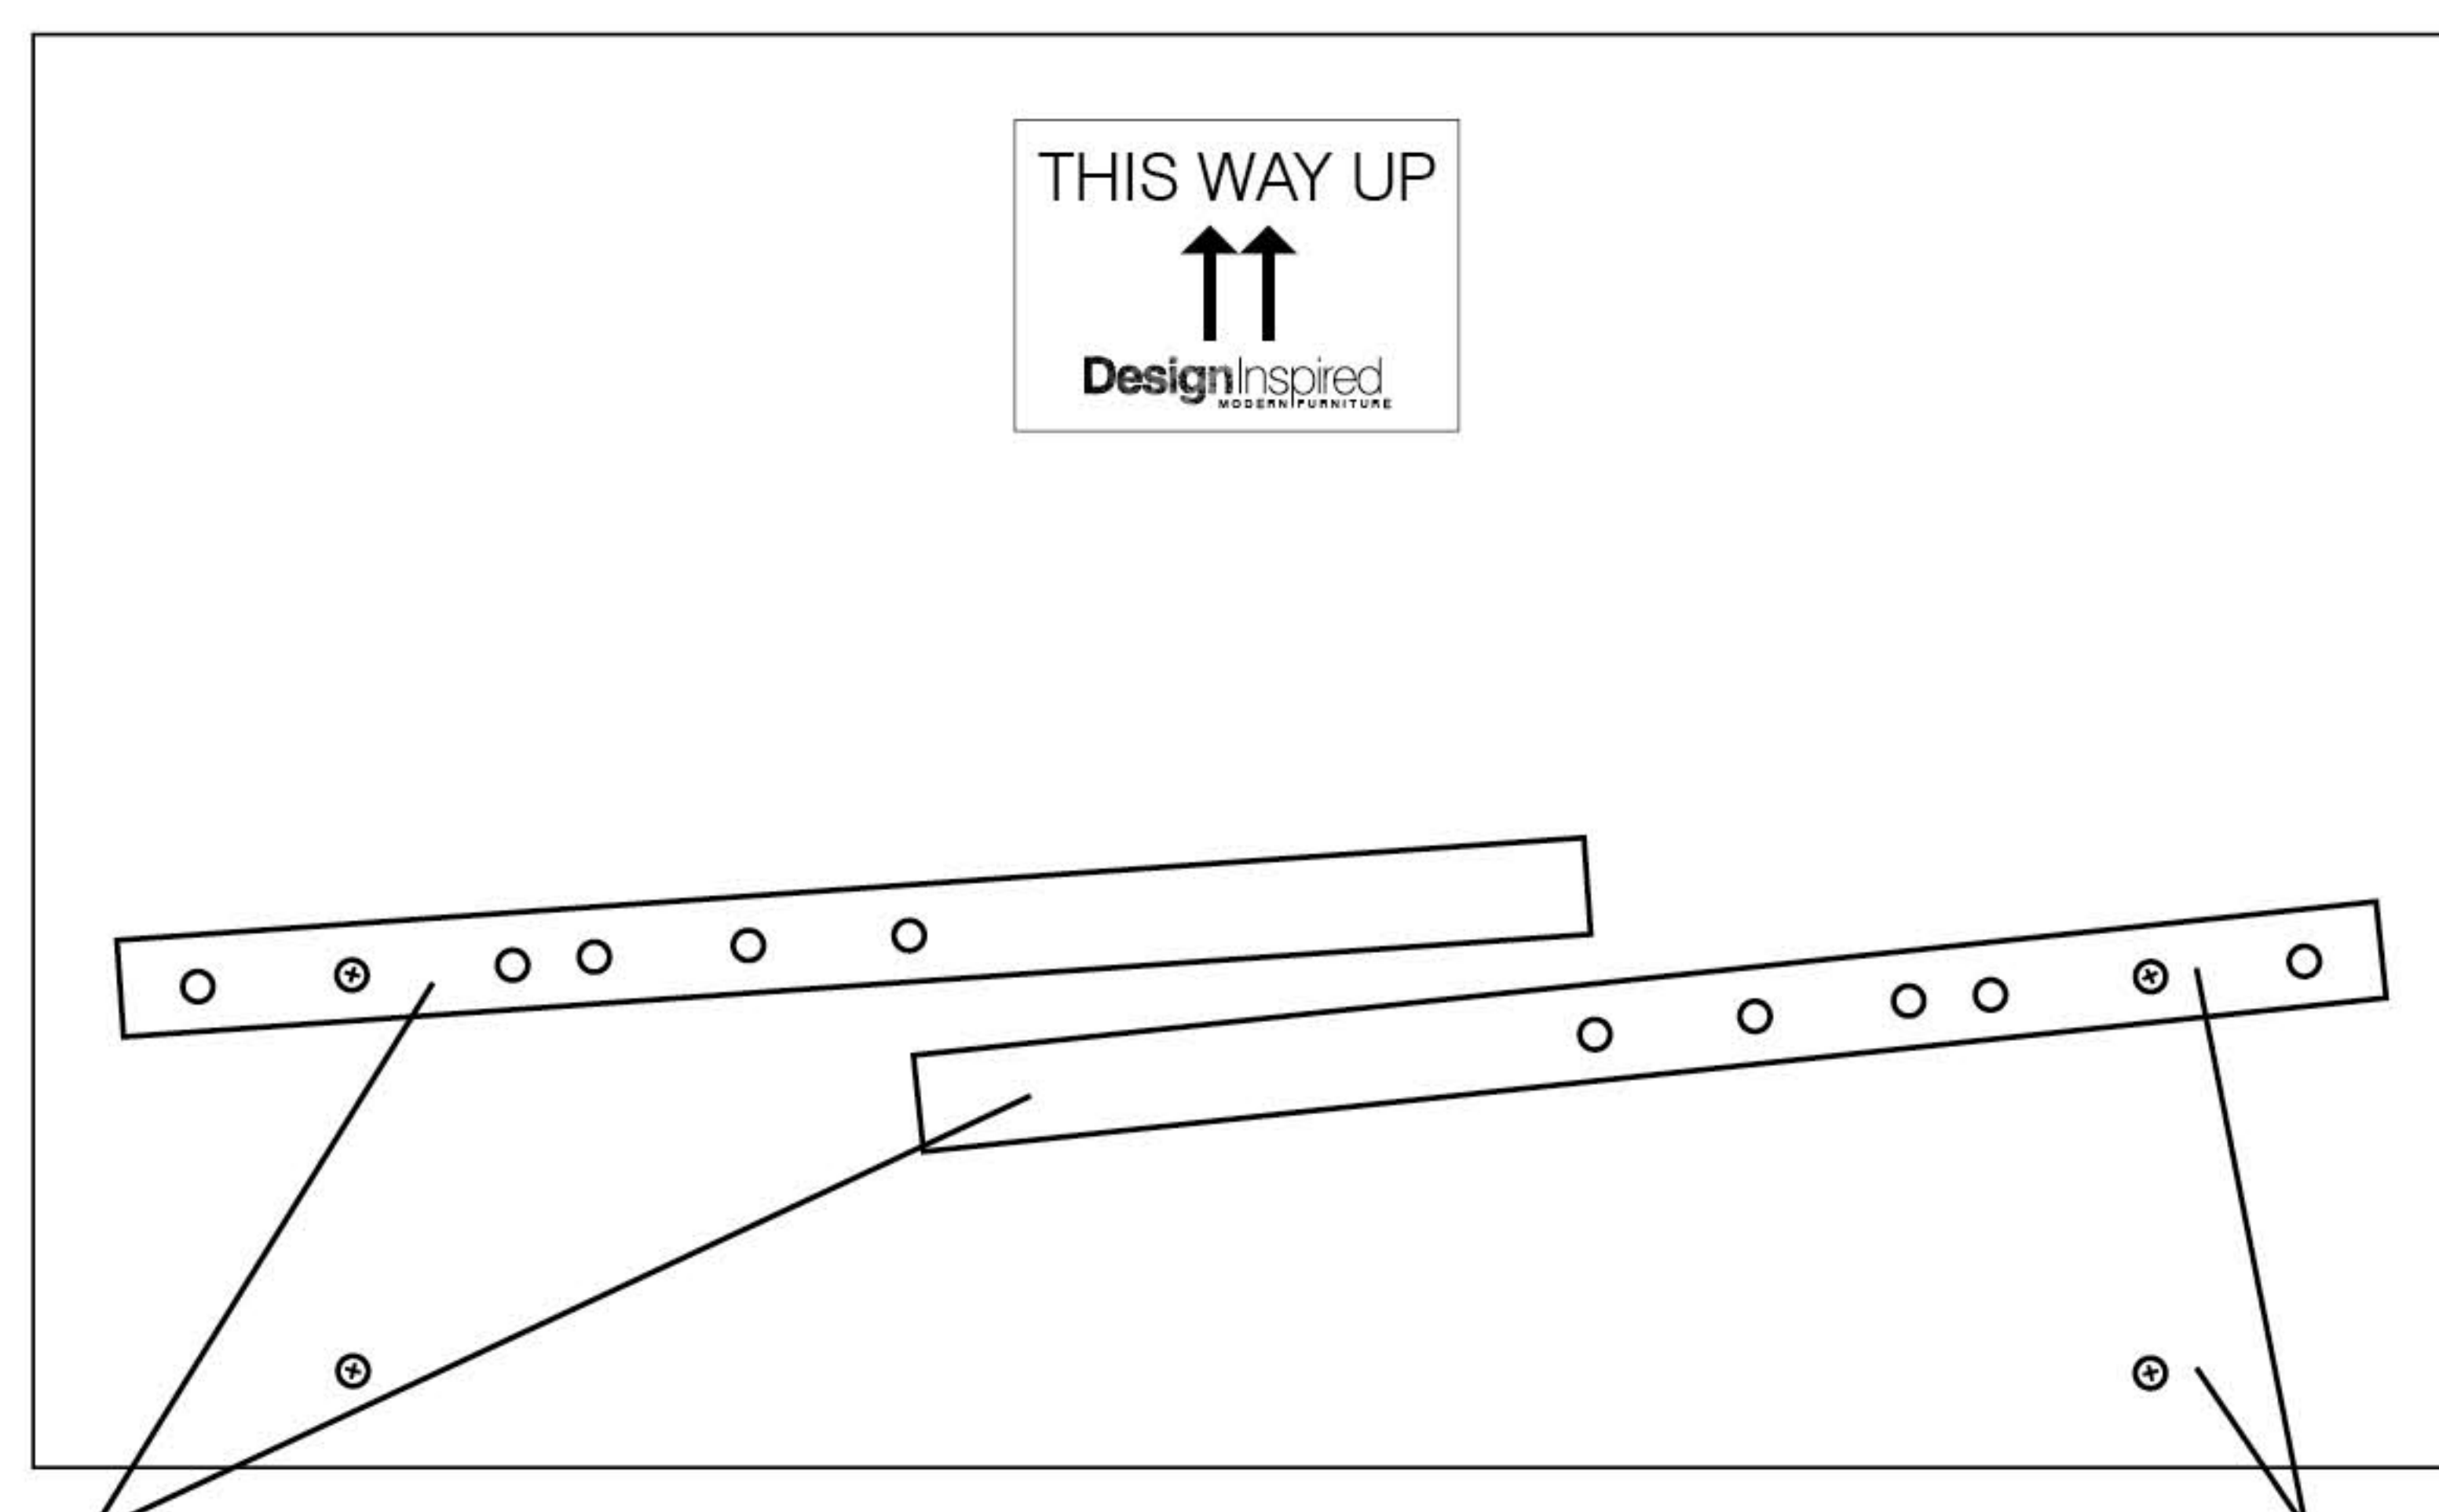


YOU WILL RECEIVE
2 x TIMBER LEG SUPPORTS,
THEY WILL EACH HAVE 6
PRE DRILLED HOLES.

THEY WILL BE FOLDED UP
LIKE THE ABOVE DIAGRAM
WHEN YOU RECEIVE YOUR
PACKAGE.

THESE SCREWS ON
EACH SIDE (4 IN TOTAL)
WILL HOLD THE
TIMBER LEGS UPRIGHT
IN PLACE

Step 2

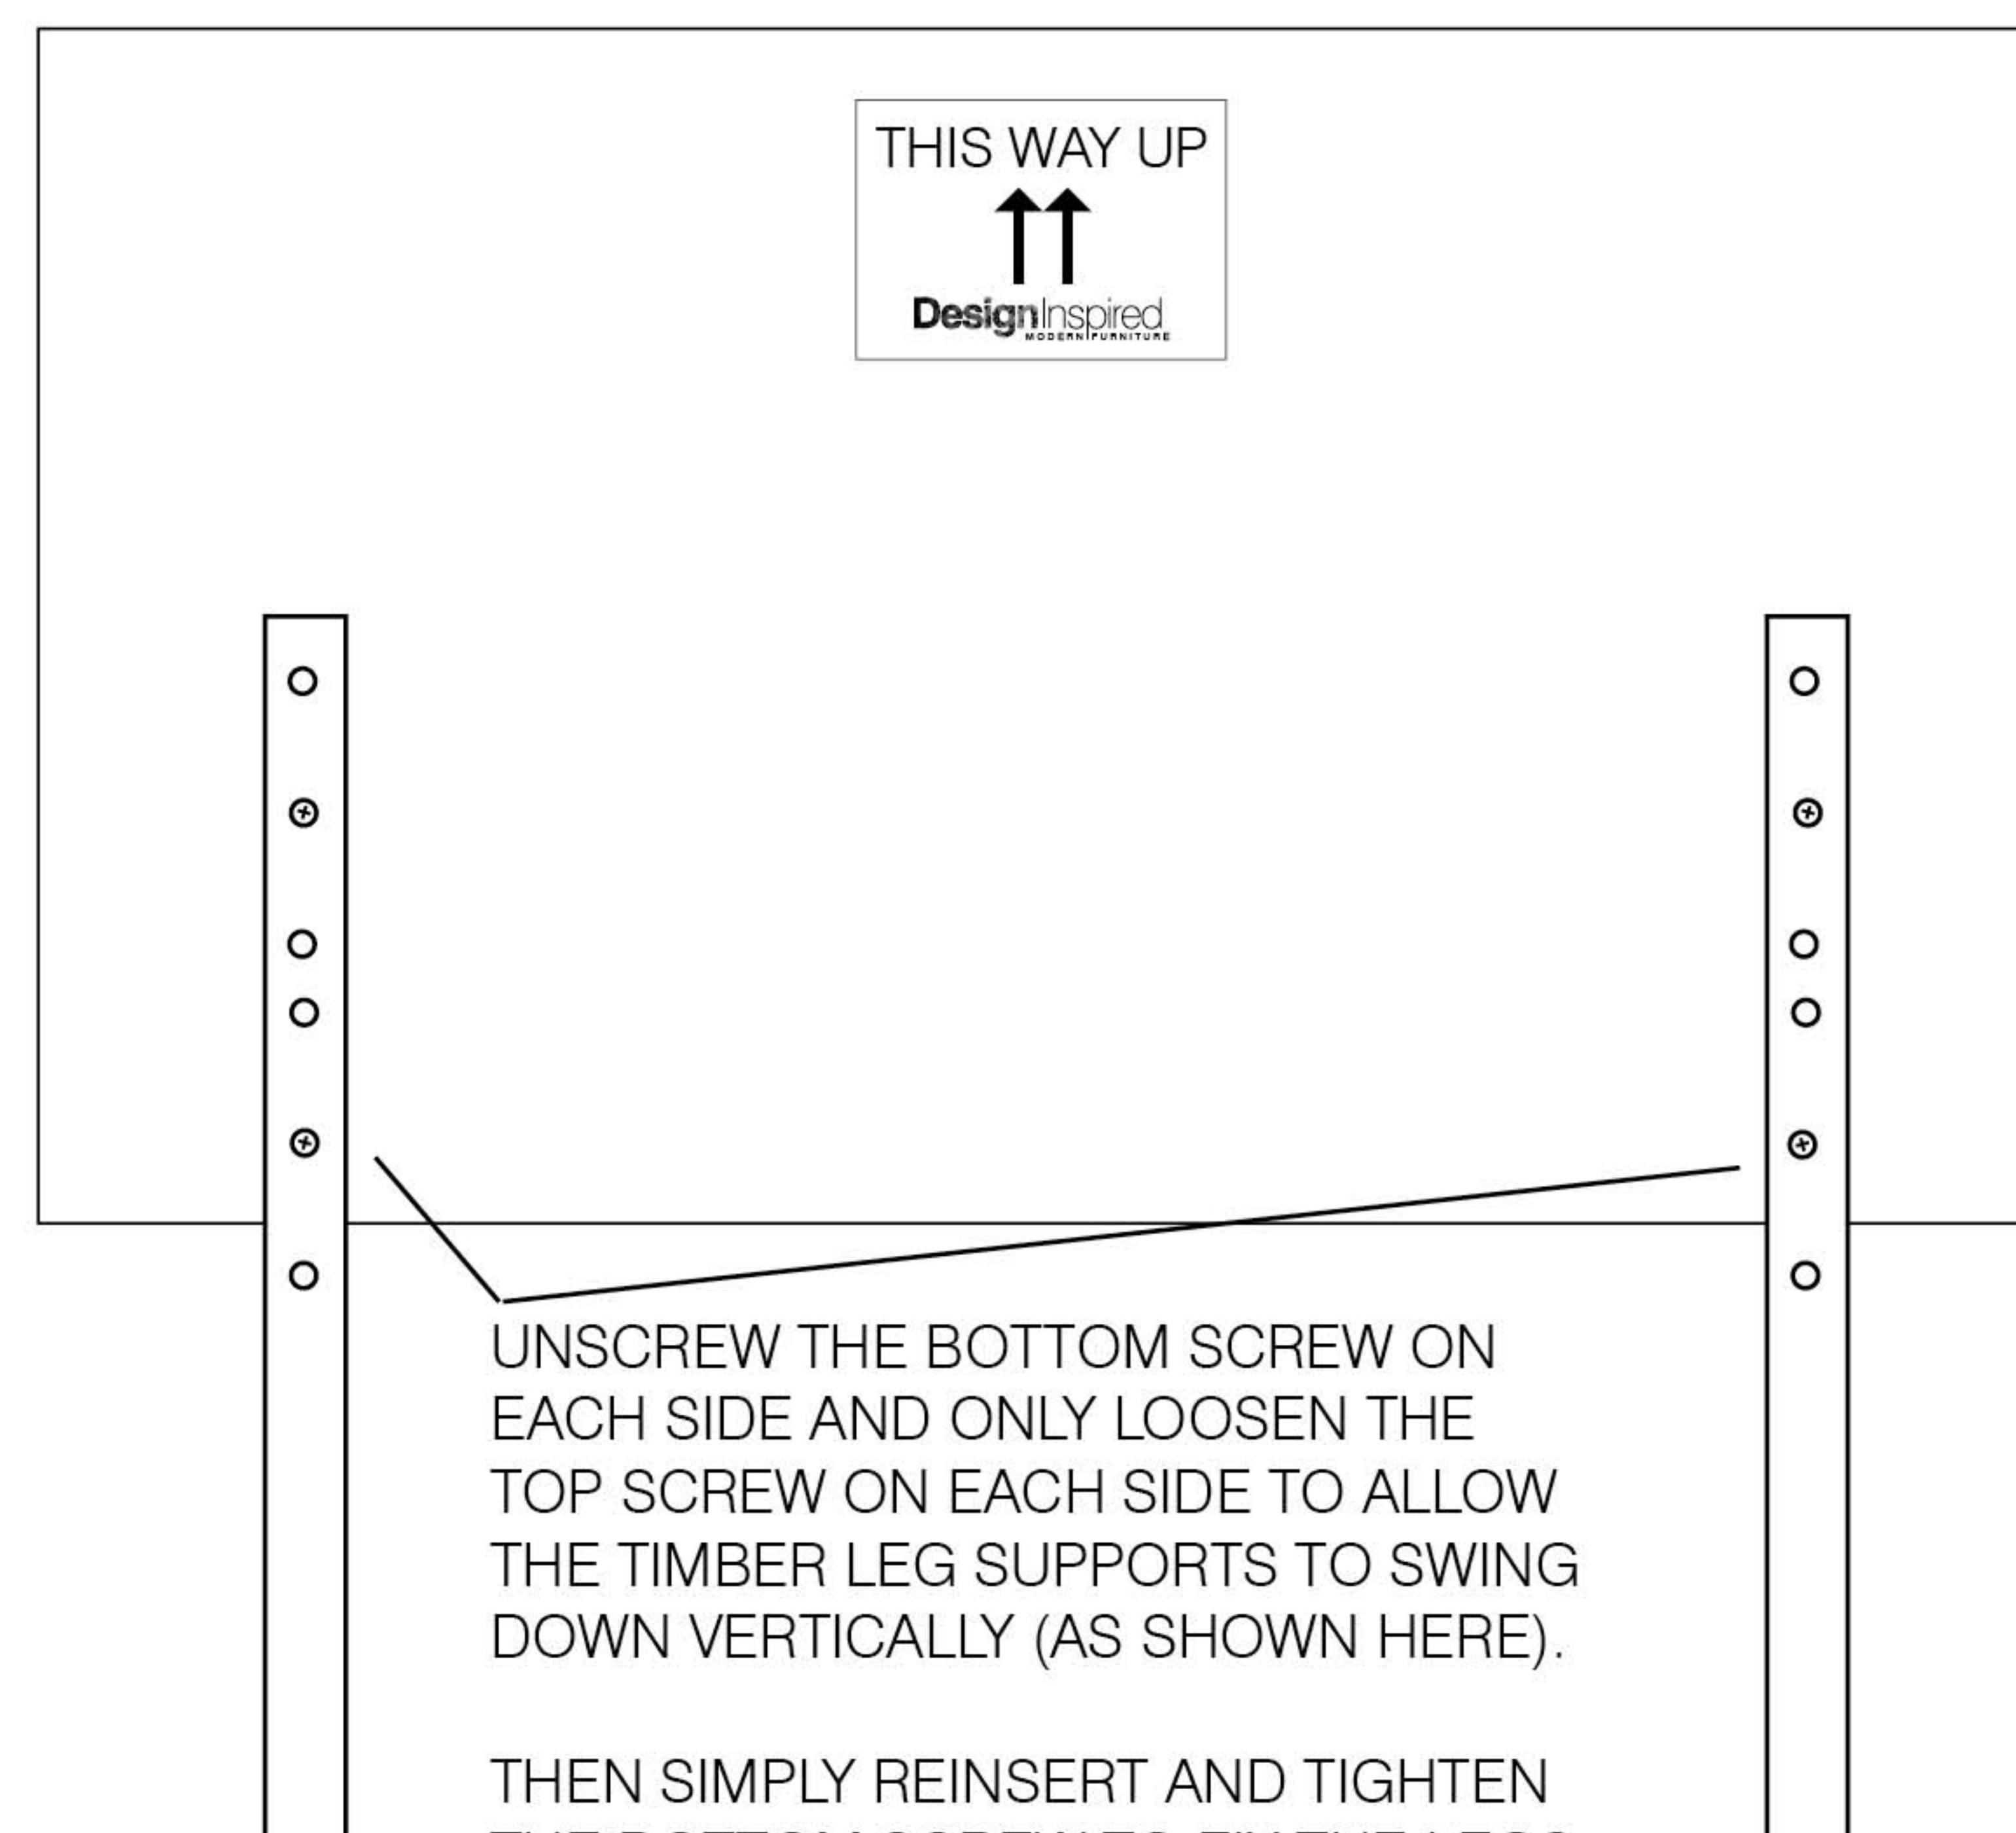

UNSCREW THE BOTTOM SCREW ON
EACH SIDE AND ONLY LOOSEN THE
TOP SCREW ON EACH SIDE TO ALLOW
THE TIMBER LEG SUPPORTS TO SWING
DOWN VERTICALLY (AS SHOWN HERE).

THEN SIMPLY REINSERT AND TIGHTEN
THE BOTTOM SCREW TO FIX THE LEGS
IN PLACE.

IF THE HEIGHT IS NOT RIGHT YOU CAN
THEN UNSCREW THE LEG SUPPORTS
AND MOVE THEM UP OR DOWN 10CM.