



INSTALLATION INSTRUCTIONS-UNDER MOUNTED SINKS

1. Use the cut-out template provided to carefully mark the cut-out line on the bench top.

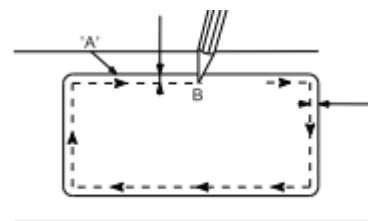

2. Cut the bench top along the line you marked. Carefully position the sink against benchtop to make sure it fits the cut-out correctly. If the fit is not correct, remove the sink and proceed with remedial work.

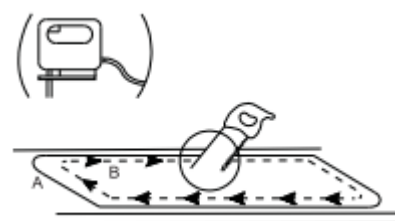

3. We recommend using "Sandwich Method" to fit the sink. Firmly fix a support board into the cabinet and cut the sink hole so that the sink flange will sit above the edge of the board. Slightly rout the edge so that the sink flange will sit flush with the top surface. Install sink and seal between flange and support board. Apply sealant to the underside edge of the cutout on benchtop material and position it over the support board to sandwich the sink in place. Fasten the benchtop securely.

