




**TAURIS**  
www.rvm.com.au








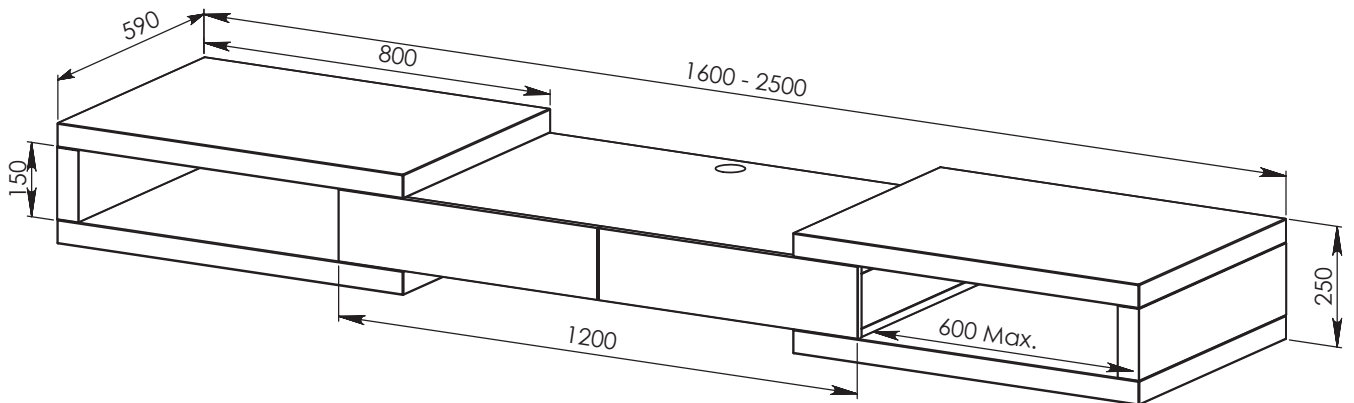



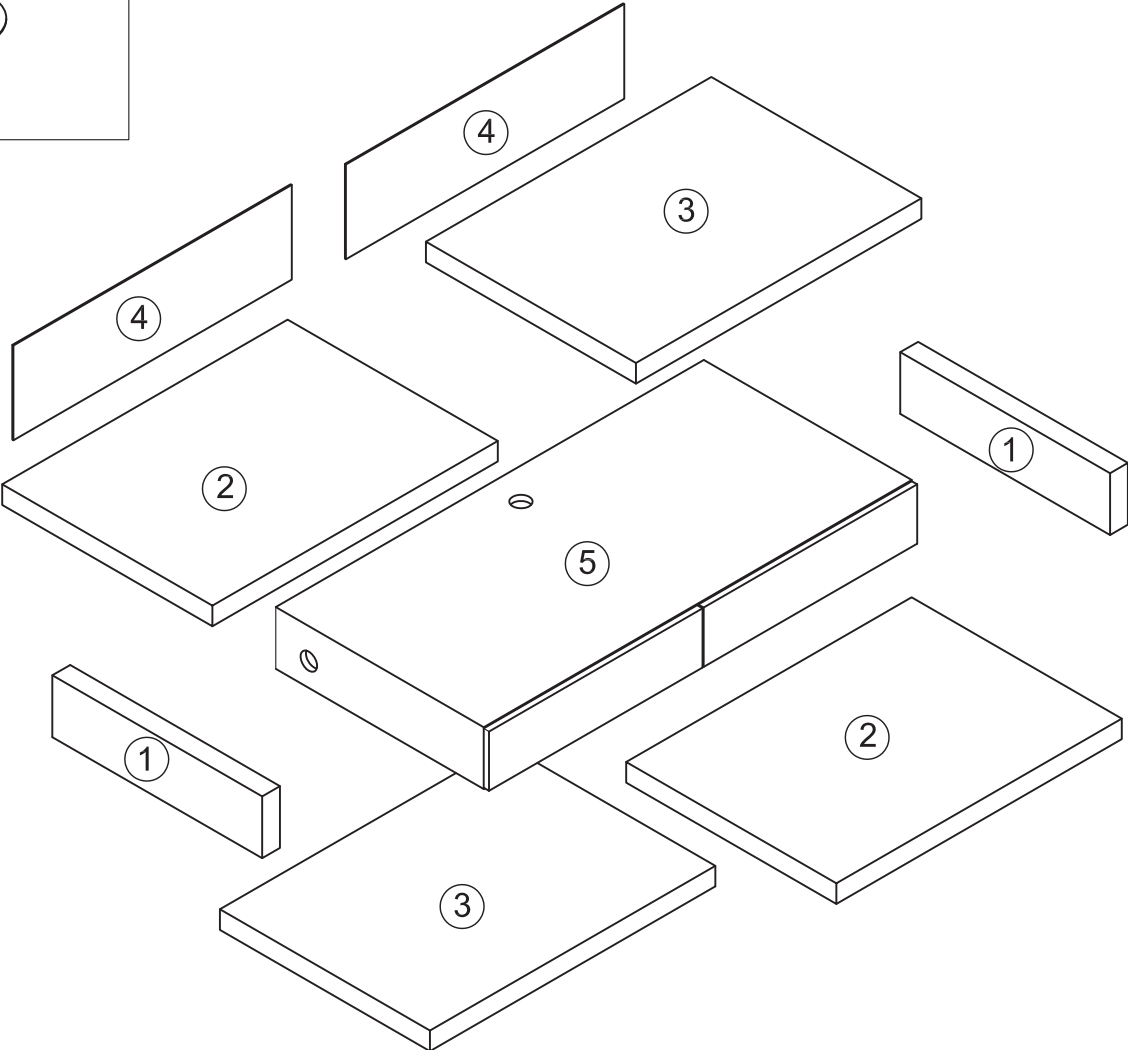
# Assembly Instruction Manual

## MODEL NO.: SPLIT2500



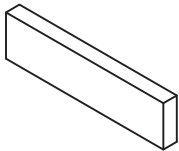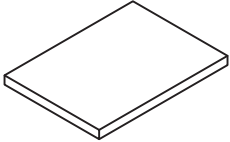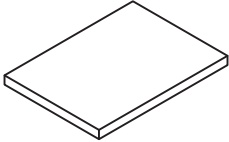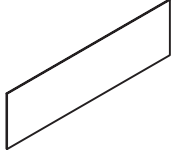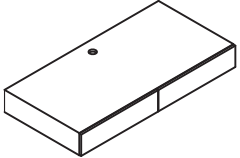


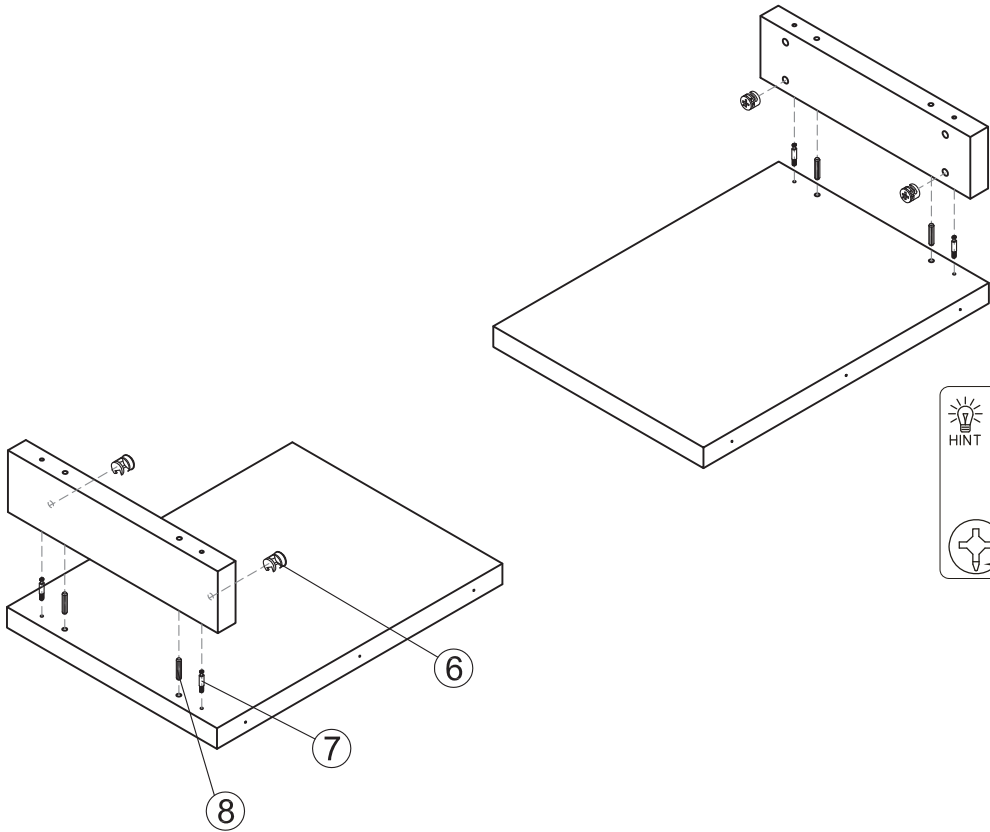
- 
- Please follow these assembly instructions as it will save you time, make assembly easier and prevent possible damage to your new unit.
  - Correct assembly is your responsibility.
  - We strongly recommend that the unit is assembled on a soft surface such as carpet or blanket.
  - We suggest the use of hand tools only to tighten all screws and fittings, as power tools can strip threads if over tightened.
  - **When moving this furniture item, always carry the unit. Dragging or sliding the unit could damage the unit and the floor surface.**
-


# Part List:

|   |   |  |  |  |
|---|---|--|--|--|
| <div>① x2pcs</div> <div></div>  | <div>② x2pcs</div> <div></div> | <div>③ x2pcs</div> <div></div>            | <div>④ x2pcs</div> <div></div>            | <div>⑤ x1pc</div> <div></div> |
| <div>⑥ x8pcs</div> <div></div> | <div>⑦ x8pcs</div> <div></div> | <div>⑧ x8pcs</div> <div><br/>ø10x50</div> | <div>⑨ x20pcs</div> <div><br/>ø4x16</div> | <div>⑩ x1pc</div> <div></div> |
| <div>⑪ x1pc</div> <div></div> | <div></div>                  |  |  |  |

# STEP 1


-  ⑥ x4
-  ⑦ x4
-  ⑧ x4






 **HINT**


**Cam fitting detail**


When inserting cam, ensure arrowhead on cam points toward to the hole on the panel edge.

 Arrowhead

# STEP 2


-  ⑥ x4
-  ⑦ x4
-  ⑧ x4

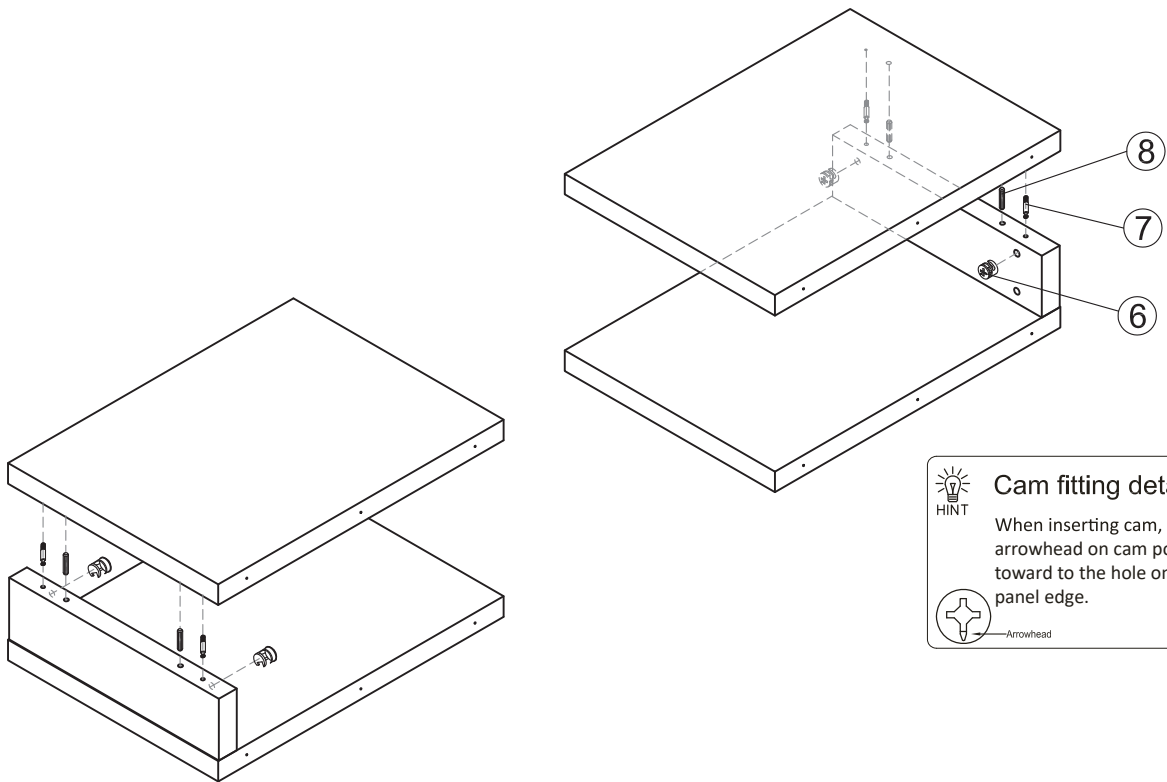

 **HINT**


**Cam fitting detail**

When inserting cam, ensure arrowhead on cam points toward to the hole on the panel edge.

 Arrowhead

# STEP 3

 ⑨ x12

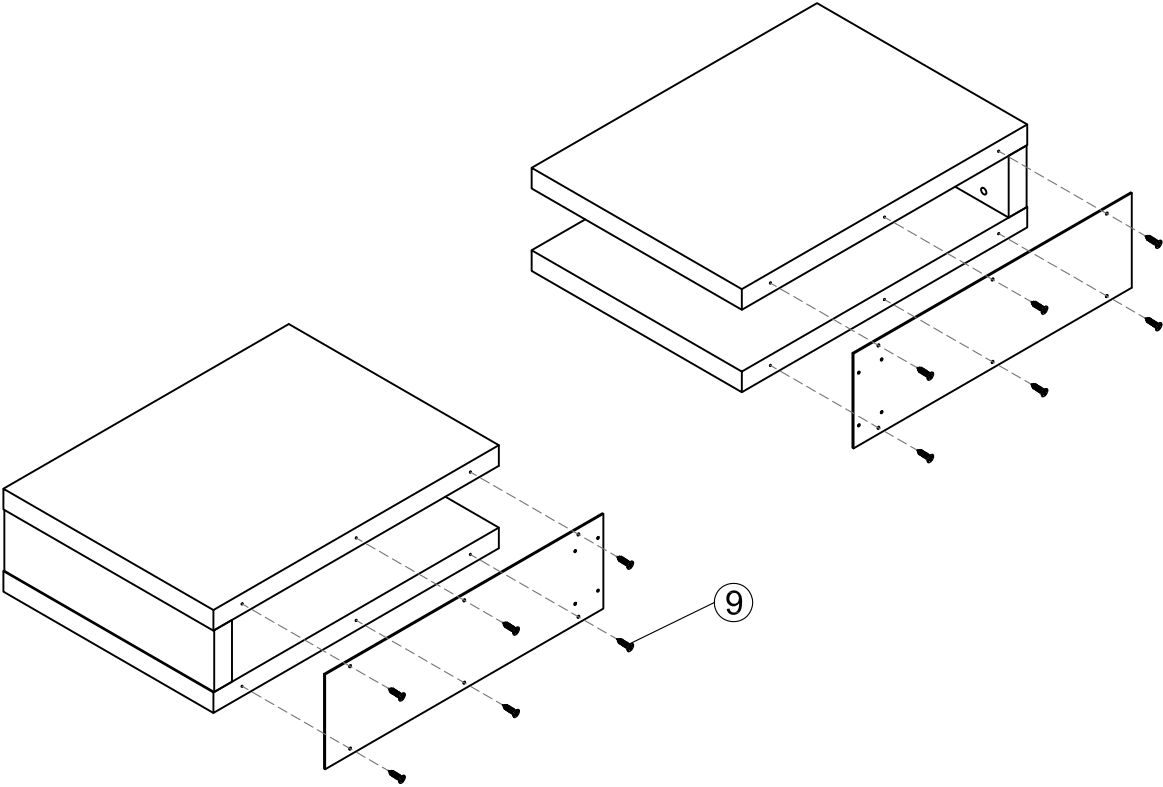


# STEP 4

 ⑨ x8

 ⑩ x1

 ⑪ x1

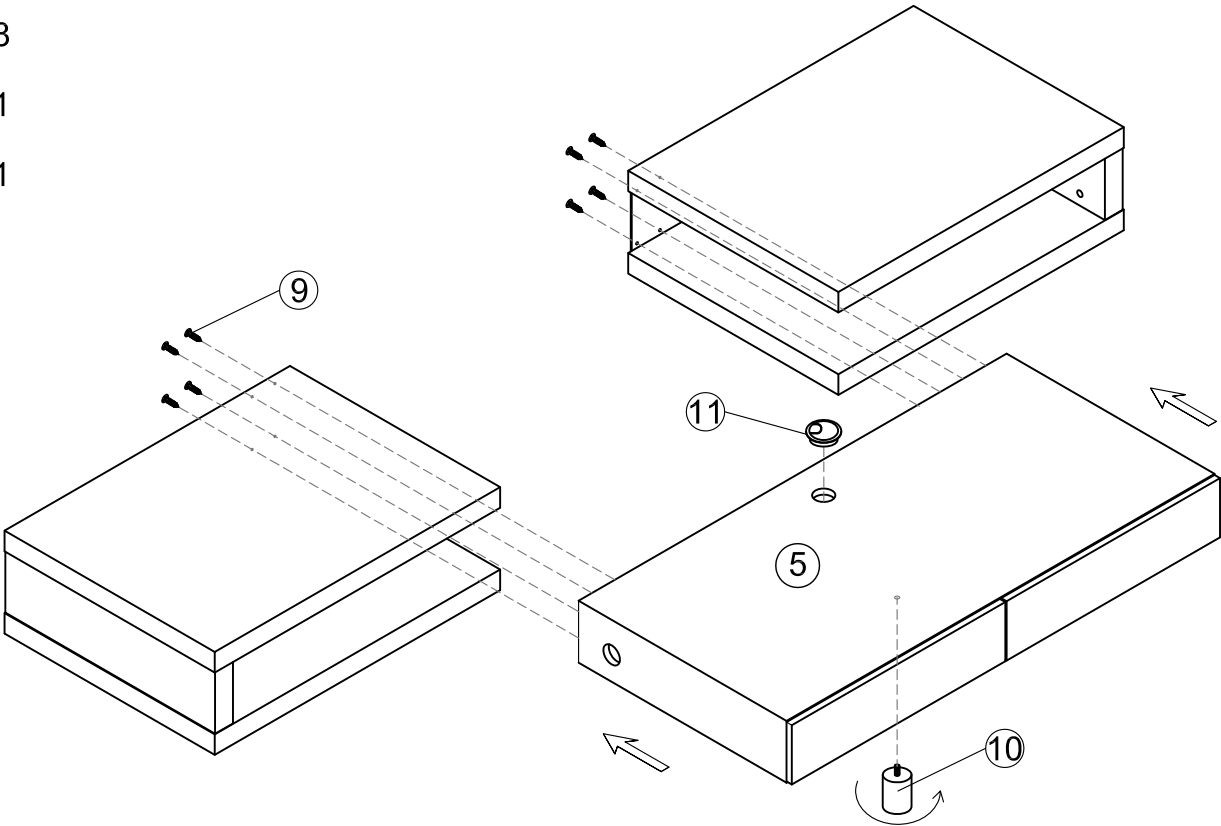

# STEP 5

