

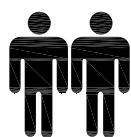


ASSEMBLY INSTRUCTION

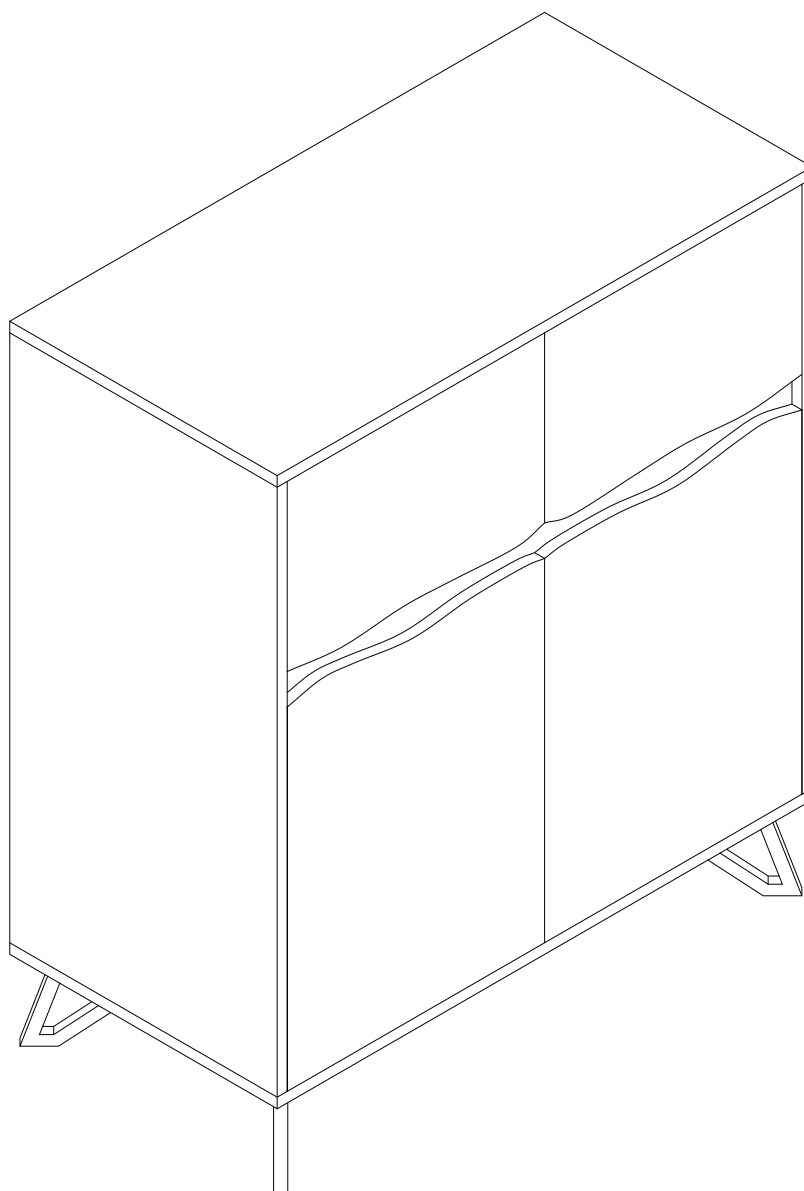


2 PERS.

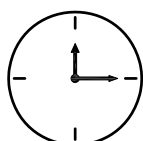


20 MIN



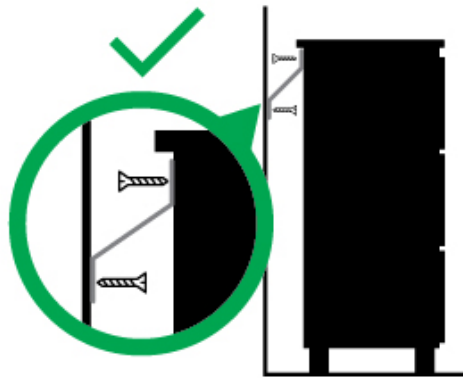



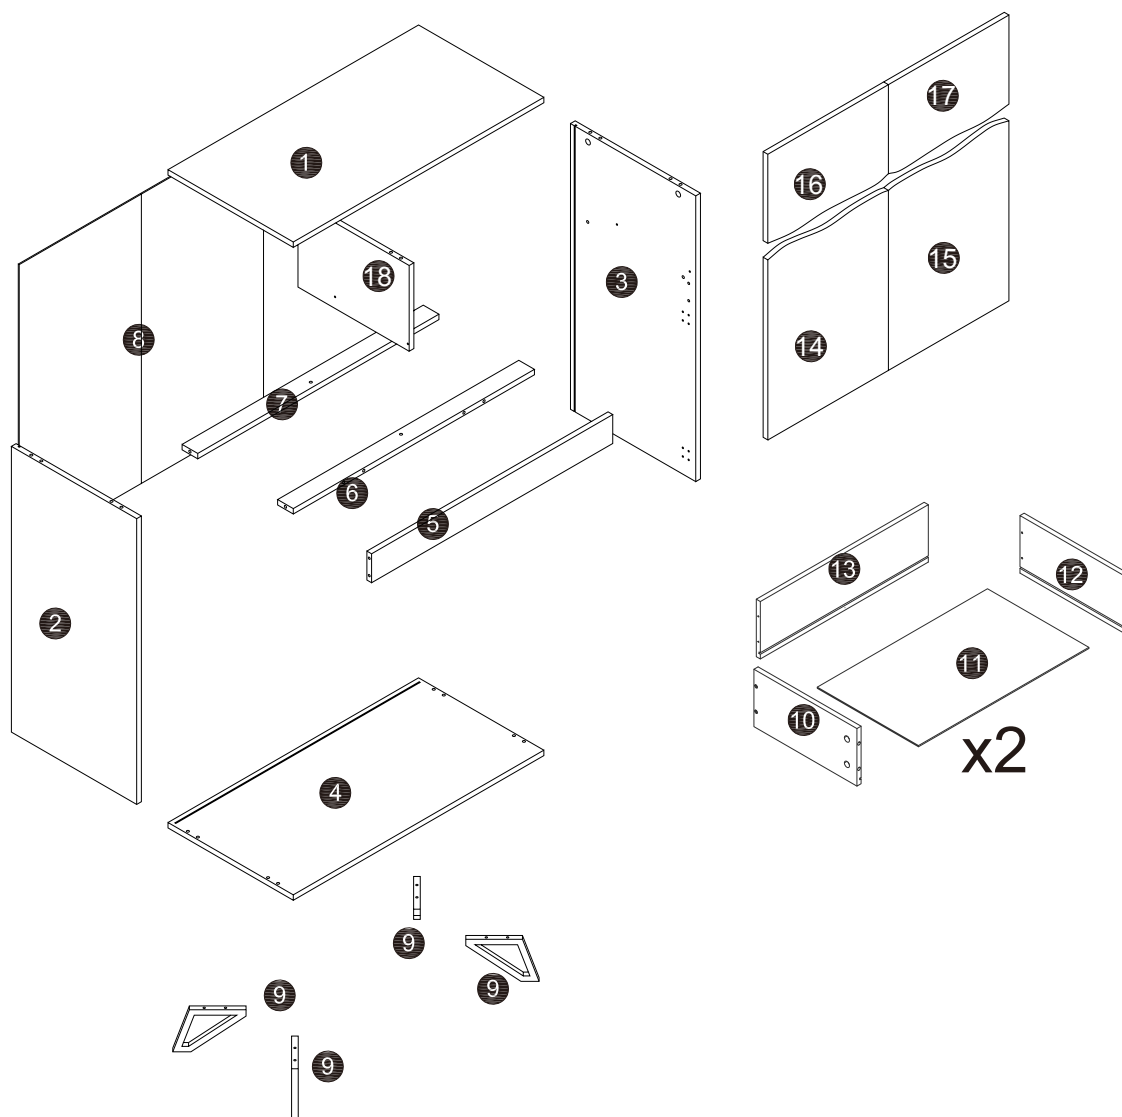








WARNING



Children have died from furniture tipover.


- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.







<p>A</p>  <p>ø6X35mm</p>	<p>B</p>  <p>ø15X10mm</p>	<p>C</p>  <p>M6x35mm</p>	<p>D</p>  <p>ø6x30mm</p>	<p>E</p>  <p>M4x30mm</p>
<p>F</p>  <p>M3.5x12mm</p>	<p>G</p> 	<p>CL</p> 	<p>CR</p> 	<p>DL</p> 
<p>DR</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 	<p>K</p> 



STEP 1

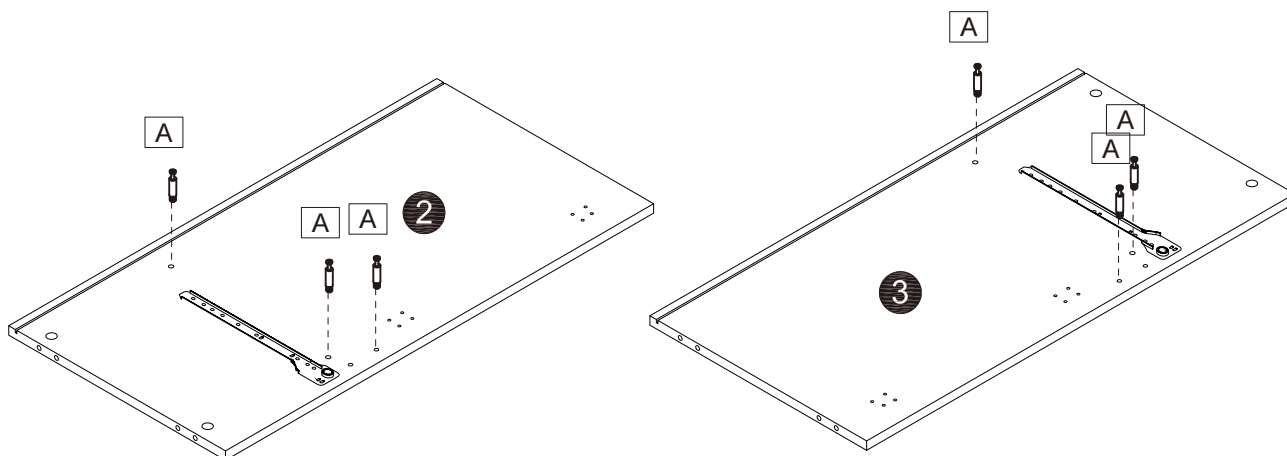Take out the relevant component as shown in the diagram.






A	x 6	F	x 4
			
ø6X35mm		M3.5x12mm	
CL	x 1	CR	x 1
			



Attach CL and CR to the left and right sides of the base frame, tighten with F screws.

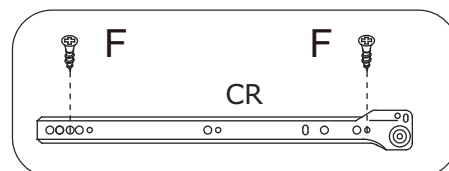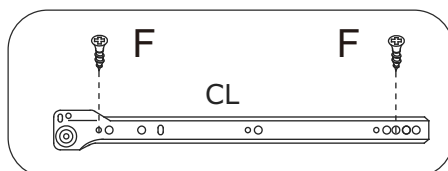



STEP 2

Assemble the components shown in the diagram. Ensure that each position is placed correctly.


F	x 4	CL	x 1	CR	x 1
					
M3.5x12mm					

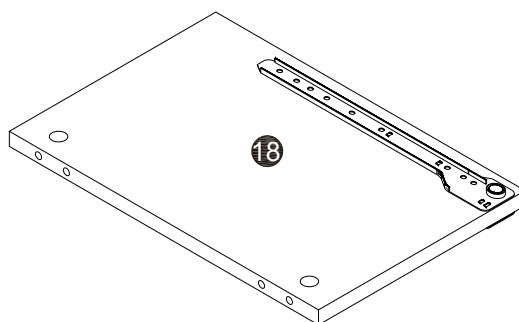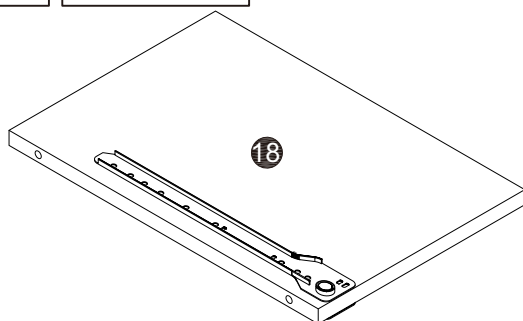

Use F screws to fix the connections.

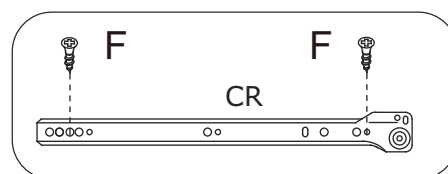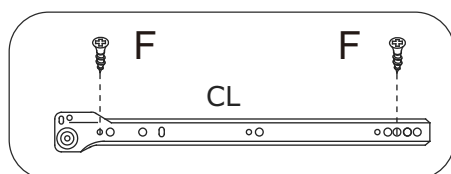



STEP 3

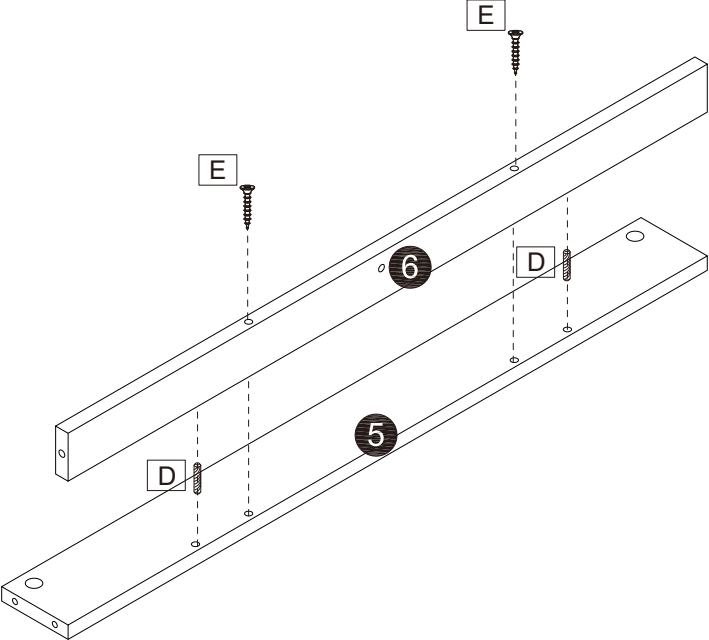


Assemble the components shown in the diagram. Ensure that each part is placed correctly.


Use D,E screws for fixing.

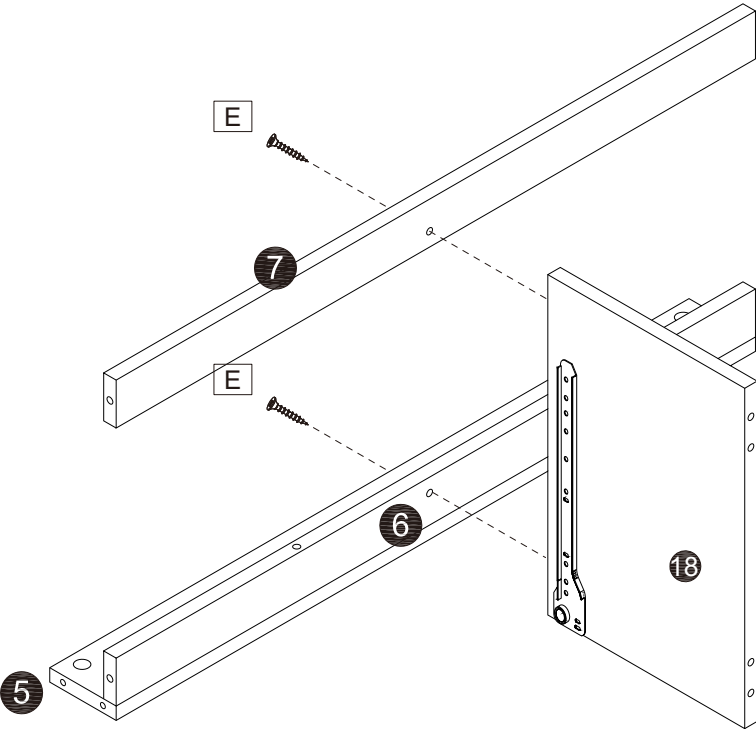



D	x 2
	
ø6x30mm	

E	x 4
	
M4x30mm	


STEP 4

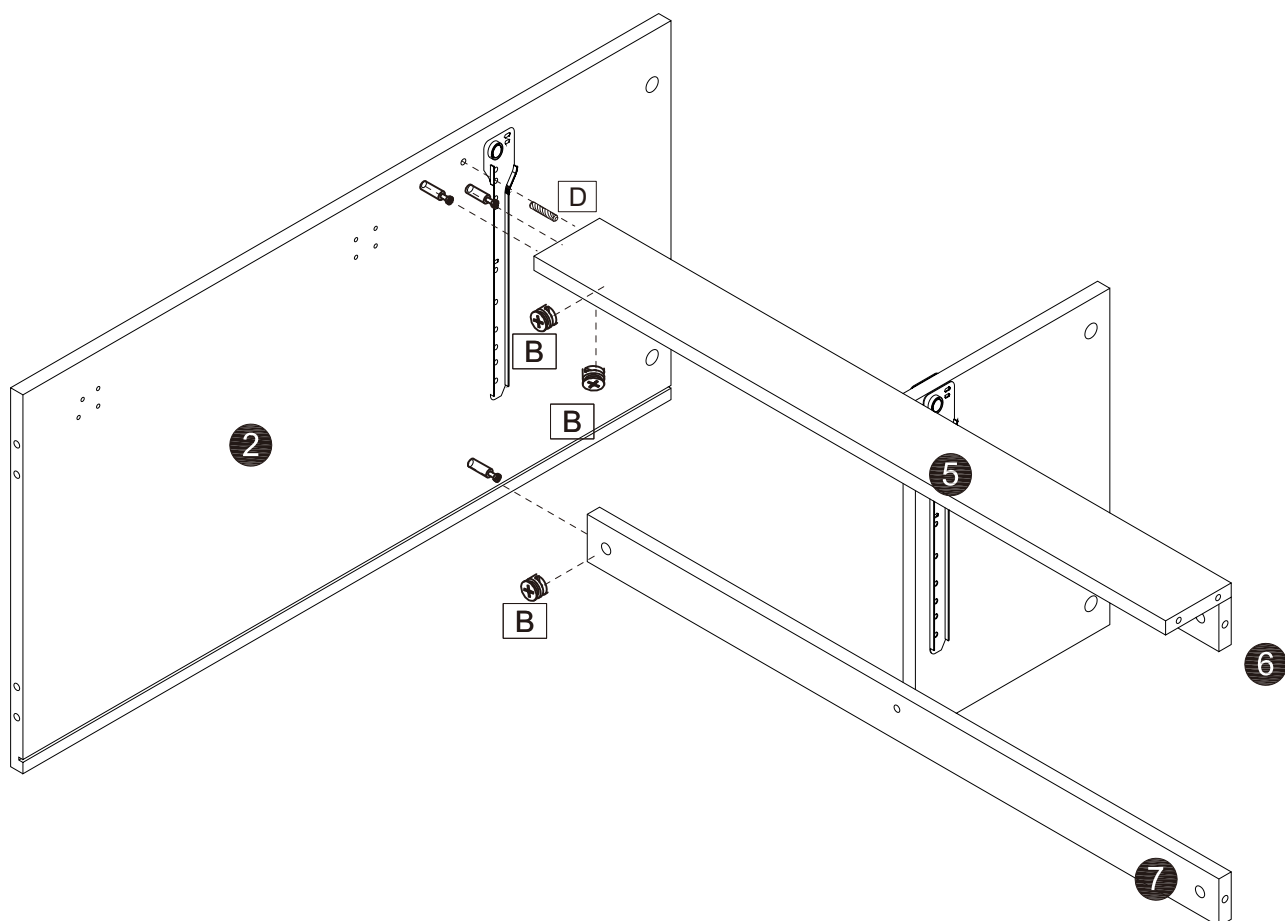



Assemble the components shown in the diagram. Layer them as needed to form the structure. Use B,D screws to secure the connections.

B	x3	D	x 1
			
ø15X10mm		ø6x30mm	

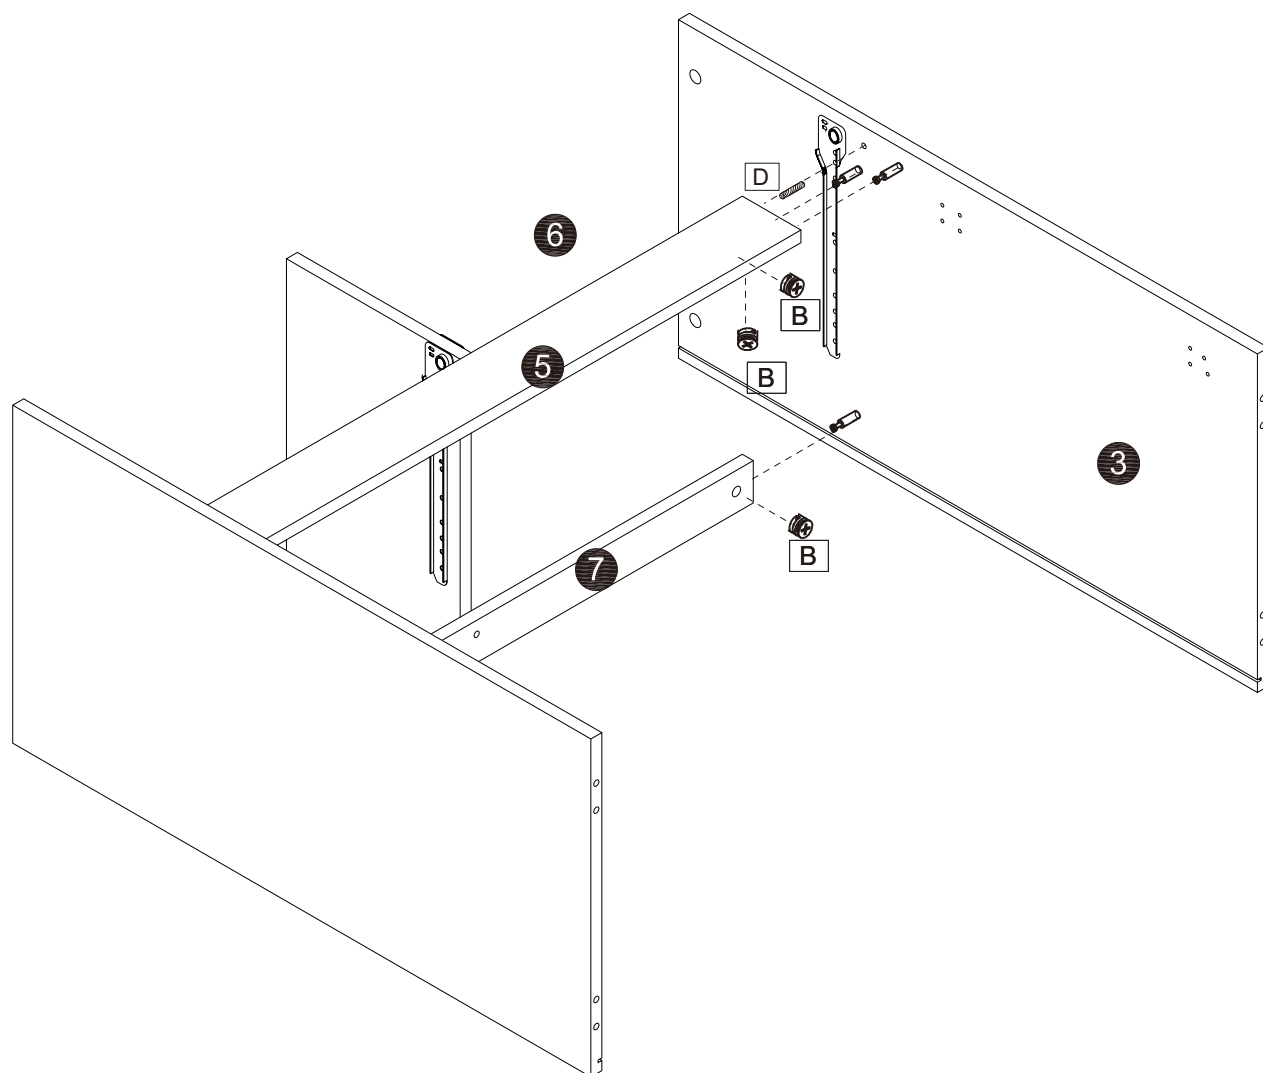
STEP 5




Assemble the parts in the manner shown. Ensure that each part is installed in the correct position. Use B,D screws to secure the connections.


B	x3	D	x 1
			
ø15X10mm		ø6x30mm	

STEP 6



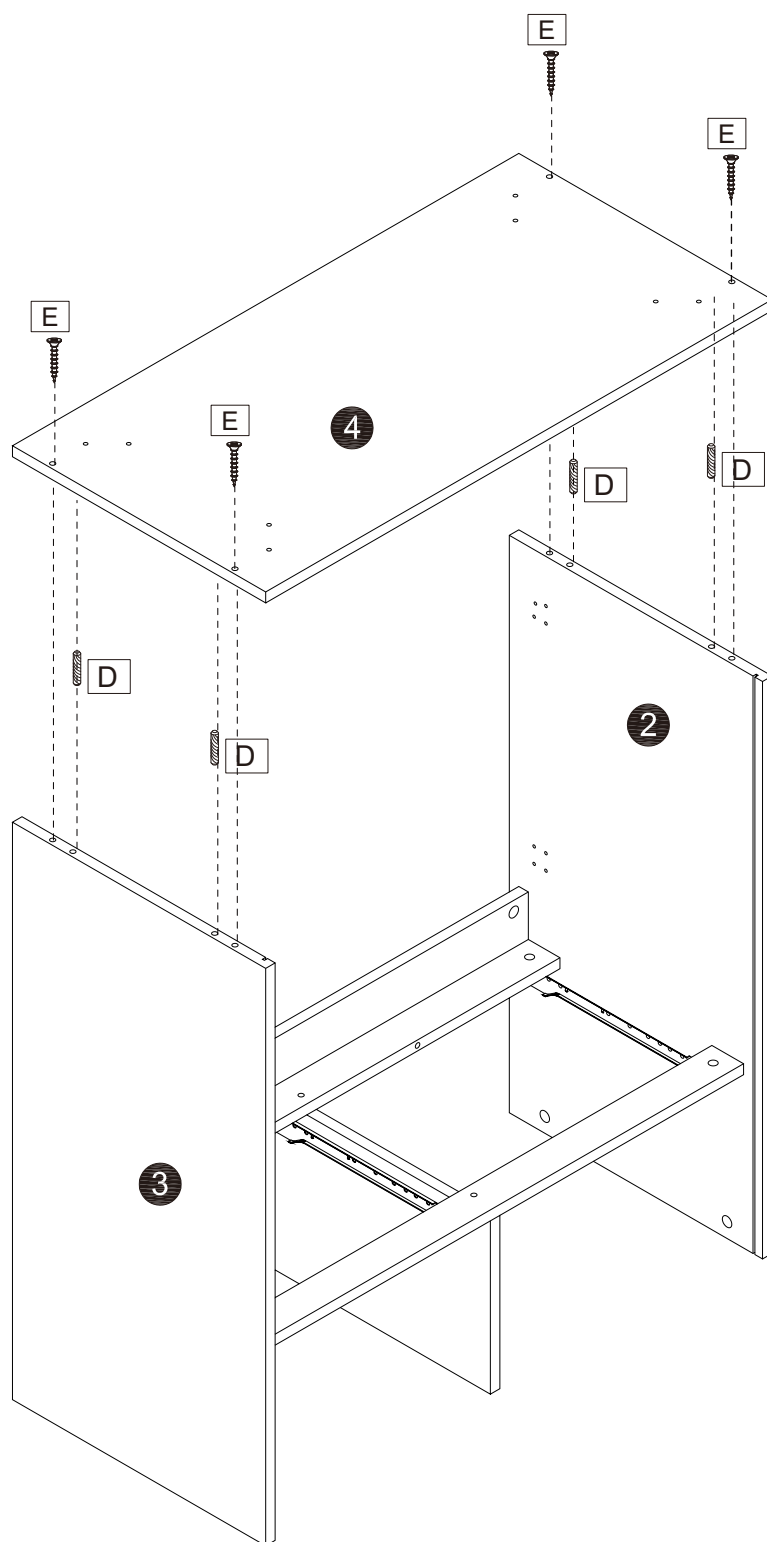


Assemble D and E according to the diagram. Connect them firmly to form the required structure. Use D,E screws to secure the connections.

D	x 4
	
Ø6x30mm	


E	x 4
	
M4x30mm	

STEP 7

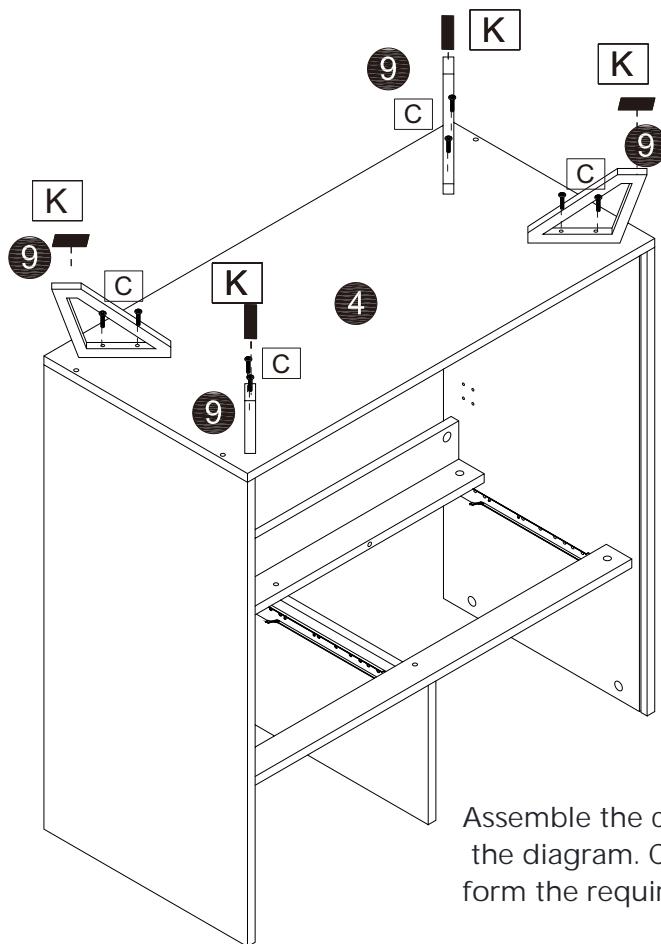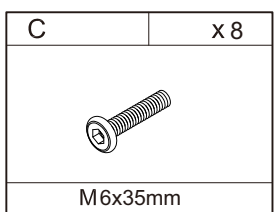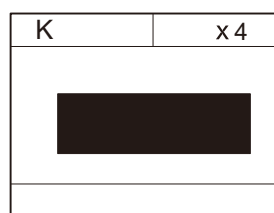


Assemble the componets according to the diagram. Connect them firmly to form the required structure.

STEP 8

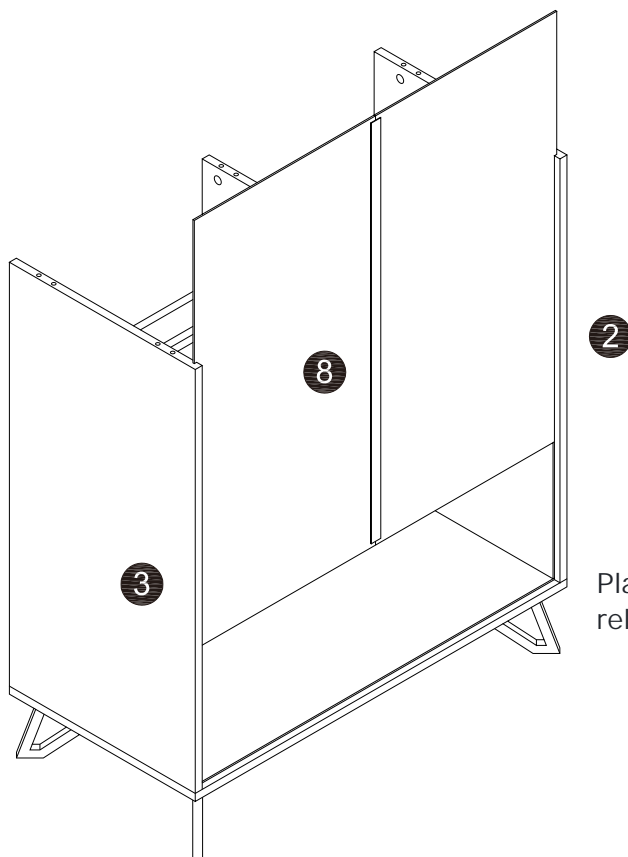




Place them in the correct positions relative to the existing structure.

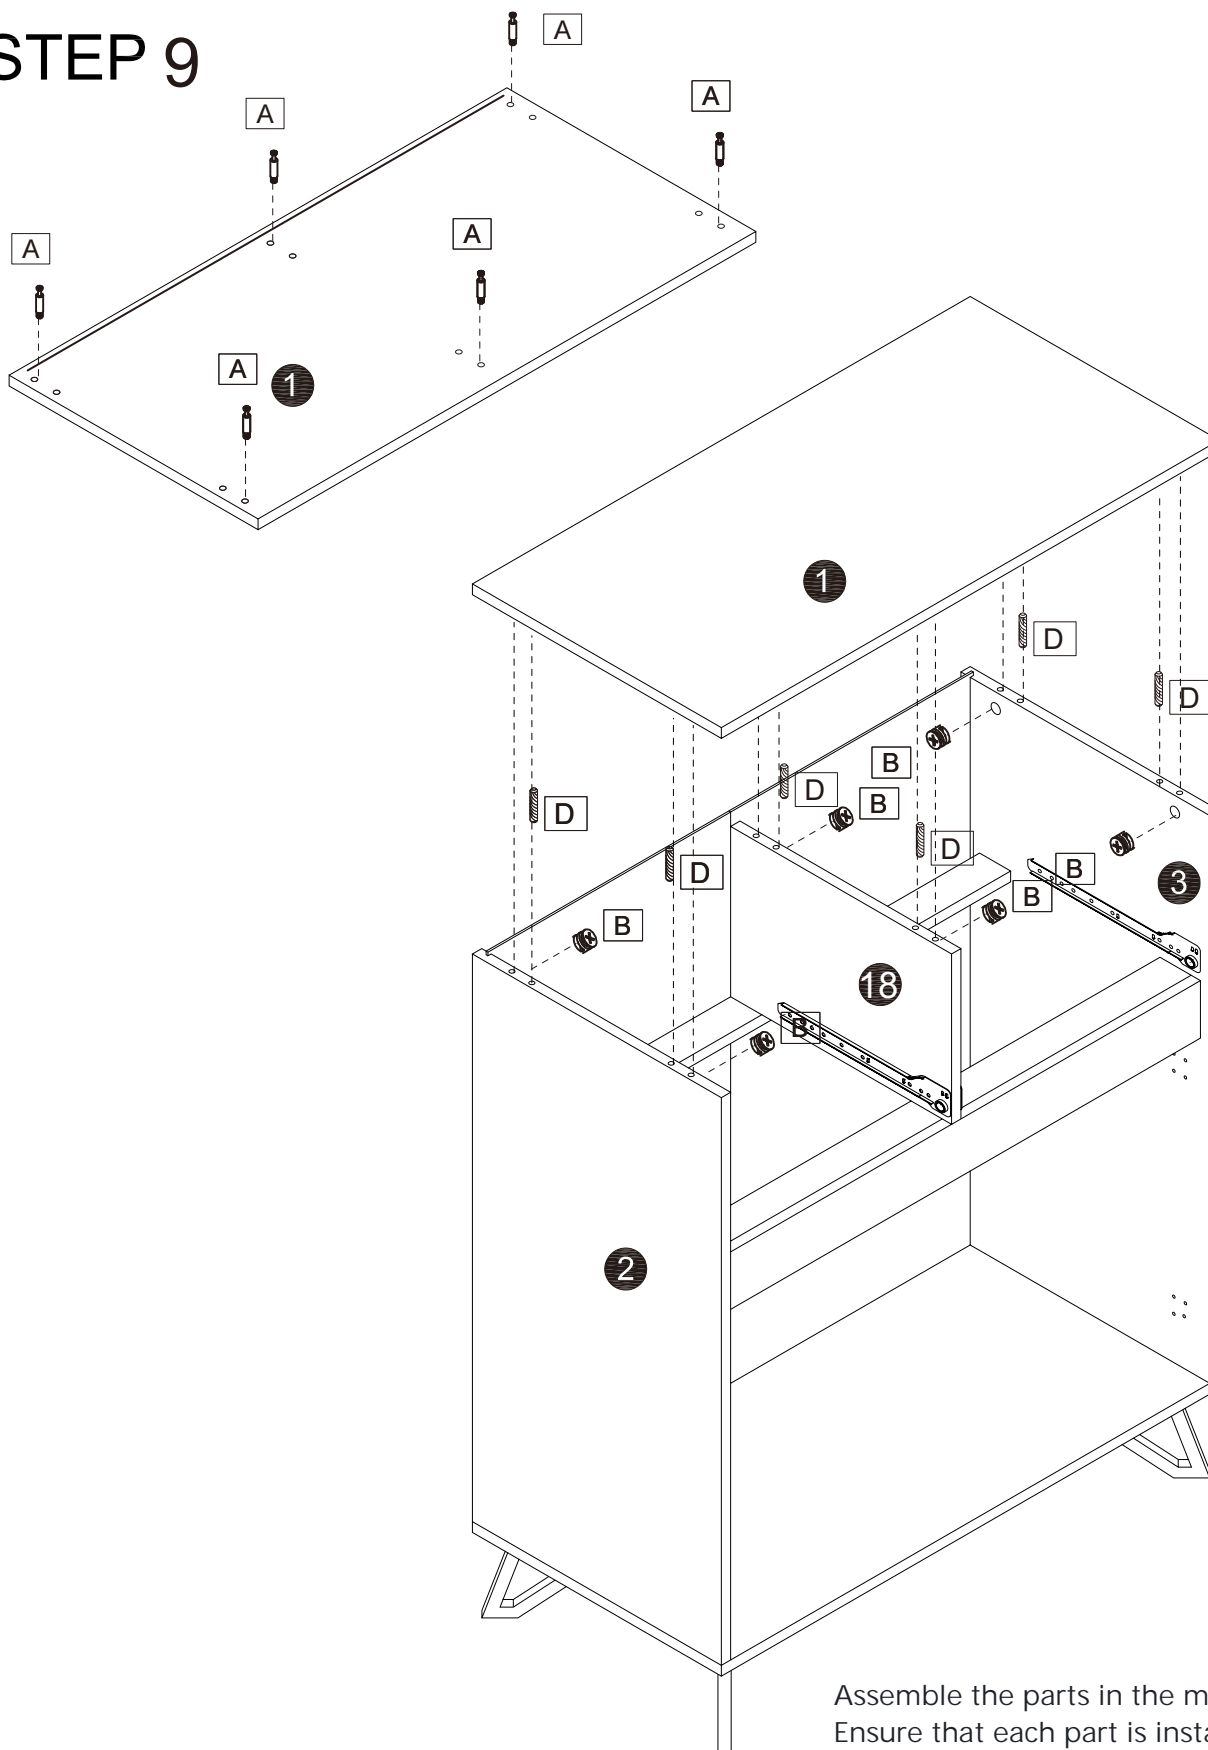
STEP 9




Assemble the parts in the manner shown. Ensure that each part is installed in the correct position. Use A,B and D screws to secure the connections.


A	x 6	B	x 6	D	x 6
					
ø6X35mm		ø15X10mm		ø6x30mm	


STEP 10

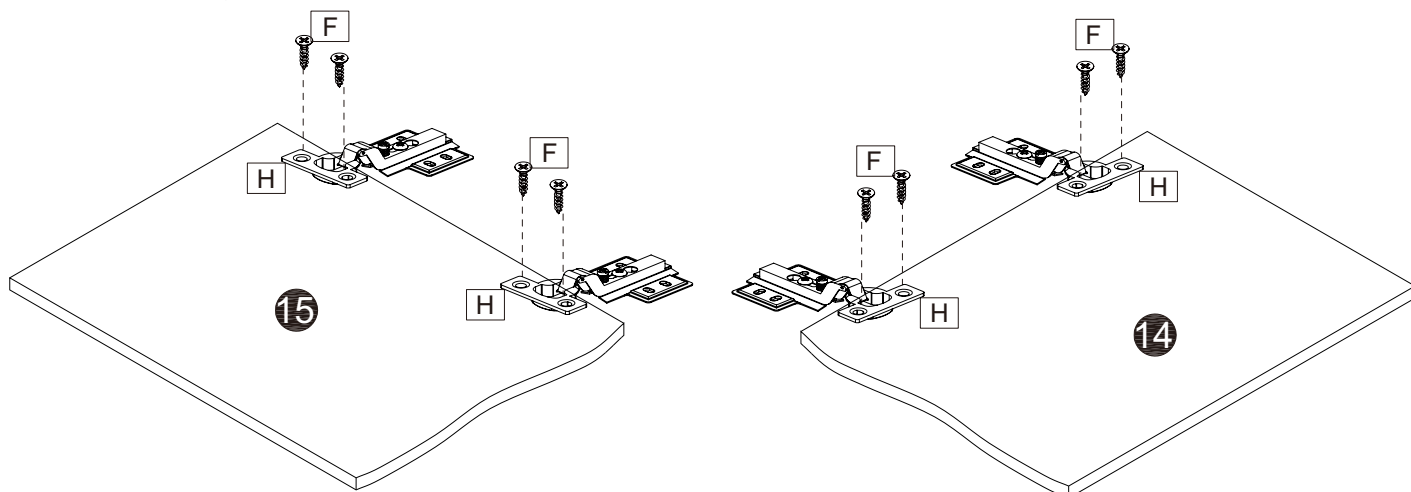

Assemble the parts in the manner shown. Use F screws to secure the connections.


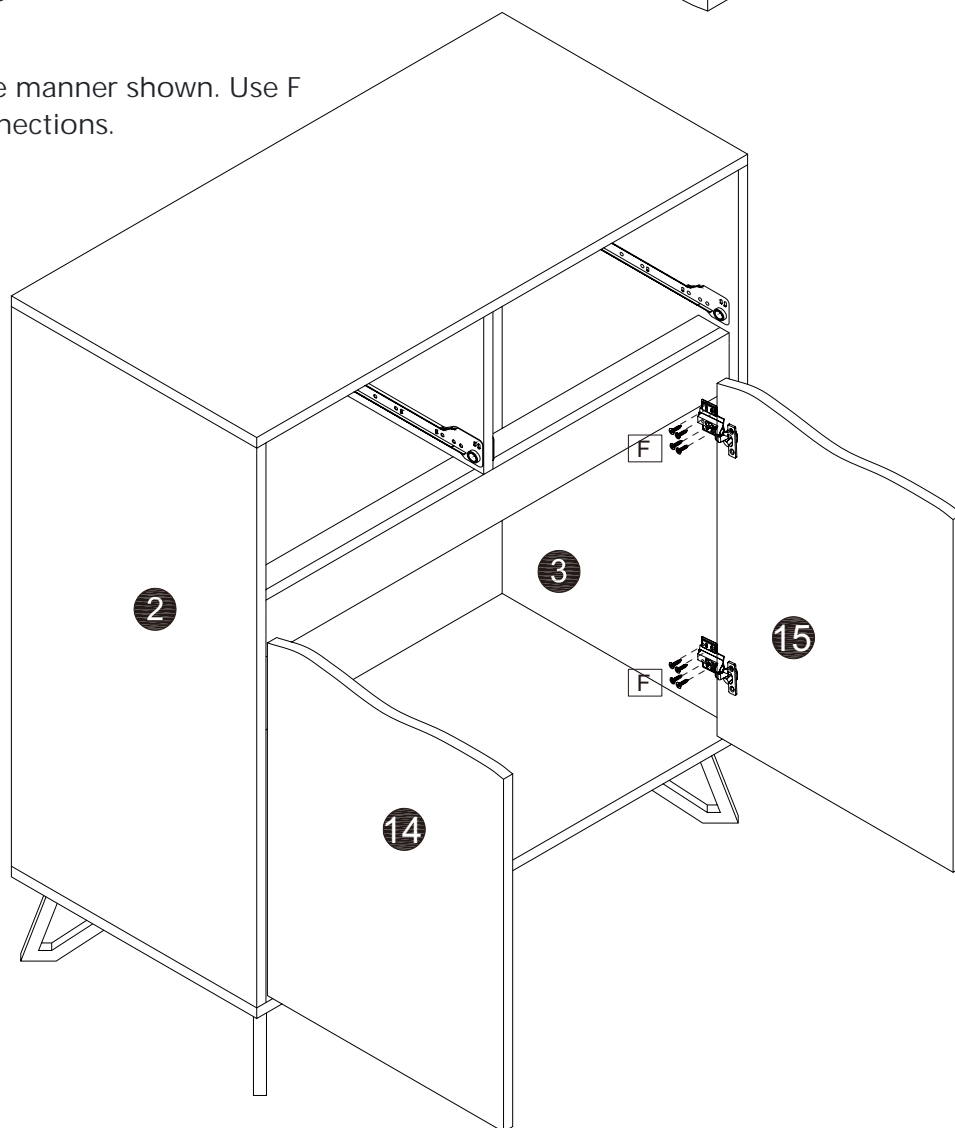



F	x 24
	
M3.5x12mm	


H	x 4
	

STEP 11



Assemble A and E according to the diagram. Pay attention to the positional relationship.

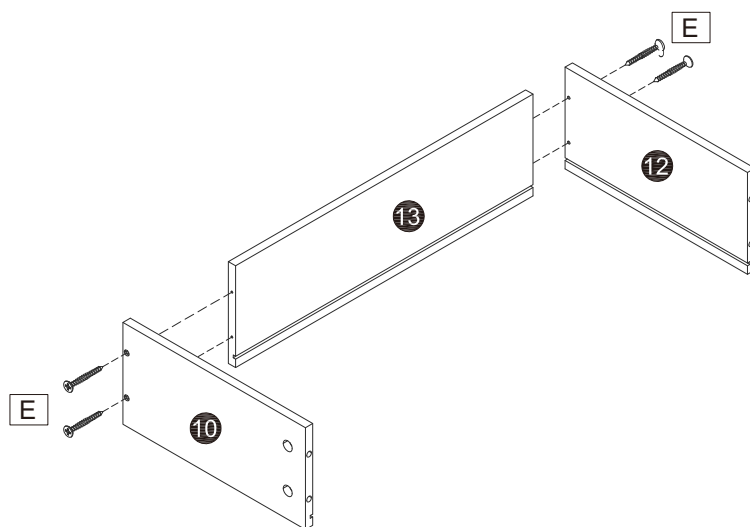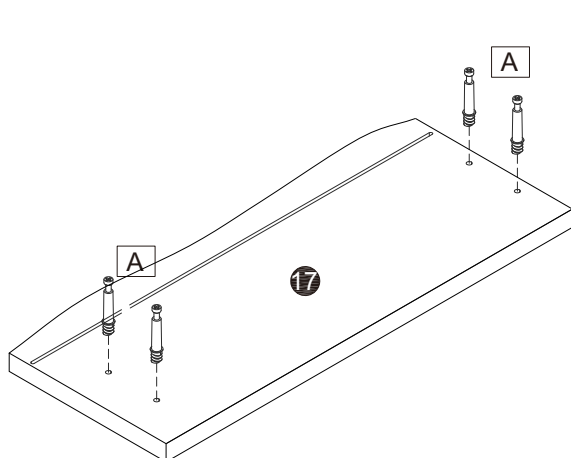


A	x 4
	
ø6X35mm	

E	x 4
	
M4x30mm	

STEP 12

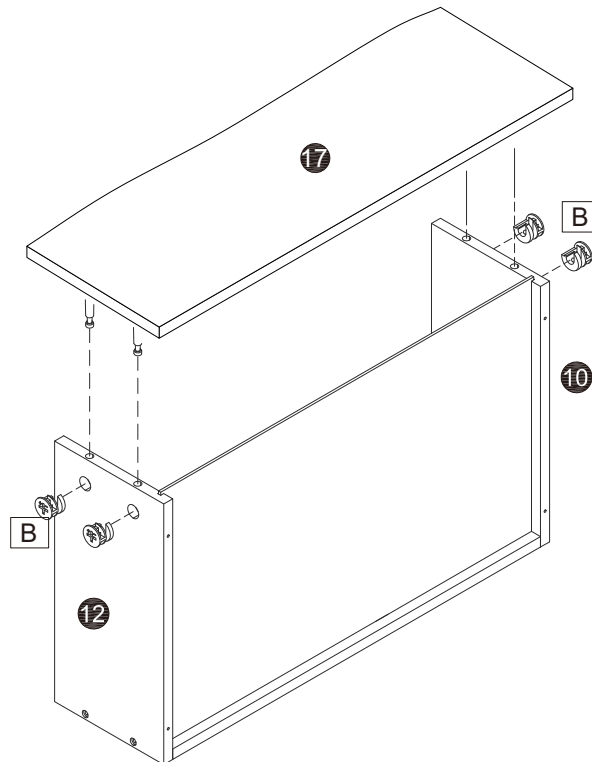
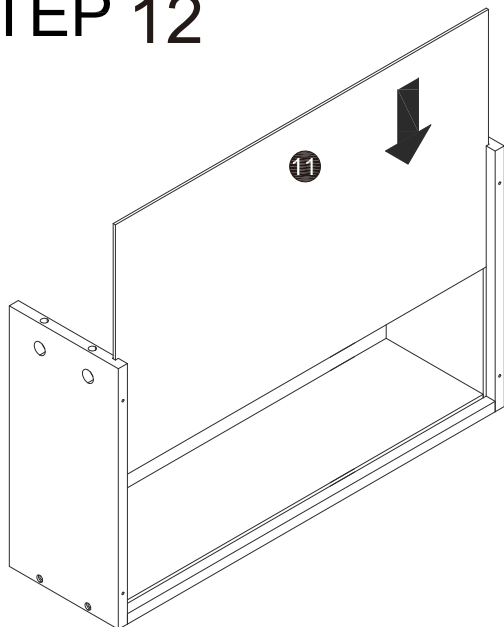


B	x 4
	
ø15X10mm	

Place them in the correct positions relative to the existing structure.
Fix with B screws.

STEP 13


Assemble the componets according to the diagram. Pay attention to the positional relationship.

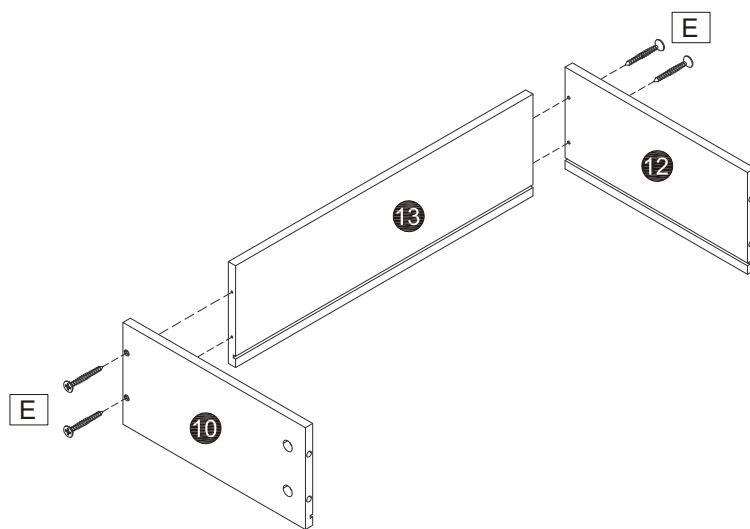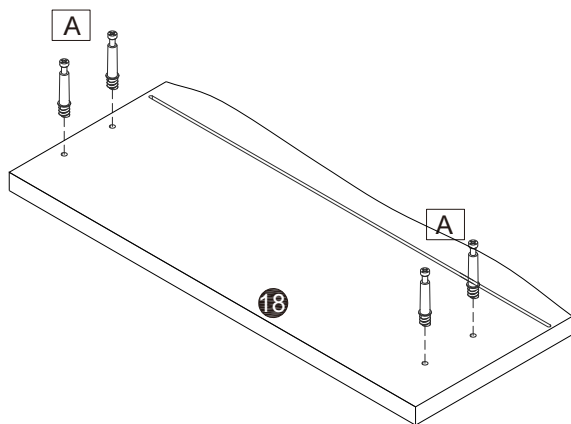


A	x 4
ø6X35mm	

E	x 4
M4x30mm	

STEP 14

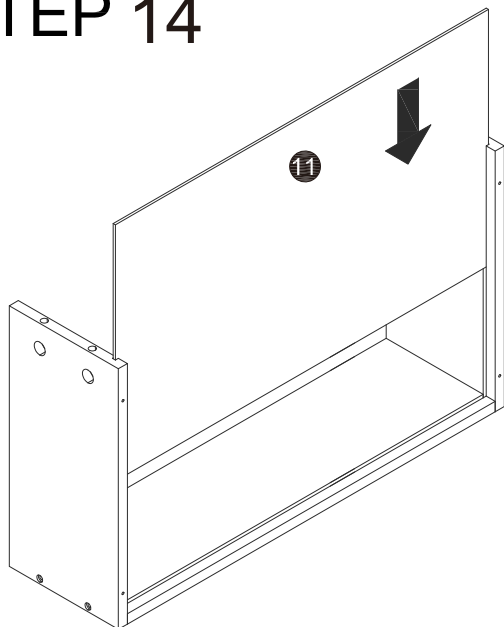


B	x 4
ø15X10mm	

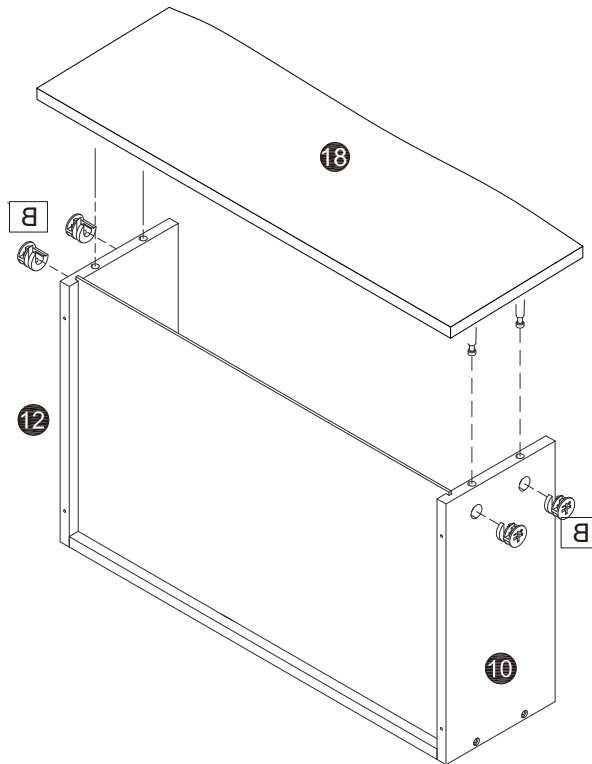


Place them in the correct positions relative to the existing structure.
Fix with B screws.

STEP 15

Assemble B, E, F, DR and DL according to the diagram. Ensure all parts are in the correct positions.

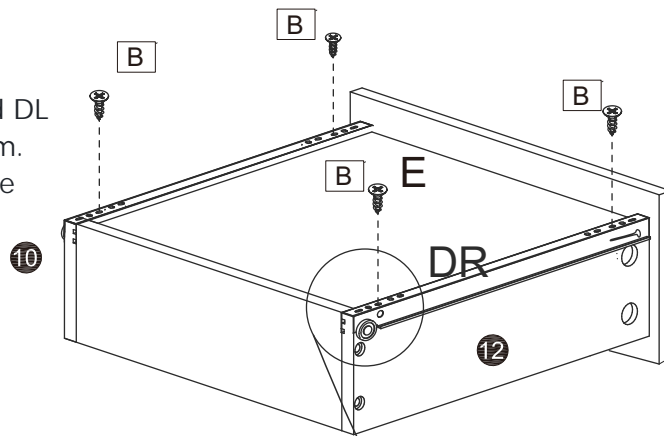

Use F screws for fixing.

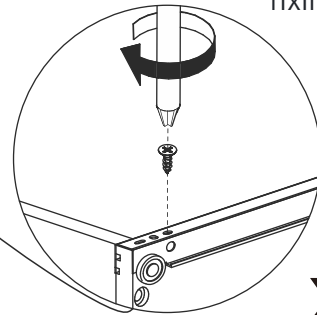

X2



F	x 8
M3.5x12mm	

DL	x 2



DR	x 2

STEP 16



Slide the assembled drawers into the drawer slides.

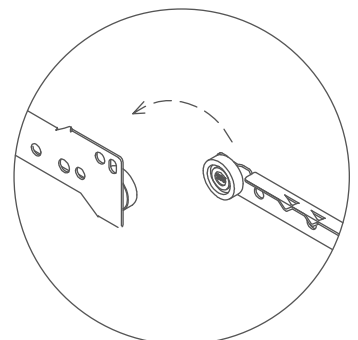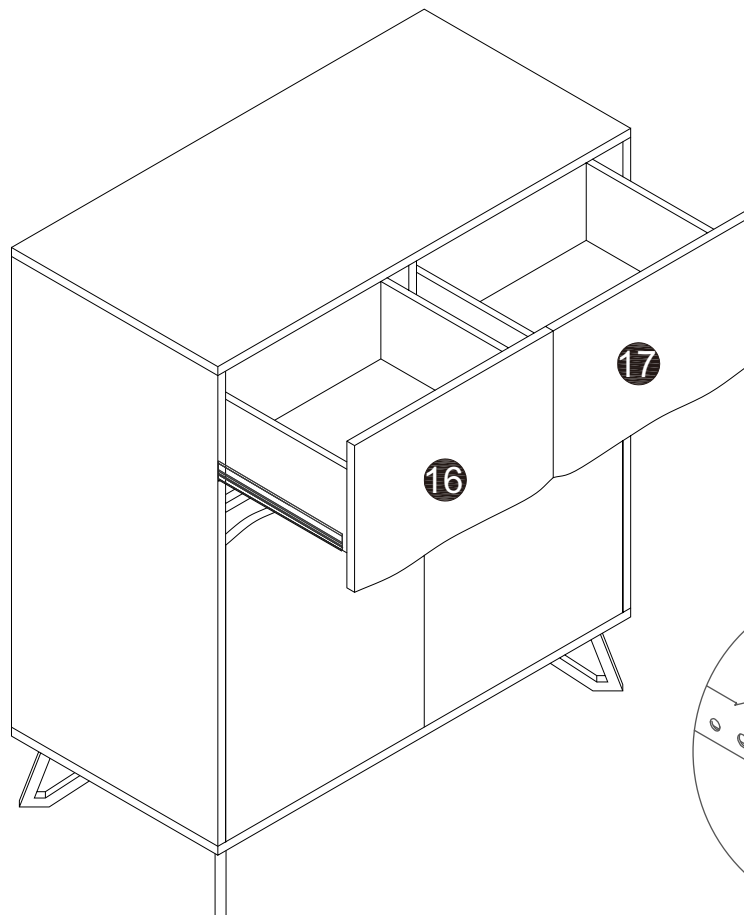

STEP 17

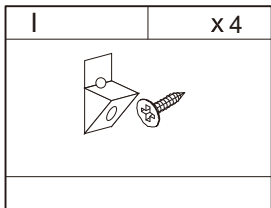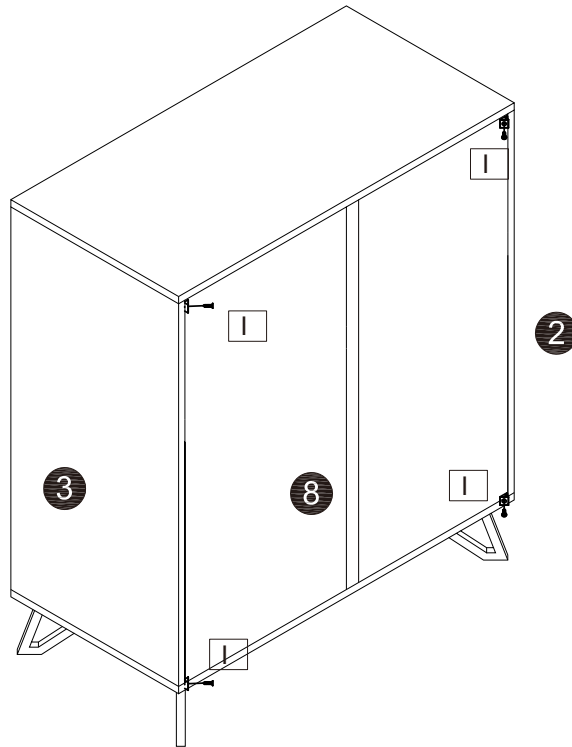

STEP 18

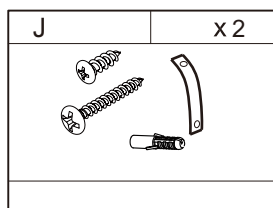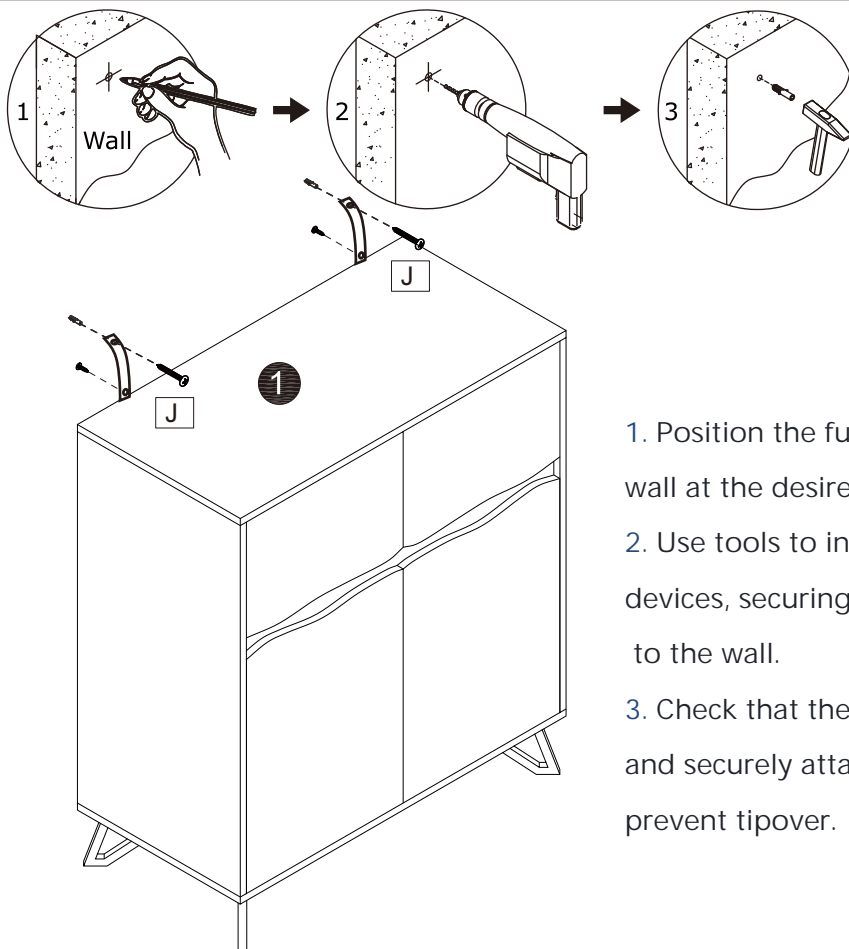

1. Position the furniture against the wall at the desired location.
2. Use tools to install the anchor devices, securing the furniture firmly to the wall.
3. Check that the furniture is stable and securely attached to the wall to prevent tipover.