




ASSEMBLY INSTRUCTION

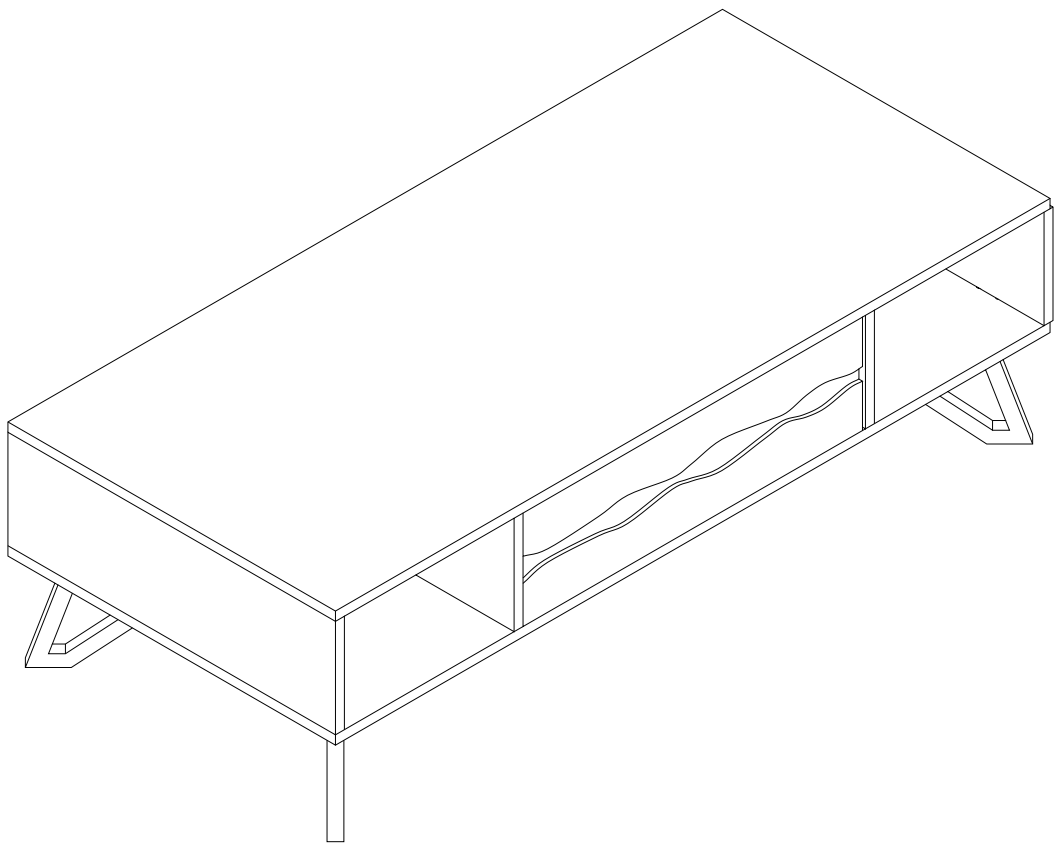


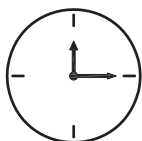










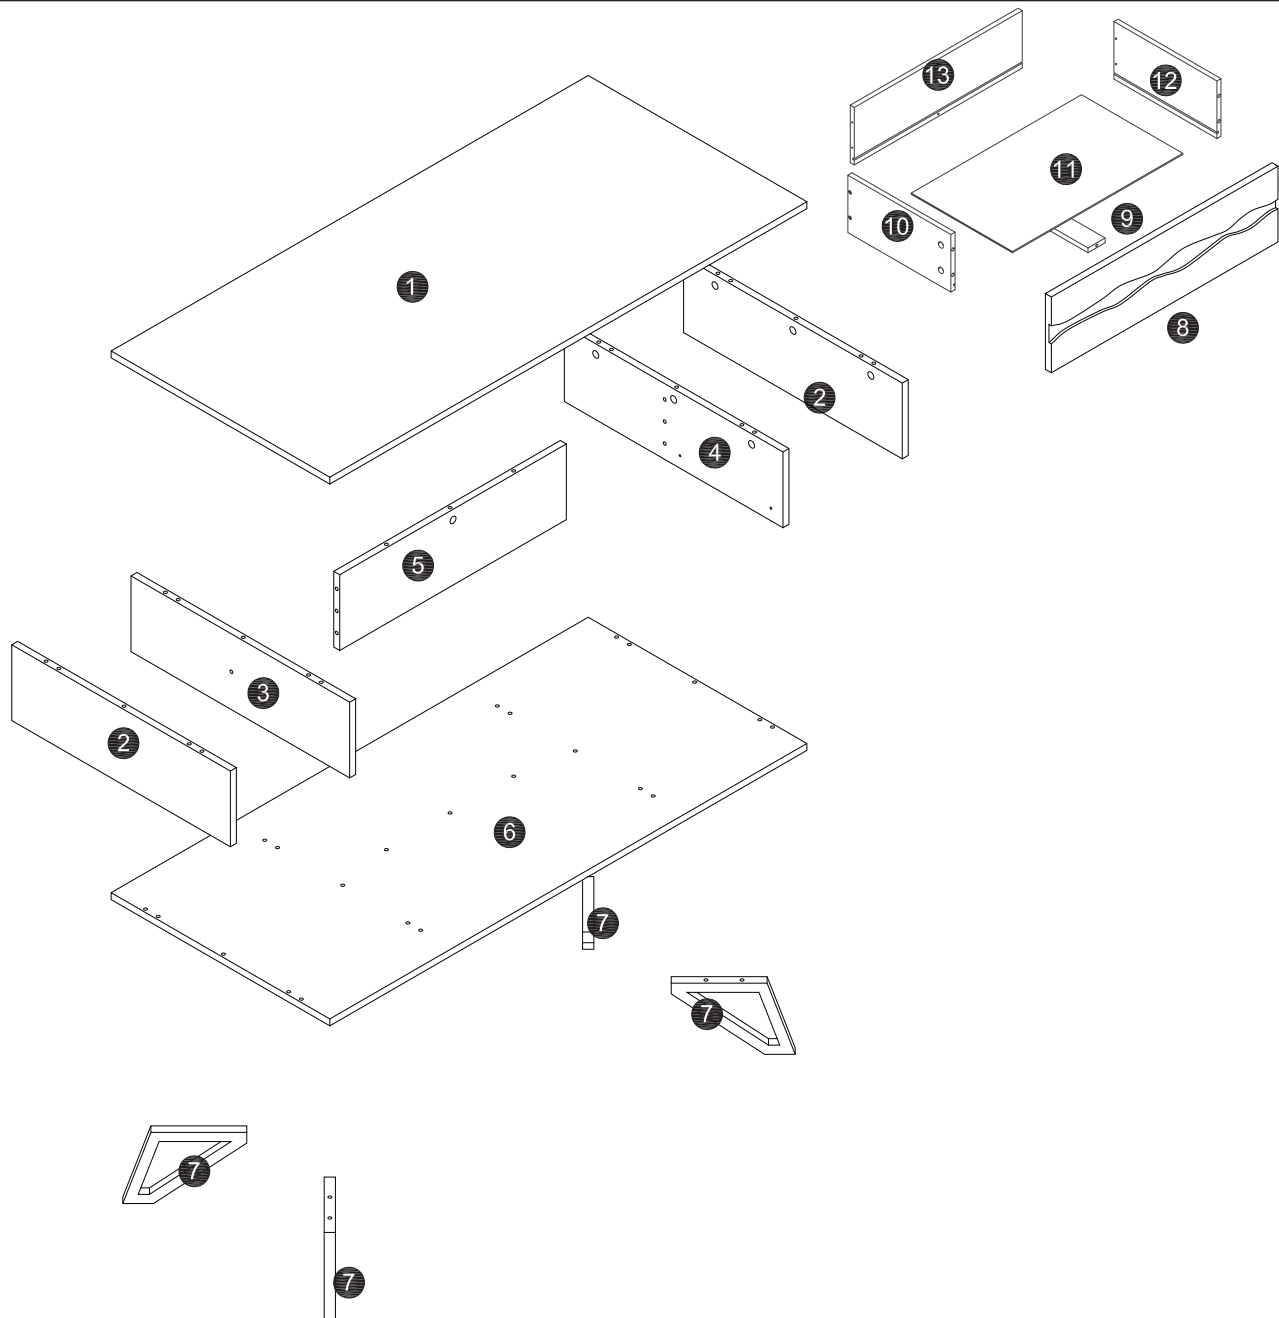
2 PERS.




20 MIN



A  ø6X35mm	B  ø15X10mm	C  M6x35mm	D  ø6x30mm	E  M4x30mm
F  M3.5x12mm	G 	CL 	CR 	DL 
DR 	H 	I 		


STEP 1

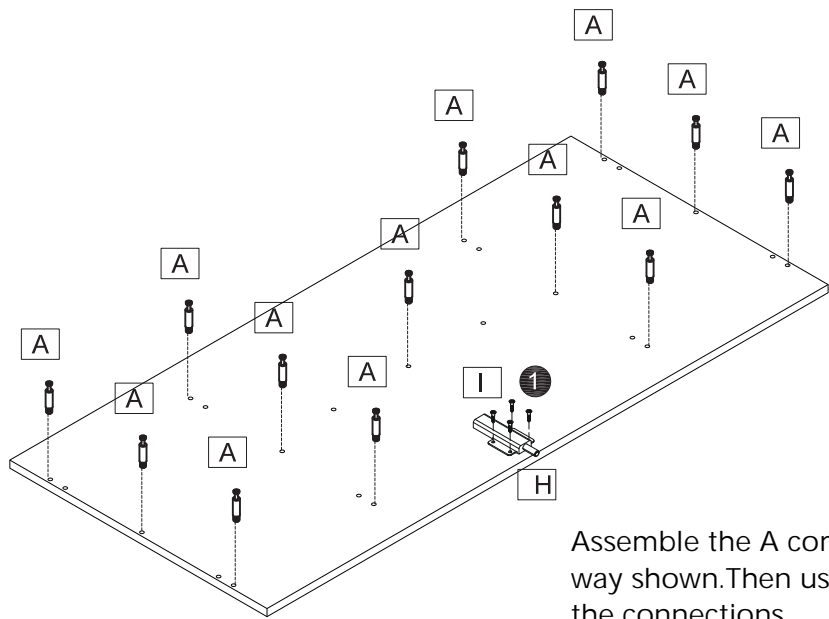


Assemble the A components in the way shown. Then use screws to fix the connections.

A	x 13	H	x 1	I	x 4
ø6X35mm					

STEP 2

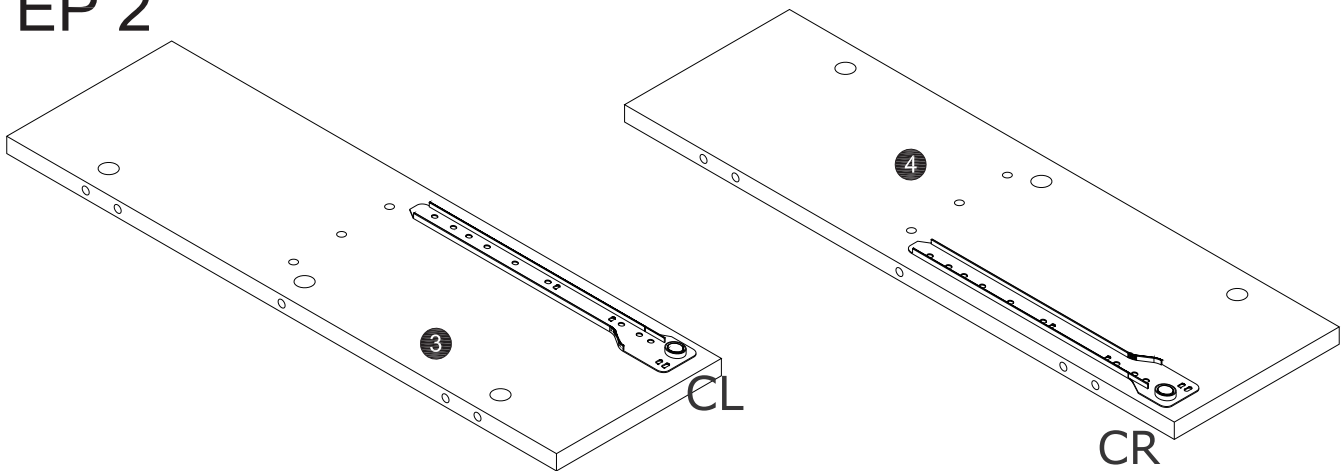

Assemble F, CL, and CR according to the diagram.

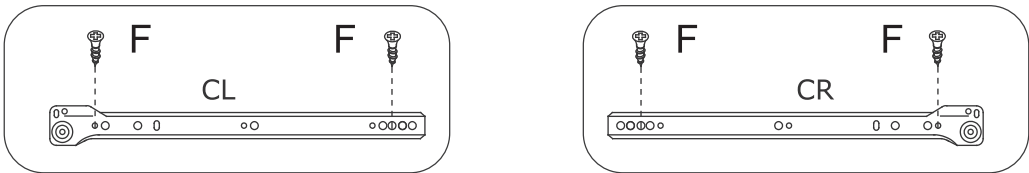


Use F screws to secure the connections.




F	x 4	CL	x 1	CR	x 1
M3.5x12mm					

STEP 3

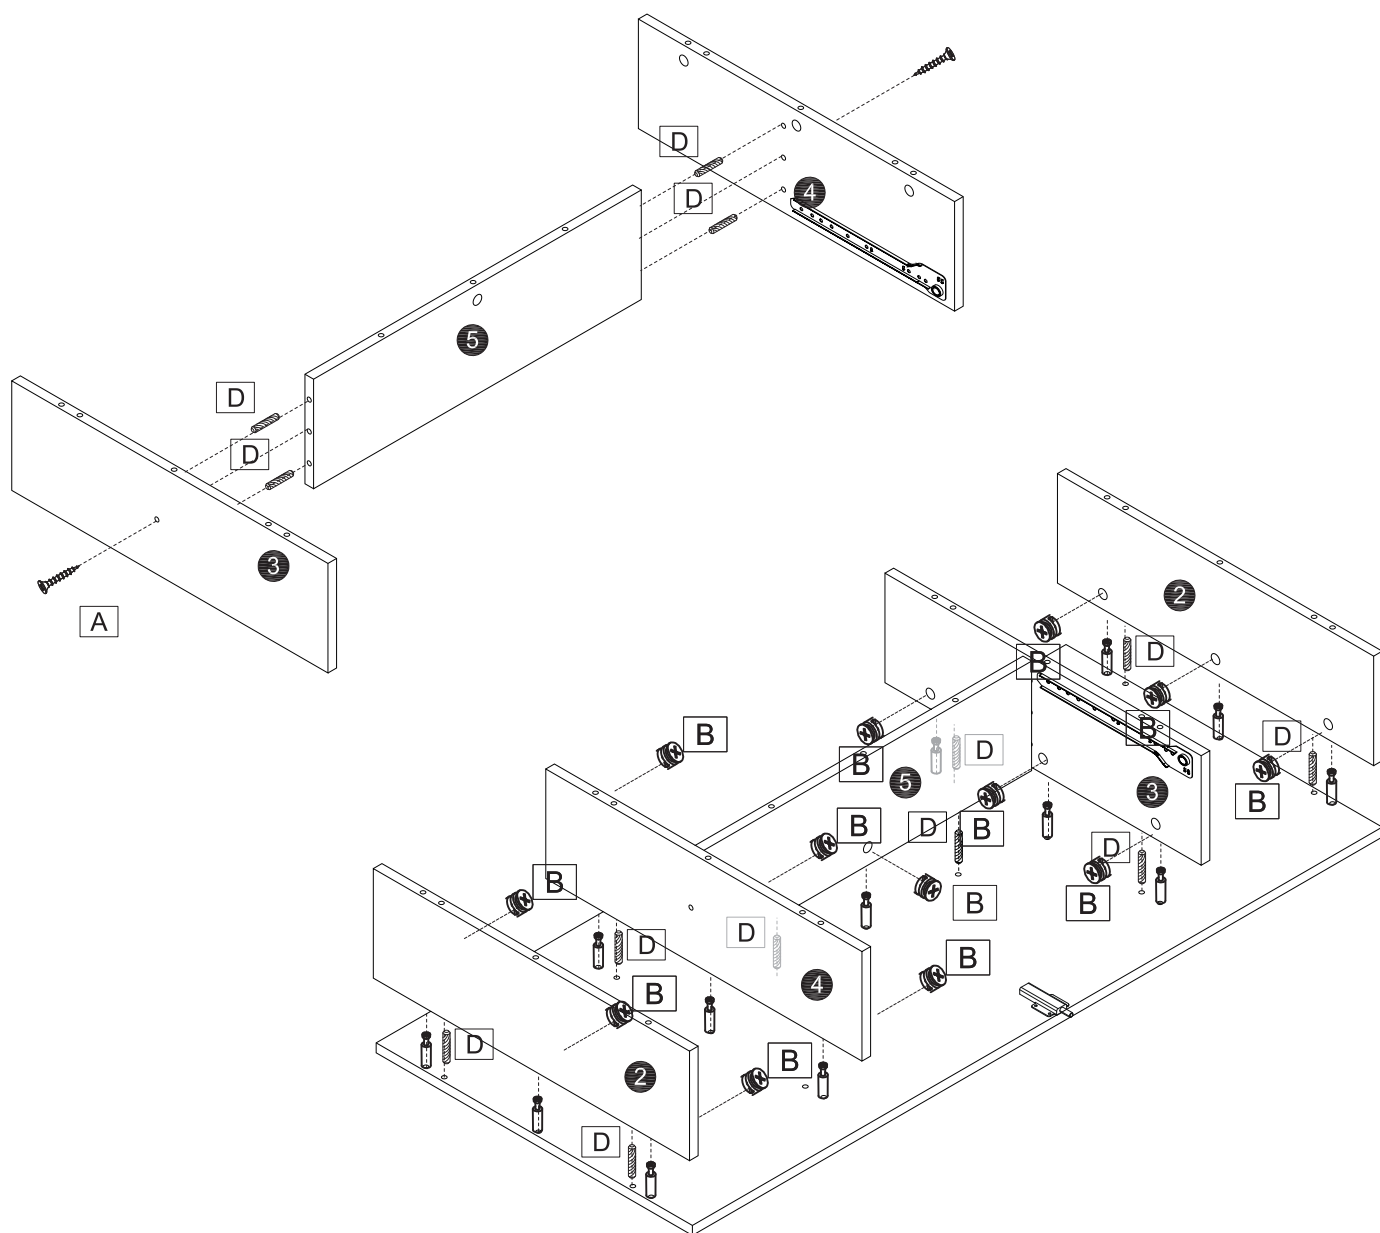
Assemble all the components in the way shown.






Use 15×10mm, 6×30mm, and M4×30mm screws for fixing. Different positions may require different screws, so please check carefully before installation.

B	x13	D	x14	E	x2
					
ø15X10mm		ø6x30mm		M4x30mm	

STEP 4

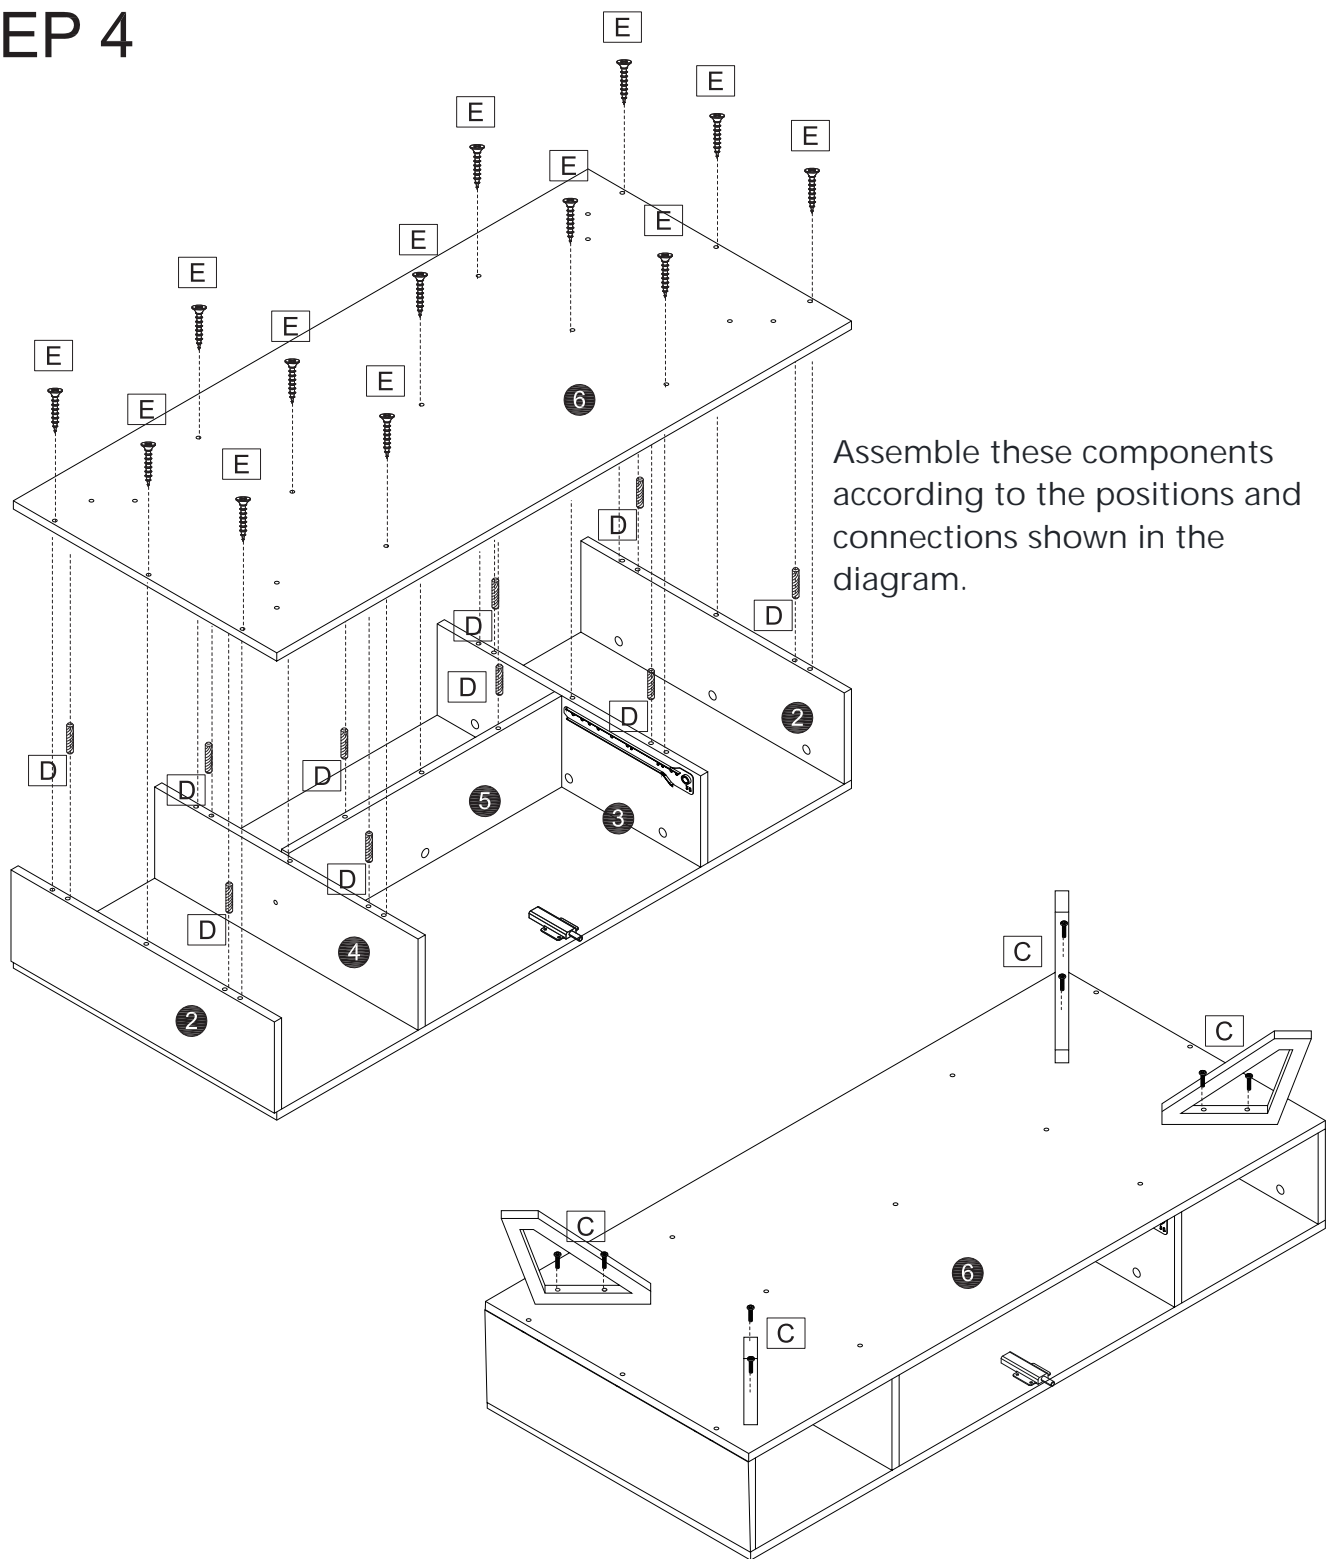


Use M6×35mm, 6×30mm, and M4×30mm screws to fix the connections. Make sure each screw is tightened properly to ensure the overall stability.

C	x 8	D	x 10	E	x 13
					
M6x35mm		ø6x30mm		M4x30mm	


STEP 5

Assemble all the components as shown in the diagram.

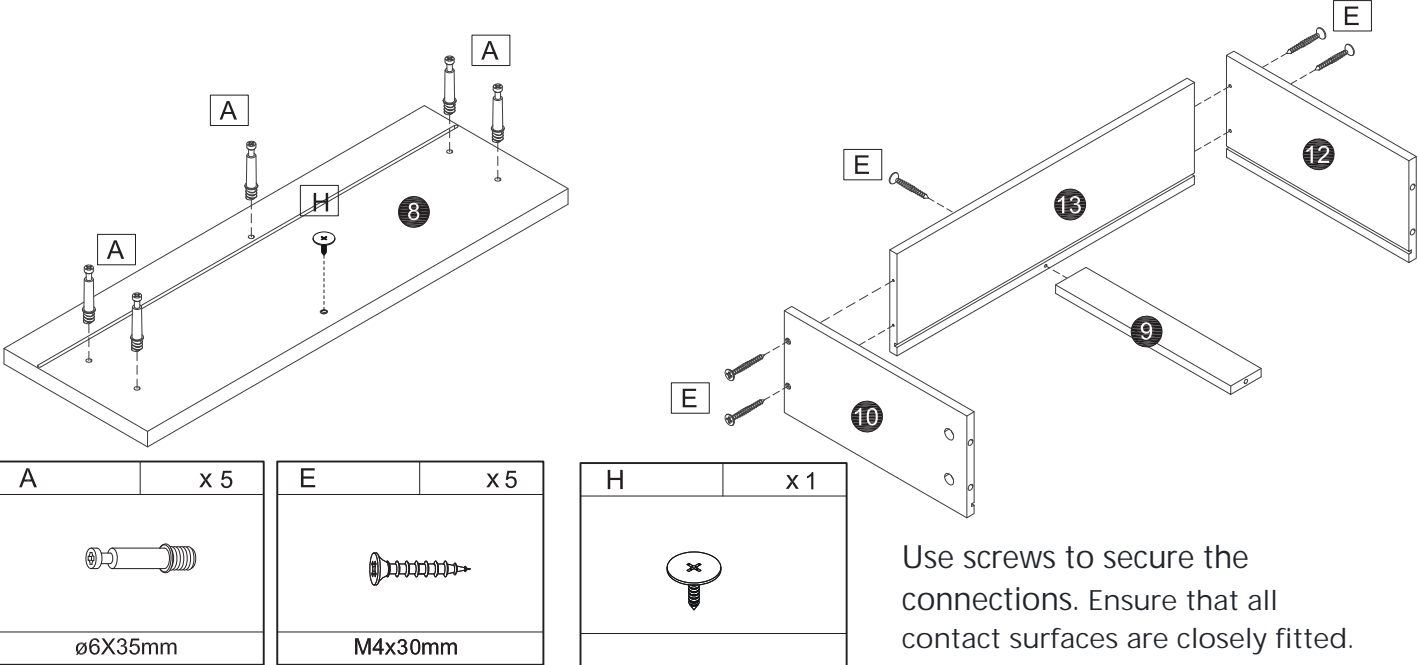


STEP 6


Assemble these B components in the way shown in the diagram. Align the connecting parts accurately.

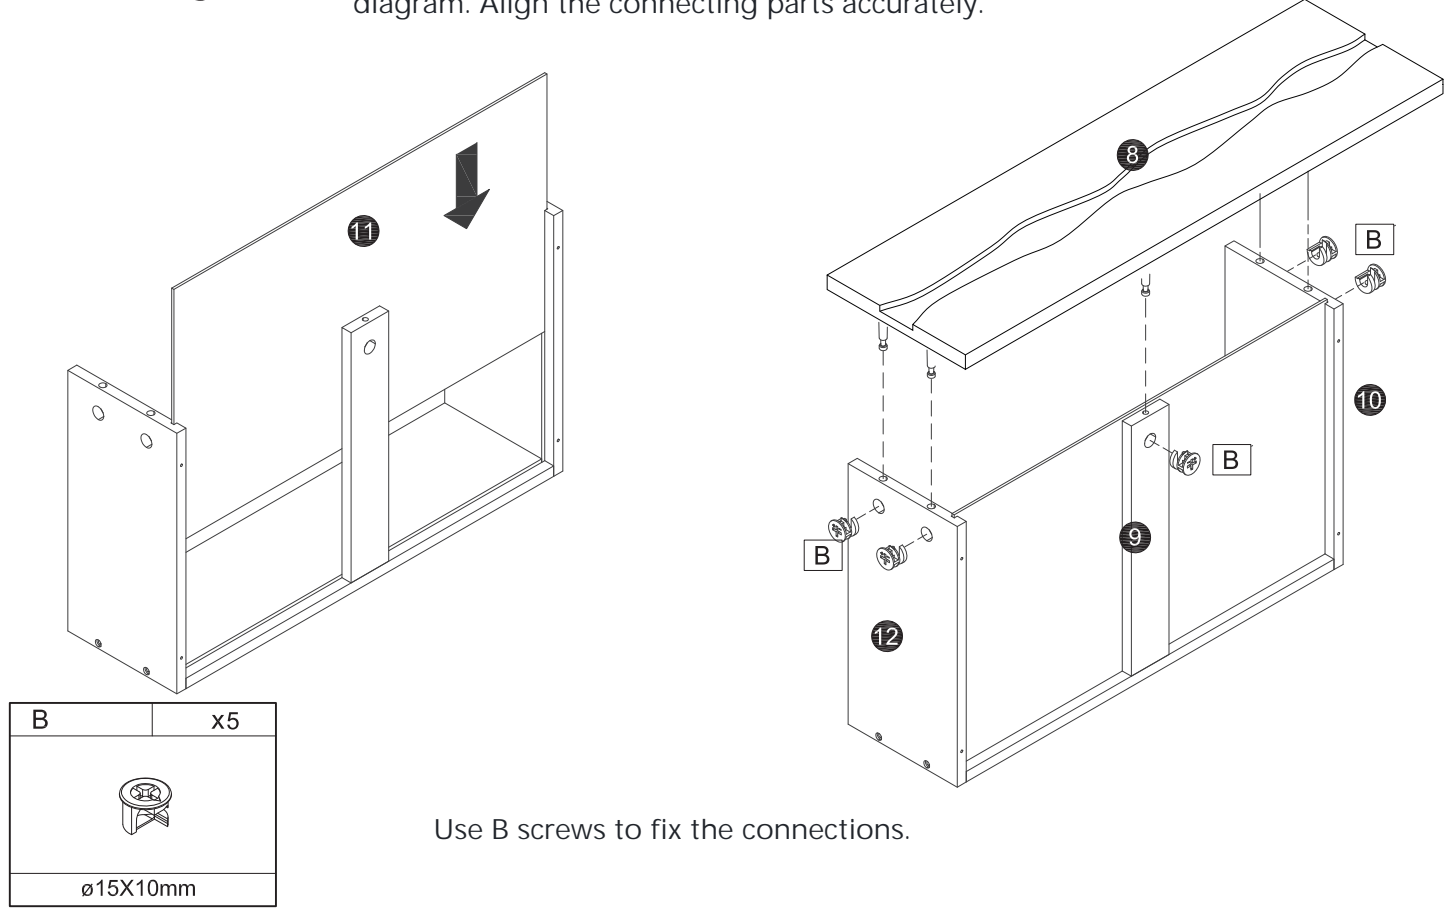



STEP 7

Install DL and DR in their respective positions.

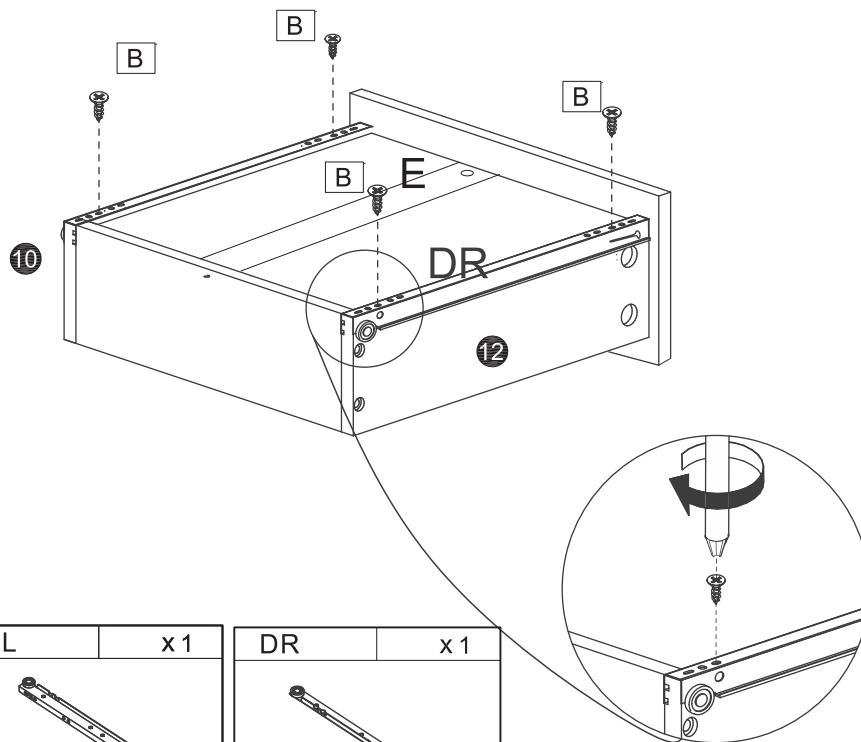

F	x 4
	
M3.5x12mm	

DL	x 1
	

DR	x 1
	

STEP 8

Slide the assembled drawers into the drawer slides.

