

READ THESE INSTRUCTIONS CAREFULLY.

REFER TO 'HARDWARE' AND 'PARTS' LIST FOR ASSEMBLY GUIDANCE.

CHECK TO ENSURE ALL 'PARTS' AND 'HARDWARE' QUANTITIES, AS NOTED ARE ENCLOSED PRIOR TO COMMENCEMENT OF ASSEMBLY.

PLACE ALL TIMBER FURNITURE PARTS ON A CLEAN, FLAT SOFT SURFACE TO PREVENT ANY SCRATCHES ETC.

FOLLOW THE BELOW 'LINE DRAWINGS' TO ASSEMBLE PRODUCT.

CAUTION : 1.DO NOT FULLY TIGHTEN BOLTS / NUTS UNTIL PRODUCT IS FULLY ASSEMBLED.
2.DO NOT OVER TIGHTEN BOLTS / NUTS AS THIS CAN CAUSE DAMAGE TO THREADS.
3.KEEP ALL HARDWARE OUT OF REACH OF CHILDREN.

NOTE : THE QUANTITY OF BOTH 'PARTS' AND 'HARDWARE' RELATE TO 1 UNIT ONLY .


TOOL NEEDED : SCREWDRIVER "NOT PROVIDED".

PARTS LIST		
ITEM	DESCRIPTION	QTY
A	HEADBOARD	1 PC
B	FOOTBOARD	1 PC
C	SIDE RAIL	2 PCS
D	CENTER RAIL	1 PC
E	BED LEG	4 PCS
F	CENTER SUPPORT LEG	3 PCS
G	HEADBOARD WING (L&R)	2 PCS
H	SLAT	1 Set


HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC BOLT M6 x 50mm	6 PCS
2	JCBB BOLT M8 x 40mm	8 PCS
3	M6 FLAT WASHER	6 PCS
4	WOOD SCREW M4 x 38mm	9 PCS
5	WOOD SCREW M4 x 45mm	8 PCS
6	M4 ALLEN KEY (BALL SHAPE)	1 PC
7	M5 ALLEN KEY (BALL SHAPE)	1 PC
8	WOOD DOWEL M8 x 30mm	4 PCS

STEP 1

1.1 Fasten center support leg (F) to center rail (D) attach by screwing the protruding nut into the corresponding holes.

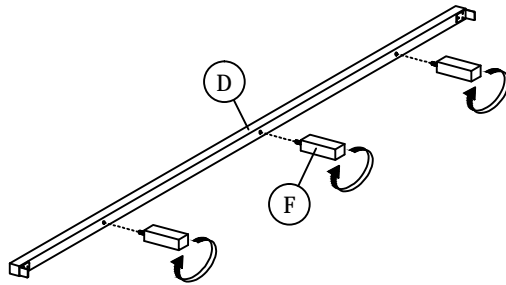


STEP 2

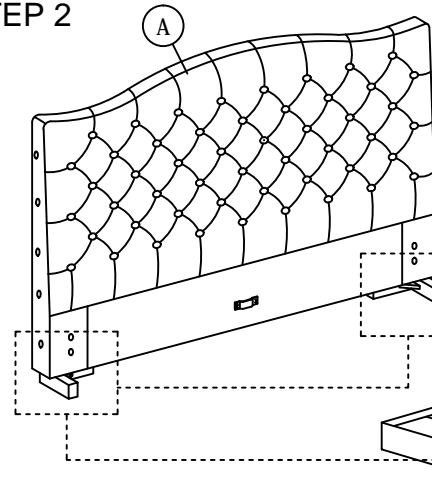


2.1 Assemble bed leg (E) wood screw M4 x 45mm (5) x 2pcs on each leg using screwdriver by follow marking line on the bottom of headboard (A) and footboard (B).

NOTE: Only 2 screws required for each leg as shown below.
Follow outline of leg as printed on both Head and Footboards.

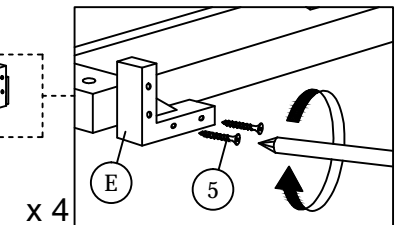

STEP 3



3.1 Loosely fit JCBB Bolts M8 x 40mm (2) into headboard (A) and footboard (B) .

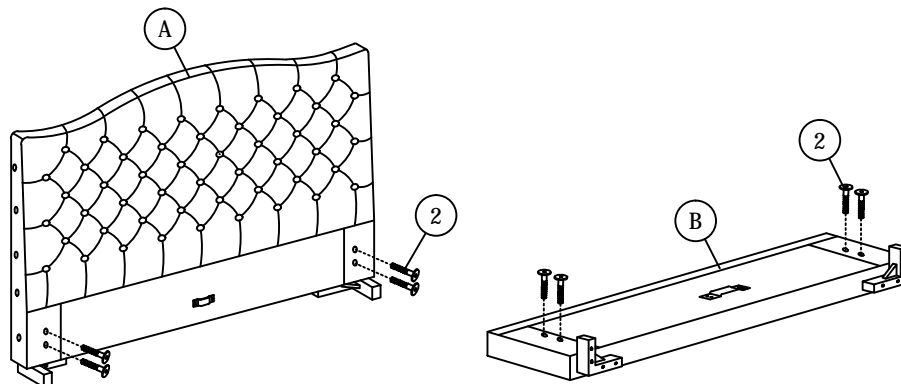

STEP 4

4.1 Fit wood dowels (8) into headboard wing (G).

4.2 Assemble headboard wing (G) to headboard (A) using the JCBC Bolts M6 x 50mm (1) and M6 flat washer (3).

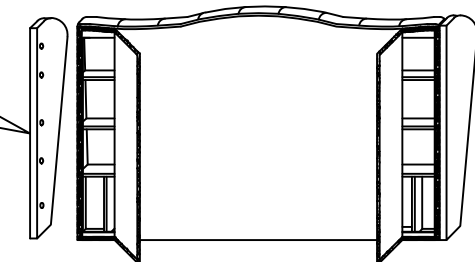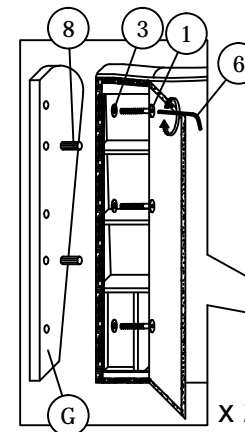


ASSEMBLY INSTRUCTIONS

2 of 2


STEP 5

5.1 Attach the side rails (C) to the headboard (A) & footboard (B), and tightening the JCBB bolt M8 x 40mm (2) using M5 allen key (7).

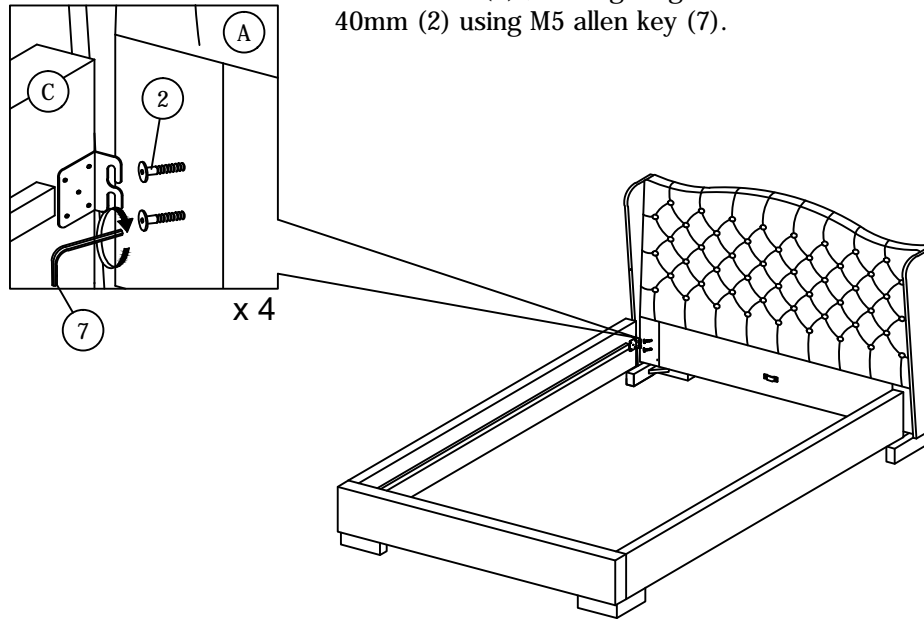


STEP 6

6.1 Locate center rail (D) into the corresponding brackets inside of headboard (A) and footboard (B).

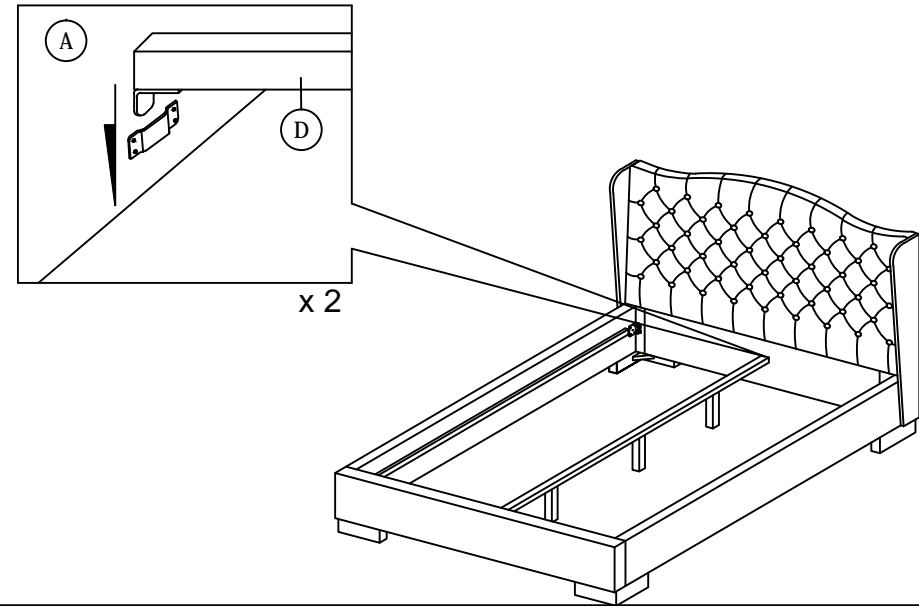


STEP 7

7.1 Assemble slat (H) into bed frame in between side rail (C) and center rail (D) screw it using wood screw M4 x 38mm (4).

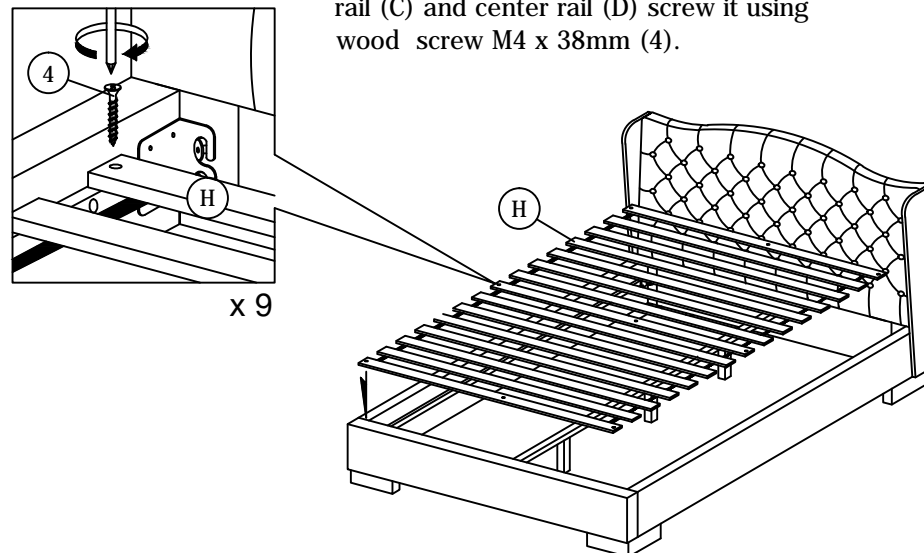

STEP 8

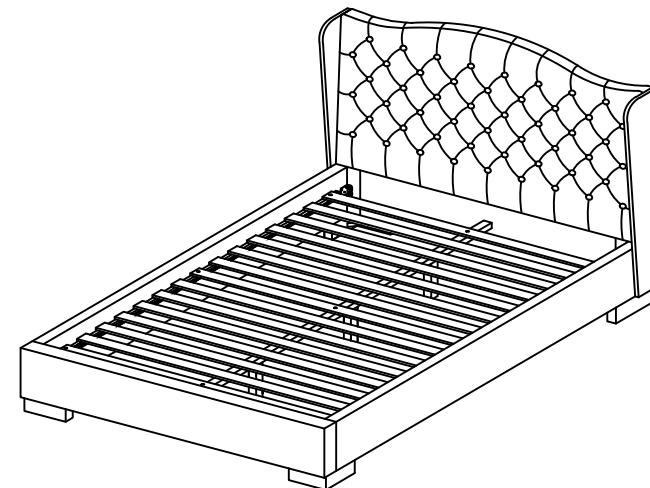

* When moving the bed position, the center support legs must be adjust to be straight to avoid any broken problem.