




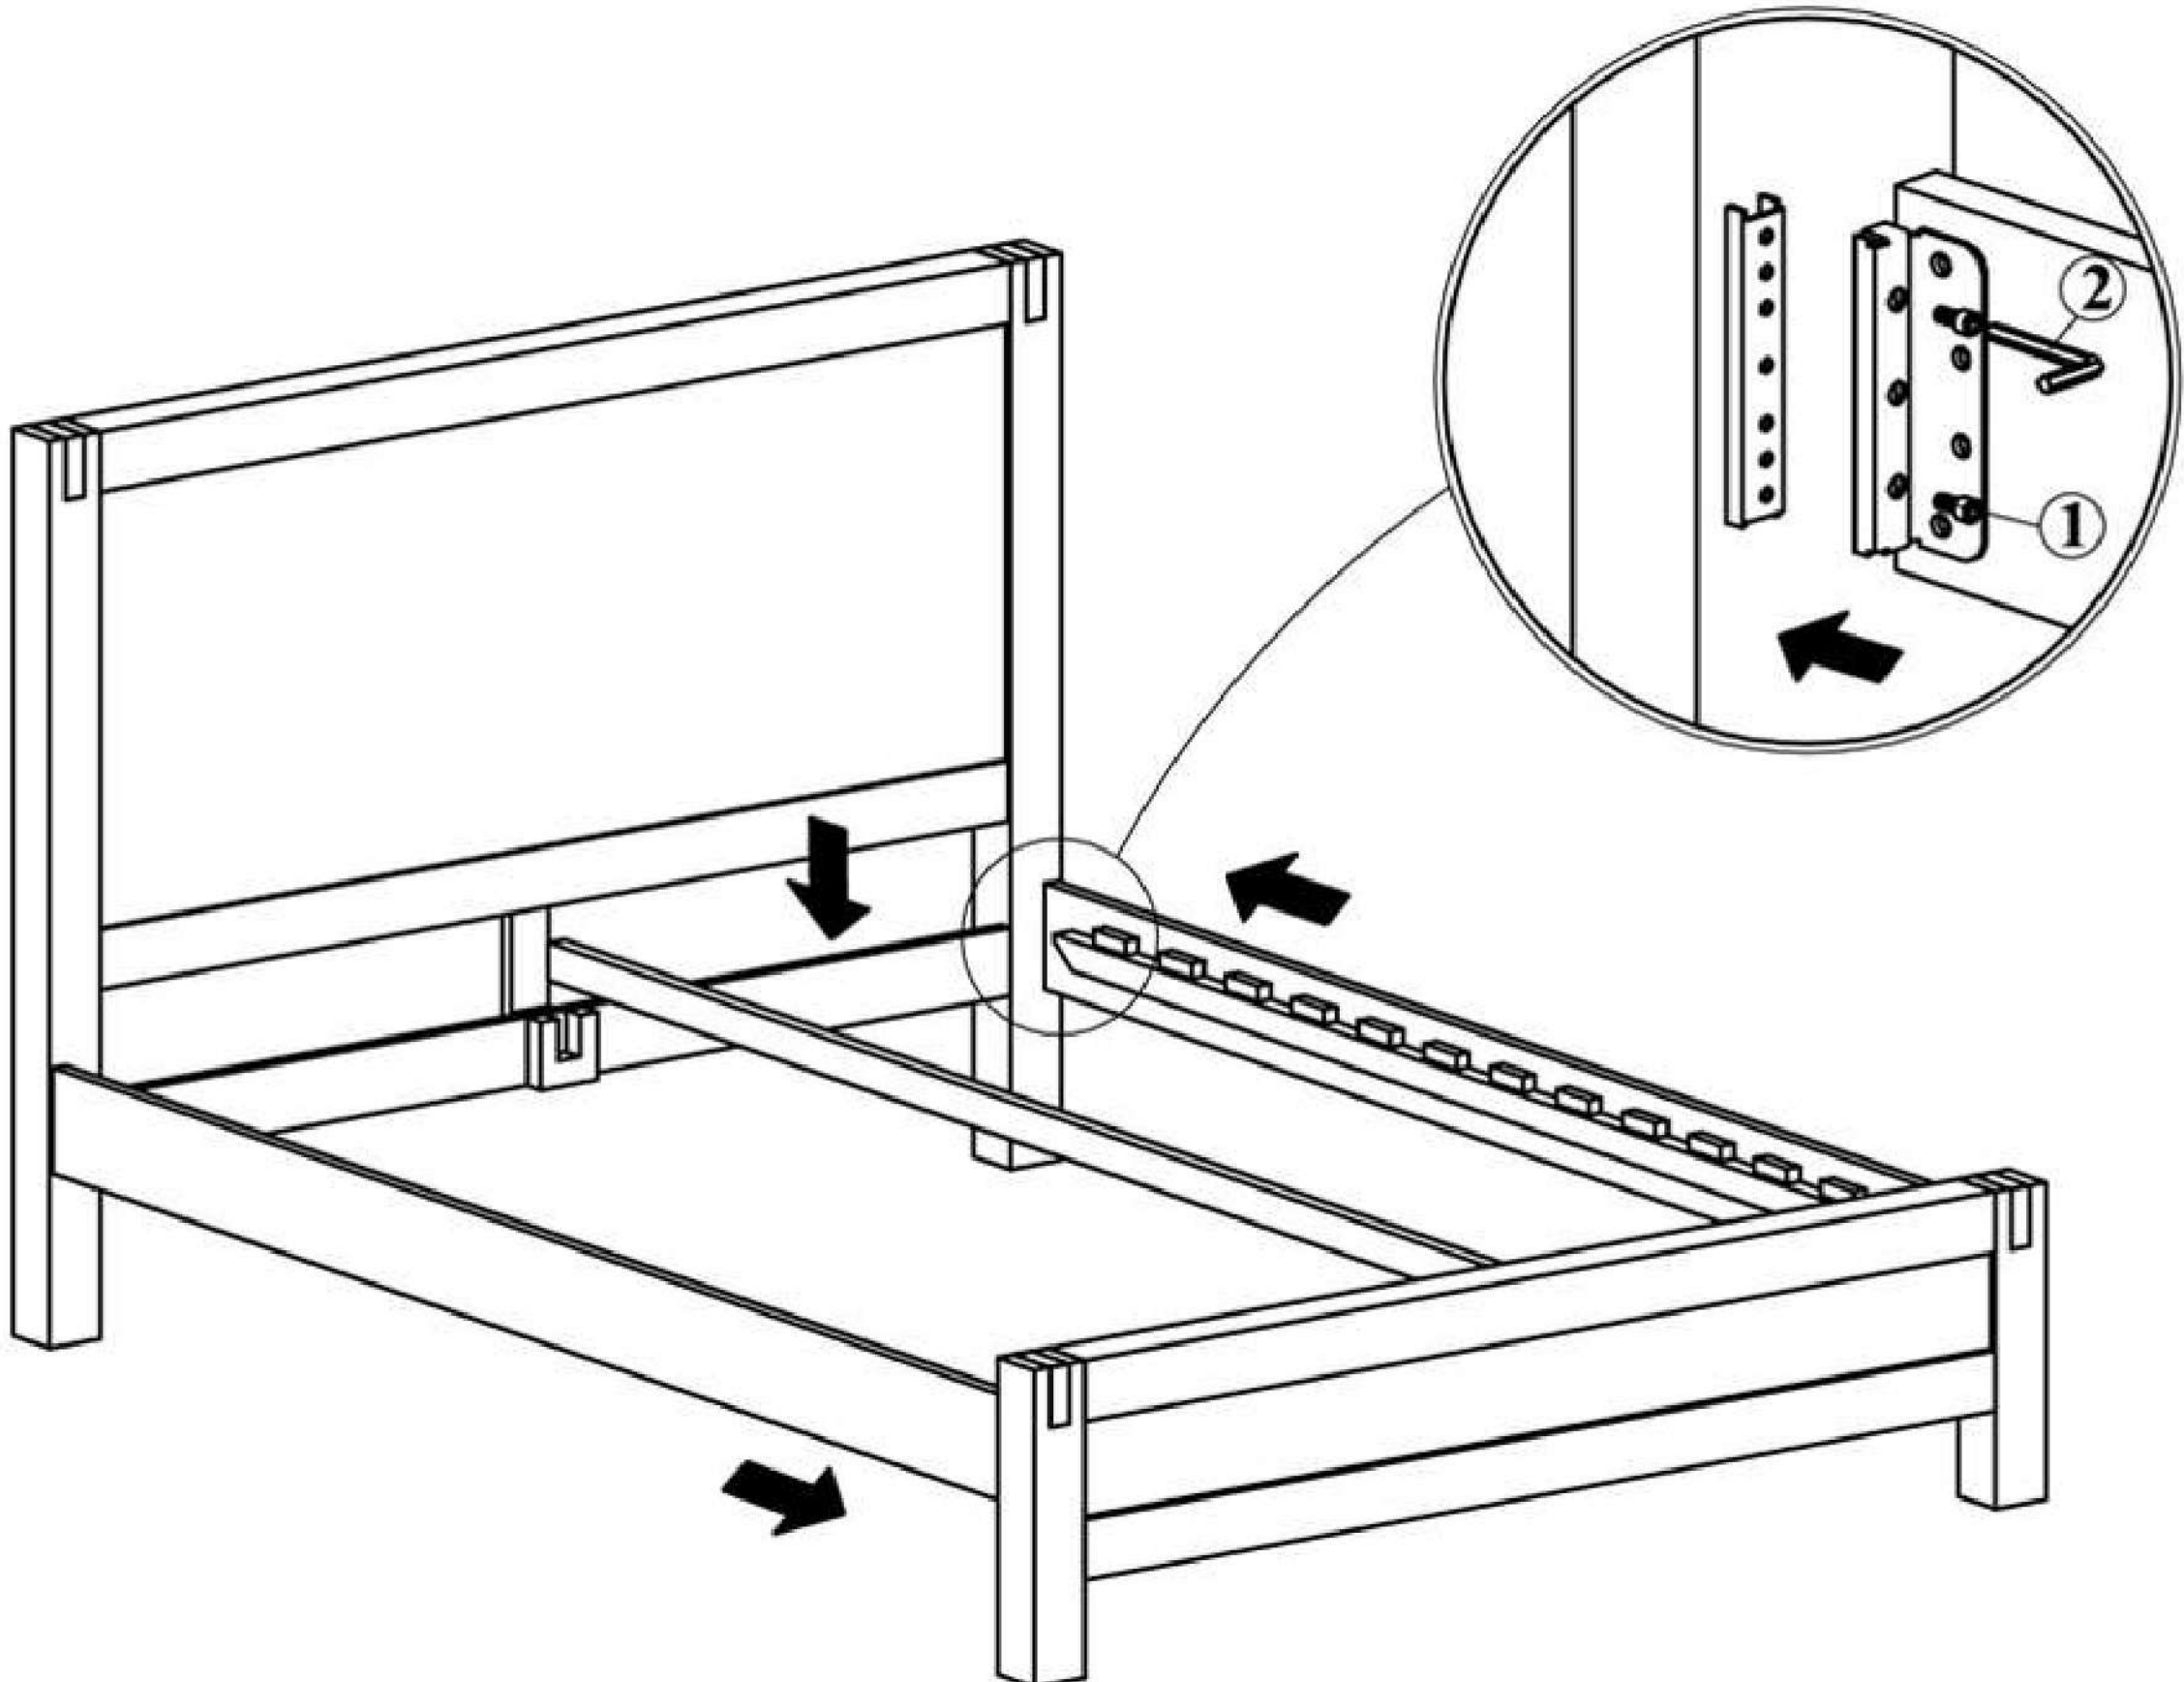
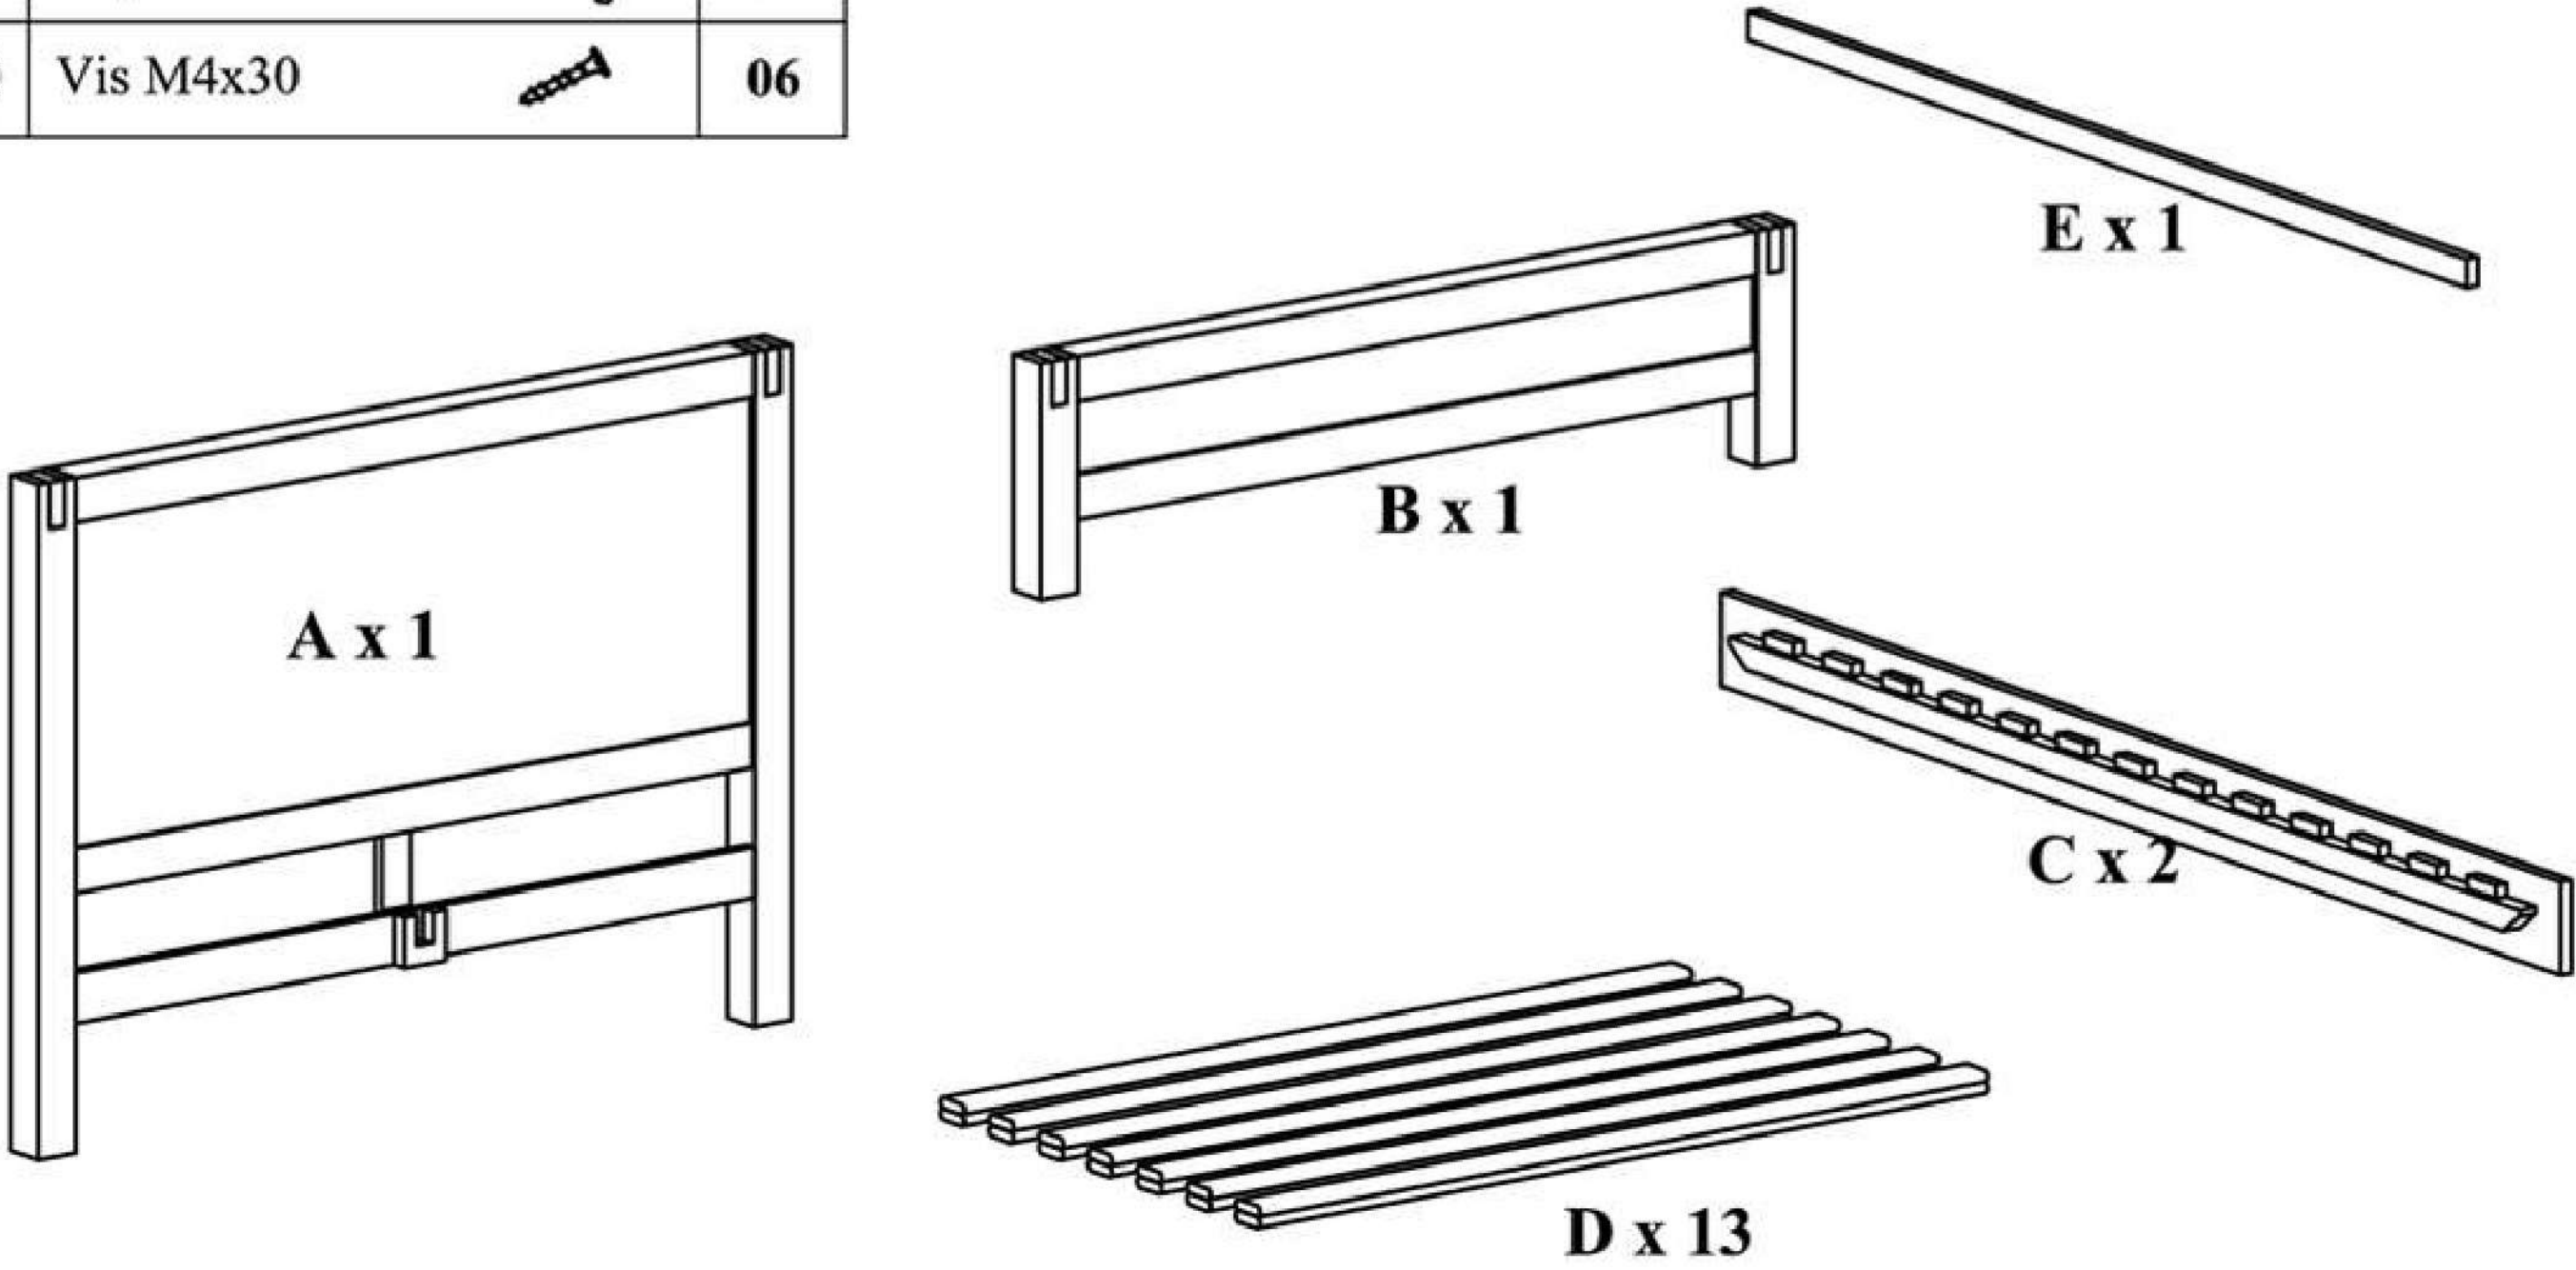
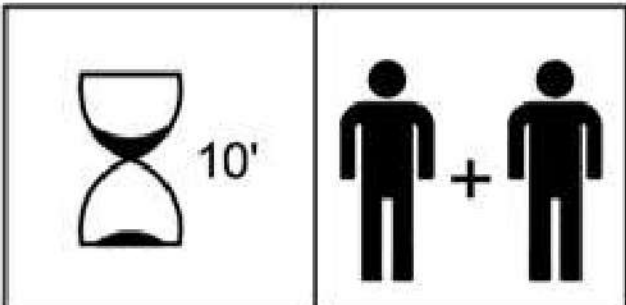
ASSEMBLY
INSTRUCTION

IMPORTANT NOTE: *PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.


*KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

*DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.

HARDWARE FOR WOODEN			
No.	Hardware		Q.ty
①	Bolts M5x10		08
②	Key K5		01
③	Vis M4x30		06



STEP 1

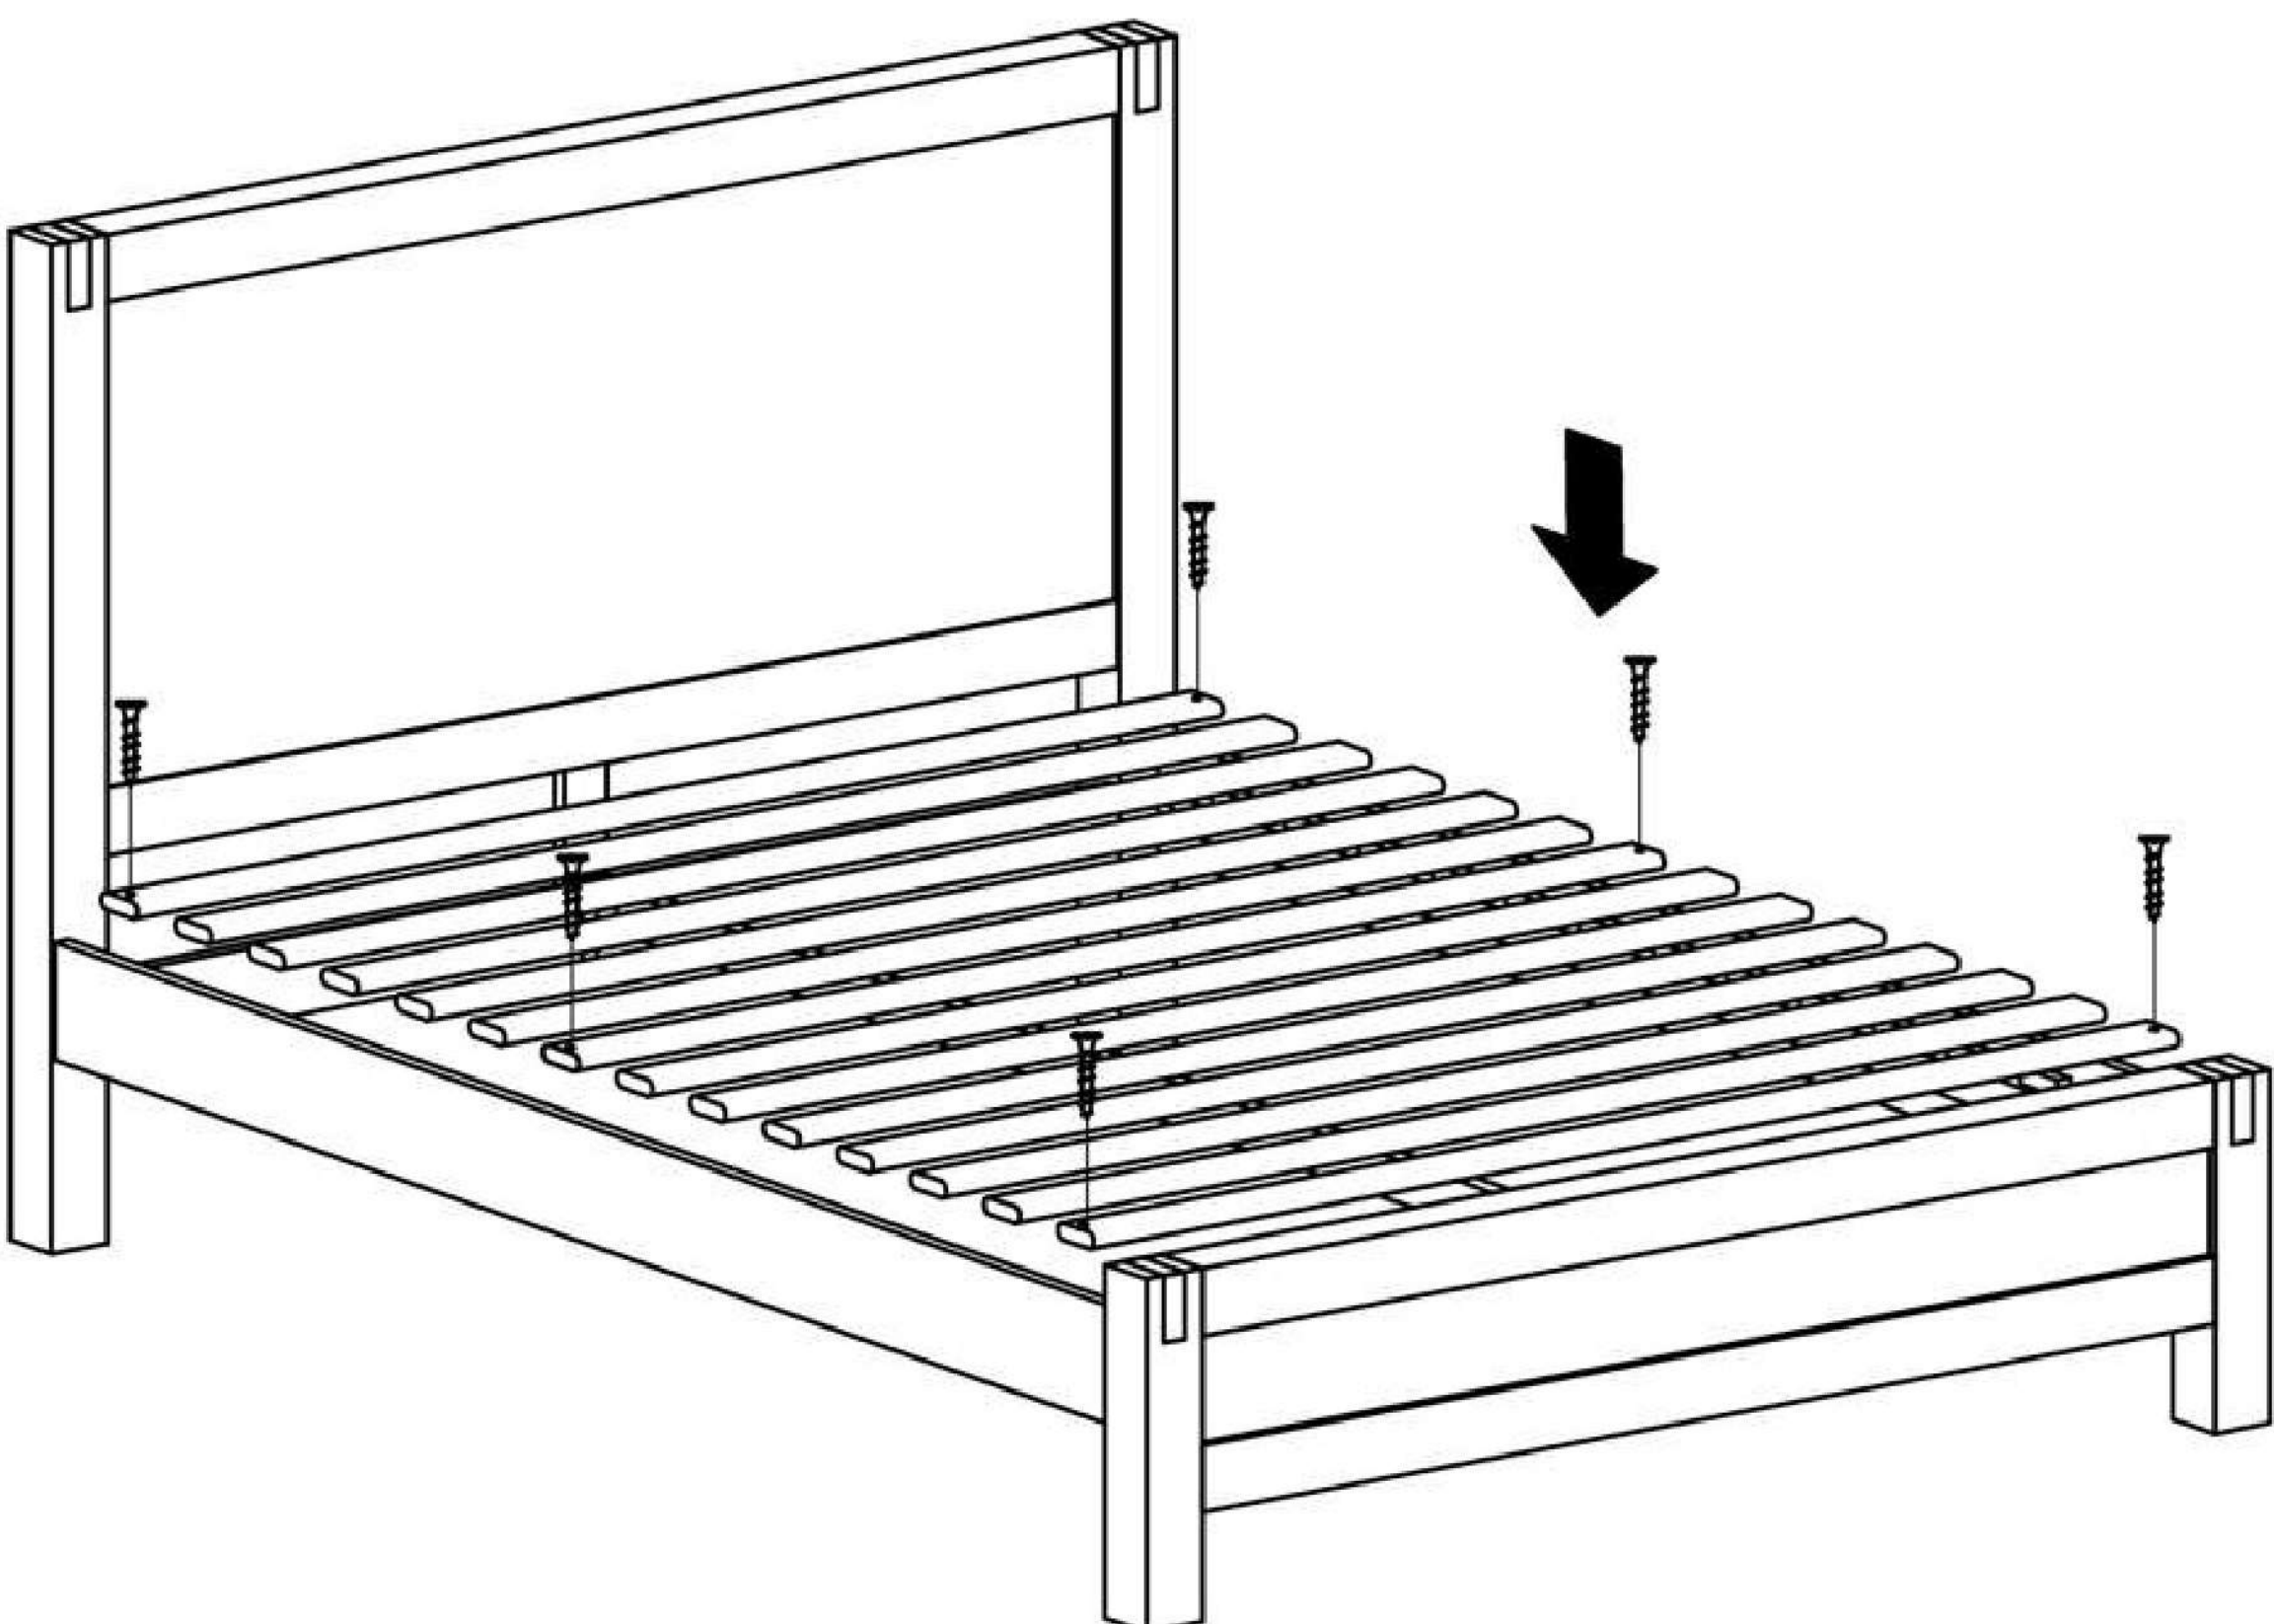

STEP 2

