



CASANO BED - GRAIN FINISH ASSEMBLY INSTRUCTIONS

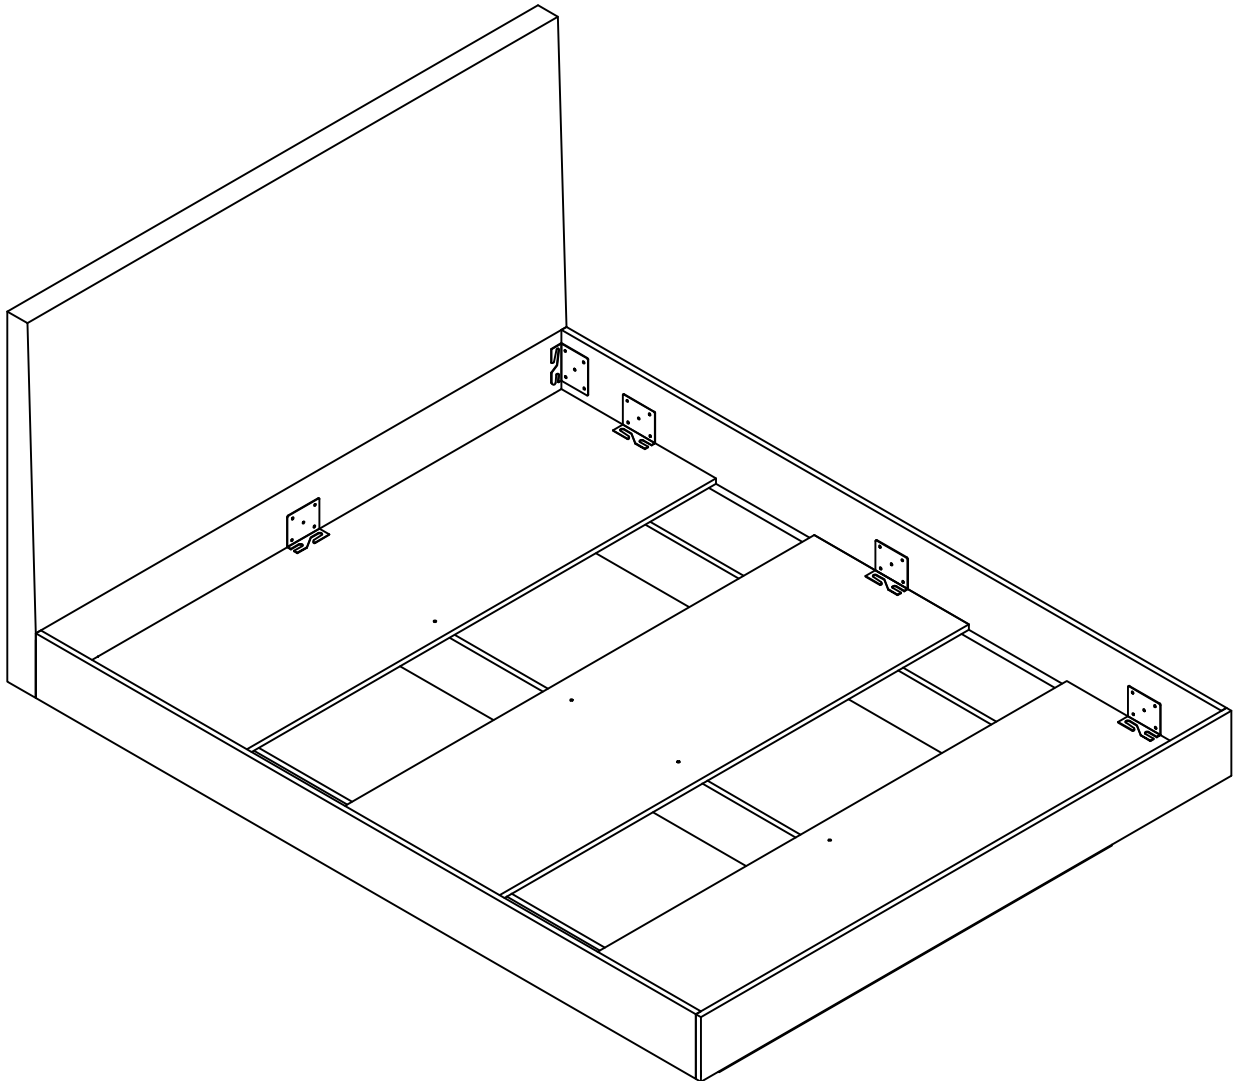





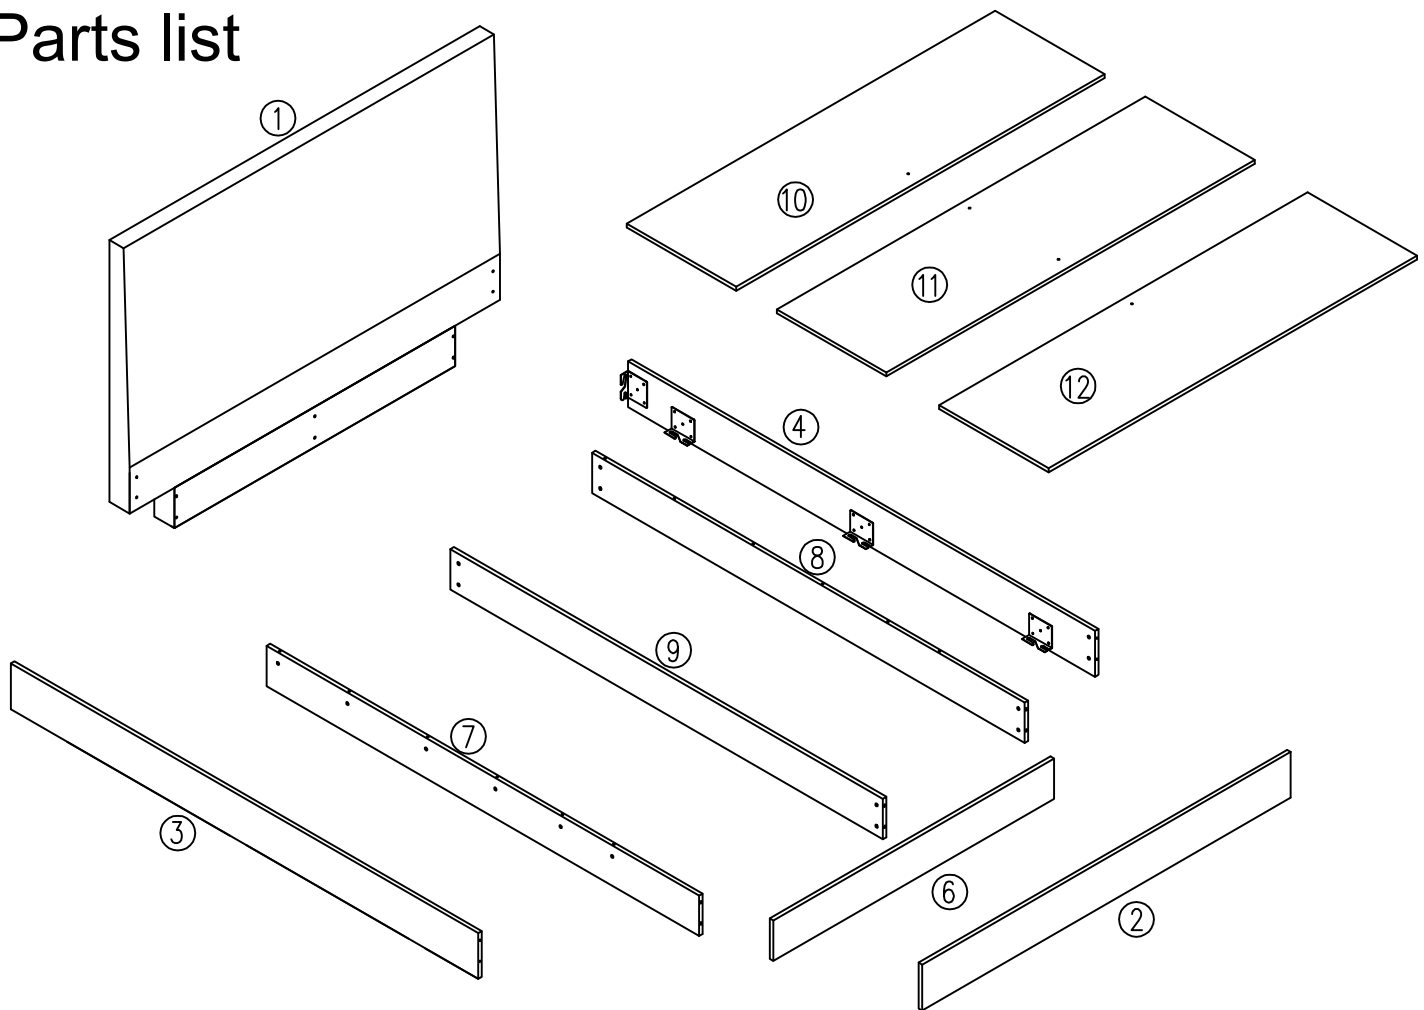

THIS BED IS FOR DOMESTIC USE
AND STRICTLY NOT FOR CONTRACT USE.



Parts list



Hardware list

Label	Picture	Description	Qty	Label	Picture	Description	Qty
A		Connecting rod	28	D		Bolt M6x20	20
B		Connecting buckle	28	E		Spring Washer	20
C		Screw 4*35	10	F		Washer M6	20


Tool list

Label	Picture	Description	Qty
T-1		Screw driver(not provided)	1
T-2		Allen key M4	1


Step 1

A  12pcs


Connecting rod

B  12pcs

Connecting buckle

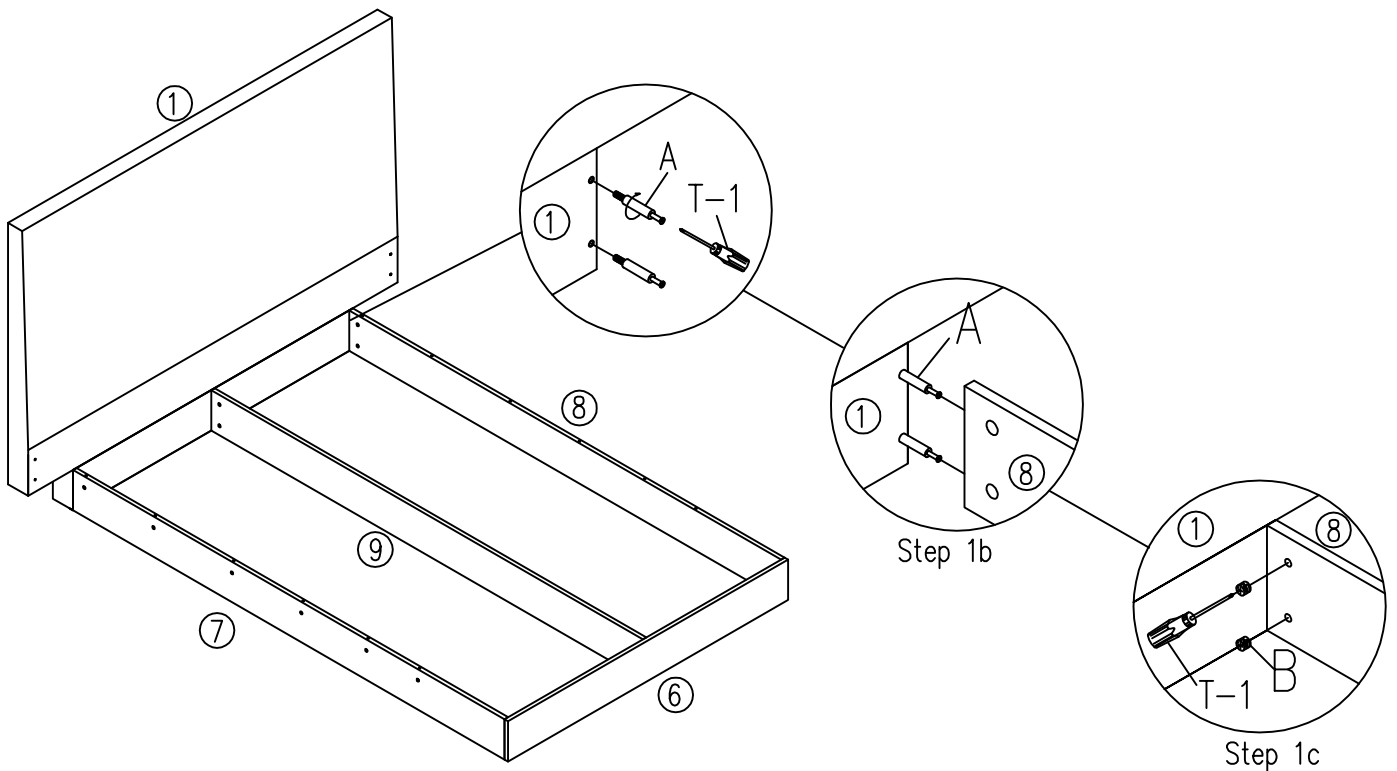

Step 2

A  12pcs


Connecting rod

B  12pcs


Connecting buckle

C  5pcs

Screw 4*35

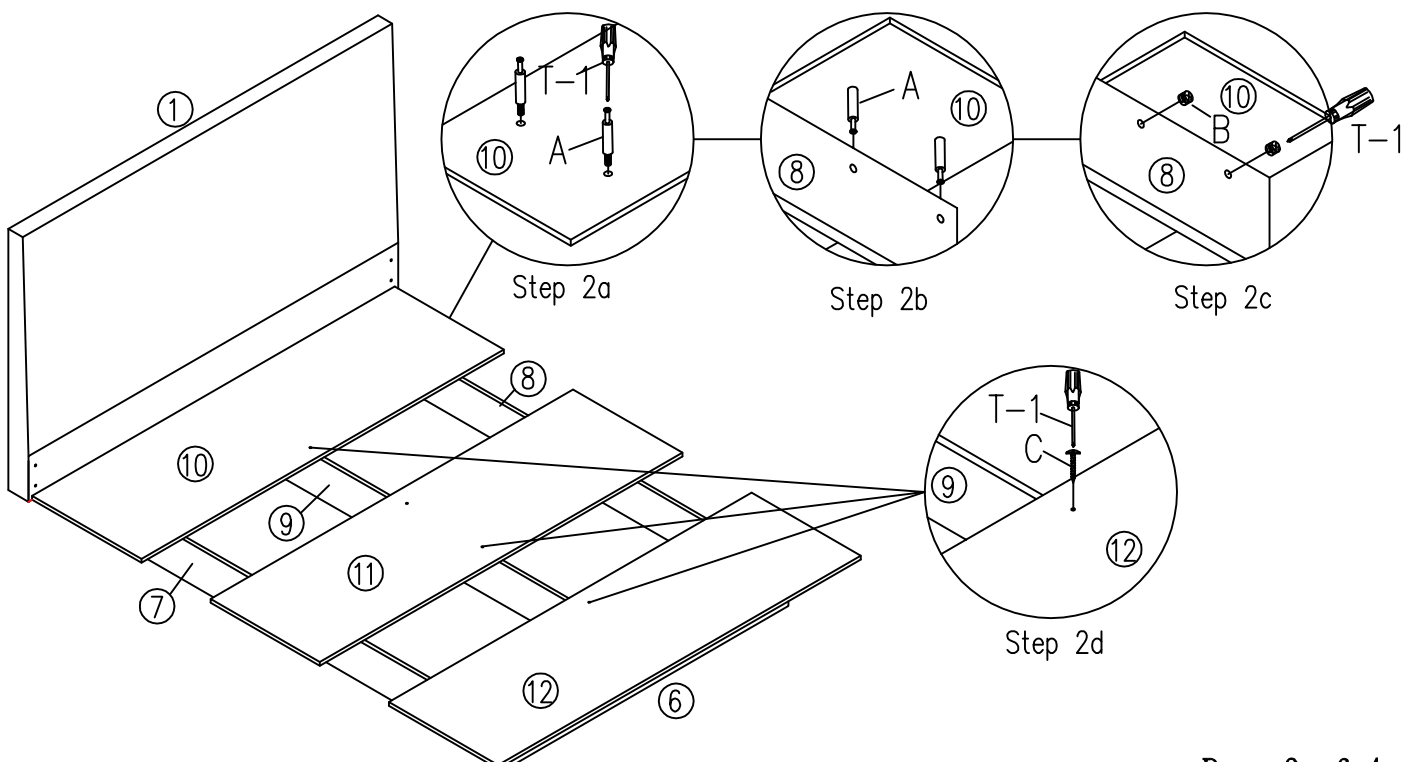

Step 3

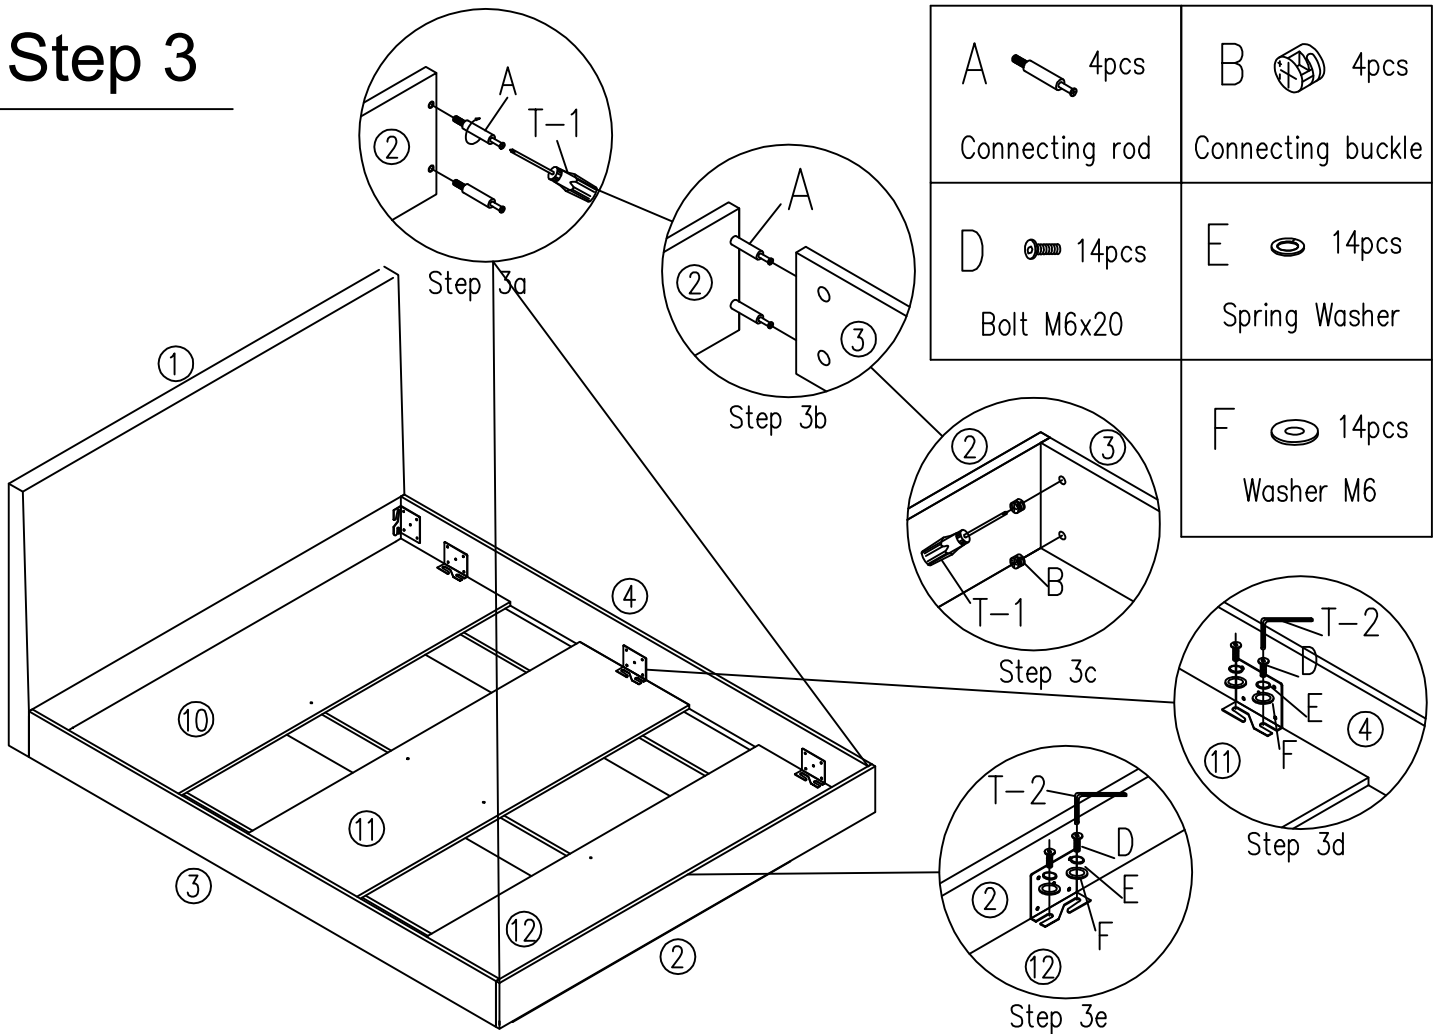

Step 4

