

WIMBLEDON OTTOMAN BED


ASSEMBLY INSTRUCTIONS



WIMBLEDON OTTOMAN BED IS FOR DOMESTIC USE
AND STRICTLY NOT FOR CONTRACT USE.

PLEASE ASSEMBLE THE BED BY TWO PERSONS.

PART LIST

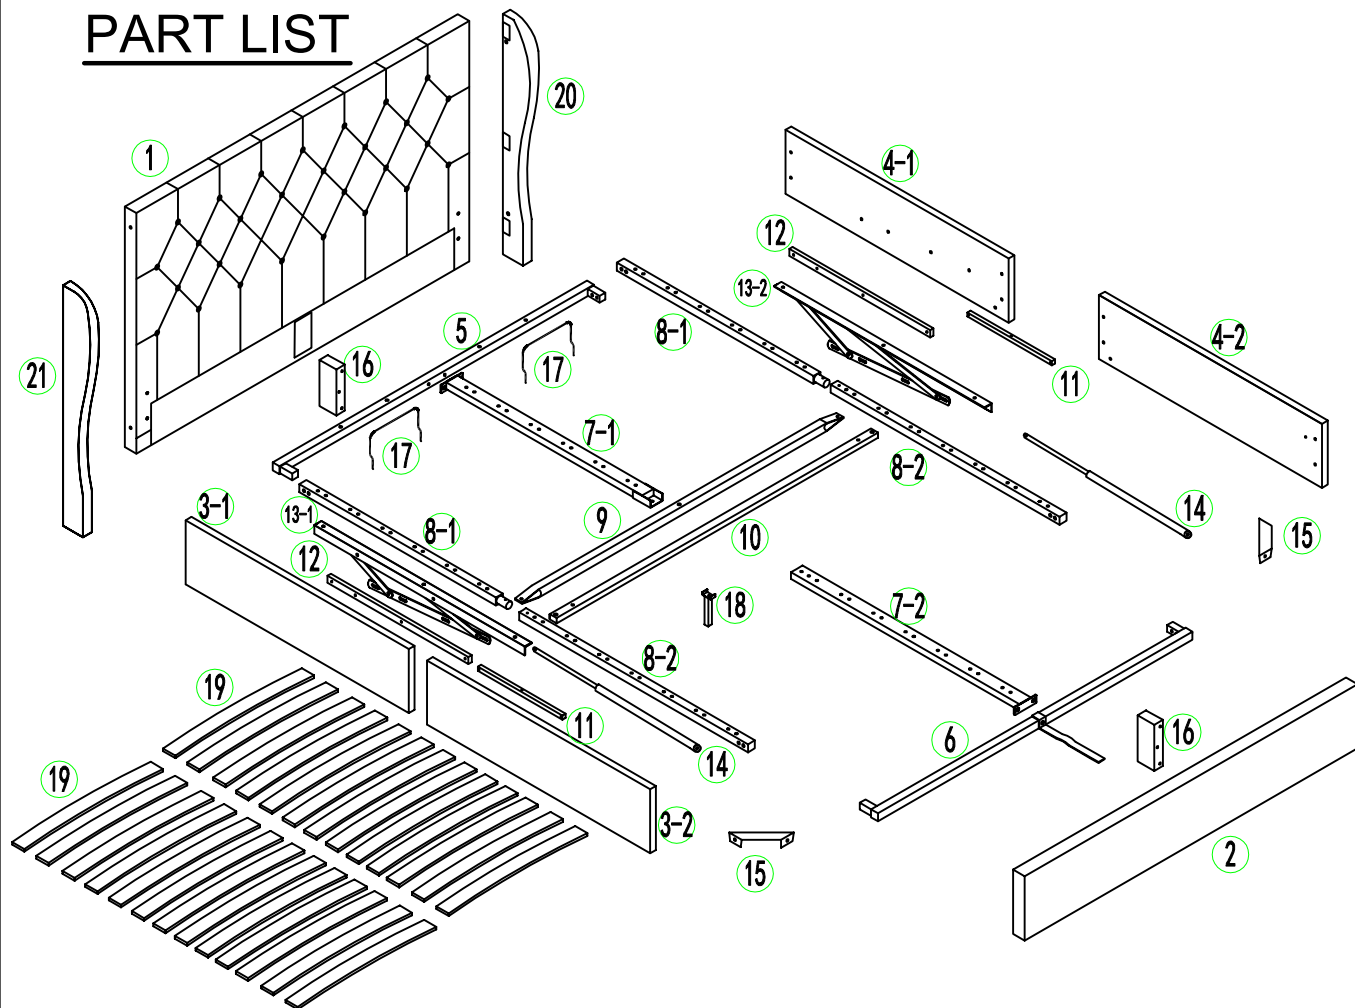


HARDWARE LIST

Label	Picture	Description	Qty	Label	Picture	Description	Qty
A		Single Plastic CAP	26	I		Bolt M6x60	1
B		Double Plastic CAP	13	J		Screw 4*80	6
C		Bolt M6x20	20	L		Connection Plate Left	2
D		Bolt M8x25	8	R		Connection Plate Right	2
E		Spring Washer	8	M		Bolt M8x35	8
F		Washer M8	8	N		Bolt M8x15	18
G		Nut M8	4	S		Bolt M6x40	6
H		Connection	2	O		Nut M6	4
K		Bolt M6x35	2	P		Washer M6	4
Q		Screw 4x25	36	T		Wooden Stick	4
V		Connection	6				

TOOL list


Label	Picture	Description	Qty
T-1		Screw driver(not provided)	1
T-2		Allen key M5	1
T-3		Allen key M4	1
T-4		Spanner M8	1
T-5		Spanner M6	1

Steps 1

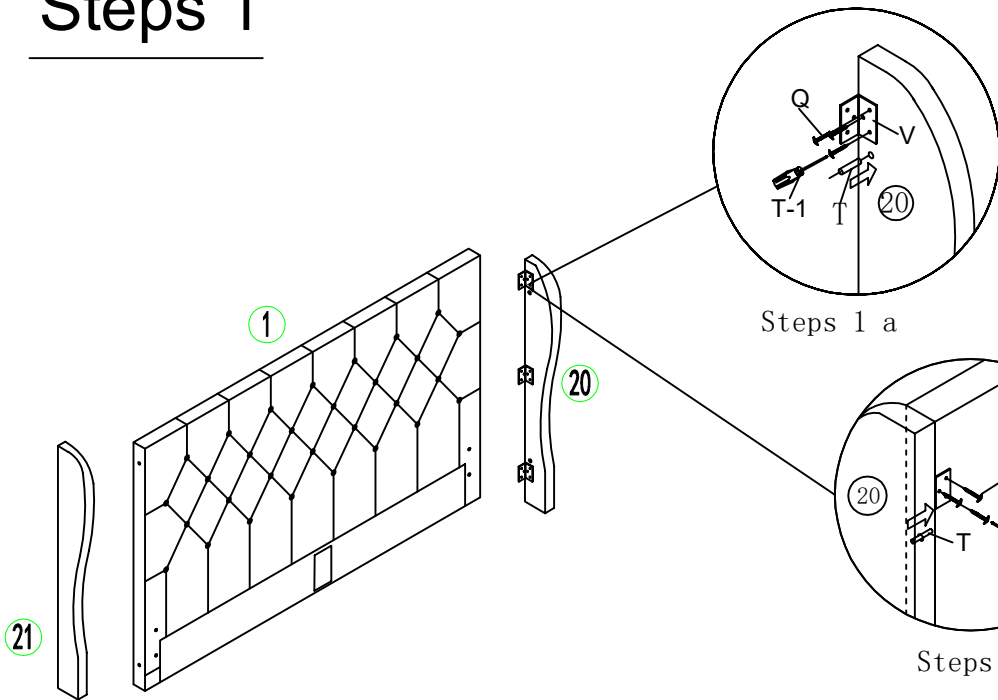


Q  36pcs	T-1  1 pcs
Screw 4x25	Screw driver (not provided)
T  4 pcs	V  6pcs
Wooden Stick	Connection

Steps 2

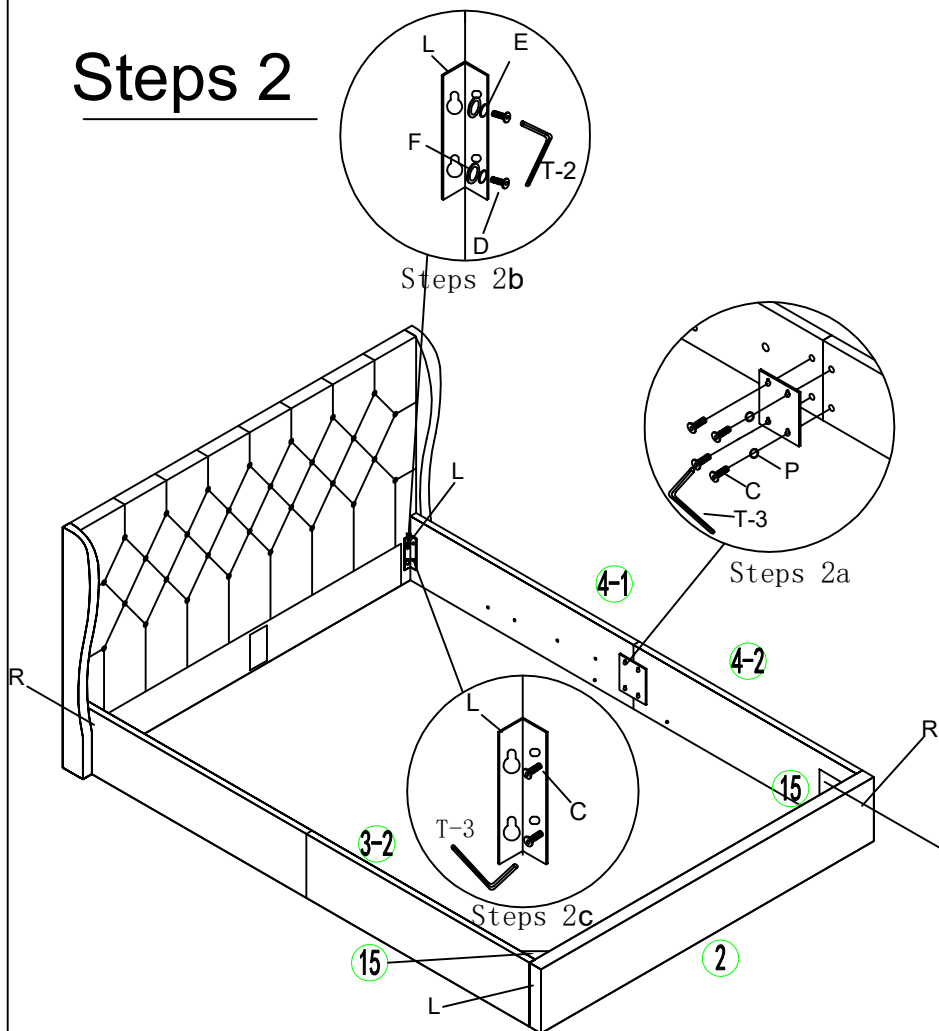


L  2pcs	R  2pcs
Connection Plate Left	Connection Plate Right
D  8pcs	E  8pcs
Bolt M8x25	Spring Washer
F  8pcs	T-2  1pcs
Washer M8	Allen key 5#
H  2pcs	T-3  1pcs
Connection	Allen key 4#
C  20pcs	P  4pcs
Bolt M6x20	Washer M6

Steps 3

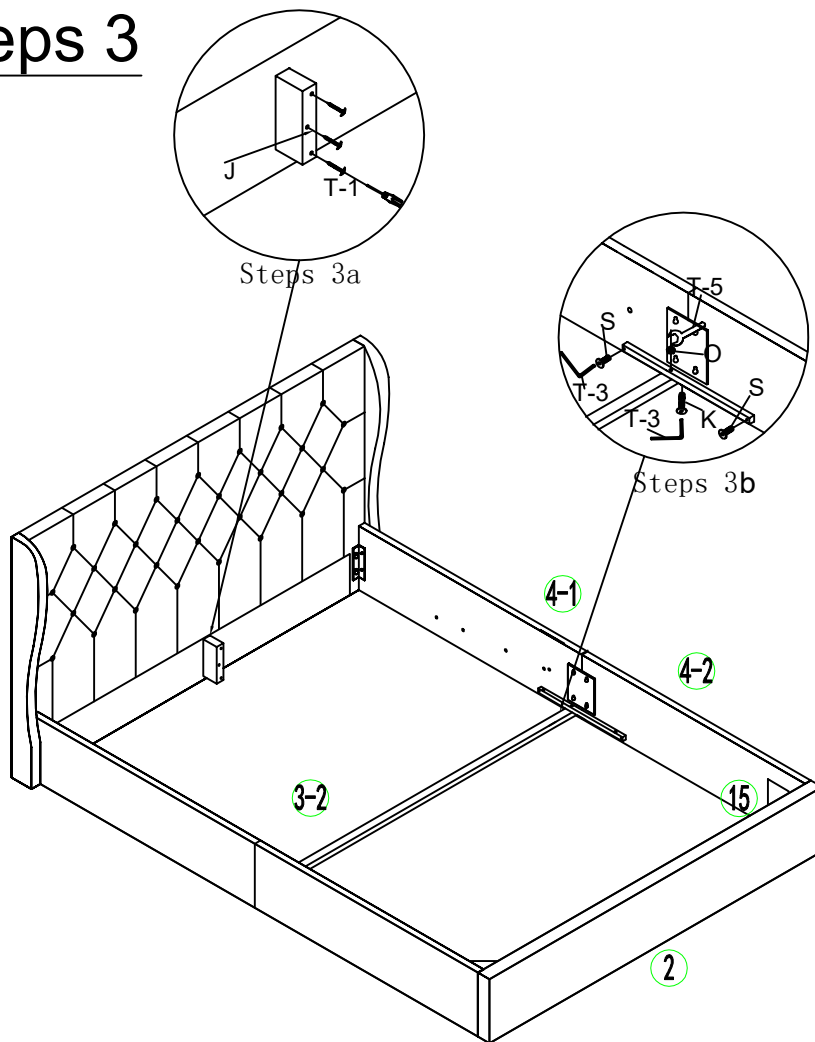


J	12pcs	T-1	1pcs
Screw 4*80		Screw driver	(not provided)
K	2pcs	T-3	1pcs
Bolt M6x35		Allen key 4#	
O	2pcs	S	4pcs
Nut M6		Bolt M6x40	
		T-5	1pcs
		Spanner M6	

Steps 4

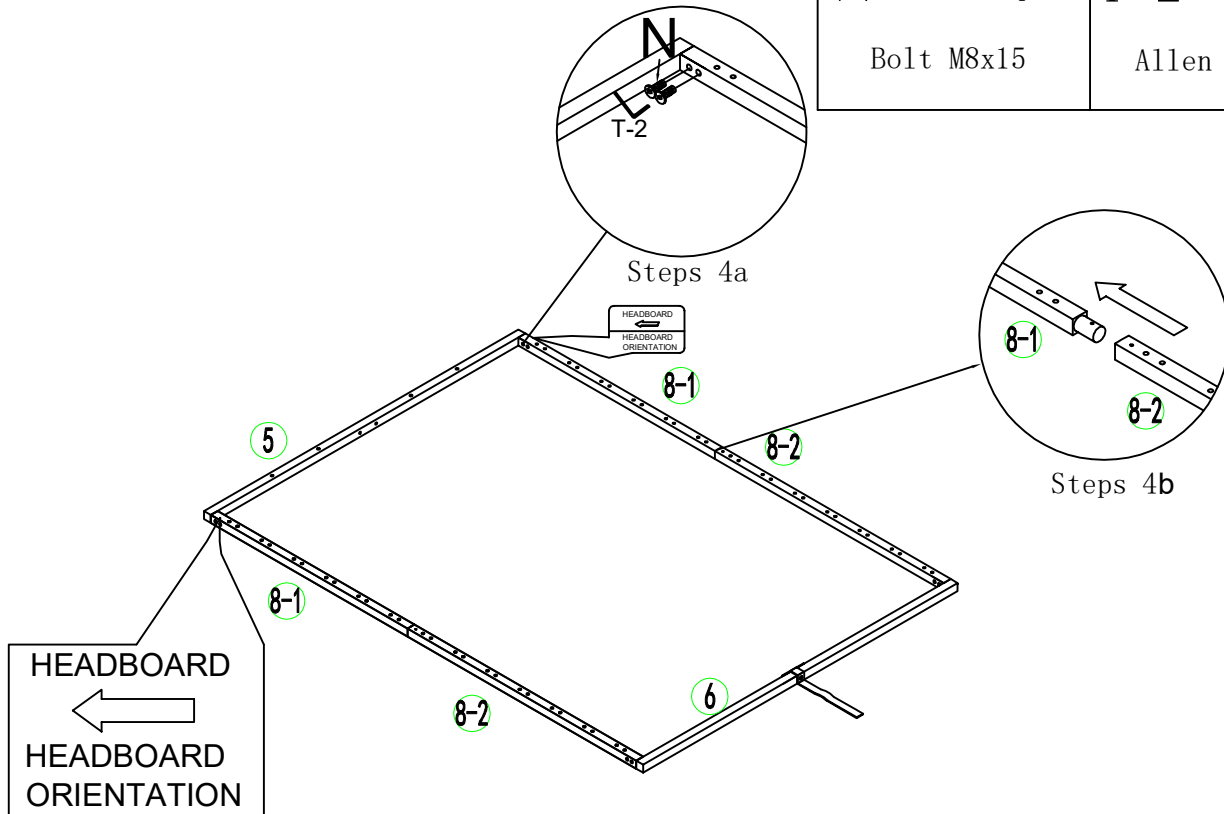


N	8pcs	T-2	1pcs
Bolt M8x15		Allen key 5#	

Steps 5

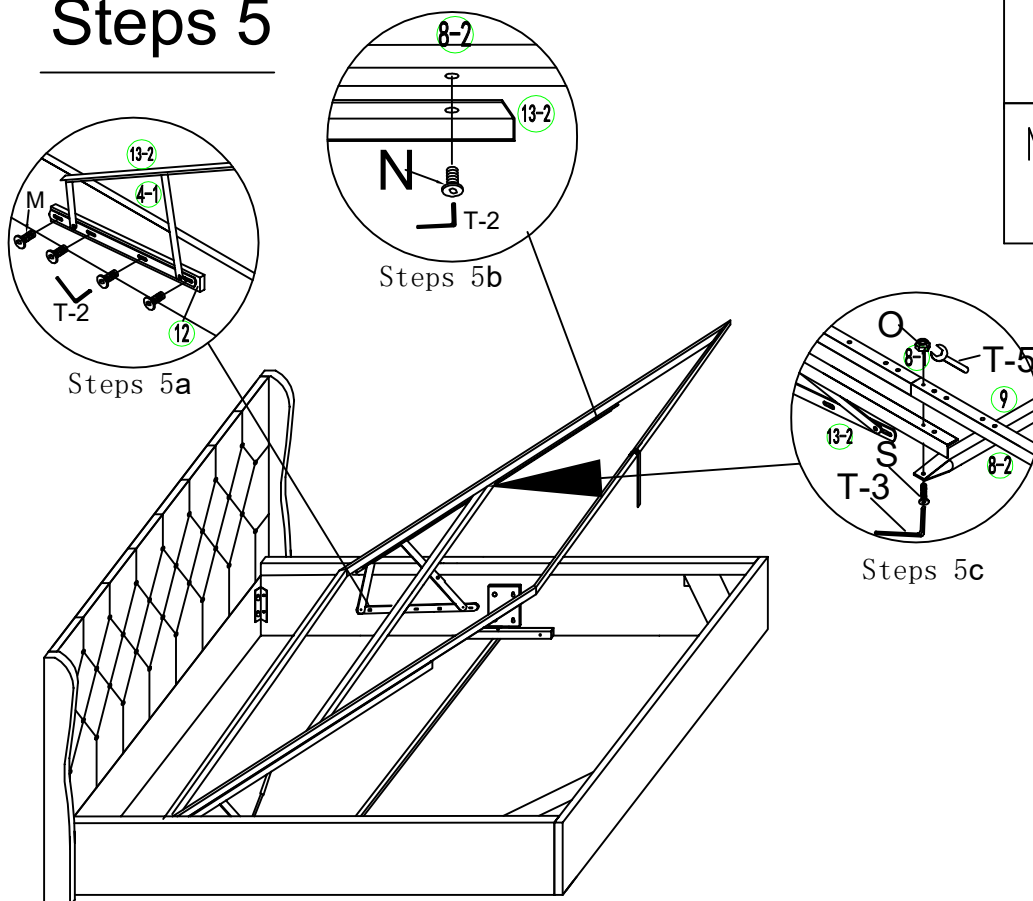

N 6pcs Bolt M8x15	T-2 1pcs Allen key 5#
M 8pcs Bolt M8x35	S 2pcs Bolt M6x40
	O 2pcs Nut M6
	T-5 1pcs Spanner M6
	T-3 1pcs Allen key 4#


Steps 6

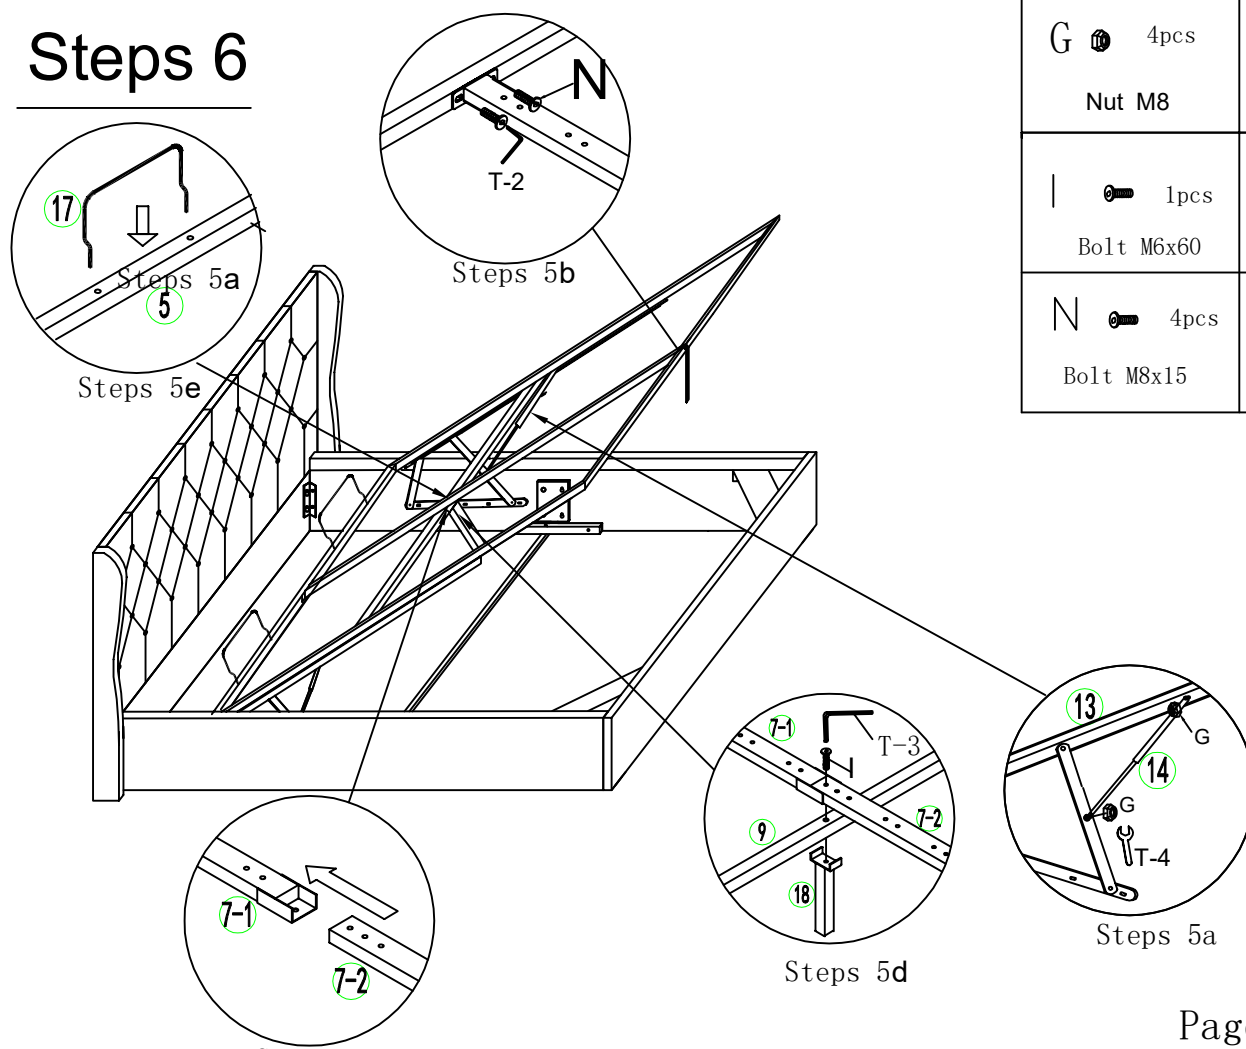

G 4pcs Nut M8	T-4 1pcs Spanner M8
I 1pcs Bolt M6x60	T-3 1pcs Allen key 4#
N 4pcs Bolt M8x15	T-2 1pcs Allen key 5#

Steps 7

A		26pcs
Single Plastic CAP		
B		13pcs
Double Plastic CAP		

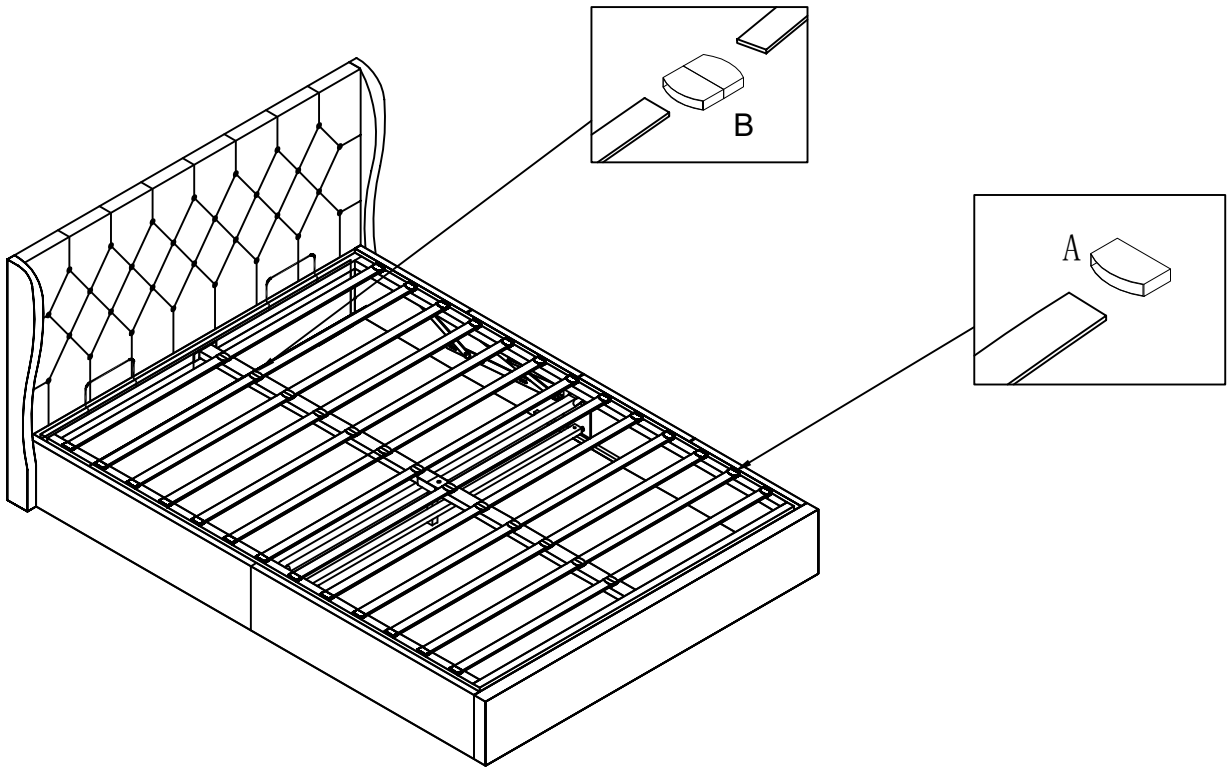

Steps 8

PASTE NON WOVEN FABRIC TO THE BOTTOM OF THE BED

