
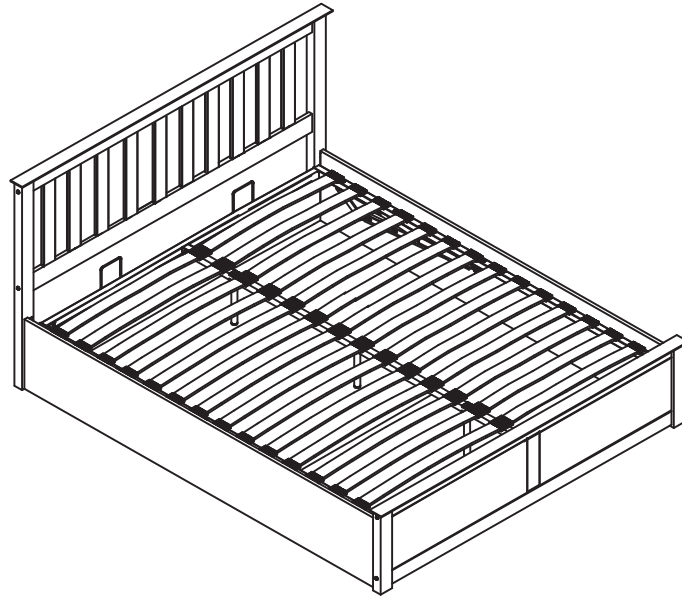






ISAAK OTTOMAN WOODEN BED - DOUBLE & QUEEN SIZE ASSEMBLY INSTRUCTIONS






HARDWARE

A x4  Wood Dowel $\Phi 8 \times 30 \text{mm}$	B x48  Wood Dowel $\Phi 6 \times 30 \text{mm}$	C x8  Bolt $\Phi 6 \times 70 \text{mm}$	D x9  Bolt $M6 \times 65 \text{mm}$	E x6  T-Nut
F x6  Bolt $M6 \times 50 \text{mm}$	G x4  Bolt $M6 \times 35 \text{mm}$	H x6  Stud $M6 \times 60 \text{mm}$	J x6  Nut $M6$	K x6  Half Moon Washer
L x1  Spanner $M6$	M x1  Allen Key $M4$	N x8  Bolt & Washer $\Phi 8 \times 20 \text{mm}$	O x24  Bolt $\Phi 8 \times 15 \text{mm}$	P x4  Nut $M8$
Q x1  Spanner $M10$	R x1  Allen Key $M5$	S x2  Screw $\Phi 4 \times 50 \text{mm}$	T x1  Wood Glue	U x6  Screw $\Phi 4 \times 20 \text{mm}$
I x1  Screw driver (not provided)				


COMPONENTS

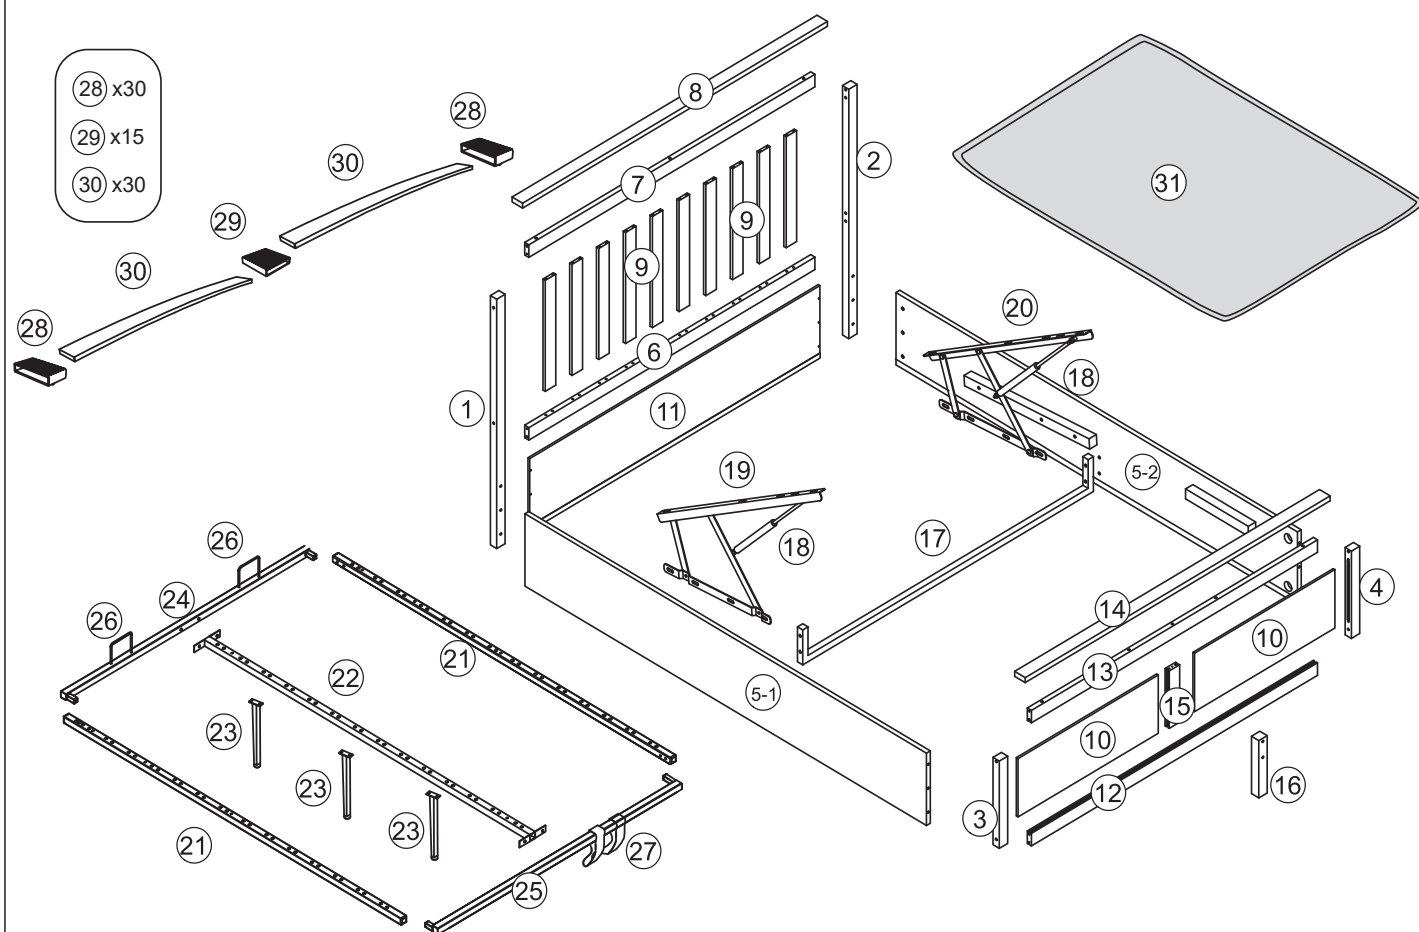

Step 01

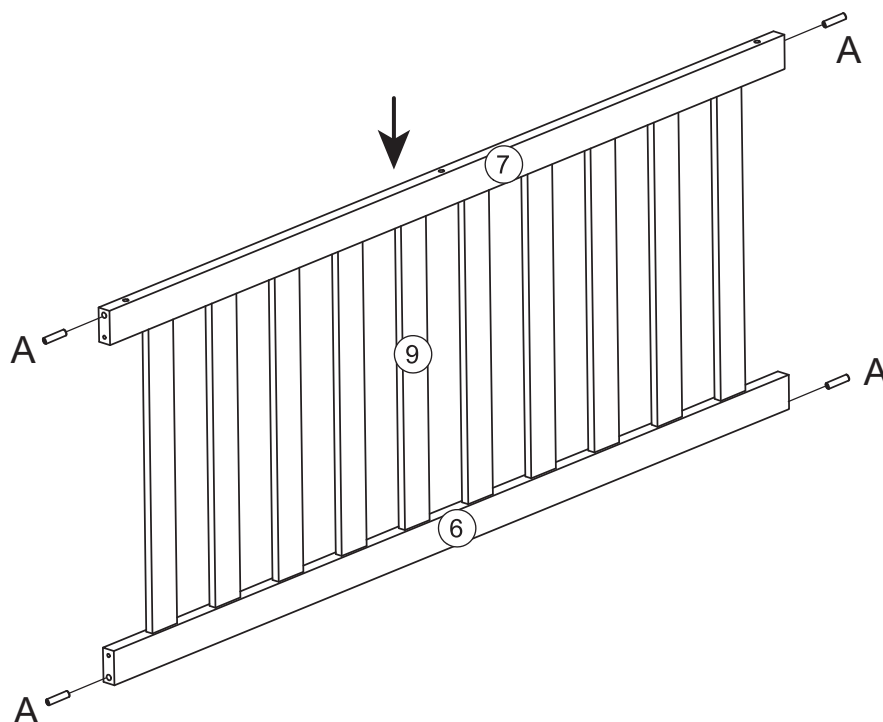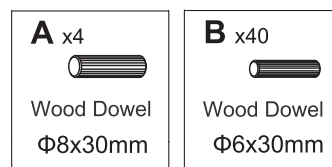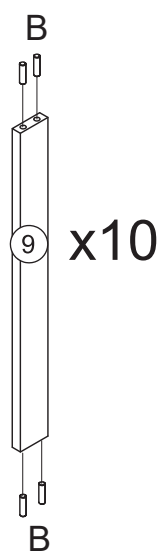


Step 02

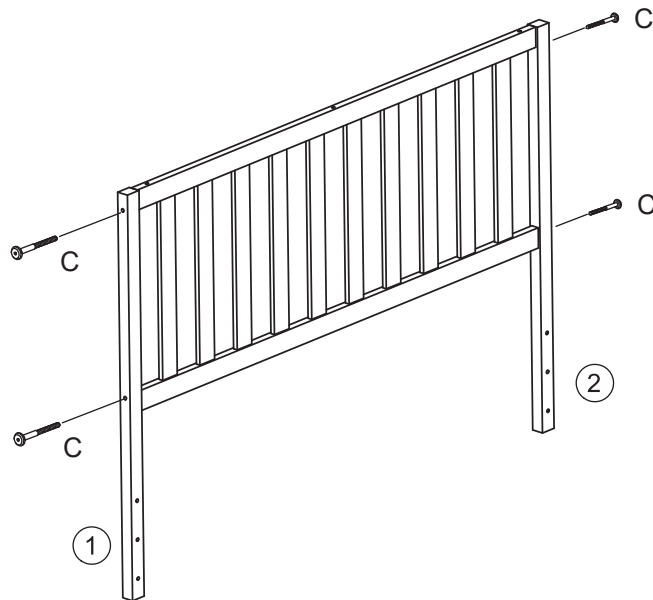



C x4
Bolt
Φ6x70mm

Step 03

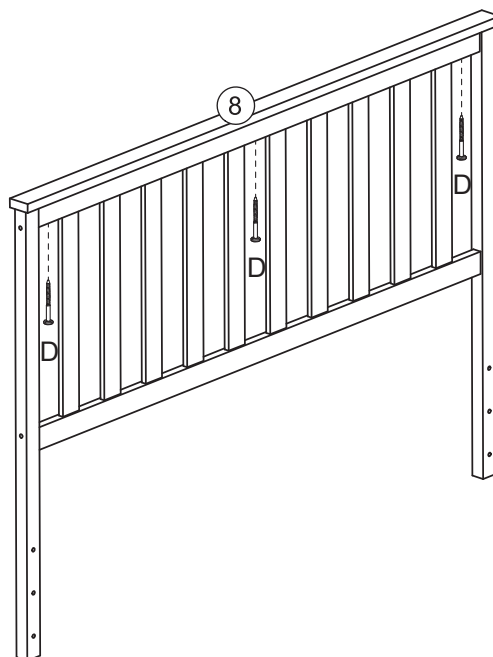

D x3
Bolt
M6x65mm

Step 04

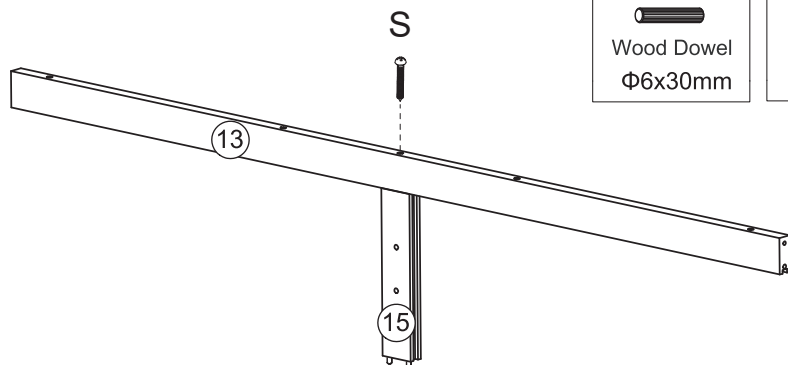

B x4
Wood Dowel
Φ6x30mm


S x1
Screw
Φ4x50mm

Step 05

F x4



Bolt
M6x50mm

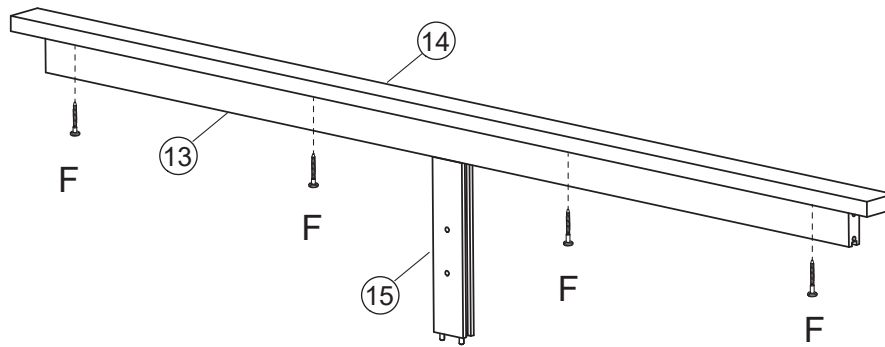

Step 06

B x4




Wood Dowel
Φ6x30mm

S x1




Screw
Φ4x50mm


T x1




Wood Glue

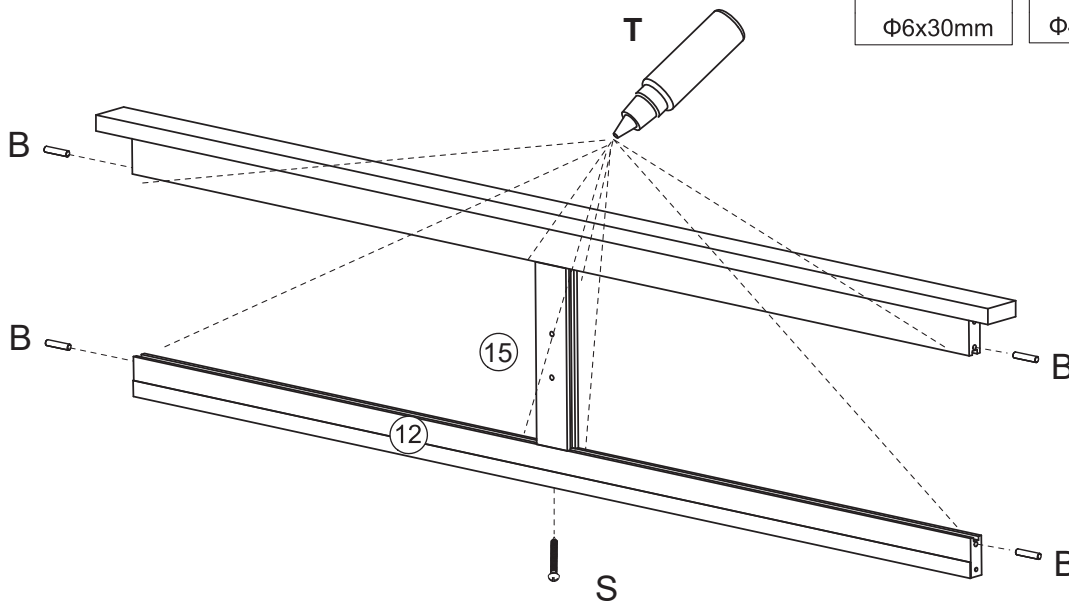

Step 07

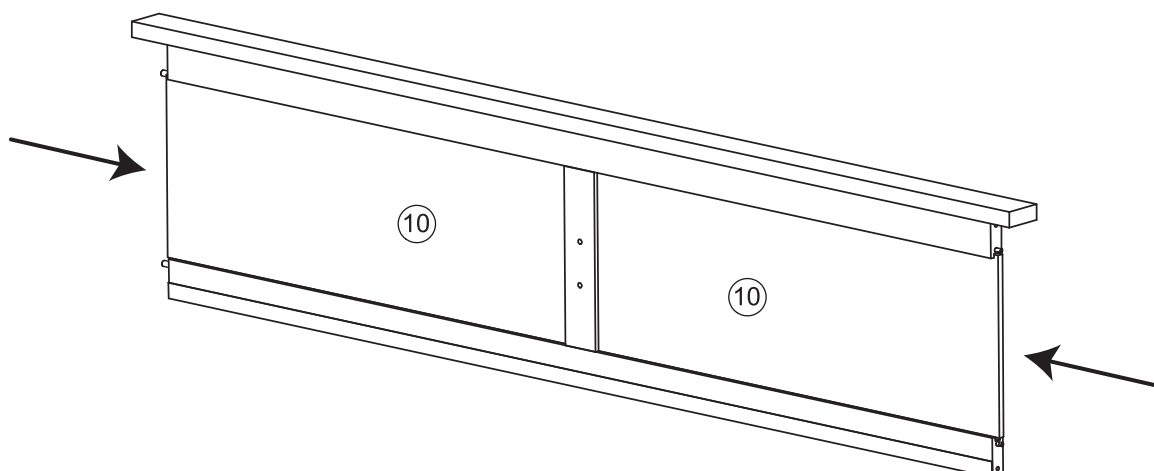

Step 08

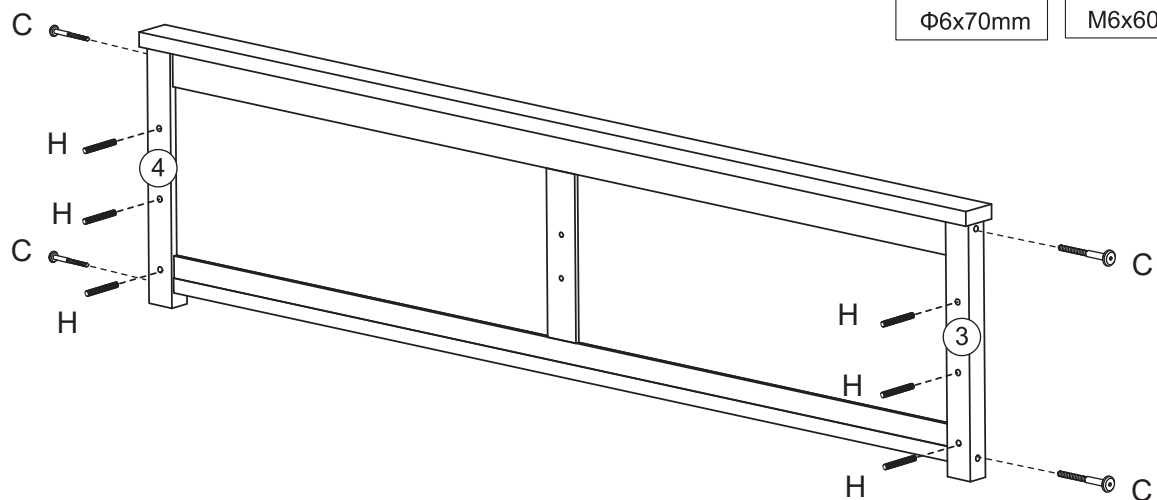

C x4



Bolt

Φ6x70mm

H x6




Stud

M6x60mm

Step 09

Do Not Over Tighten
The Nut "P"

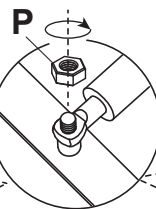

P x4



But


M8

Q x1



Spanner

M10

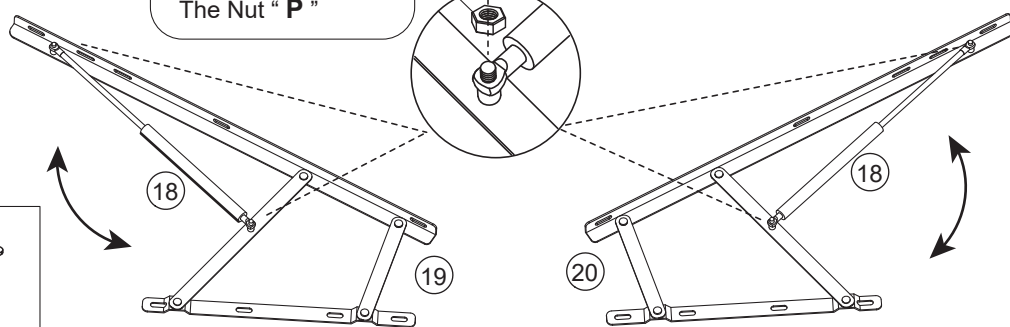


Step 10

N x8




Bolt & Washer


Φ8x20mm

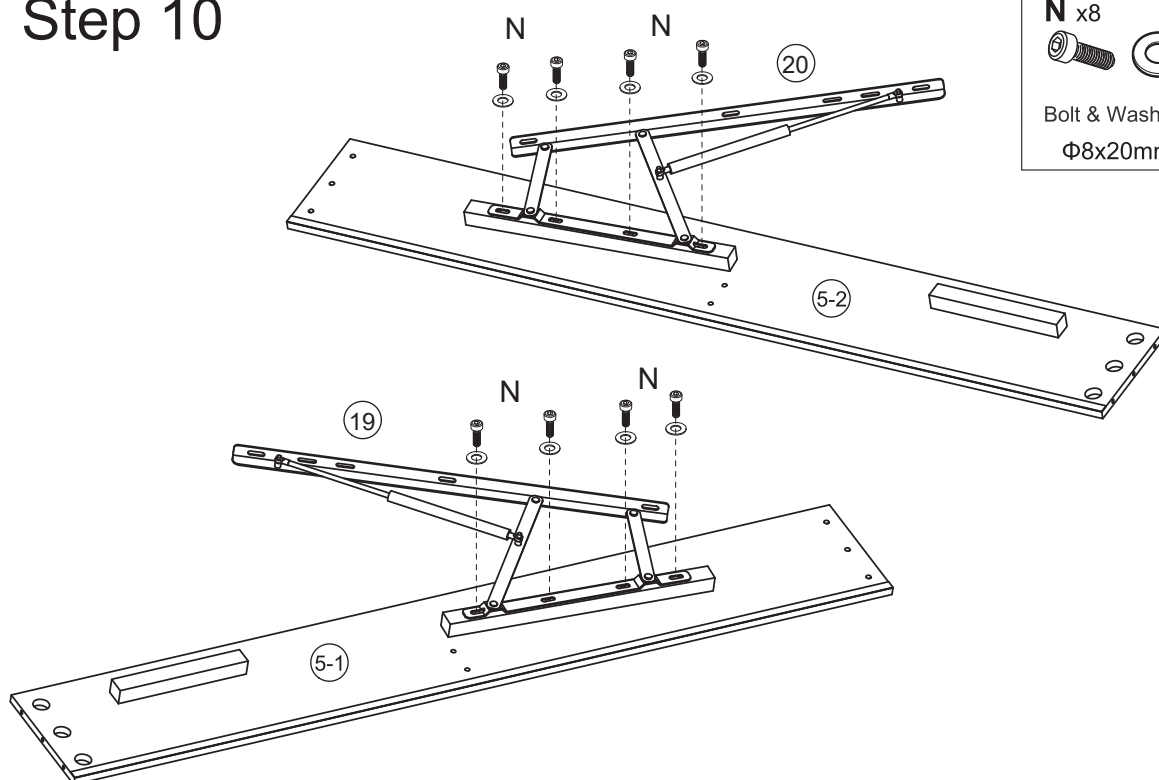


Step 11

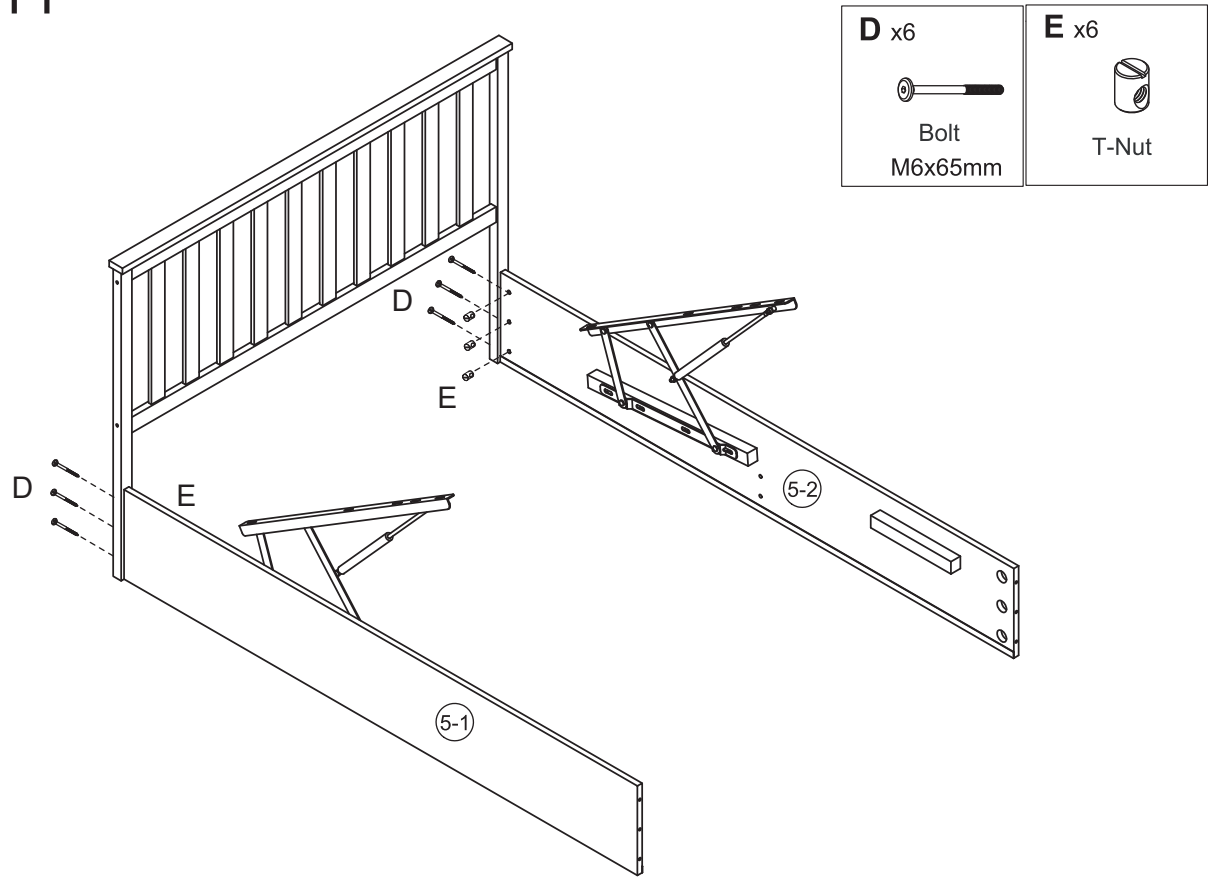


Step 12

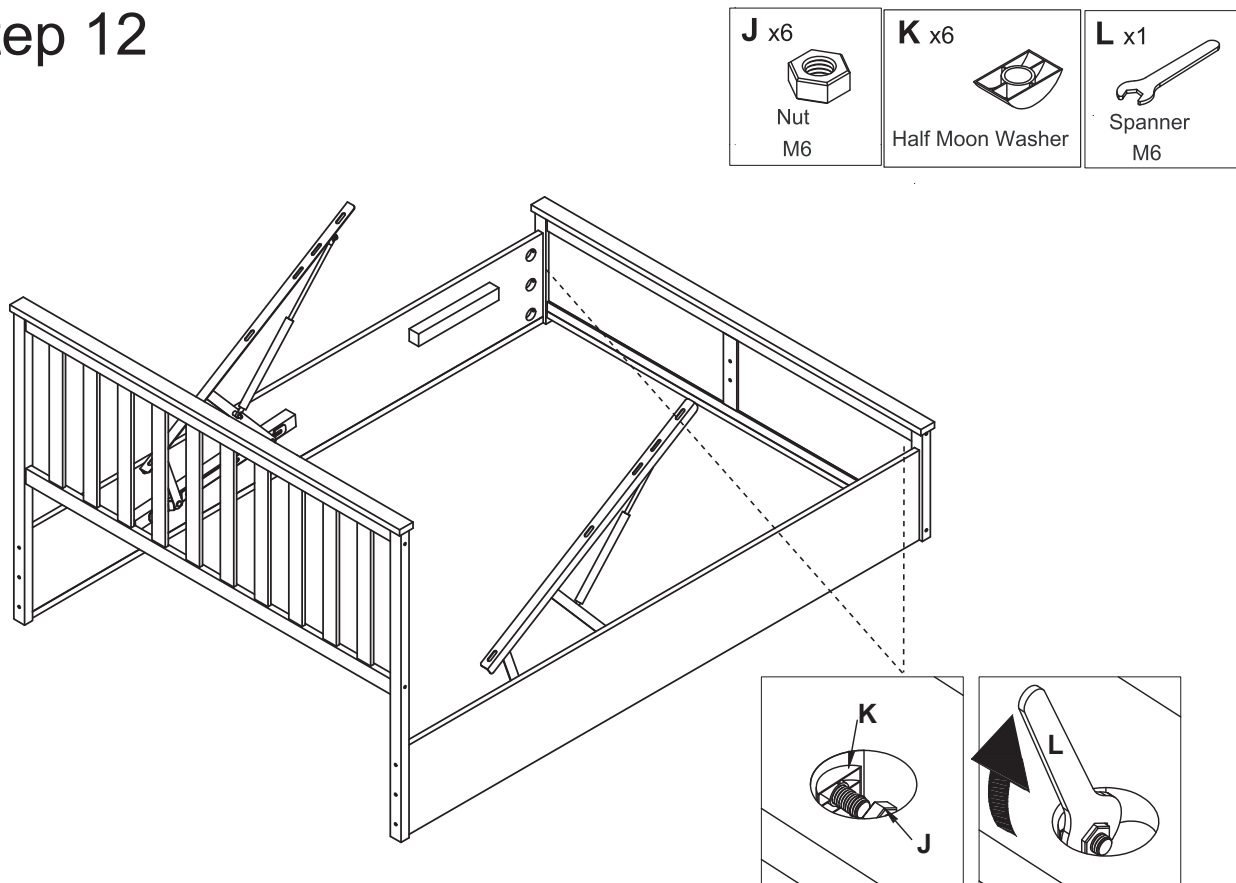

Step 13

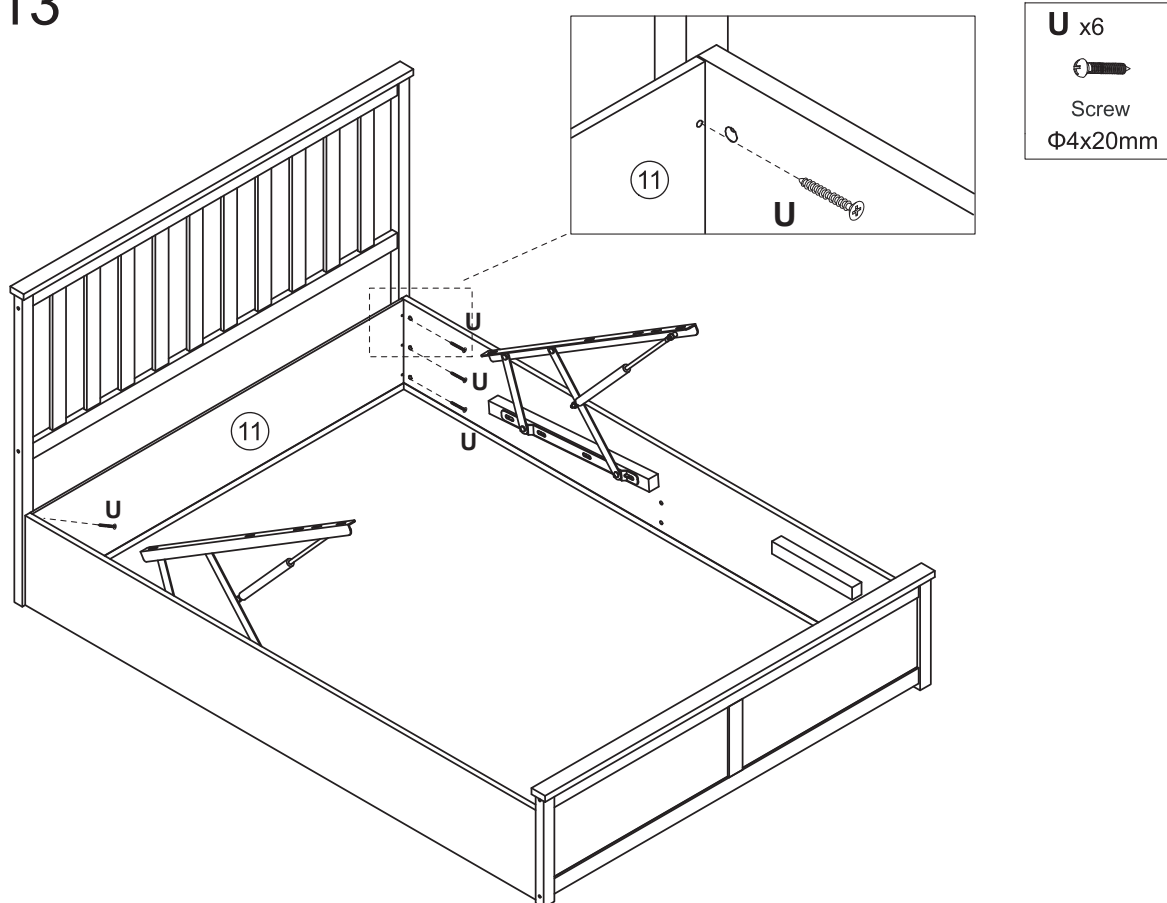

Step 14

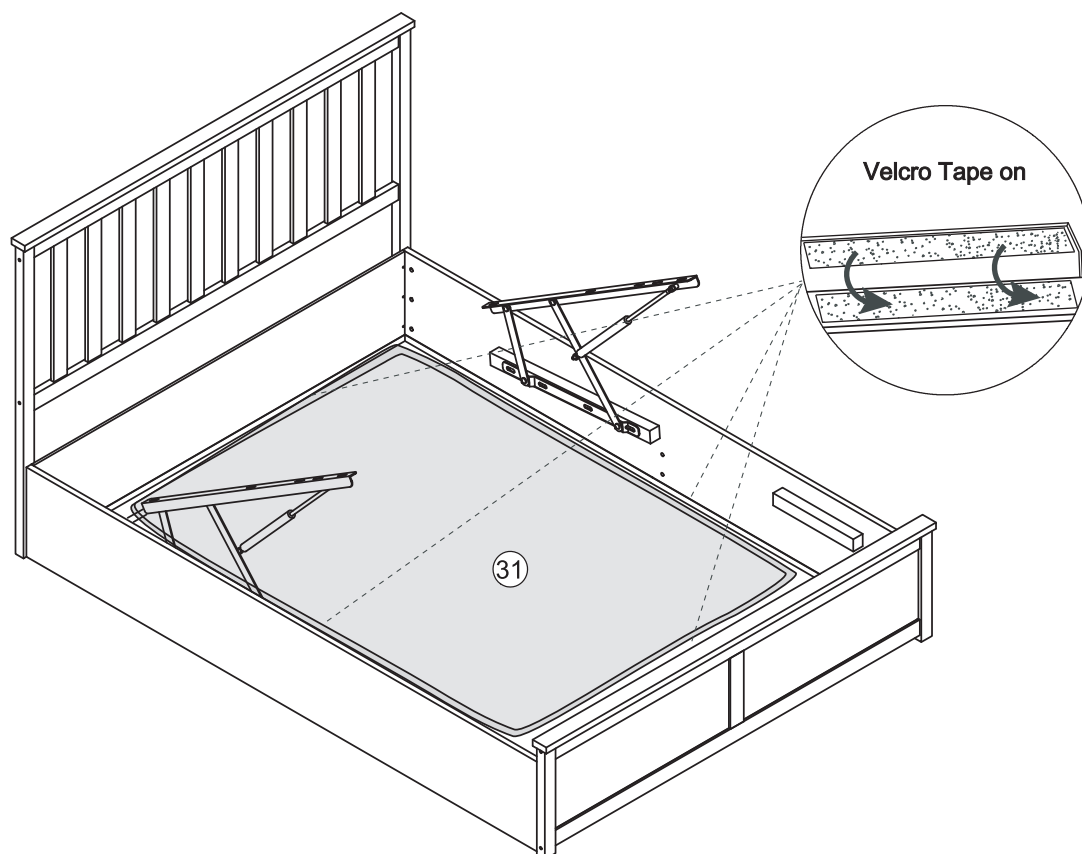

Step 15

G x4



Bolt


M6x35mm

F x2



Bolt

M6x50mm

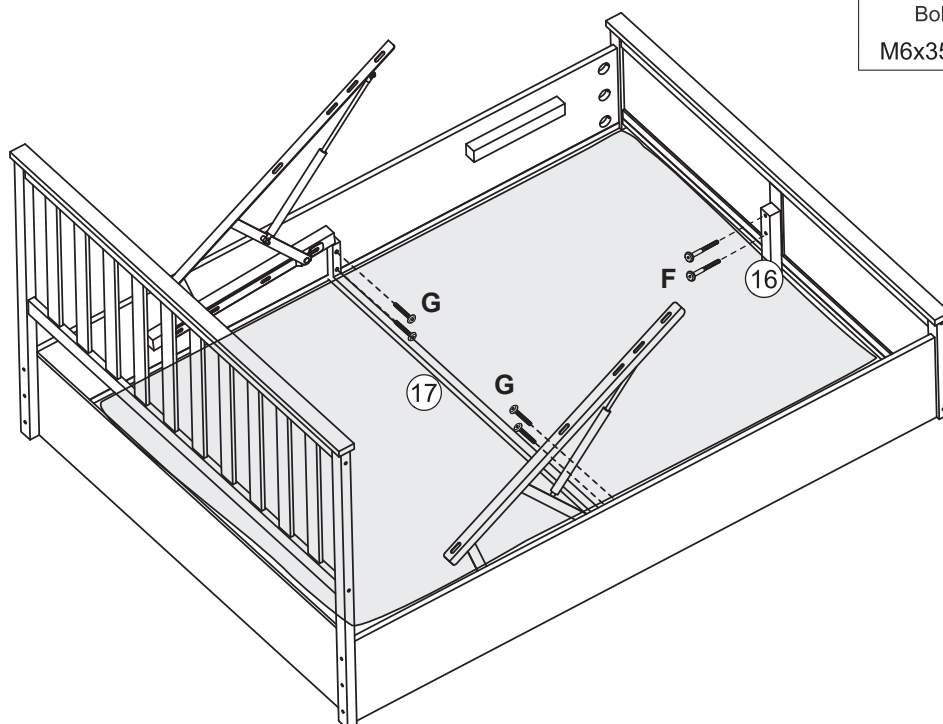


Step 16

O x12




Bolt


Φ8x15mm

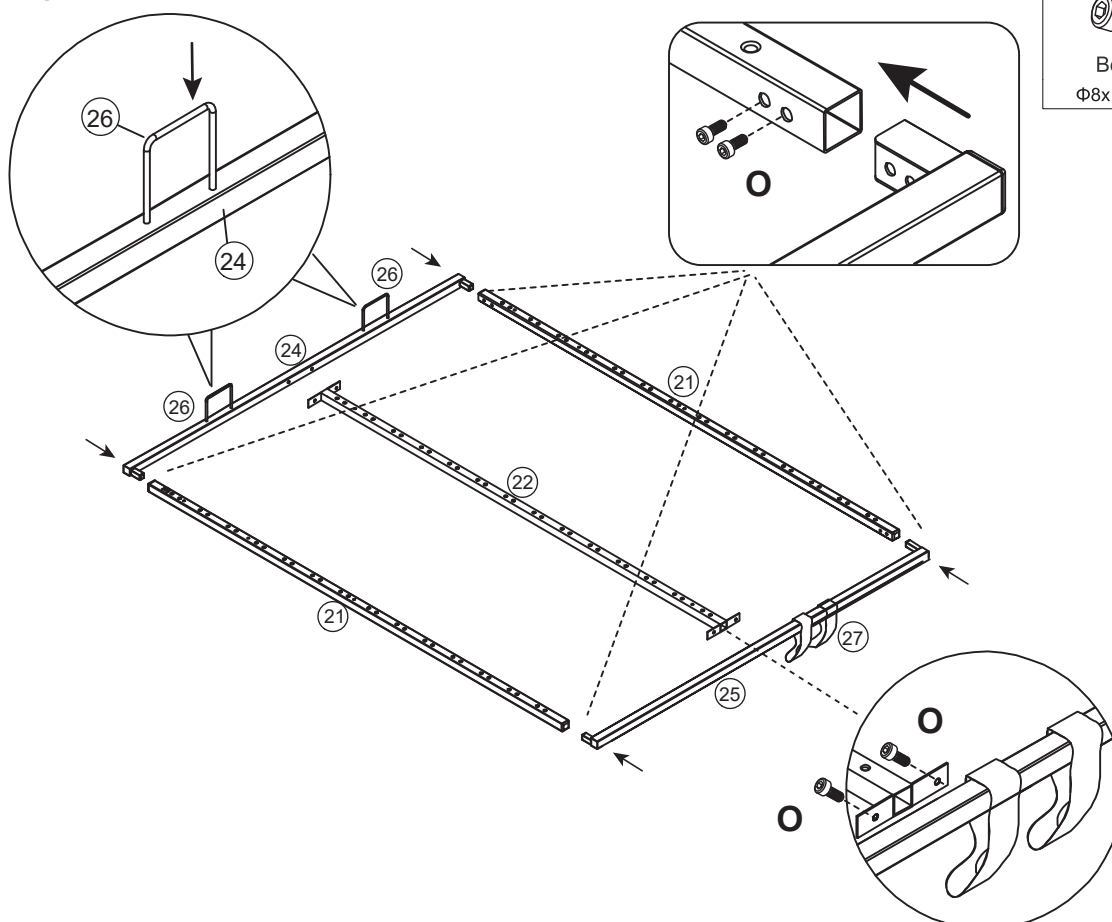



Step 17

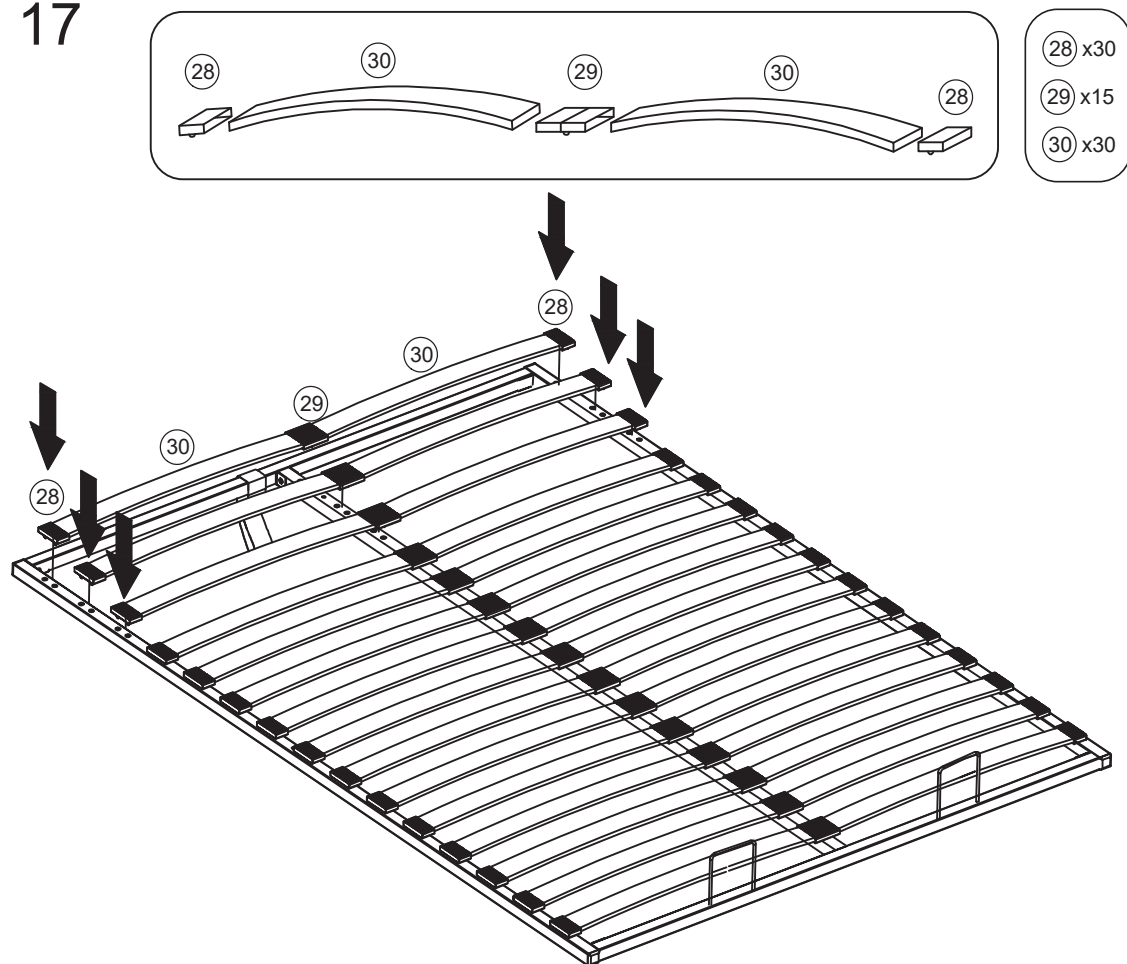

Step 18

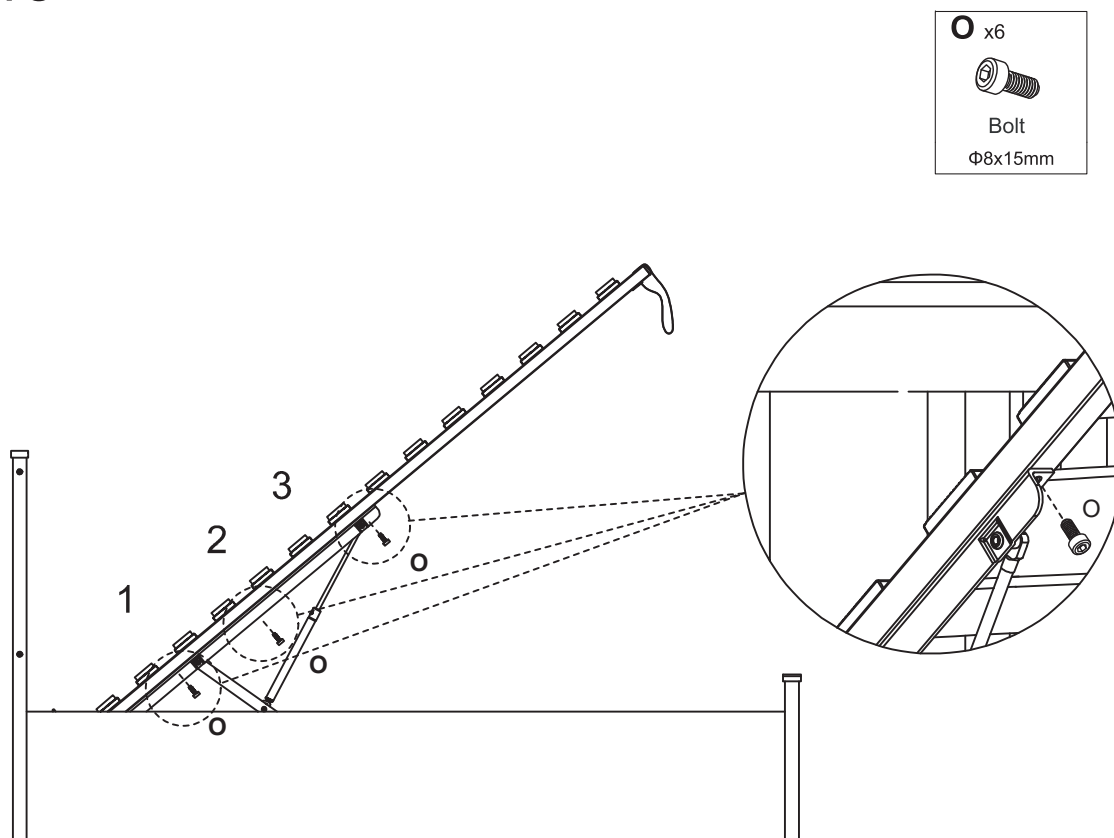

Step 19

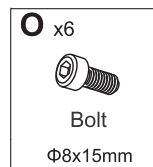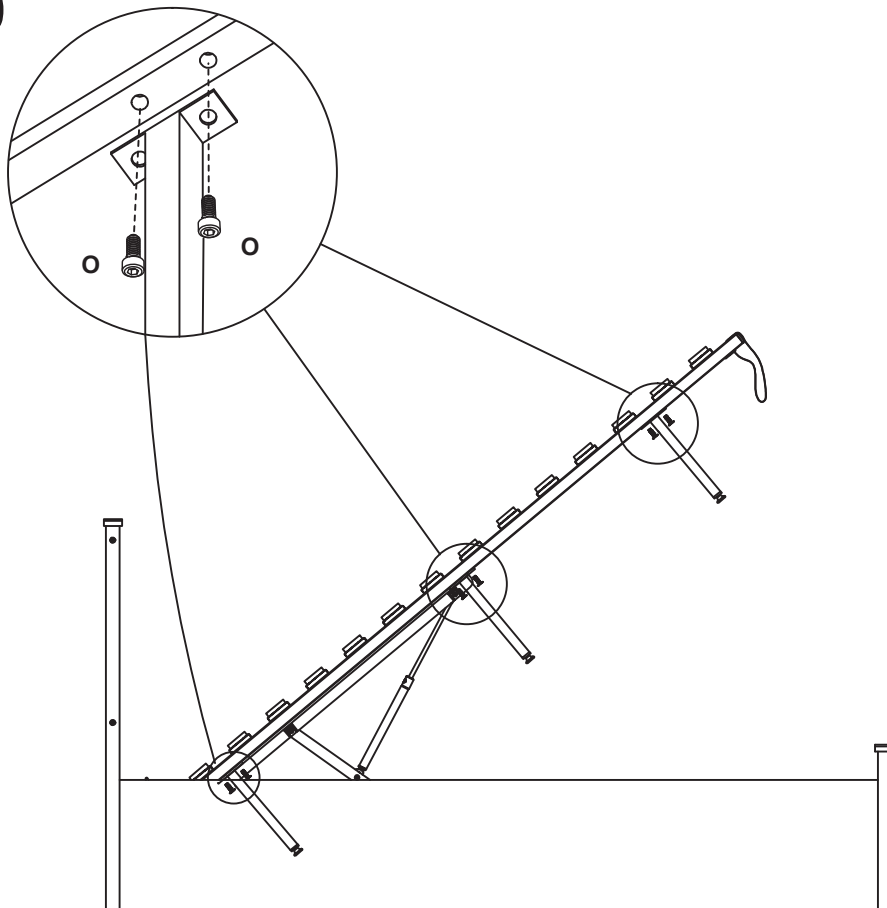

Step 20

Assembly Complete

