



ISAAK OTTOMAN WOODEN BED - KING SIZE





ASSEMBLY INSTRUCTIONS

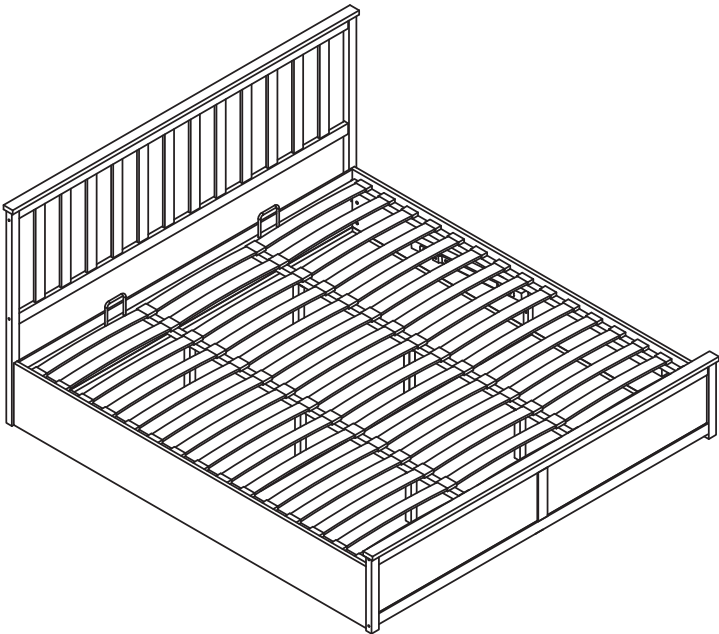


COMPONENTS

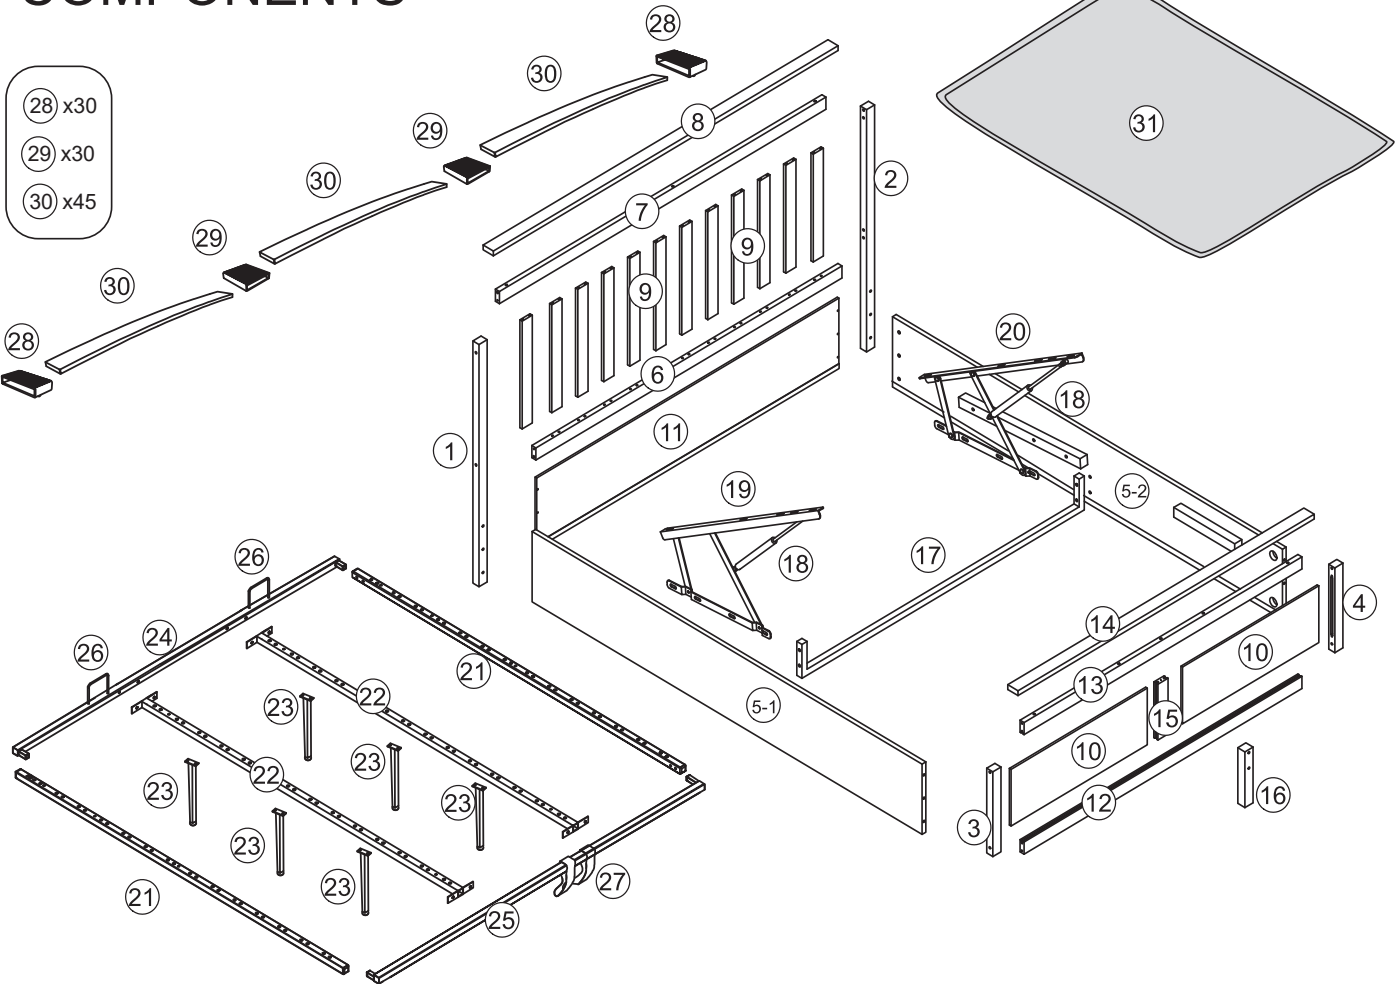


HARDWARE

A x4  Wood Dowel Φ8x30mm	B x56  Wood Dowel Φ6x30mm	C x8  Bolt Φ6x70mm	D x9  Bolt M6x65mm	E x6  T-Nut
F x6  Bolt M6x50mm	G x4  Bolt M6x35mm	H x6  Stud M6x60mm	J x6  Nut M6	K x6  Half Moon Washer
L x1  Spanner M6	M x1  Allen Key M4	N x8  Bolt & Washer Φ8x20mm	O x34  Bolt Φ8x15mm	P x4  Nut M8
Q x1  Spanner M10	R x1  Allen Key M5	S x2  Screw Φ4x50mm	T x1  Wood Glue	U x6  Screw Φ4x20mm
I x1  Screw driver (not provided)				

Step 01

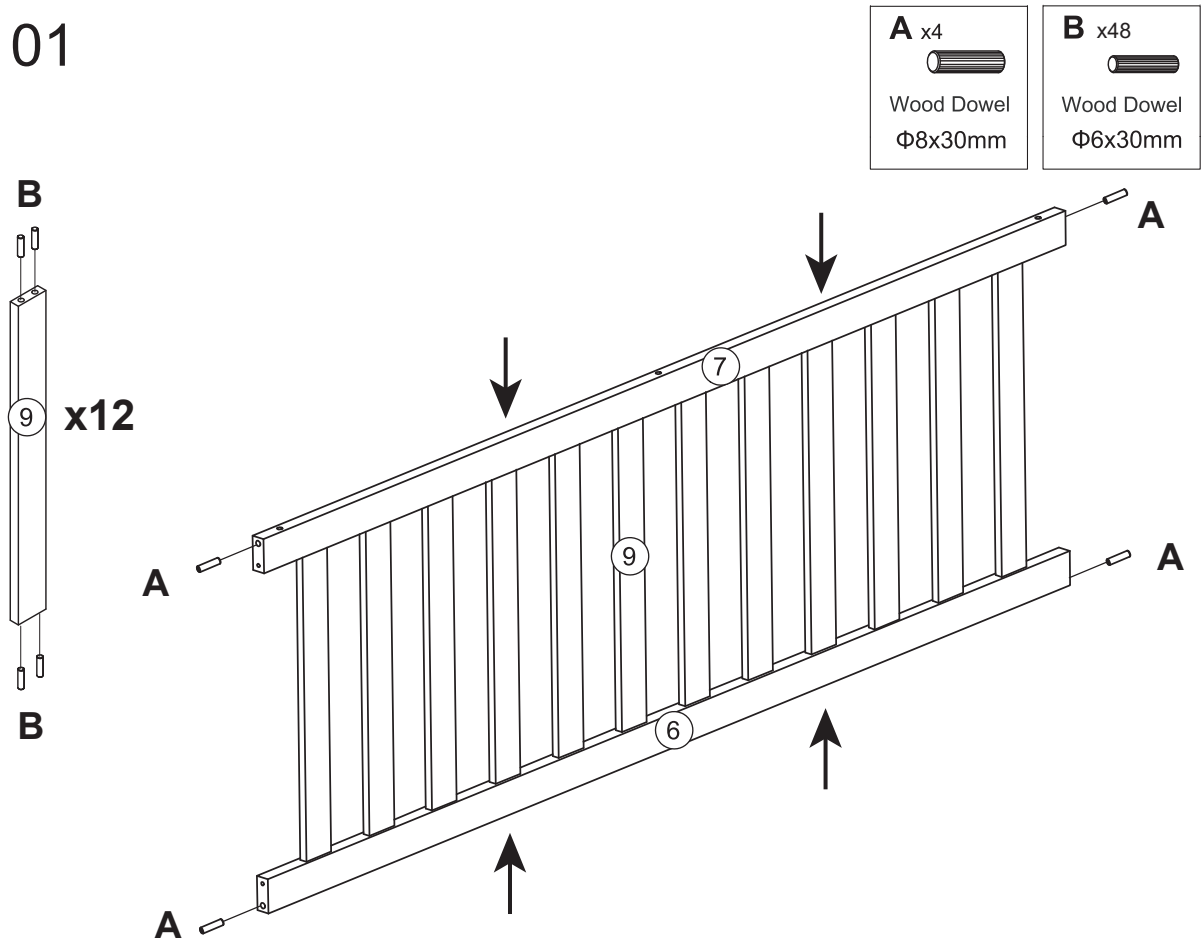


Step 02

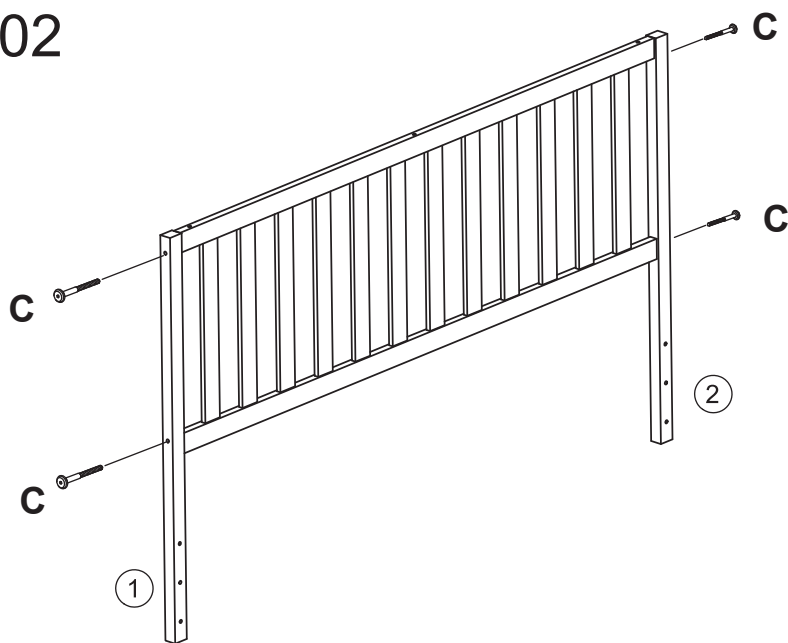



C x4
Bolt
Φ6x70mm

Step 03

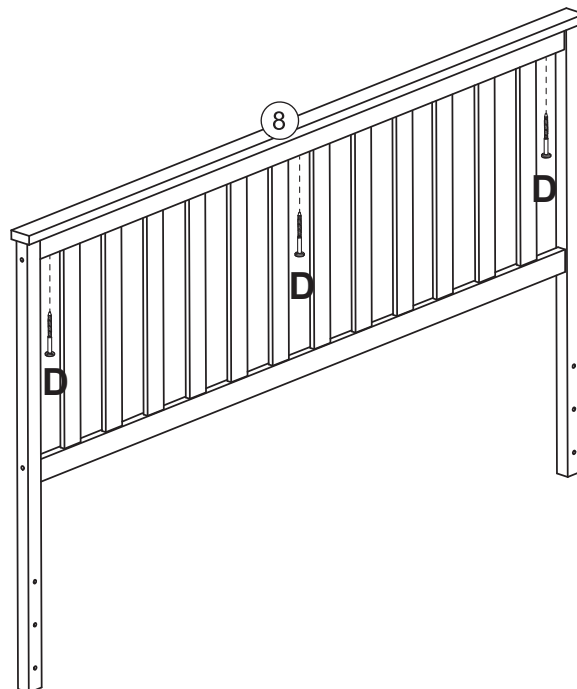

D x3
Bolt
M6x65mm


Step 04

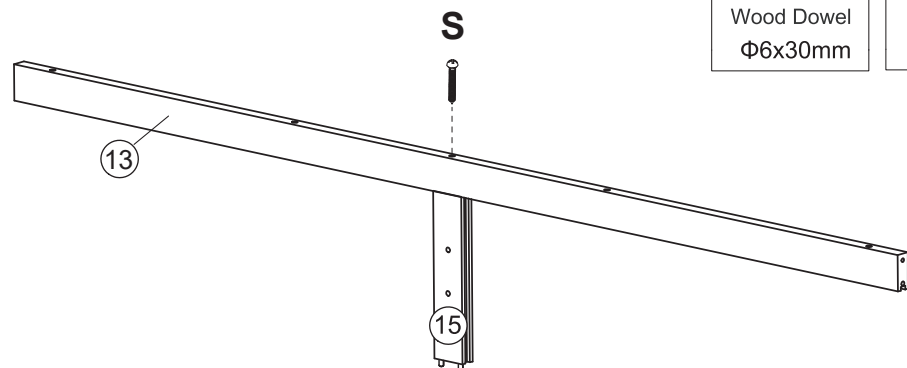

B x4
Wood Dowel
Φ6x30mm

S x1
Screw
Φ4x50mm

Step 05

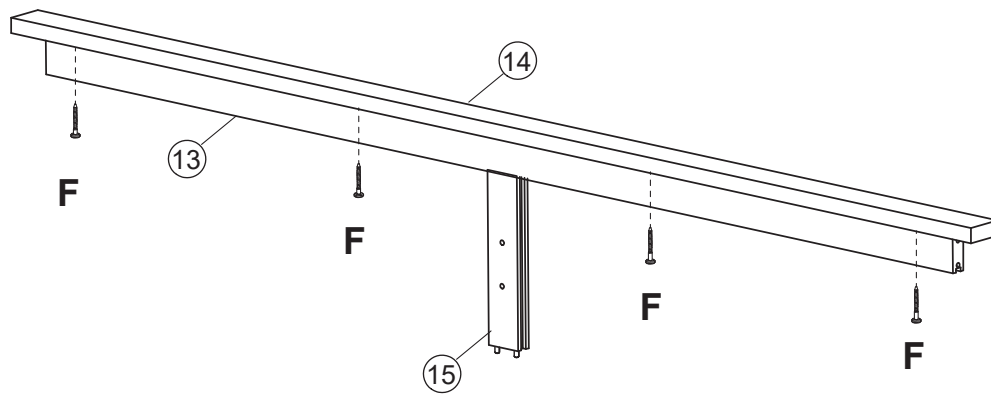


F x4



Bolt
M6x50mm

Step 06

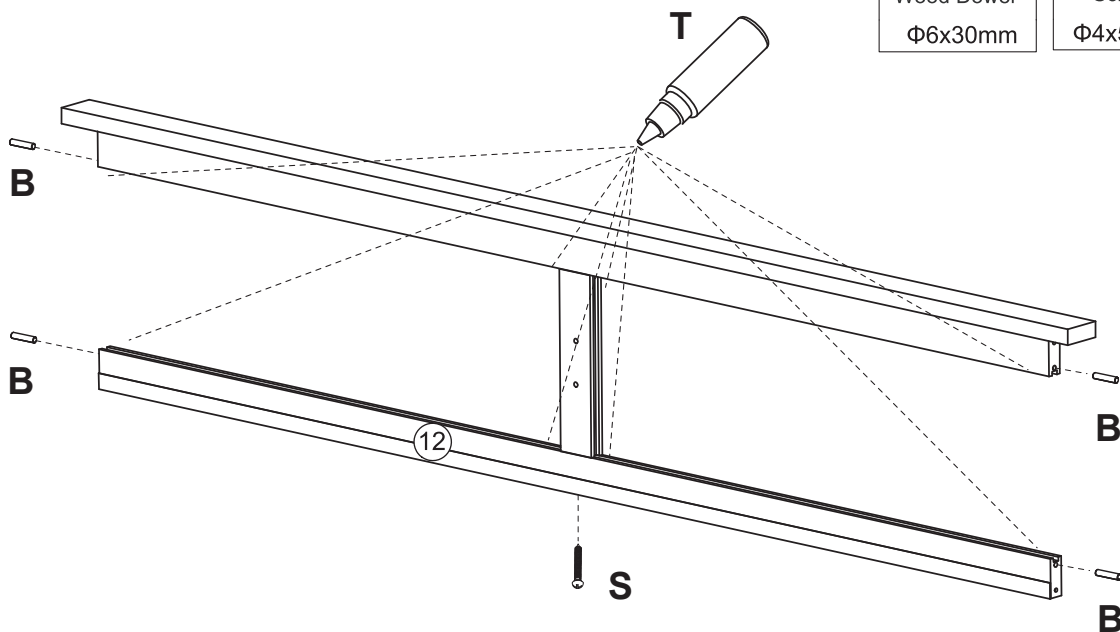

B x4




Wood Dowel
Φ6x30mm

S x1




Screw
Φ4x50mm


T x1





Wood Glue

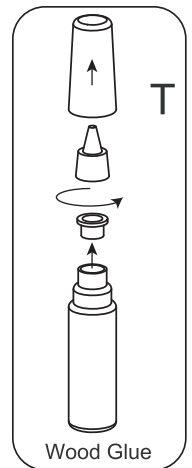

Step 07


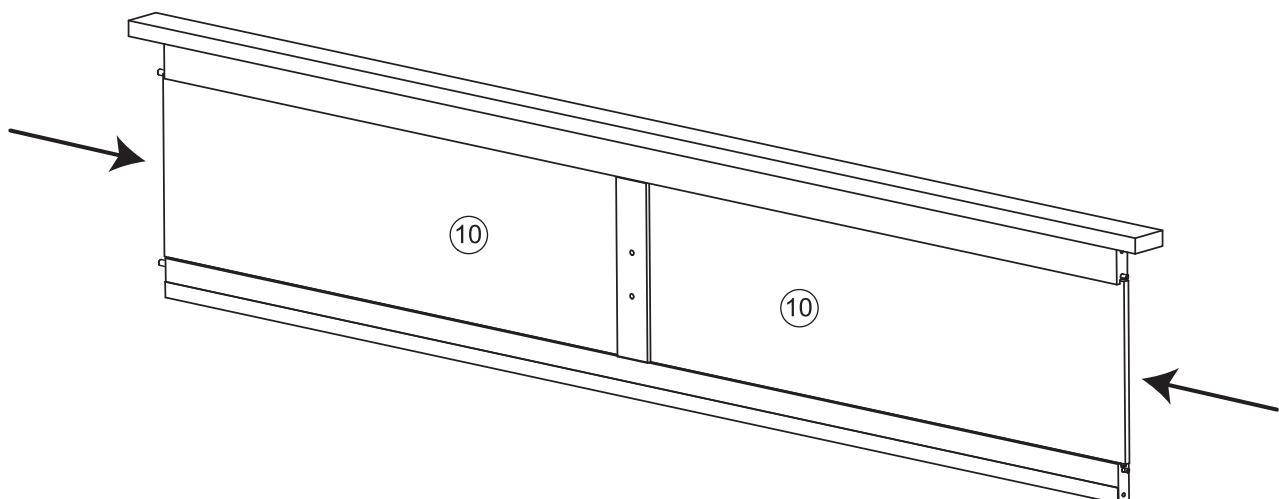


Step 08

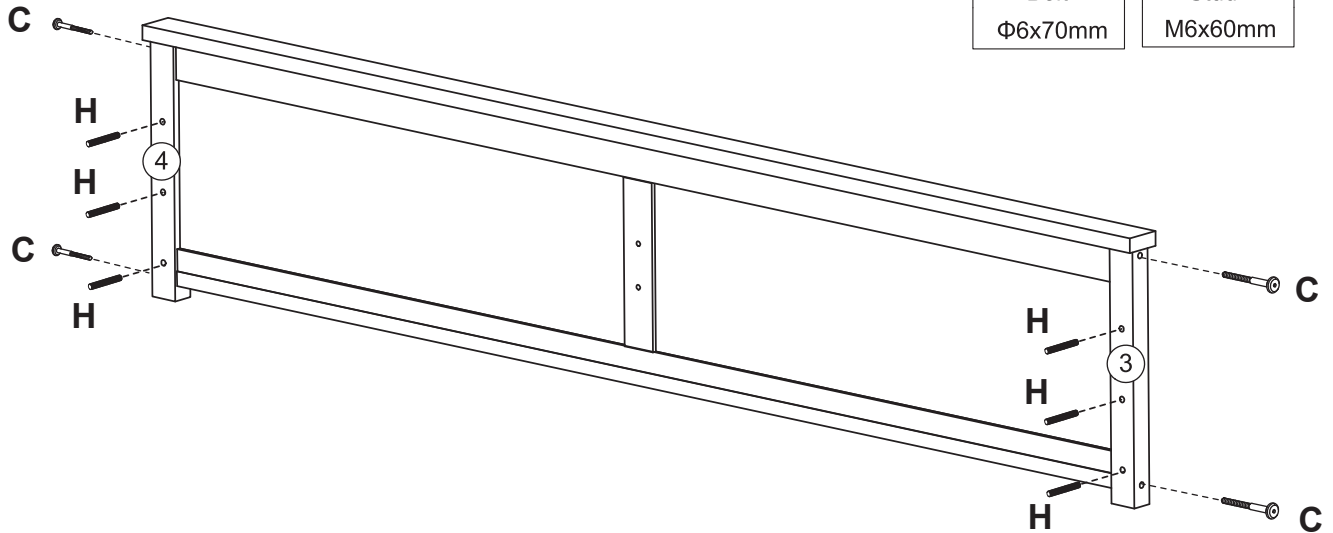
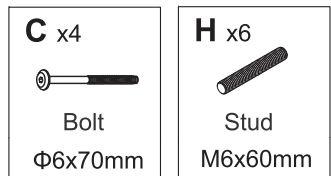


Step 09


Do Not Over Tighten
The Nut "P"

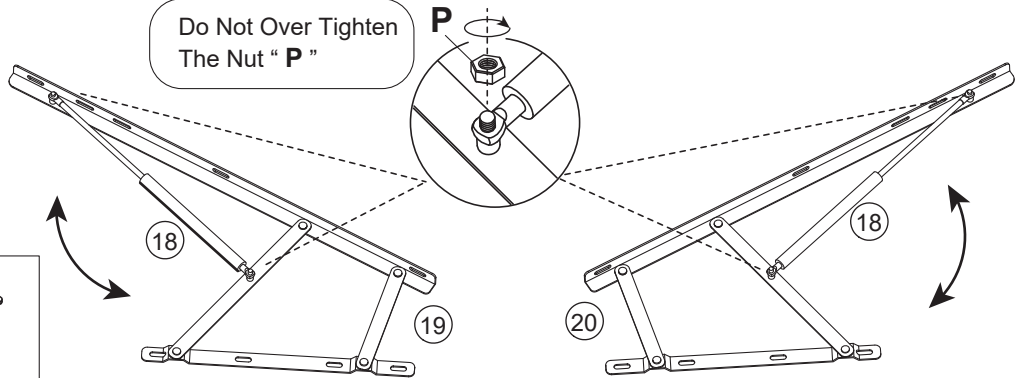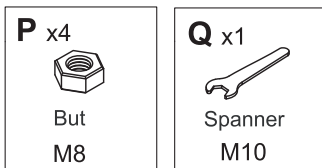


Step 10

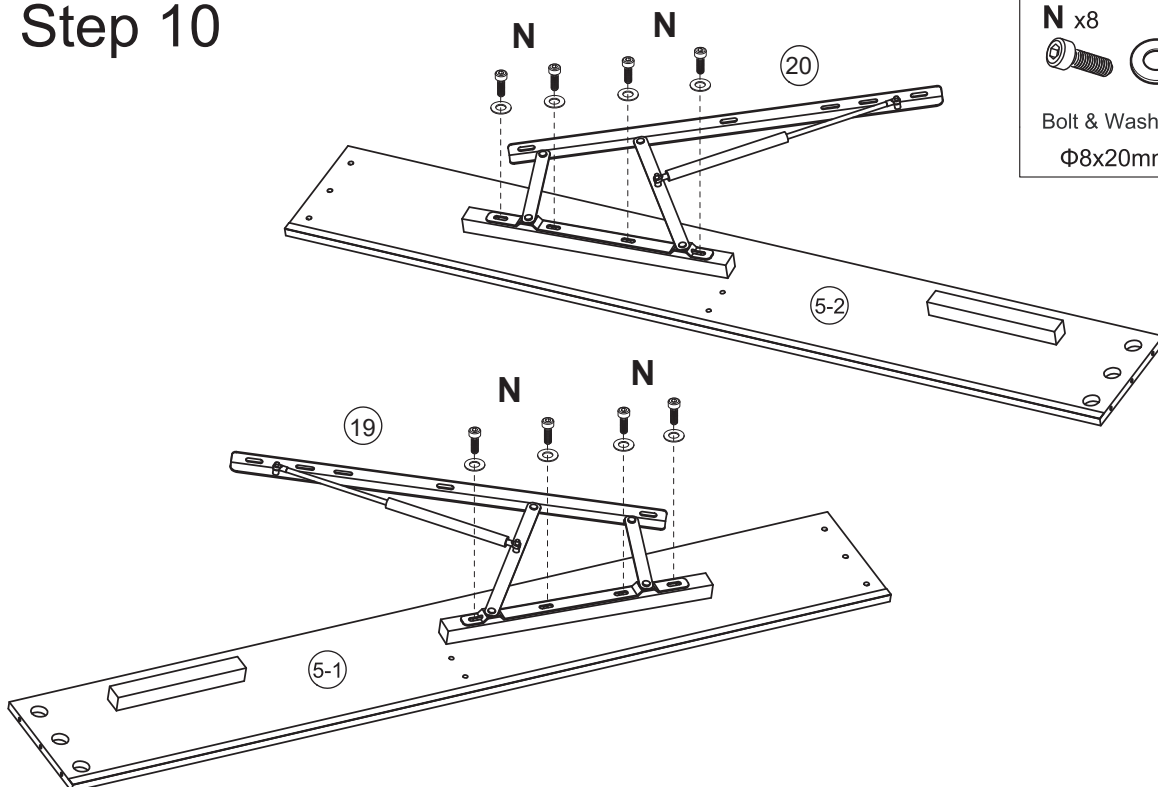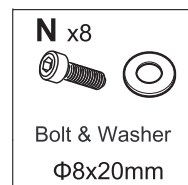


Step 11

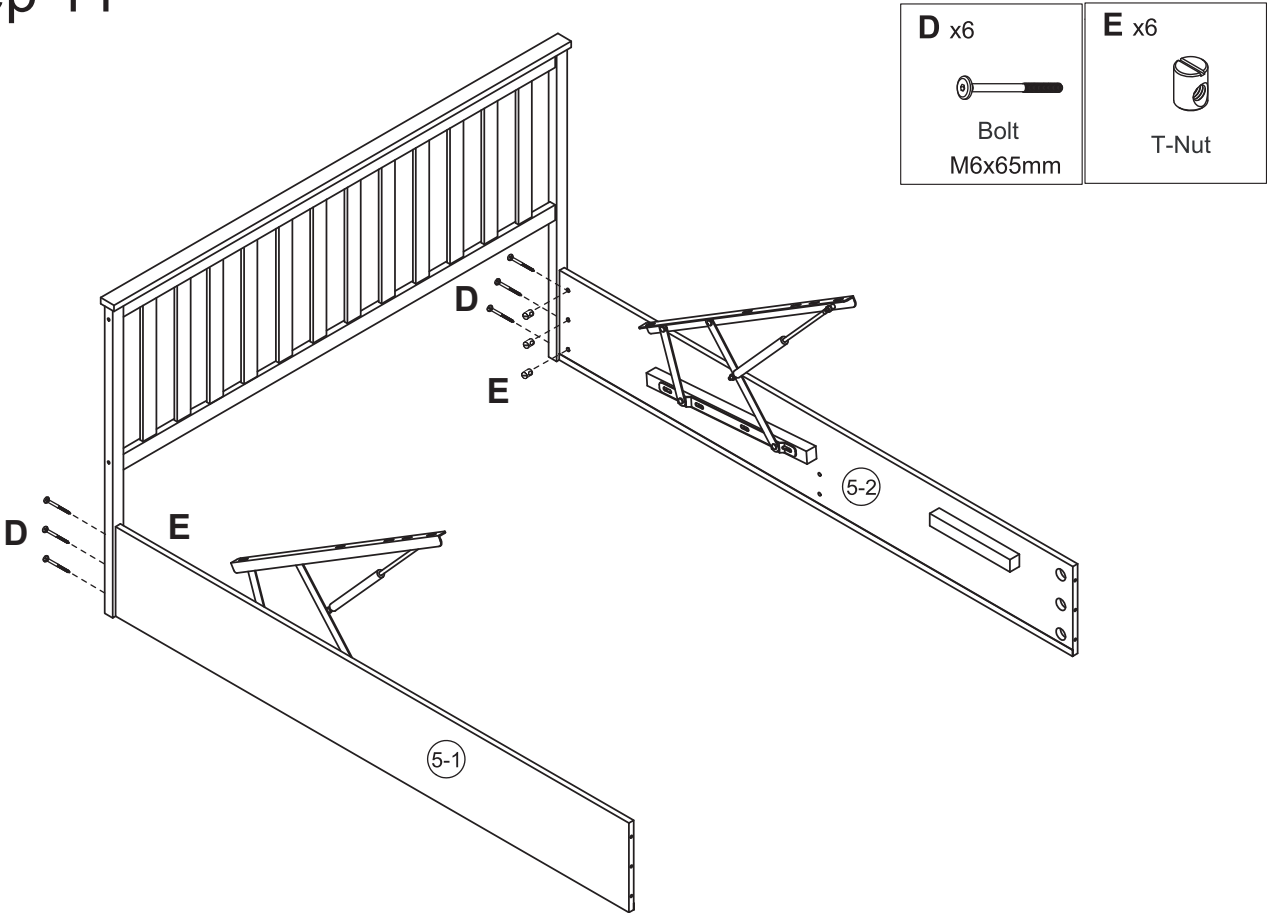


Step 12

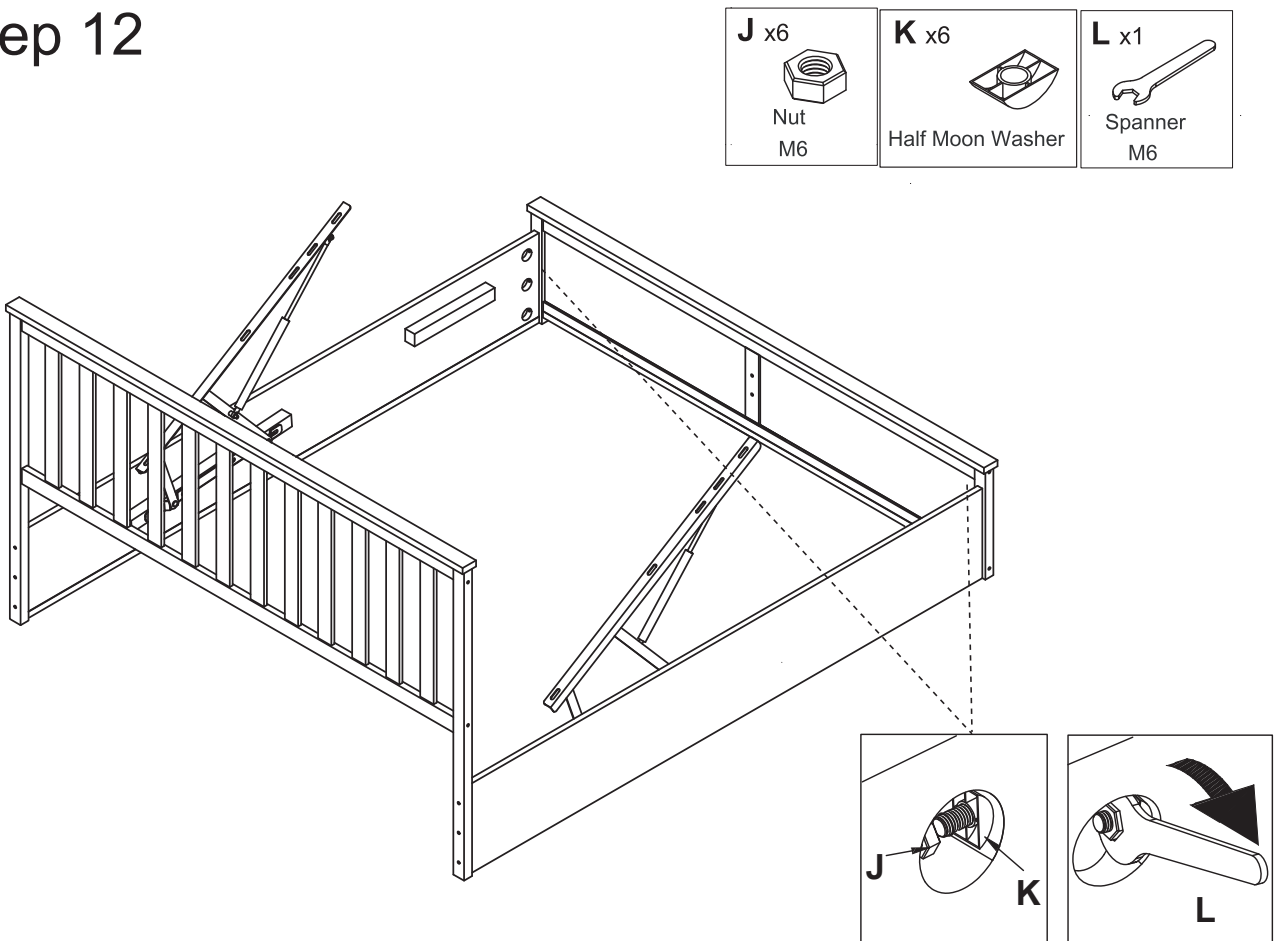

Step 13

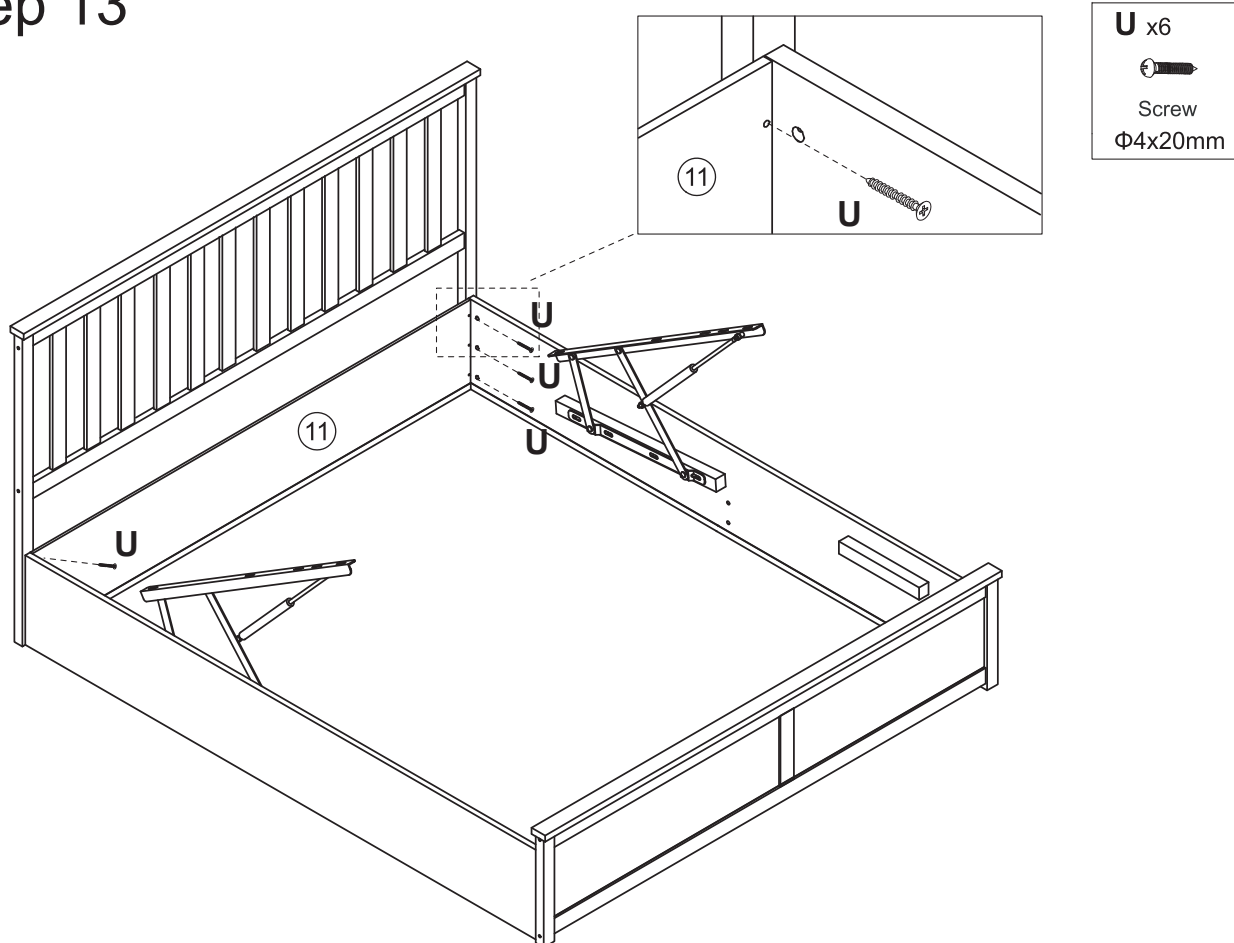

Step 14

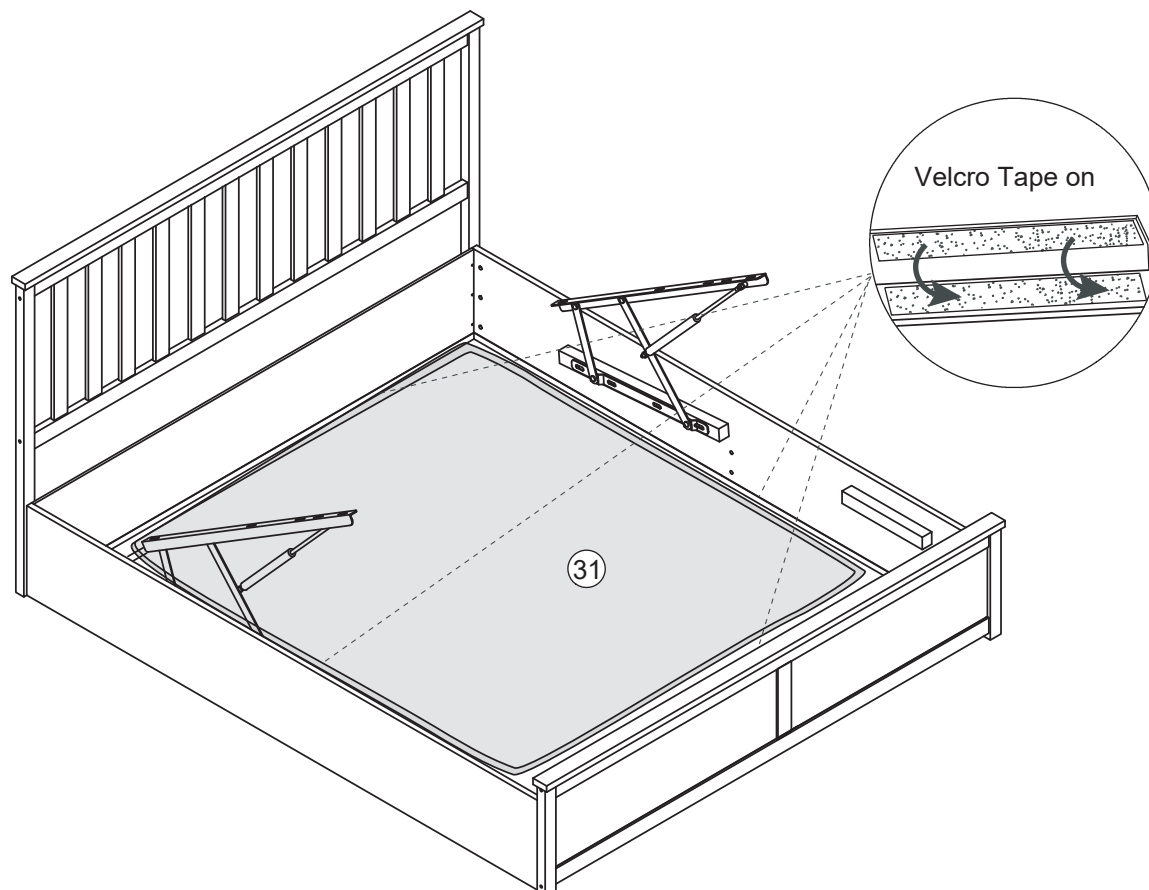

Step 15

G x4



Bolt


M6x35mm

F x2



Bolt

M6x50mm

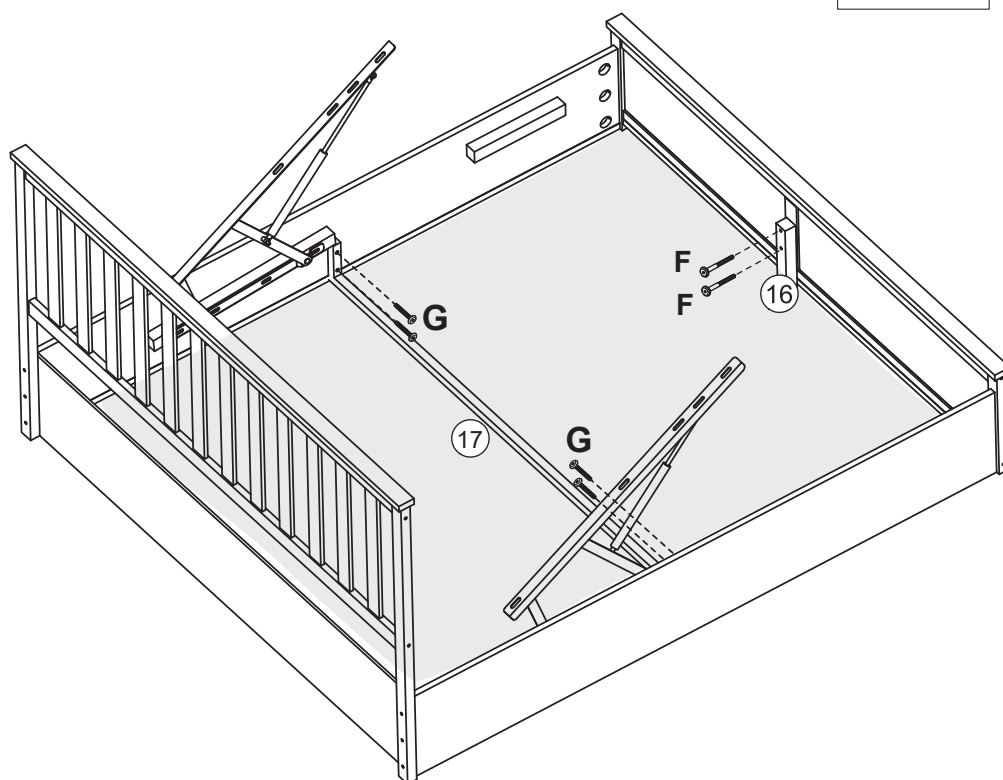




Step 16

O x16





Bolt



Φ8x15mm

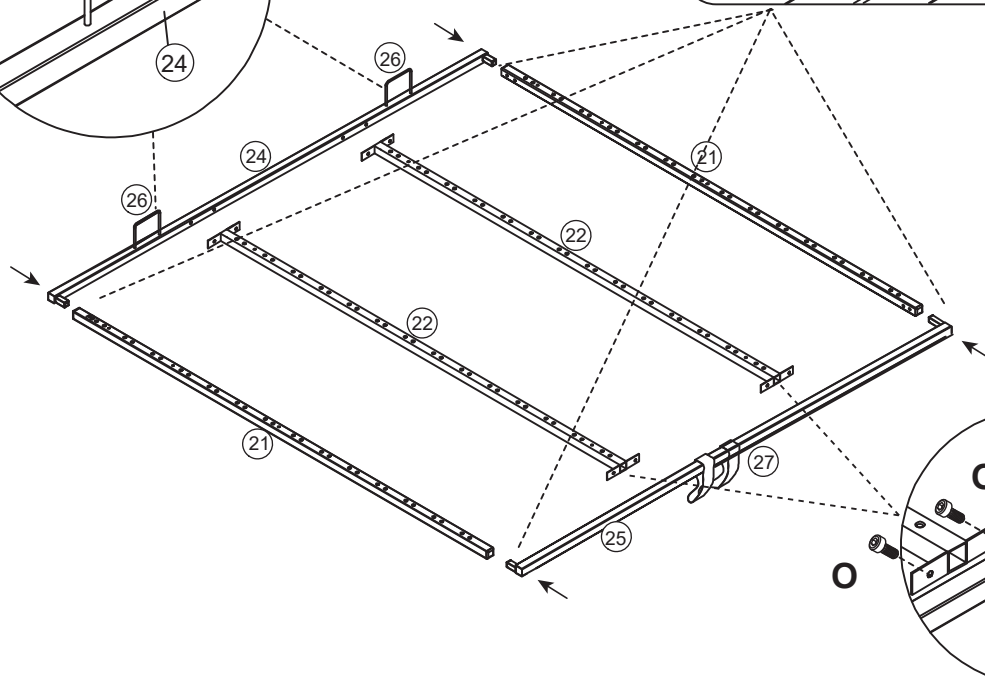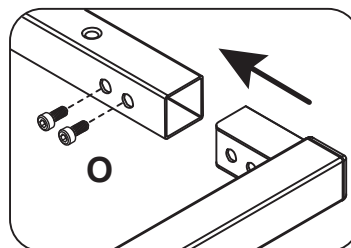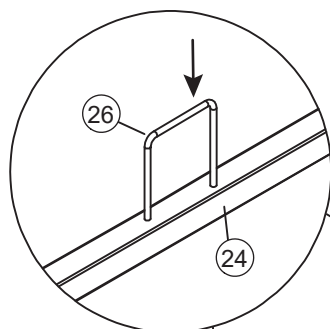



Step 17

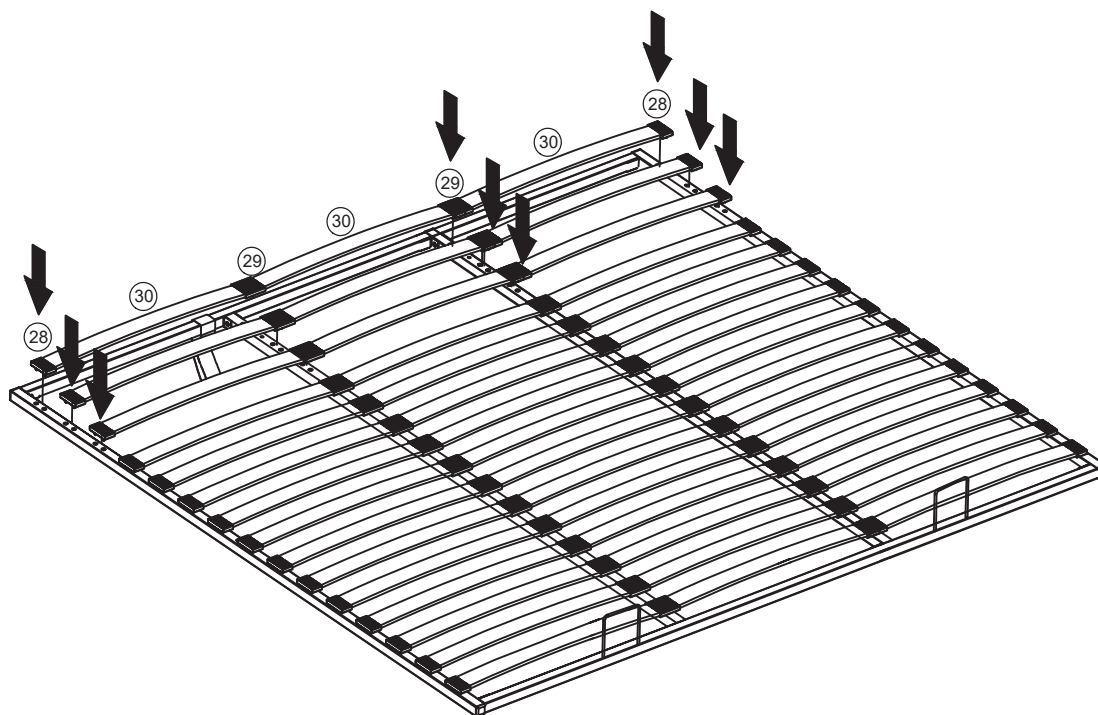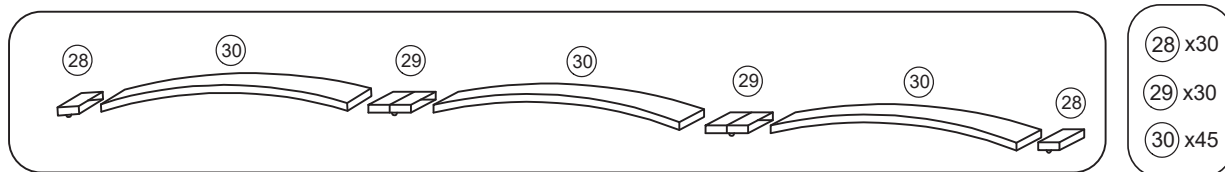

Step 18

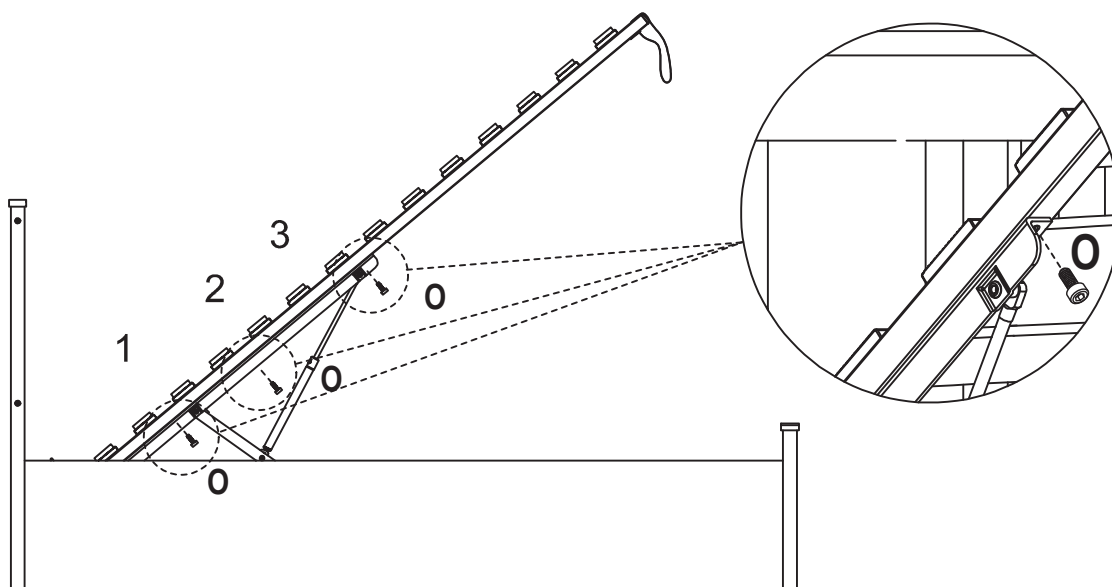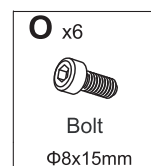

Step 19

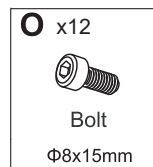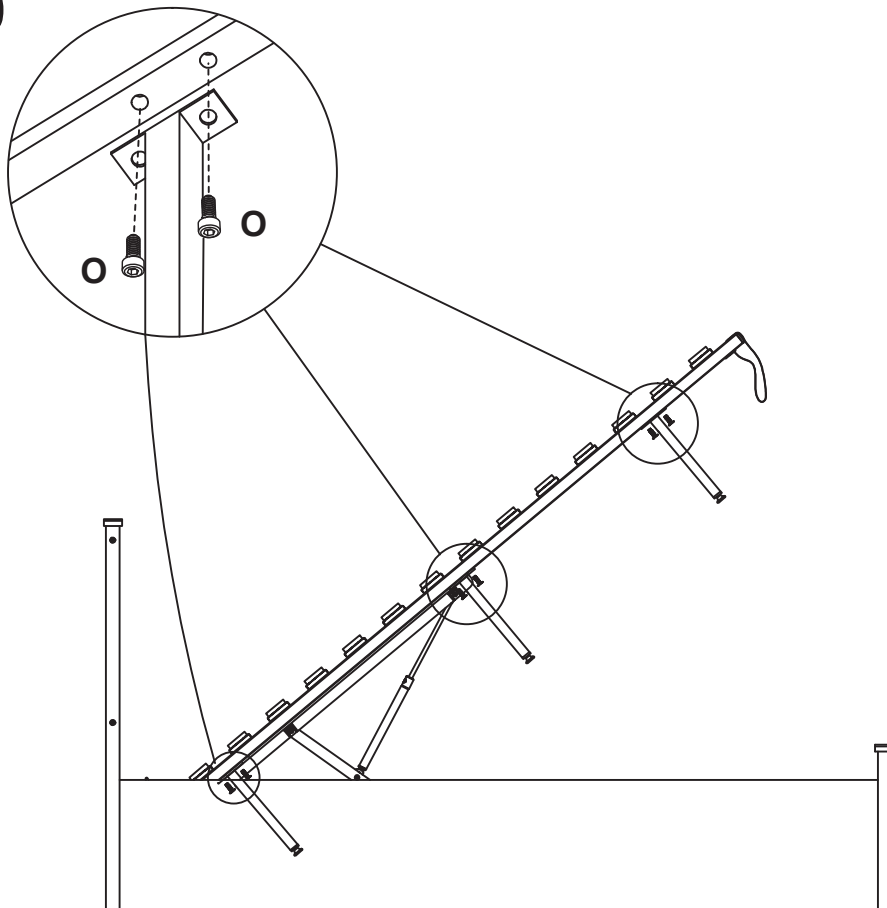

Step 20

Assembly Complete

