



ASSEMBLY INSTRUCTIONS

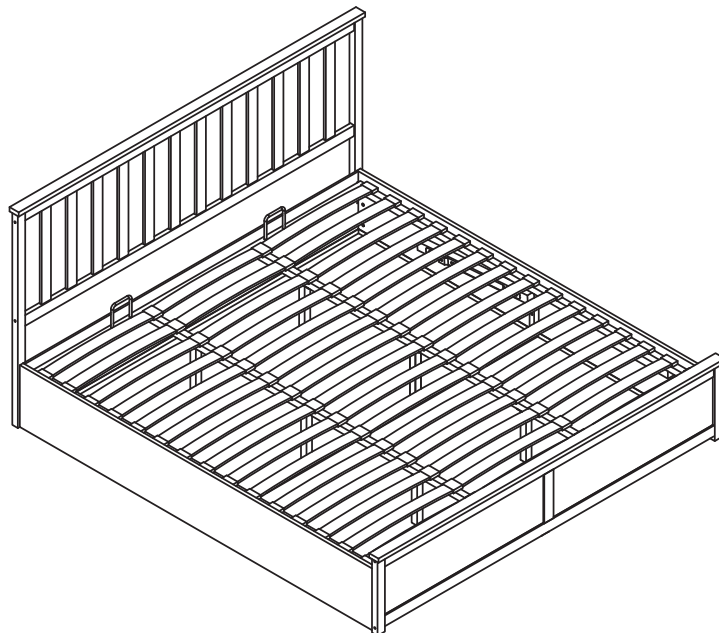

COMPONENTS

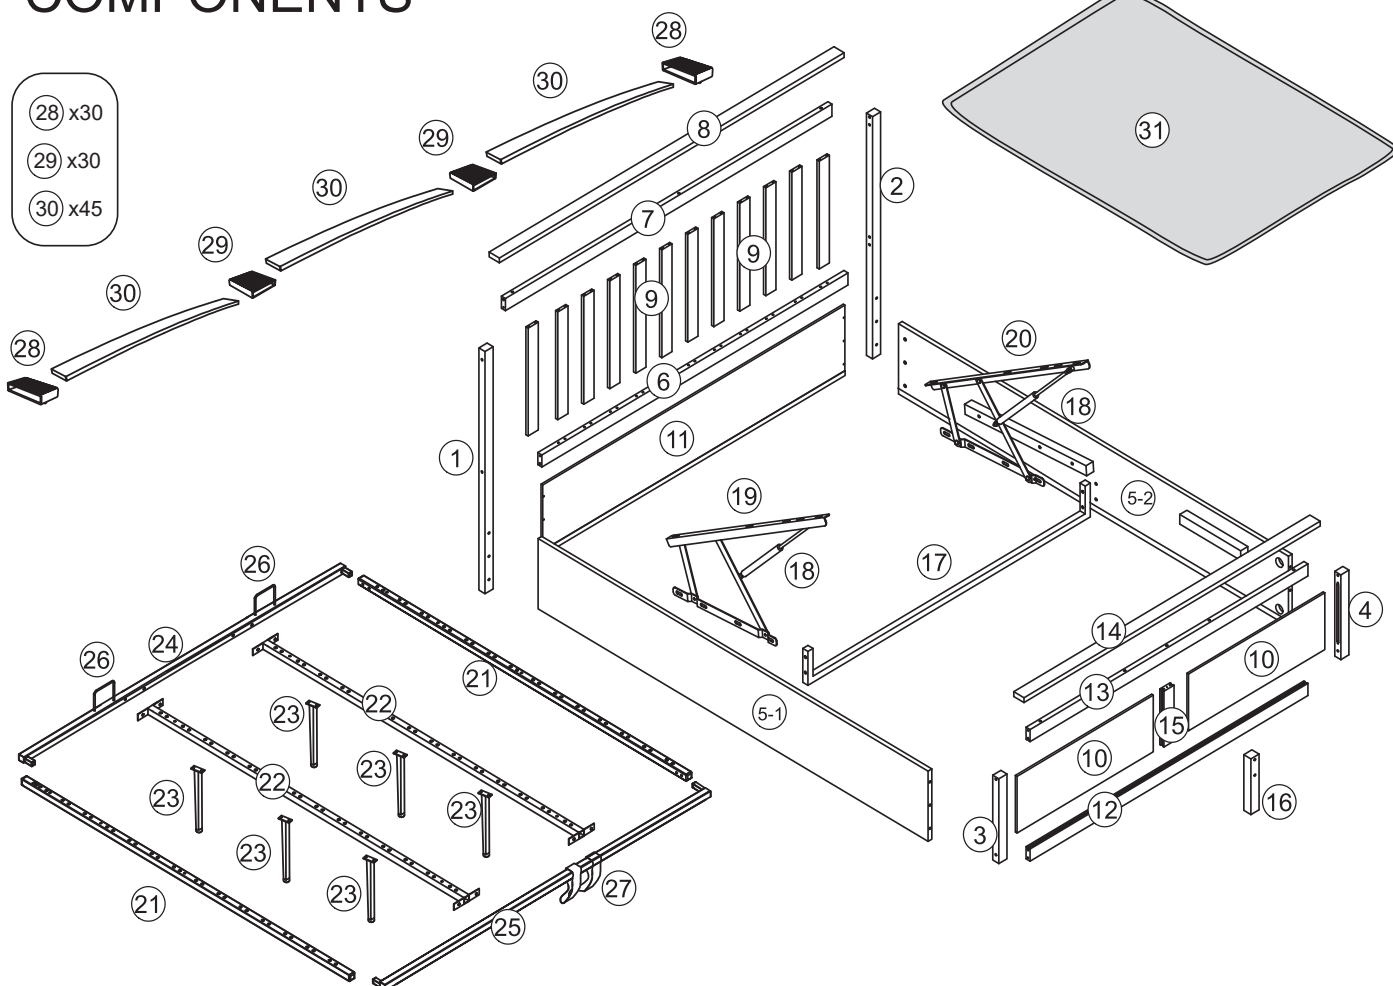

A x4 Wood Dowel Φ8x30mm	B x56 Wood Dowel Φ6x30mm	C x8 Bolt Φ6x70mm	D x9 Bolt M6x65mm	E x6 T-Nut
F x6 Bolt M6x50mm	G x4 Bolt M6x35mm	H x6 Stud M6x60mm	J x6 Nut M6	K x6 Half Moon Washer
L x1 Spanner M6	M x1 Allen Key M4	N x8 Bolt & Washer Φ8x20mm	O x34 Bolt Φ8x15mm	P x4 Nut M8
Q x1 Spanner M10	R x1 Allen Key M5	S x2 Screw Φ4x50mm	T x1 Wood Glue	U x6 Screw Φ4x20mm
I x1 Screw driver (not provided)				

Step 01

A x4
Wood Dowel
Φ8x30mm

B x48
Wood Dowel
Φ6x30mm

9 x12

7

9

6


A

A

A


A

Step 02

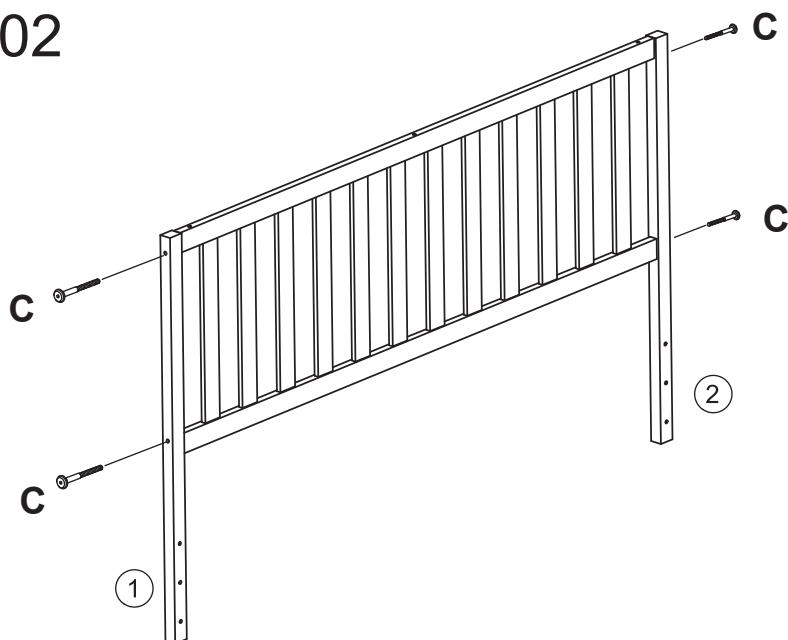


C x4
Bolt
Φ6x70mm

Step 03

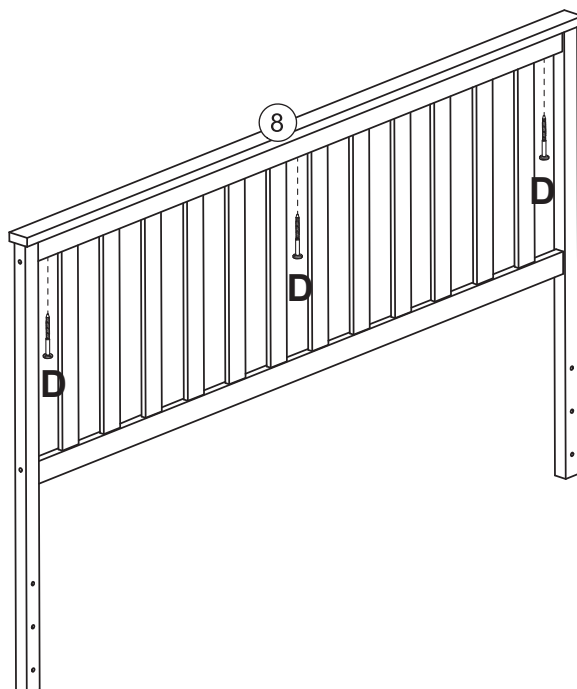

D x3
Bolt
M6x65mm


Step 04

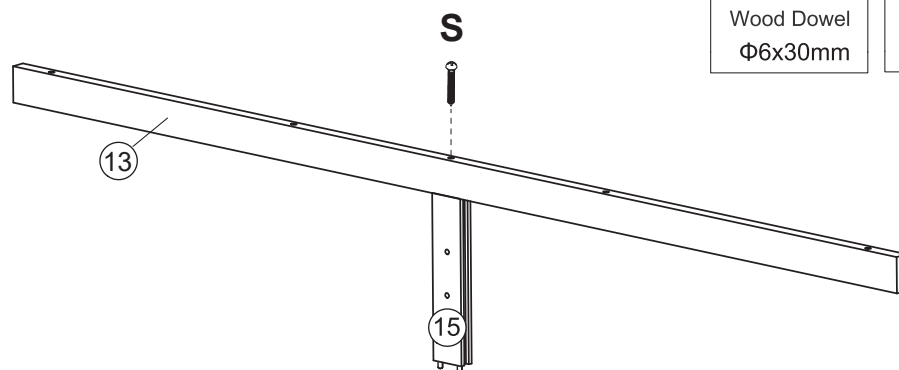

B x4
Wood Dowel
Φ6x30mm

S x1
Screw
Φ4x50mm

Step 05

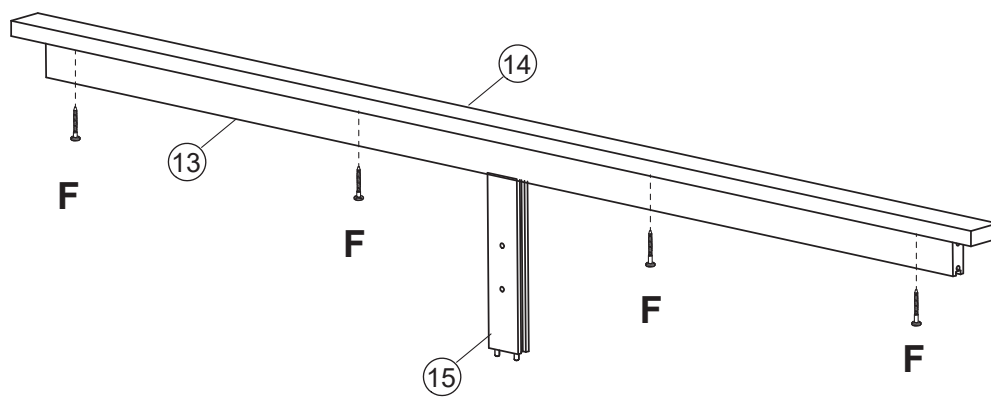


F x4



Bolt
M6x50mm

Step 06

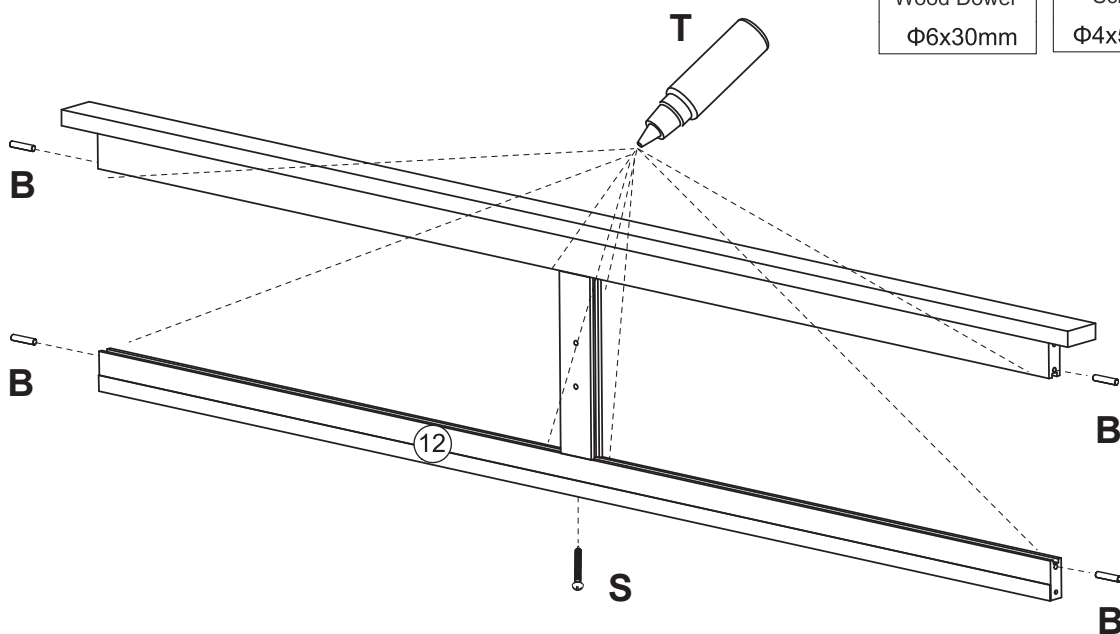

B x4




Wood Dowel
Φ6x30mm

S x1




Screw
Φ4x50mm


T x1





Wood Glue

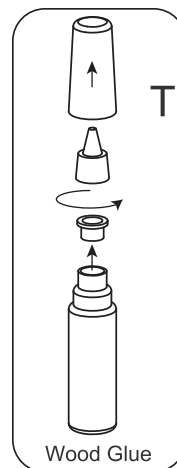

Step 07


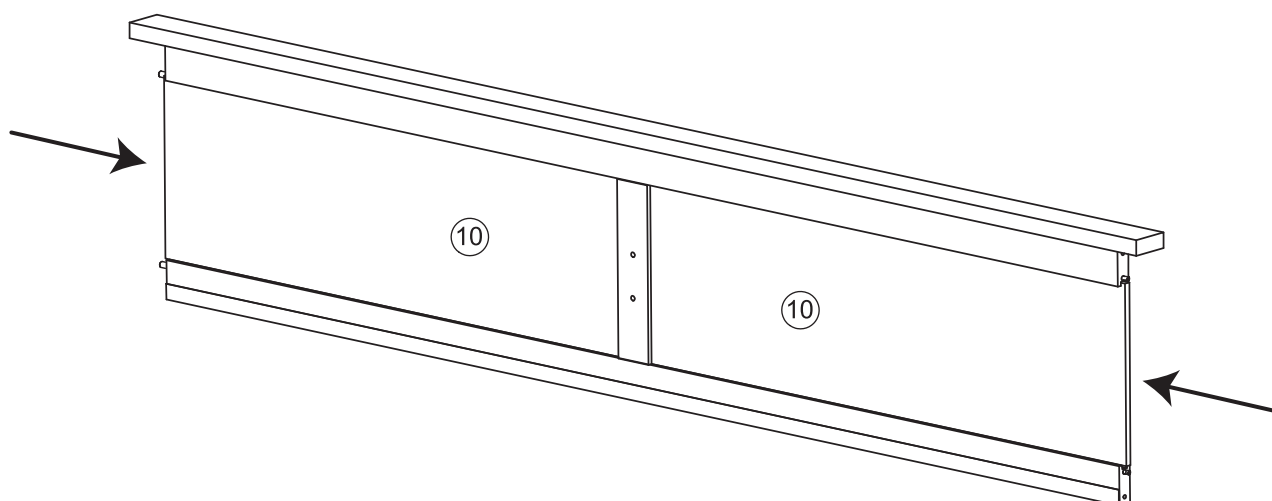


Step 08

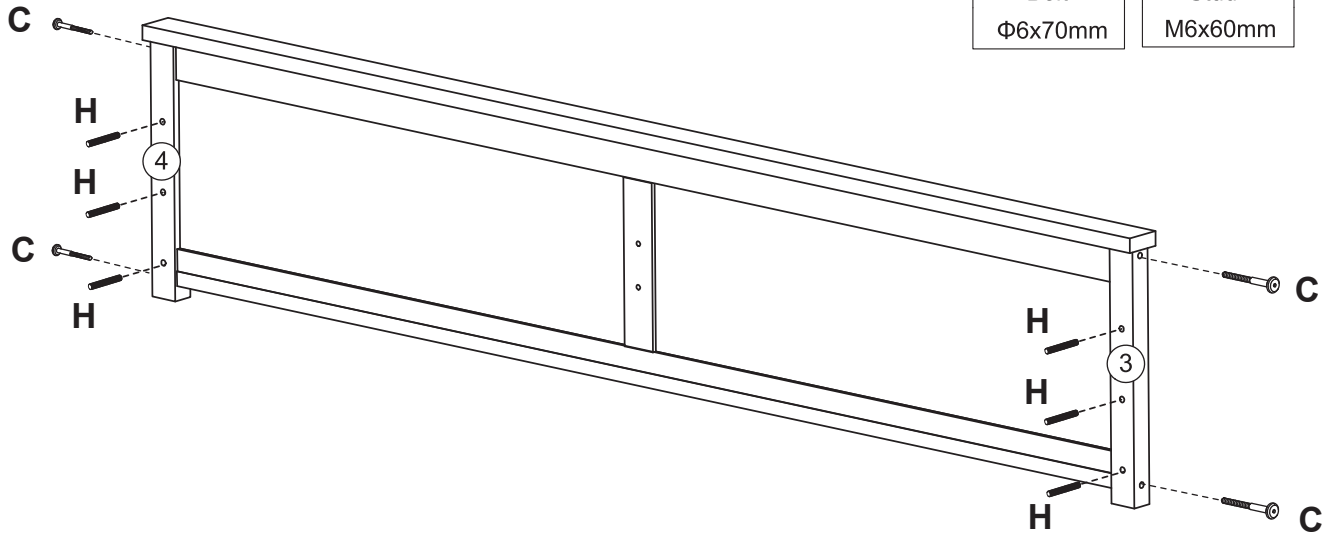
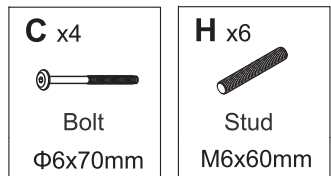


Step 09


Do Not Over Tighten
The Nut "P"

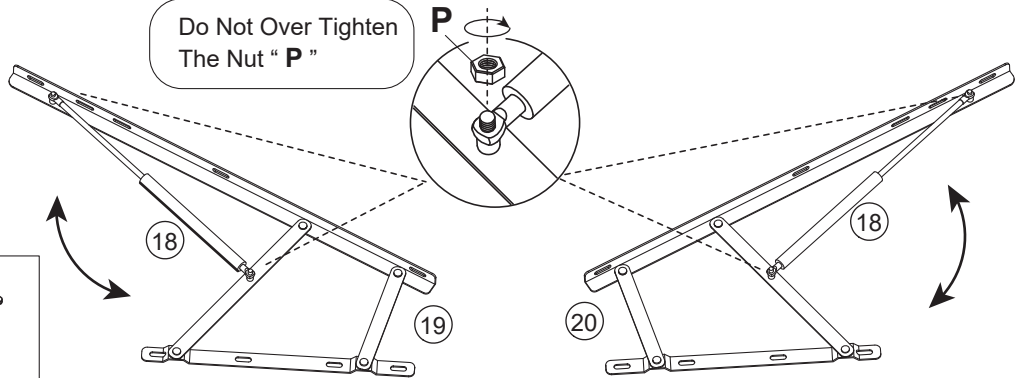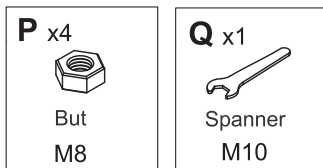


Step 10

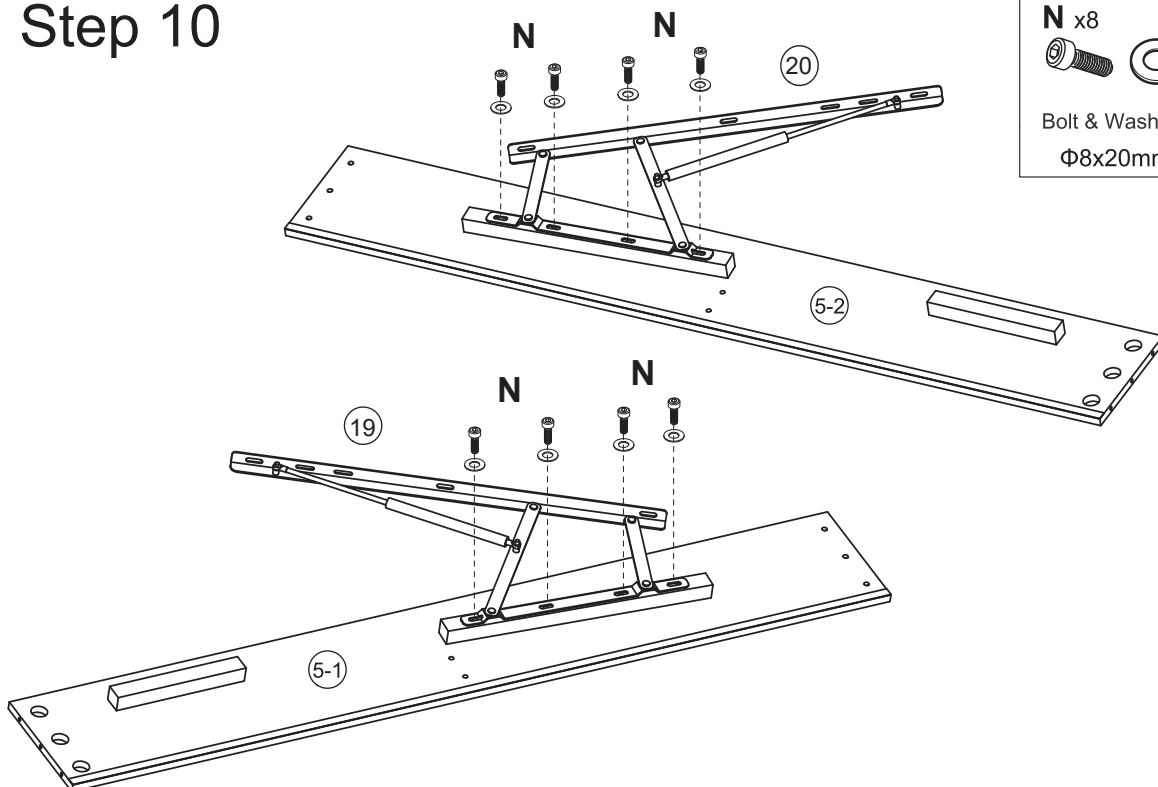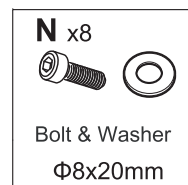


Step 11

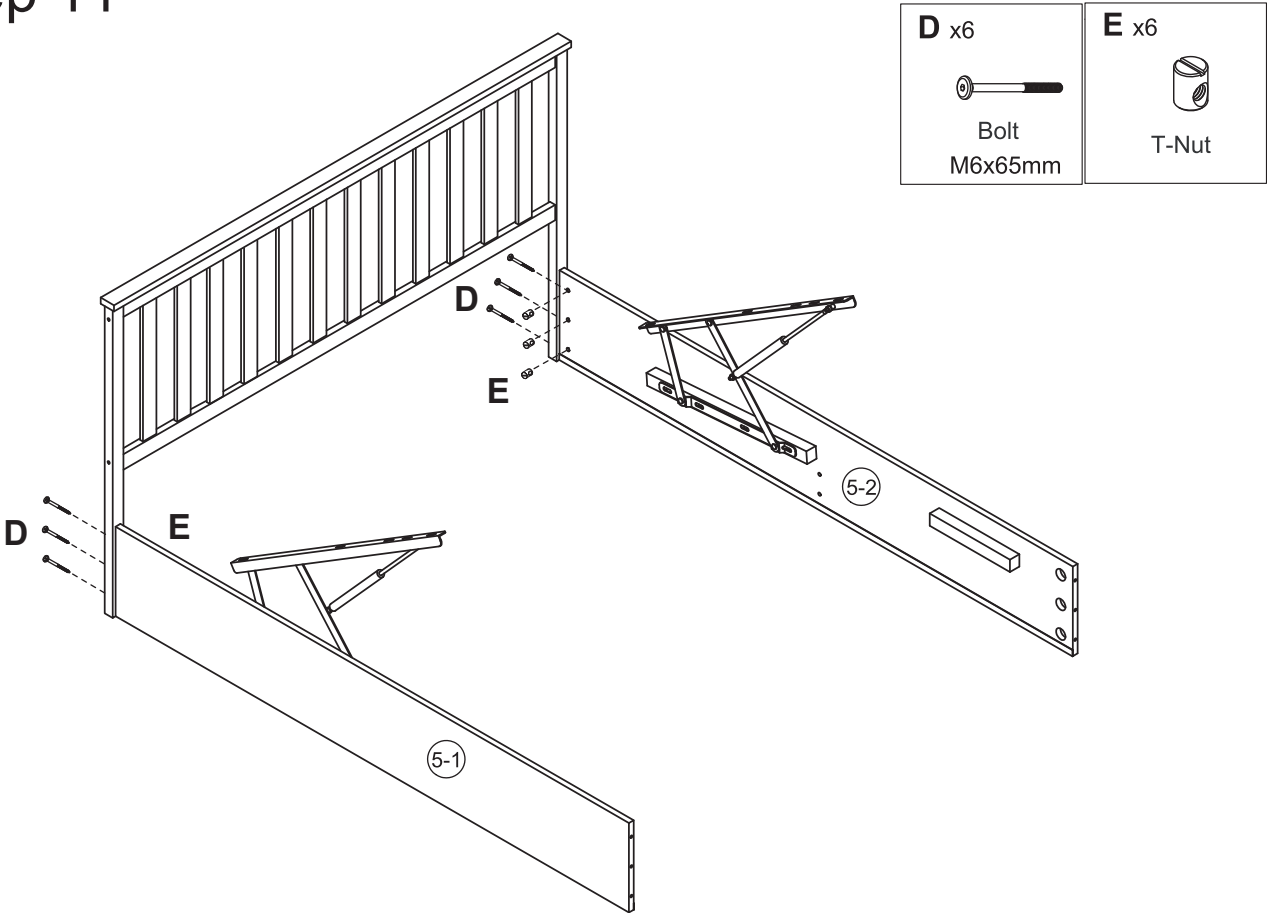


Step 12

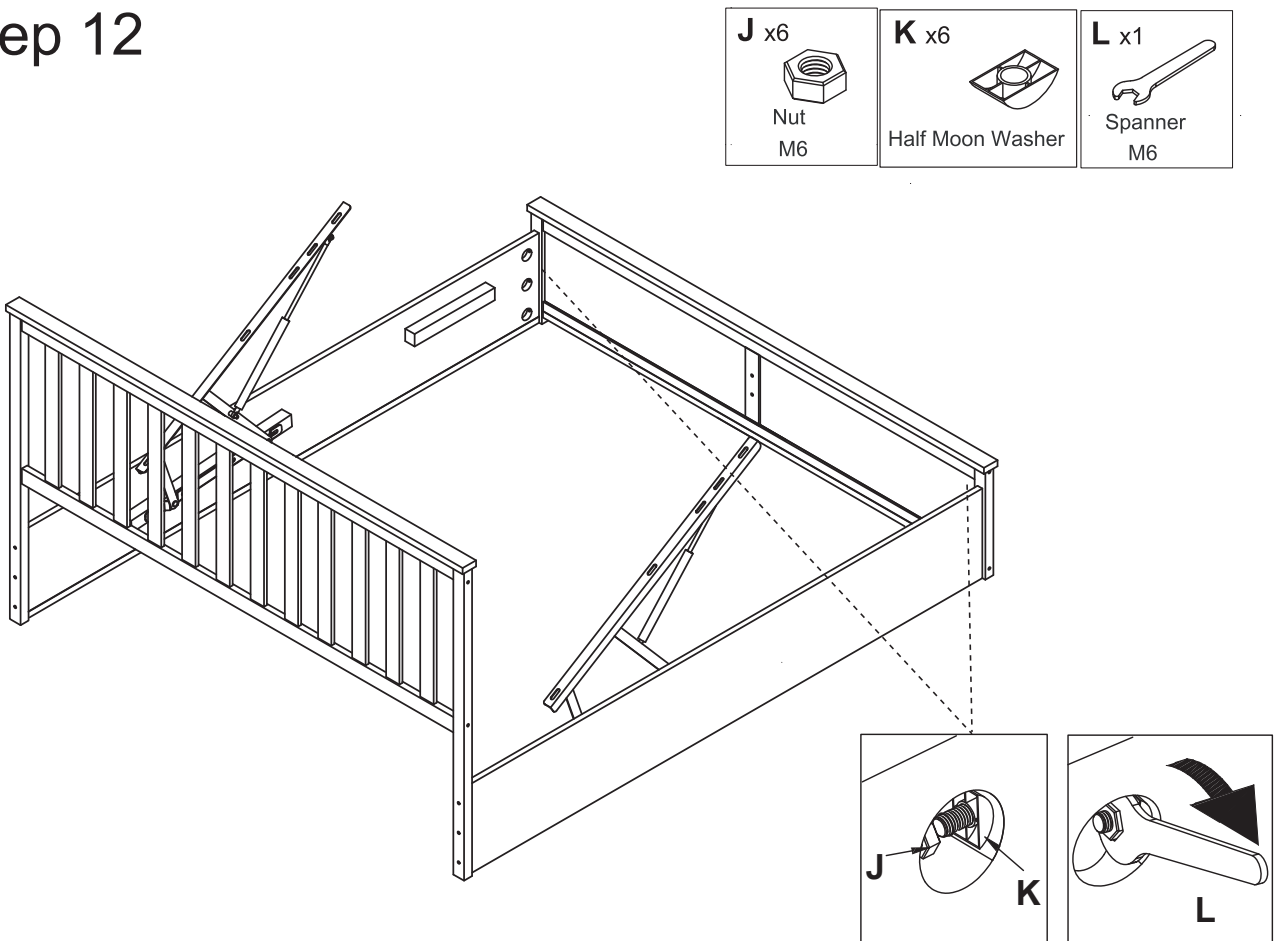

Step 13

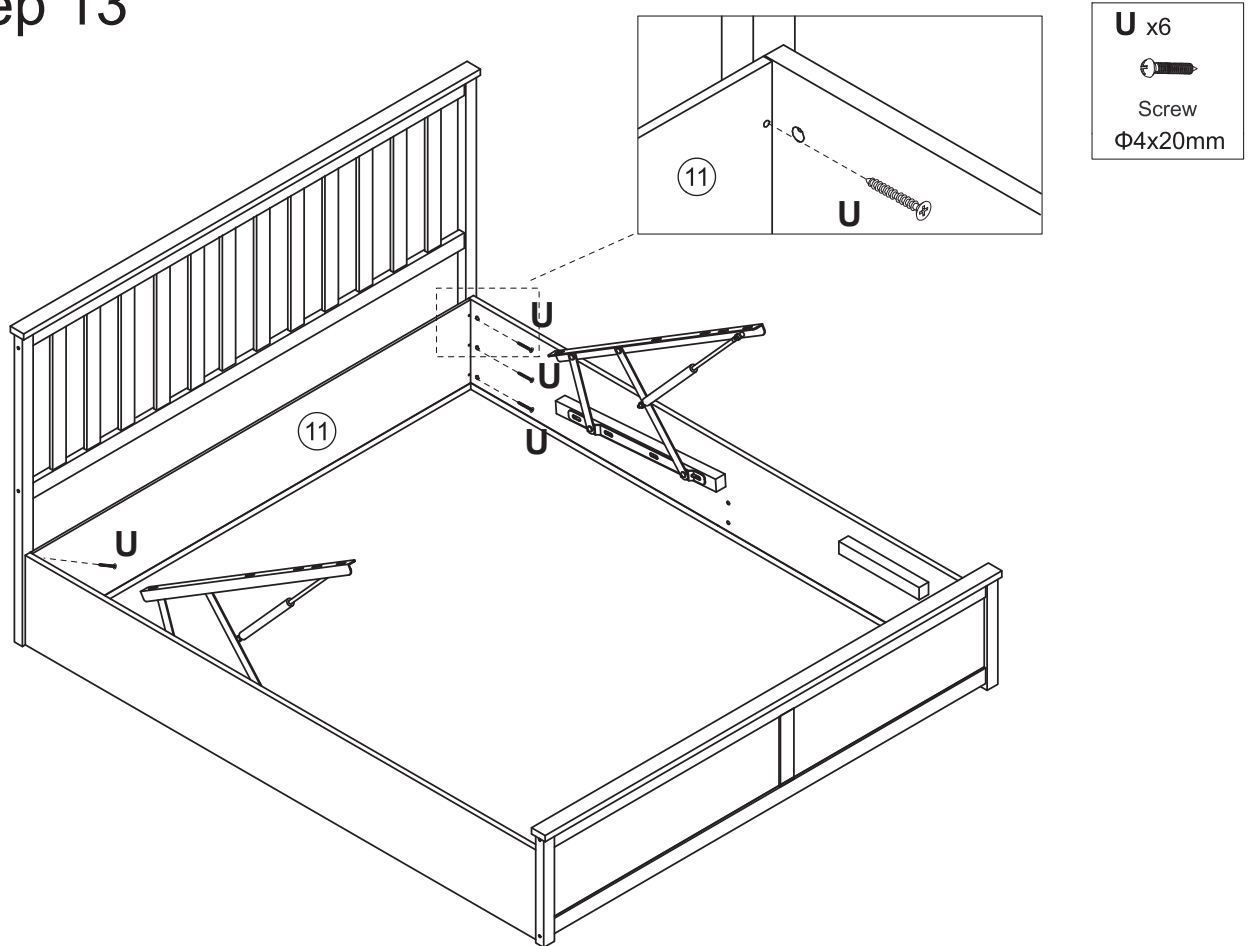

Step 14

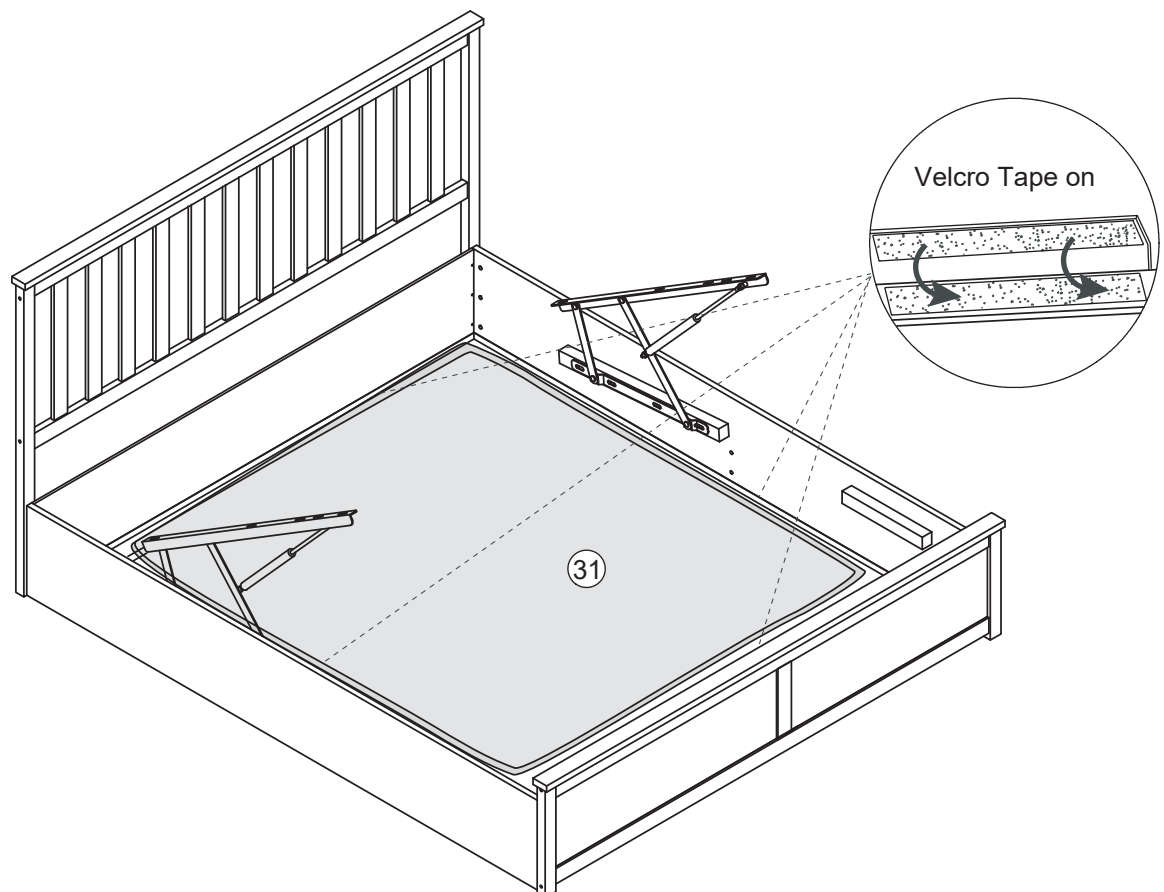

Step 15

G x4



Bolt


M6x35mm

F x2



Bolt

M6x50mm

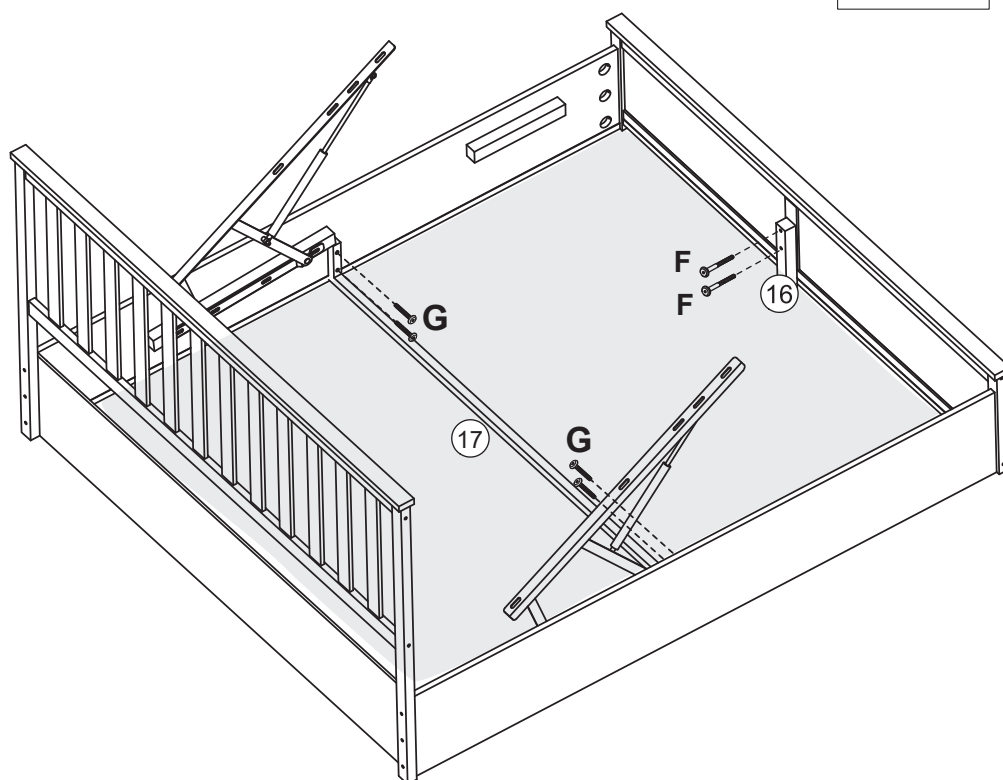





Step 16

O x16





Bolt



Φ8x15mm

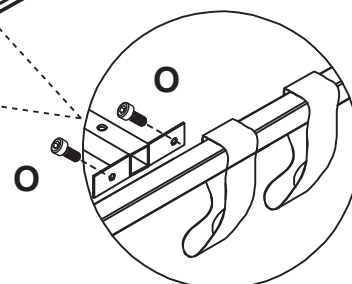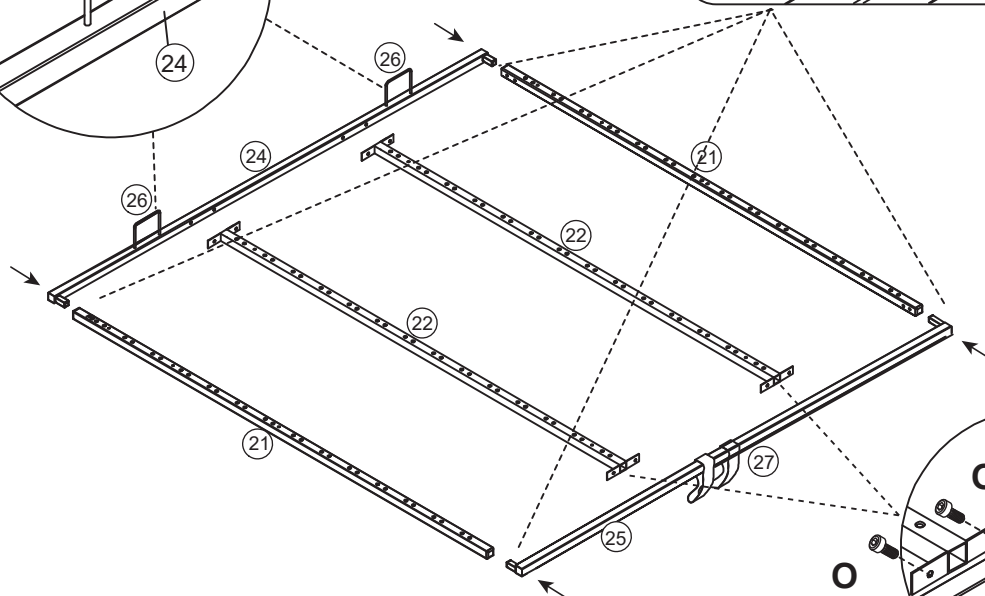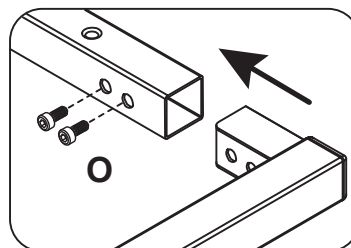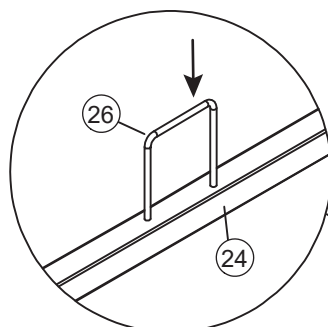



Step 17

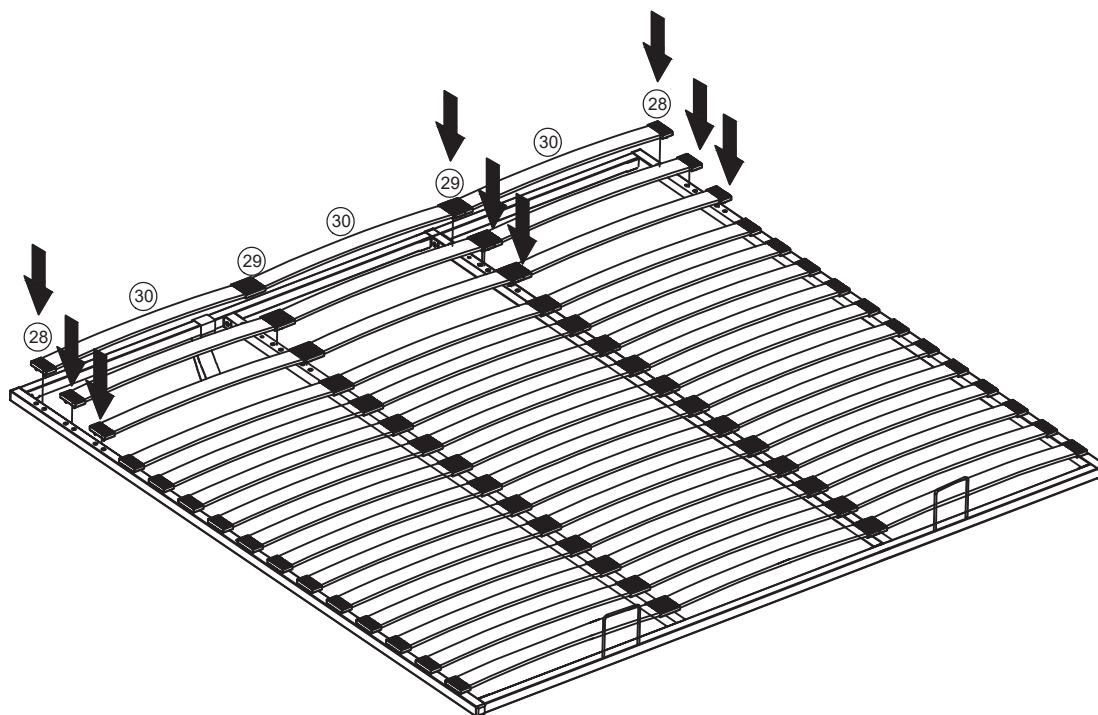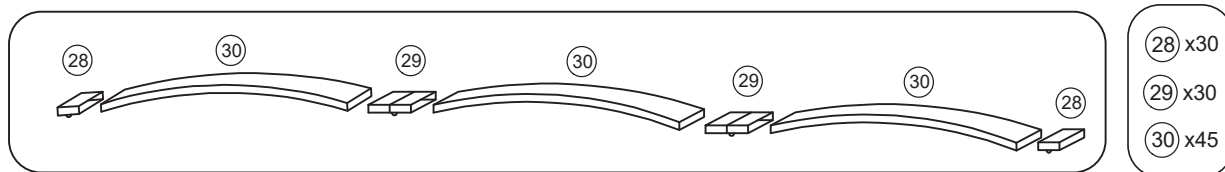

Step 18

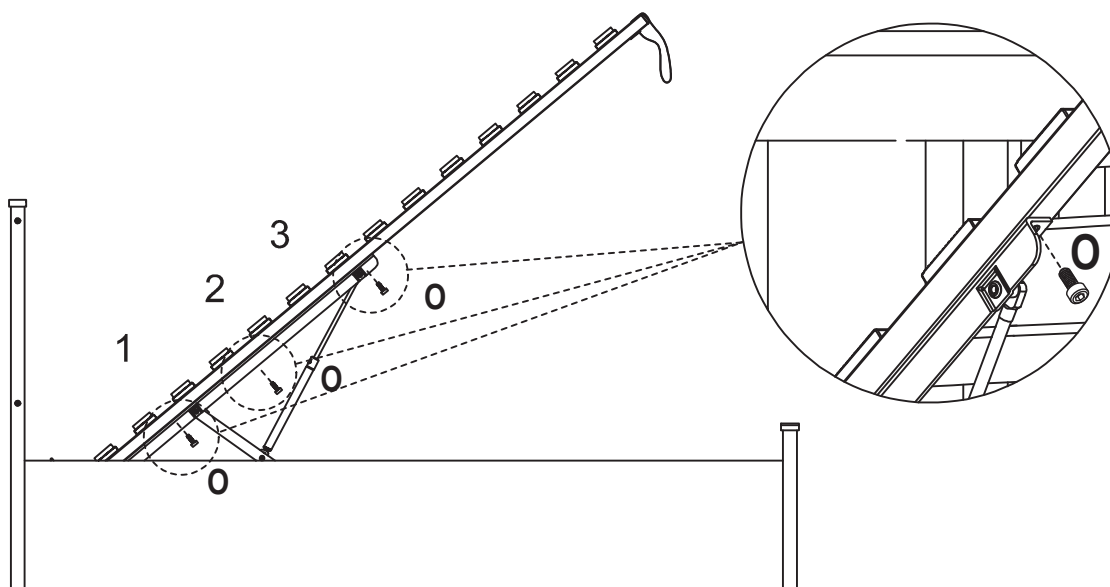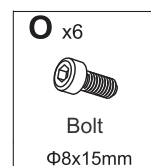

Step 19

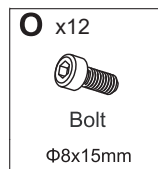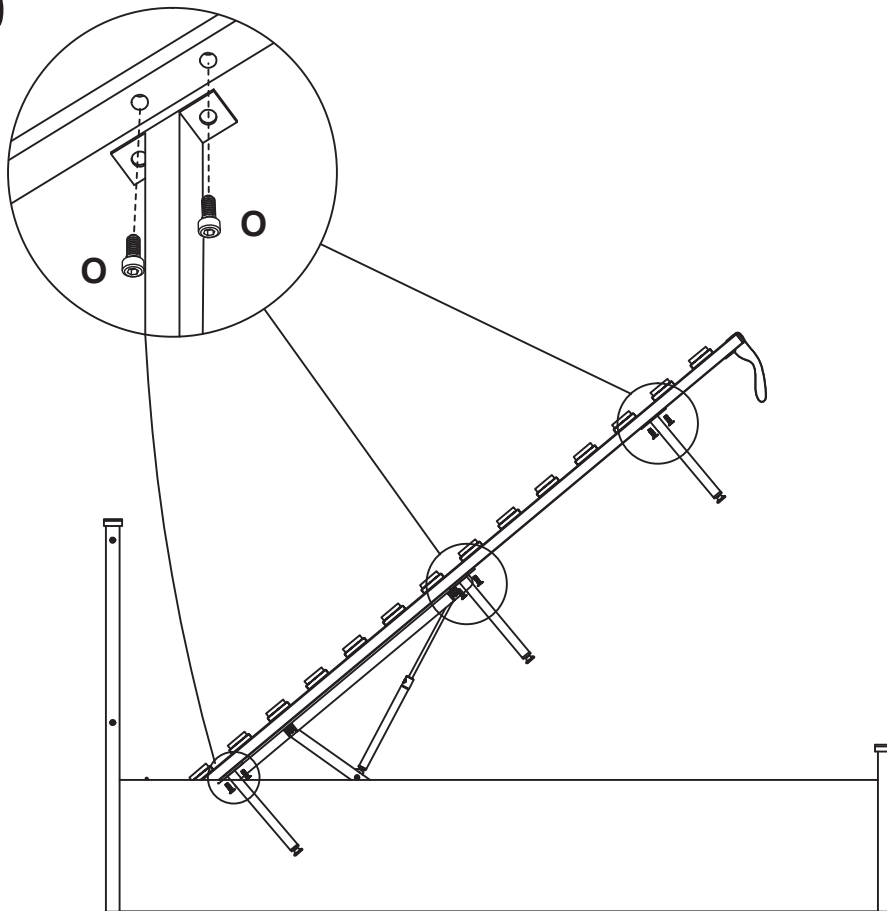

Step 20

Assembly Complete

