


ASSEMBLY INSTRUCTIONS

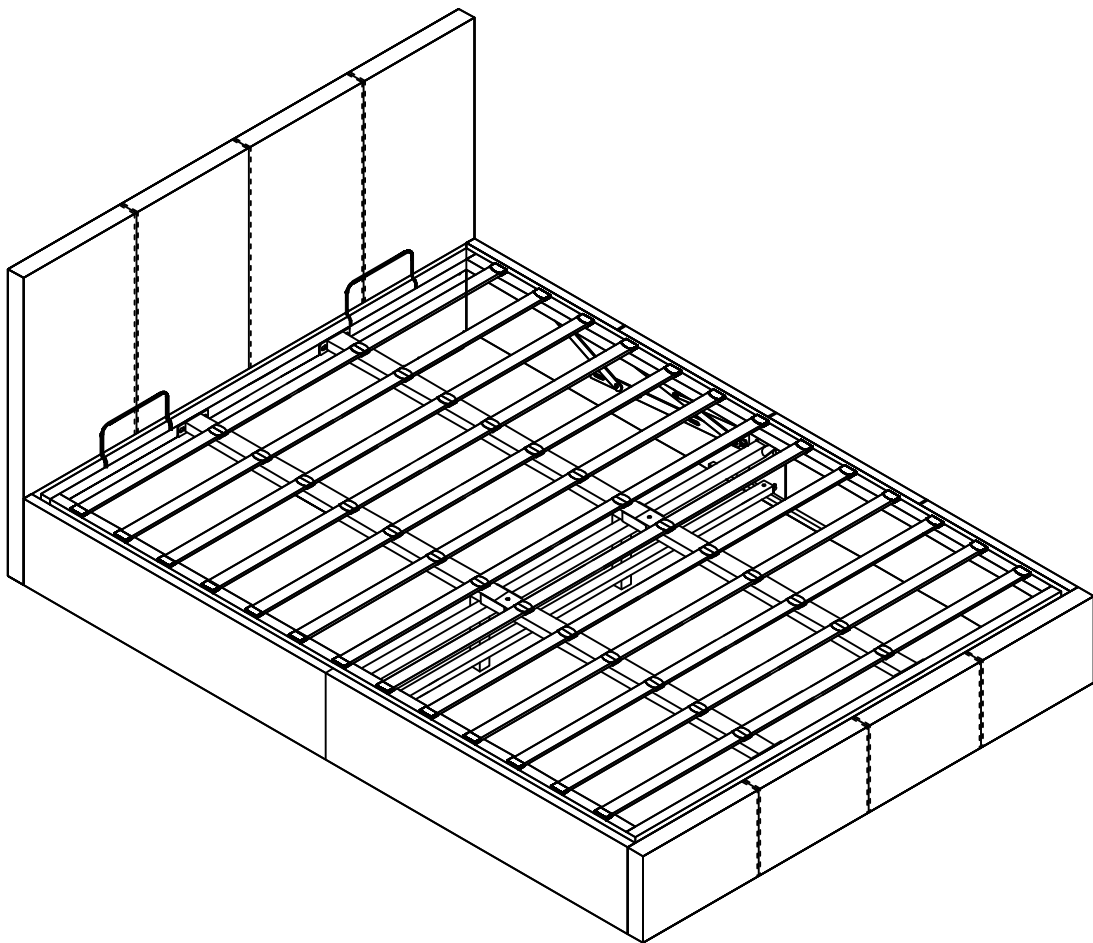


To activate the Gas lift Struts
A mattress needs to be on top of the frame

**PRADO PROMO OTTOMAN KING BED IS FOR DOMESTIC USE
AND STRICTLY NOT FOR CONTRACT USE.**

PLEASE ASSEMBLE THE BED BY TWO PERSONS.

PART LIST

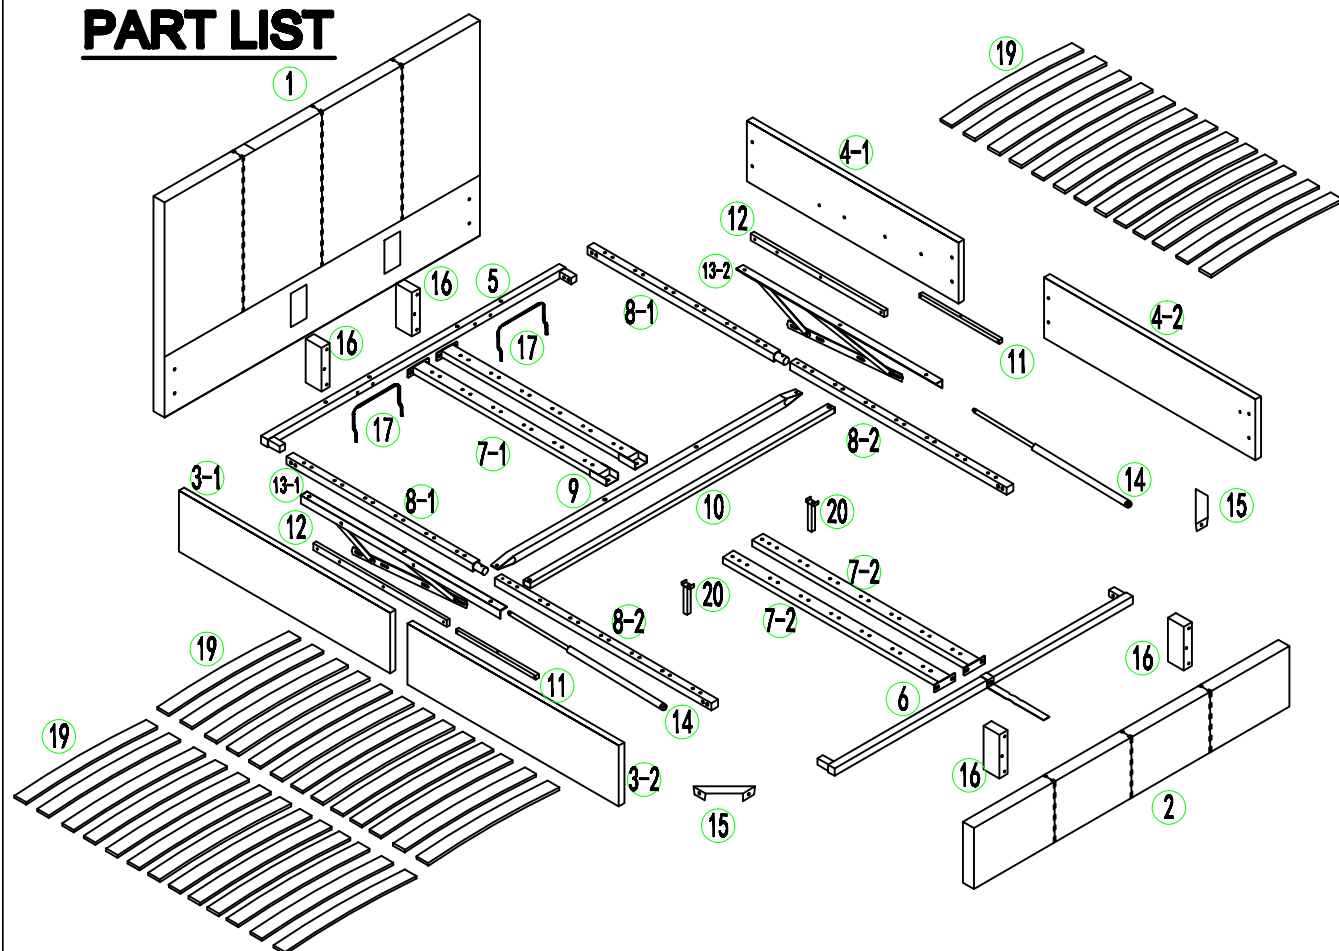


HARDWARE LIST

Label	Picture	Description	Qty	Label	Picture	Description	Qty
A		Single Plastic CAP	26	I		Bolt M6x60	2
B		Double Plastic CAP	26	J		Screw 4*80	12
C		Bolt M6x20	20	L		Connection Plate Left	2
D		Bolt M8x25	8	R		Connection Plate Right	2
E		Spring Washer	8	M		Bolt M8x35	8
F		Washer M8	8	N		Bolt M8x15	22
G		Nut M8	4	S		Bolt M6x40	6
H		Connection	2	O		Nut M6	4
K		Bolt M6x35	2	P		Washer M6	4


TOOL list

Label	Picture	Description	Qty
T-1		Screw driver(not provided)	1
T-2		Allen key M5	1
T-3		Allen key M4	1
T-4		Spanner M8	1
T-5		Spanner M6	1


Steps 1

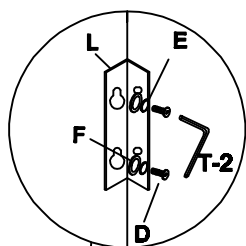


Steps 1b

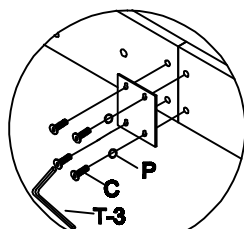

Steps 1a

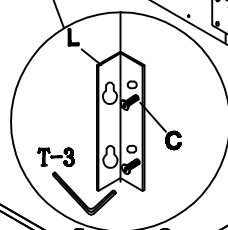


Steps 2c

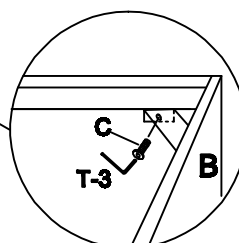


Steps 1d


L  2pcs Connection Plate Left	R  2pcs Connection Plate Right
D  8pcs Bolt M8x25	E  8pcs Spring Washer
F  8pcs Washer M8	T-2  1pcs Allen key 5#
H  2pcs Connection	T-3  1pcs Allen key 4#
C  20pcs Bolt M6x20	P  4pcs Washer M6

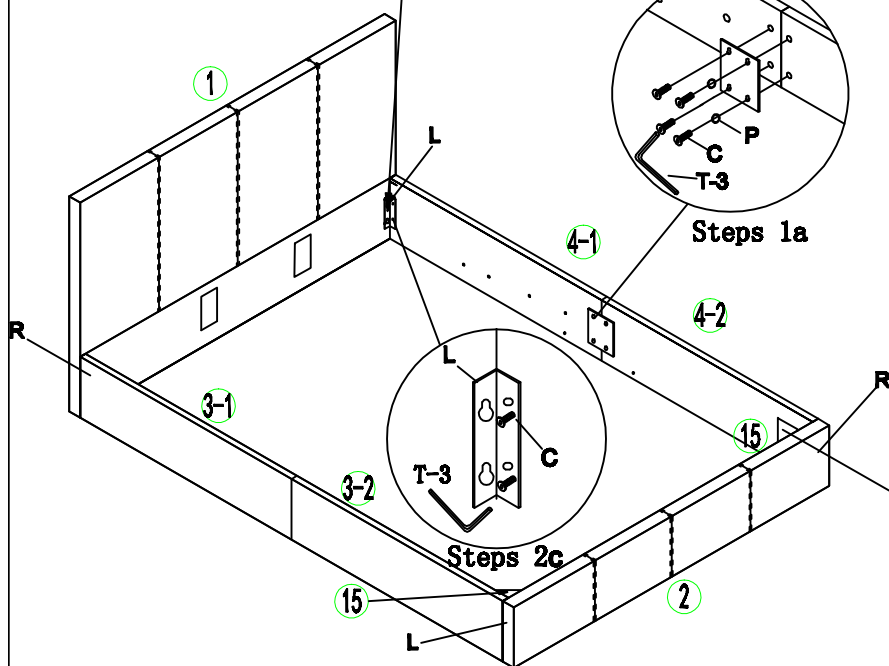

Steps 2

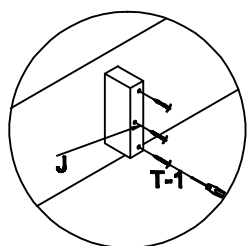


Steps 2a

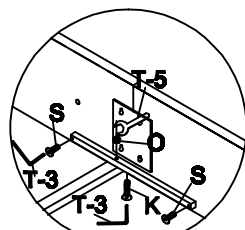


Steps 2b


J  12pcs Screw 4*80	T-1  1 pcs Screw driver (not provided)
K  2pcs Bolt M6x35	T-3  1pcs Allen key 4#
O  2pcs Nut M6	S  4pcs Bolt M6x40
	T-5  1pcs Spanner M6

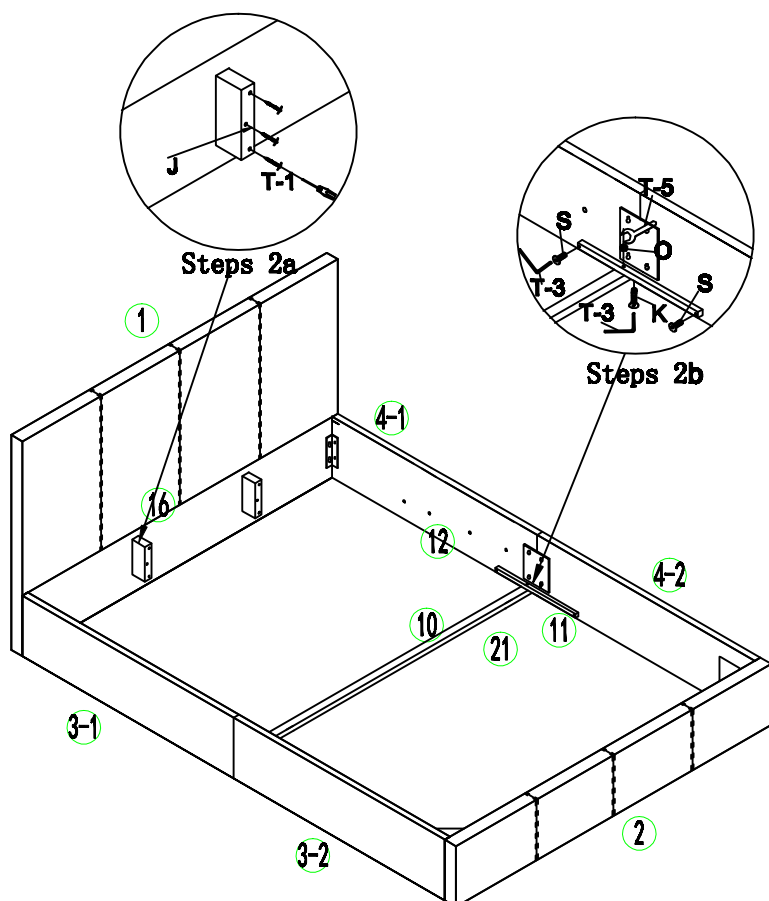



Steps 3

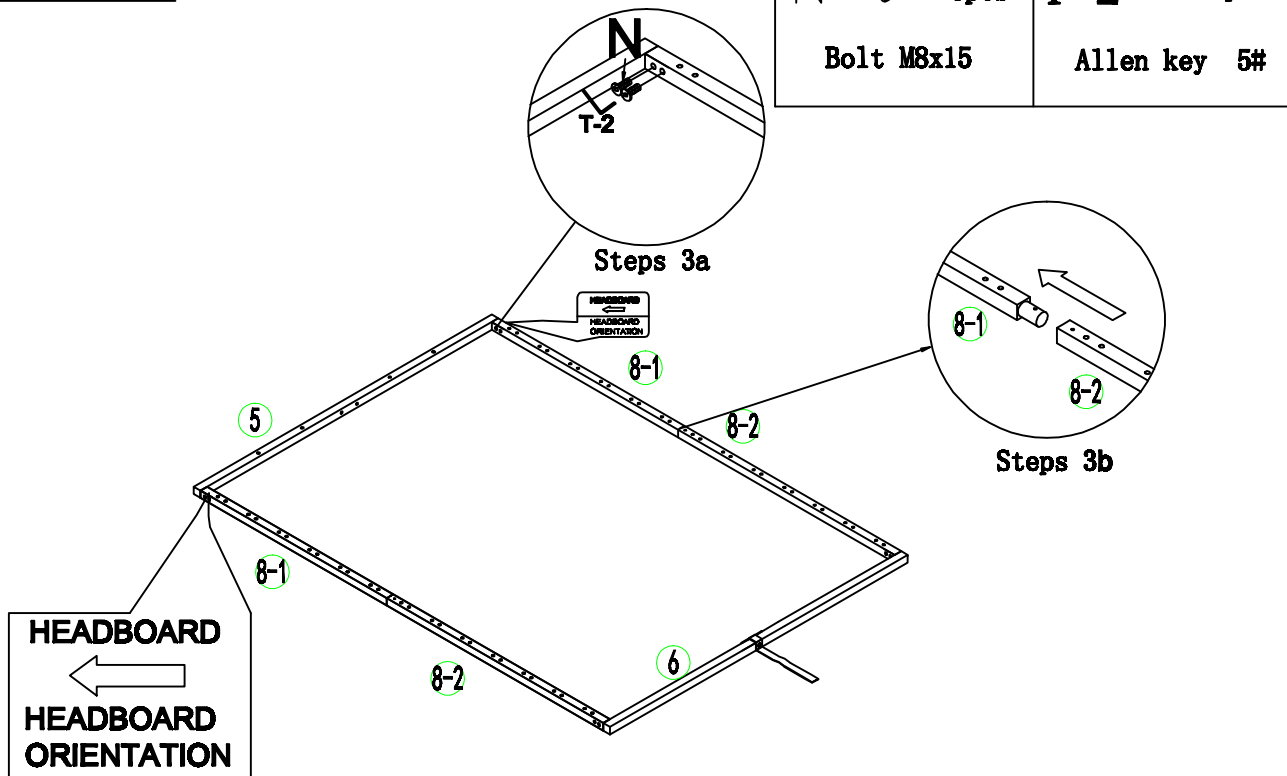

Steps 4

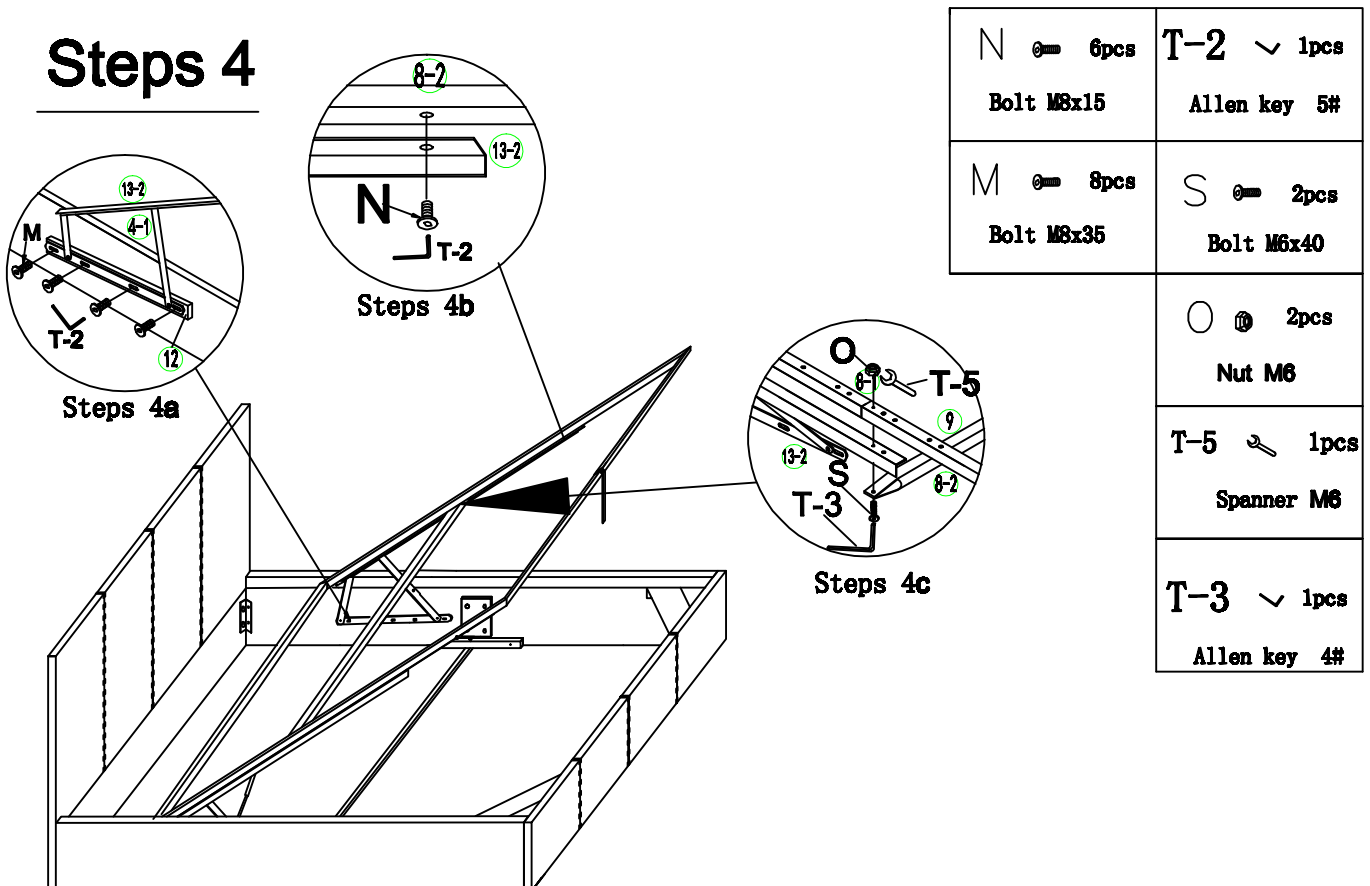

Steps 5

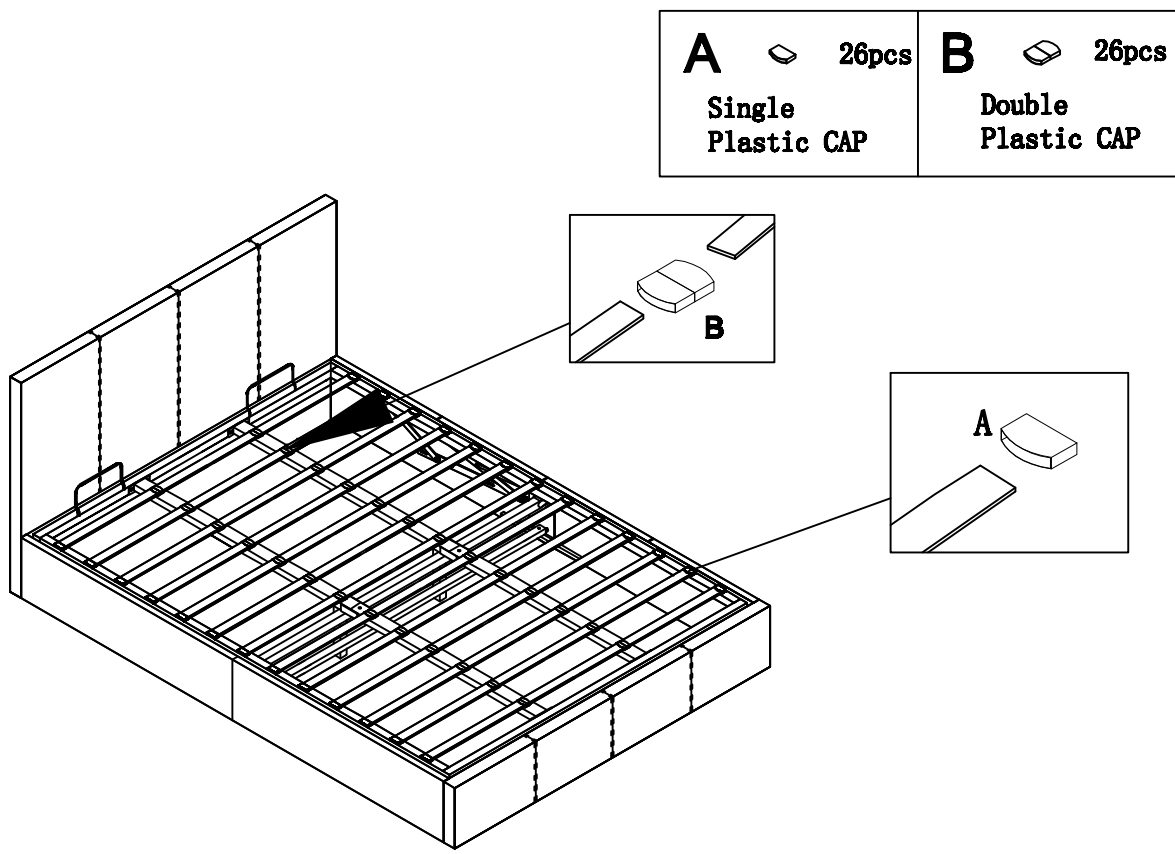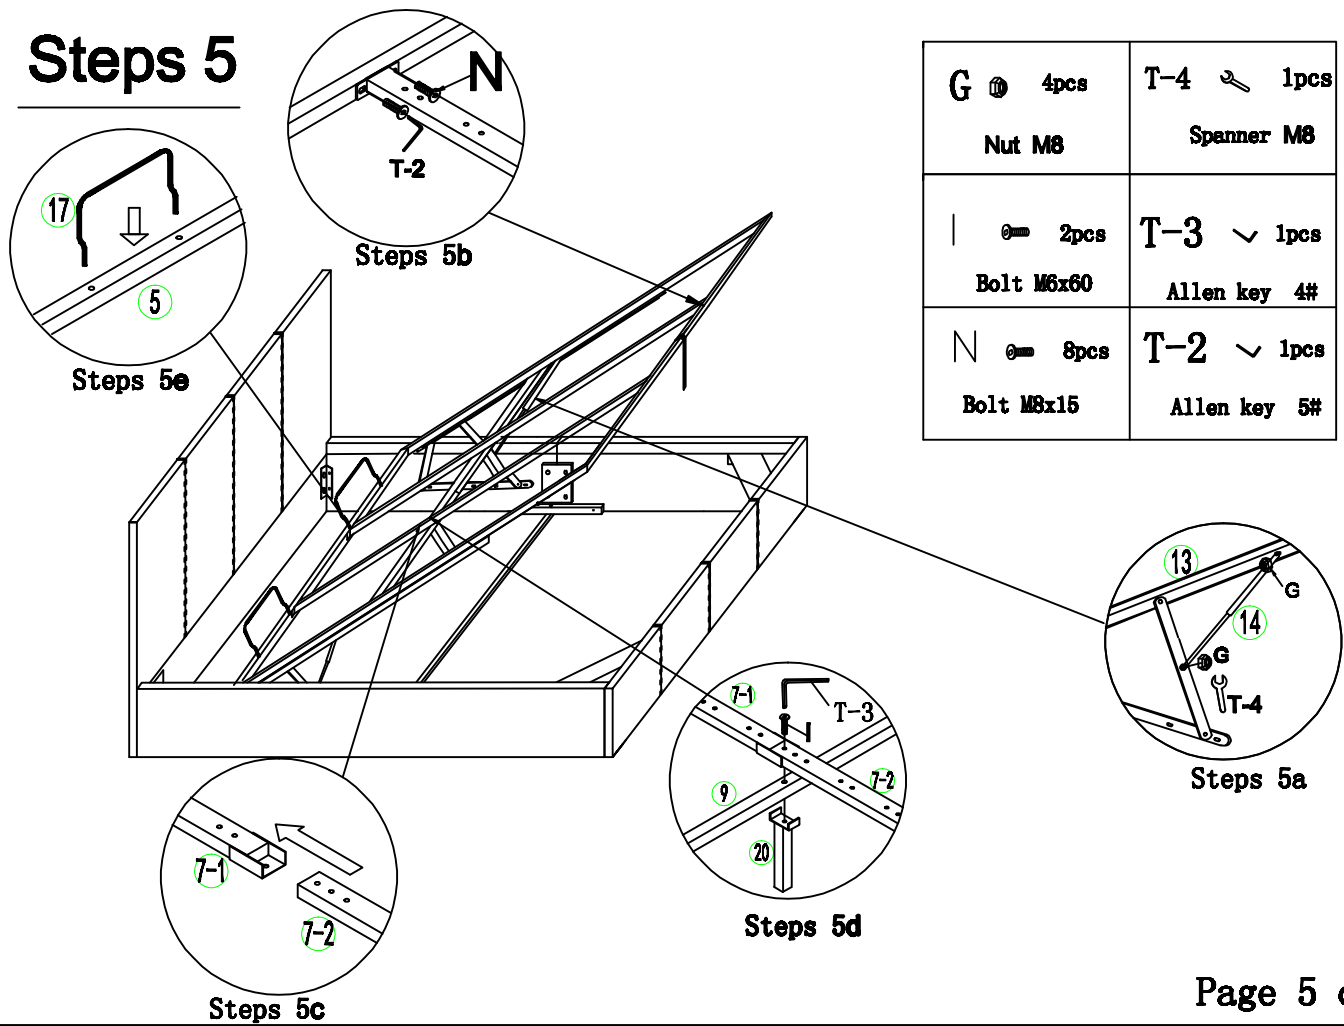

Steps 7

PASTE NON WOVEN FABRIC TO THE BOTTOM OF THE BED

