

ASSEMBLY INSTRUCTION

EXECUTIVE TABLE WITH FIXED SIDE CABINET

ITEM CODE: NW001-R


This instruction suitable for 180*160*76cm



PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean & spacious assembly area, avoid hard surfaces that may damage the product.
2. Take care when lifting product. It should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before assembly is finished.
5. Keep all hardware parts and packing material out of children.
6. Do not over tighten the screws and bolts as this may cause damage.
7. Estimate assembly time: 2hrs 30 minutes.
8. Additional Tools required is screw-driver.



Warning

Serious or fatal injuries may occur from furniture toppling over.

For security, please follow the below recommendations:

- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/sliding system
- Please use this product with caution
- This is a permanent label. Do not attempt to remove!

VIDEO ASSEMBLY AVAILABLE

ASSEMBLY VIDEO

NW001 EXECUTIVE DESK



SCAN THE QR CODE TO
THE LEFT WITH YOUR
PHONE TO BE TAKEN
DIRECTLY TO A VIDEO
DEMONSTRATING THE
ASSEMBLY OF YOUR
PRODUCT.


FREE QR READING APPS CAN BE FOUND ON YOUR APP STORE

PRODUCT CHECK








Upon receiving the furniture, please check product size, carton quantity, and confirm the direction of the side cabinet's location you want prior to assembly. If you want the side cabinet on your right hand, please choose the assembly instruction named NW001-R; If you want the side cabinet on your left hand, please choose the assembly instruction named NW001-L.

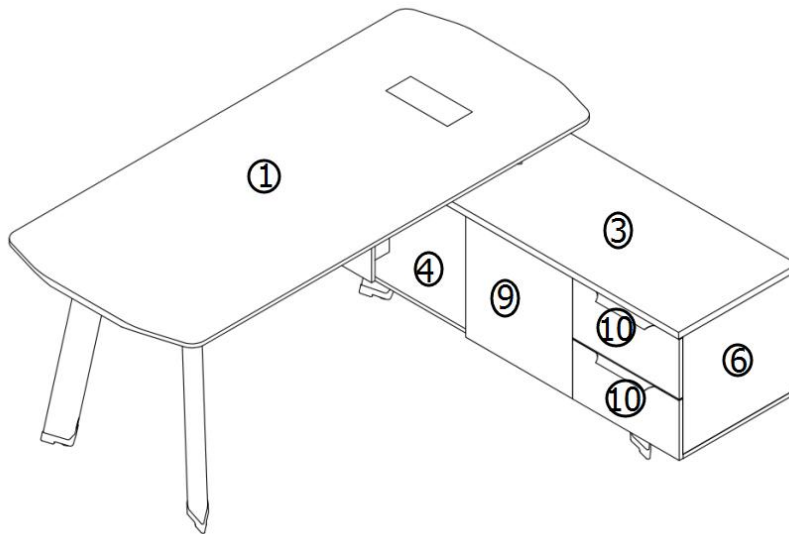










The NW001 executive table set should be packaged in 3 cartons. The shipping mark to be show on 3-1,3-2,3-3.

PARTS LIST





Carton No.	Panel No.	Panel Size (CM)	Qty		Carton No.	Panel No.	Panel Size (CM)	Qty
3-1	1	180*80*5	1		3-2	8	42*30*1.5	1
3-1	2	100*40*1.5	1		3-2	9	41.5*45*1.5	1
3-2	3	160*50*2.5	1		3-2	10	20.6*45*1.5	2
3-2	4	160*50*2.5	1		3-2	11	35*14*1.5	4
3-2	5	156.8*42*1.5	1		3-2	12	37.2*14*1.5	2
3-2	6	42*48*1.5	2		3-2	13	38.2*34.4*0.4	2
3-2	7	42*46.4*1.5	2		3-2	14	42*12*1.5	2

Accessories list (put in Ctn No.3-3)				
No.	Name	Size(mm)	QTY	Drawing
A	3 in 1 minifix-Bolt	40	45	
	3 in 1 minifix-Cam	∅ 15		
B	Dowel	8*40	8	
C	Hinge-Full overlay		2	
D	Handle	448	2	
F	Grommet	∅ 60	1	
G	Grommet	266*130	1	

H	Leg protector		6	
I	Drawer Slide	14 inch	2	
J	Screw	3.5*14	82	
K	Screw	3.5*35	8	
L	Socket		3	
M	Connecting Bolt	6*20	4	
N	Door bumper		1	
O	Front panel Connector		2	
P	Table Frame & Leg	1800*1600*760	1	
R	Bolt	8*35	2	
T	Connecting Bolt	6*30	4	

GENERAL ASSMEBLY DETAILS:

How to use 3 in 1 Mini-Fix Cam & Pins (Accessory A) Fasteners

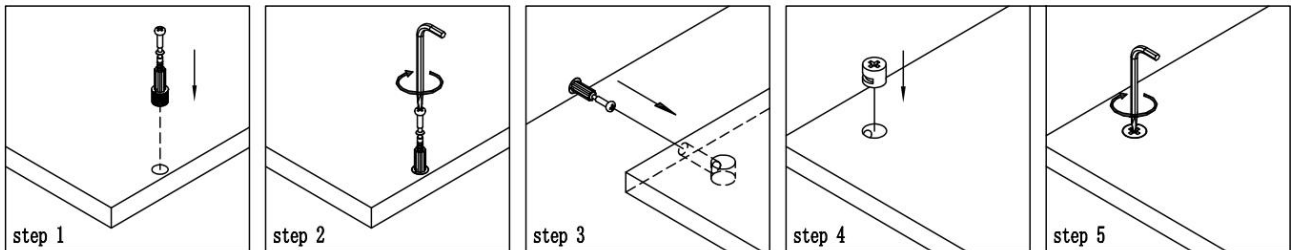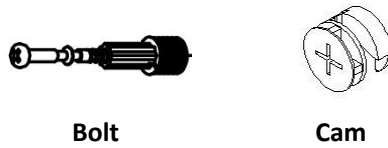


Cam lock fasteners are used to join two pcs boards together.

1. Using a screw driver or cordless drill, do not over tighten Bolts.
2. Use a flathead screwdriver to turn and tighten the Cam lock in a clockwise direction until the head of the pin is tightly secured. **DO NOT USE A CORDLESS DRILL**

How to separate drawer sliders?

The drawer slide I1 & I2 may be connected.


Carefully pull out slide part I2 and press the plastic clip/lever to unlock to fully separate the two parts of the runner.

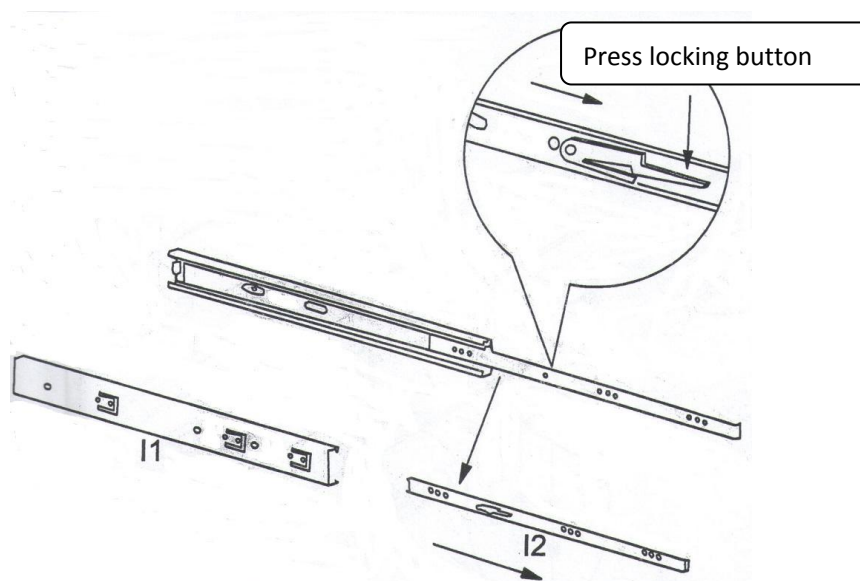

START TO ASSEMBLE


Step 1: Assemble side cabinet

1. Take out Panel No.6 & 7 with guiding holes for drawer slider from carton No.3-2.
As per guiding hole, tighten slide I1 onto panel No.6 & 7 with J Screws (3.5*14MM).

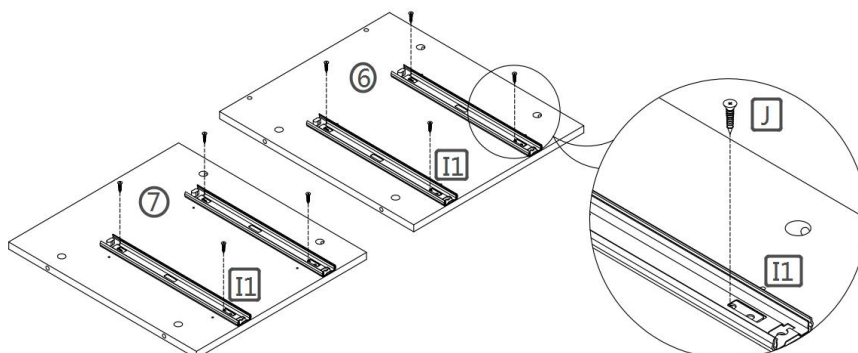


2. Assemble outer side panel

Take out another Panel No.6 & Panel No.5, 8. Connect Panel No.5, 6 8 by accessory A.

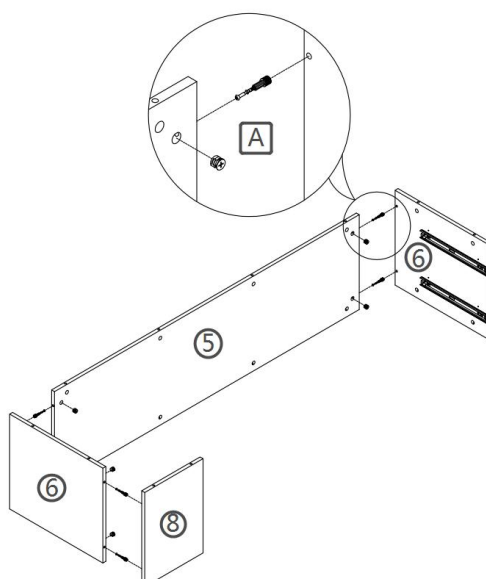

3. Assemble the push open accessory N on top panel No.3 by screw J.

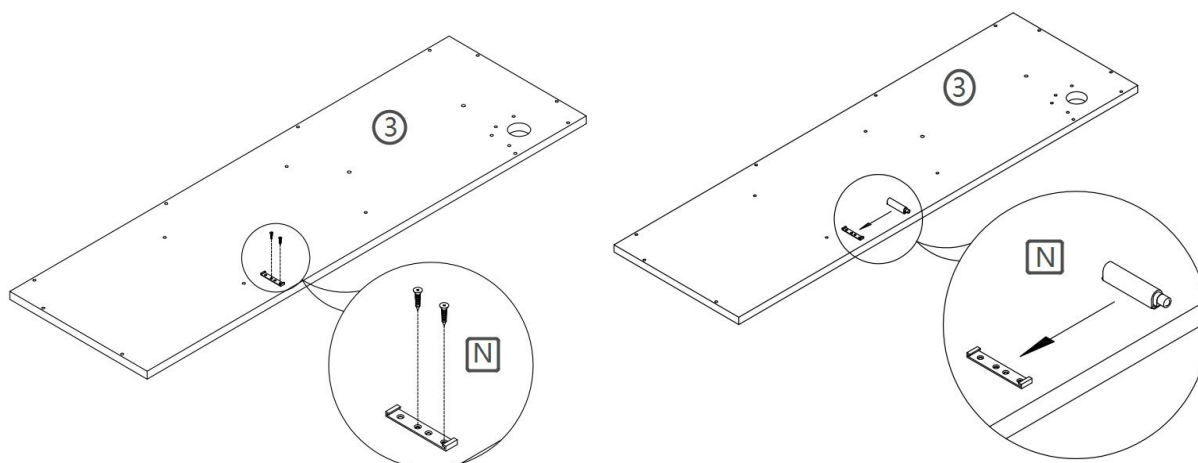


4. Assemble the side cabinet.


Screw A bolts onto top panel No.3 & bottom panel No.4.

Knock B dowel into holes which connect Panel No.3,4 & 14.

Push A-bolt of panel No.3,4 into holes in panel No.6,7 and then tighten A CAM on panel No.6,7.

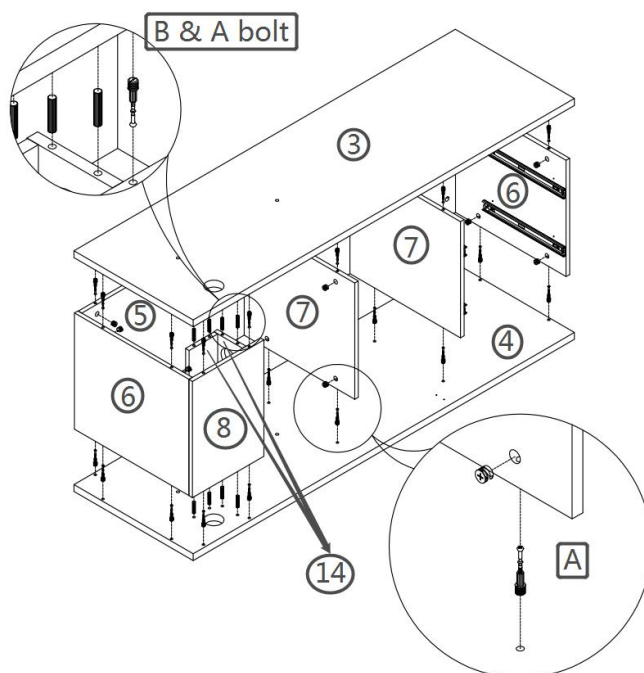

5. Fix short table leg (accessories No. P) on Panel No.4 with J screws (3.5*14mm), and put the leg protector cap on the table leg.

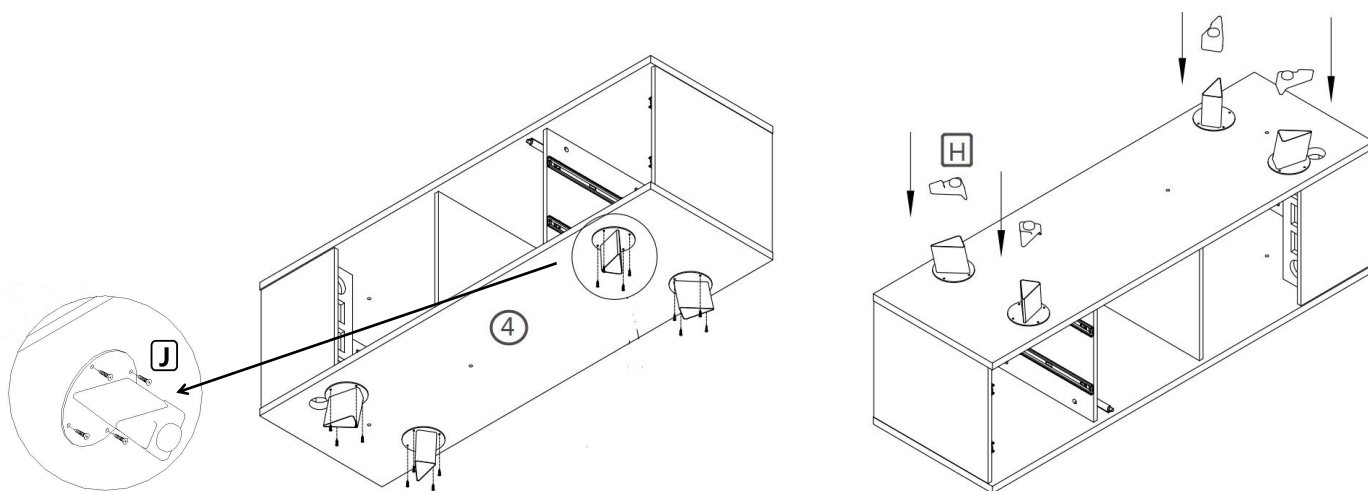


Step 2: Assemble main table


1. Take out black table leg and frame from Carton No.3-3. Assemble them as following drawing.

There are some specialized screws for table leg which are packing with legs.


Smaller holes and bigger holes are supplied on Cross-bar. Bigger holes should be towards the floor.

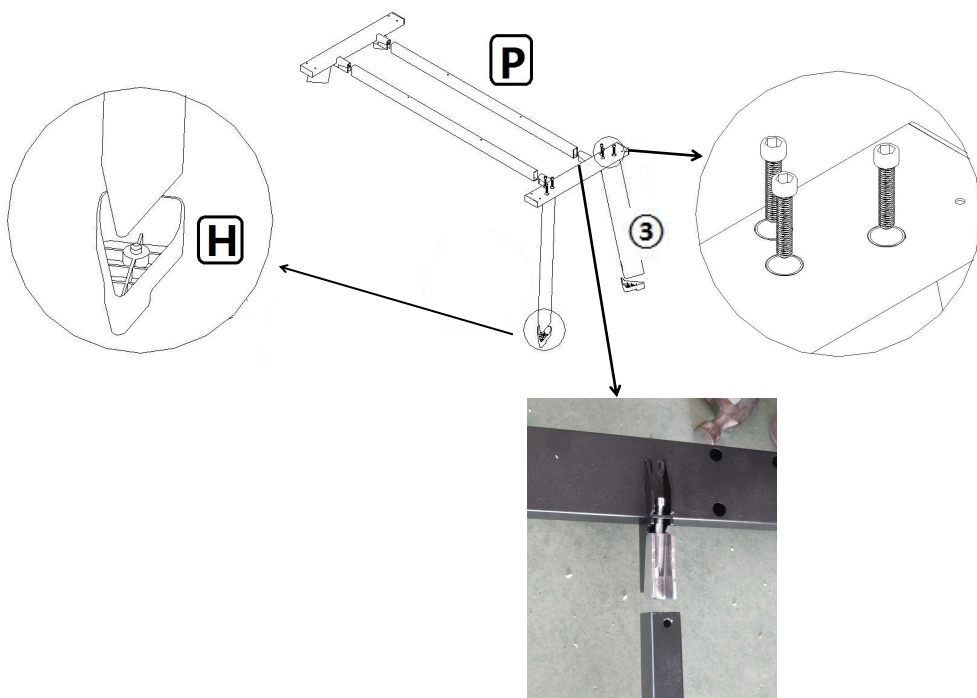

2. Assemble table top panel. Take out panel No.1 from Carton 3-1.
J screws (3.5*14mm) need to be through cross-bar's bigger hole and fix on table top.

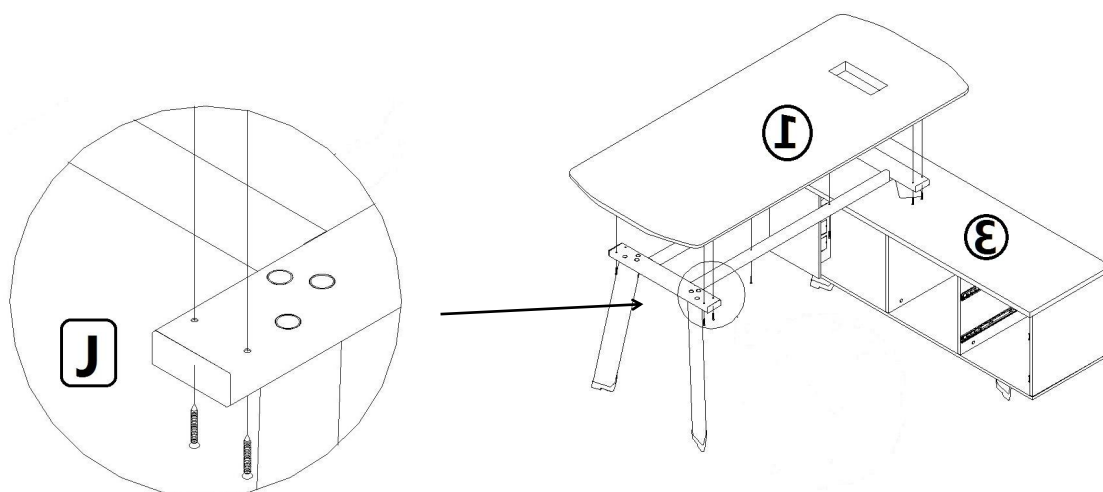

3. Fix on table leg and side cabinet. Tighten R screw(8*40mm) underneath panel No.3.

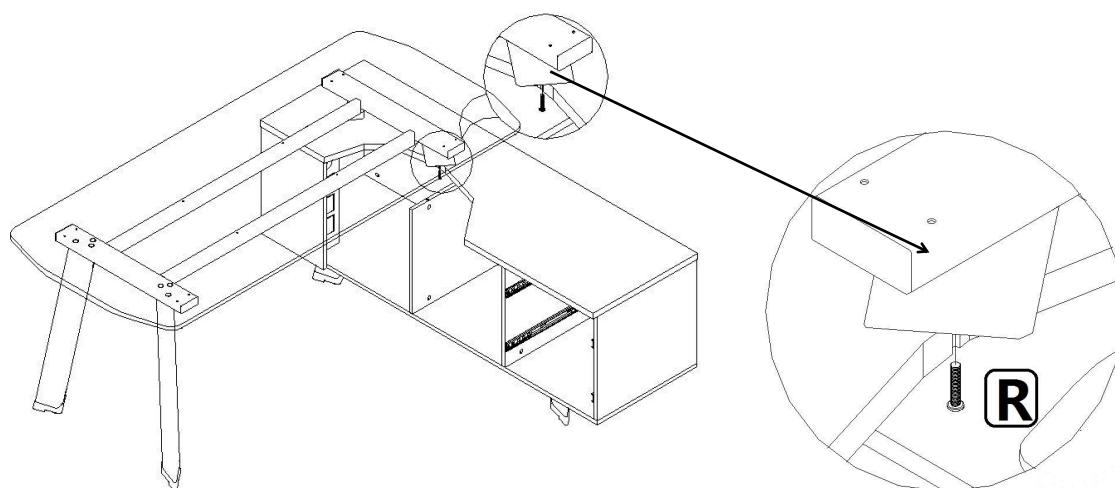

Step 3: Assemble drawer and door panel


1. Take out panel No.10,11,12,13 from Carton 3-2. Assemble them as following drawing.

Tighten drawer slide I2 with J screws (3.5*14mm) on outside of panel No.11.

Assemble panel No.10 & 11 with A bolt and CAM.


Tighten K screws (3.5*35mm) by panel No.11&12.

Tighten D handle with J screw(3.5*14mm).

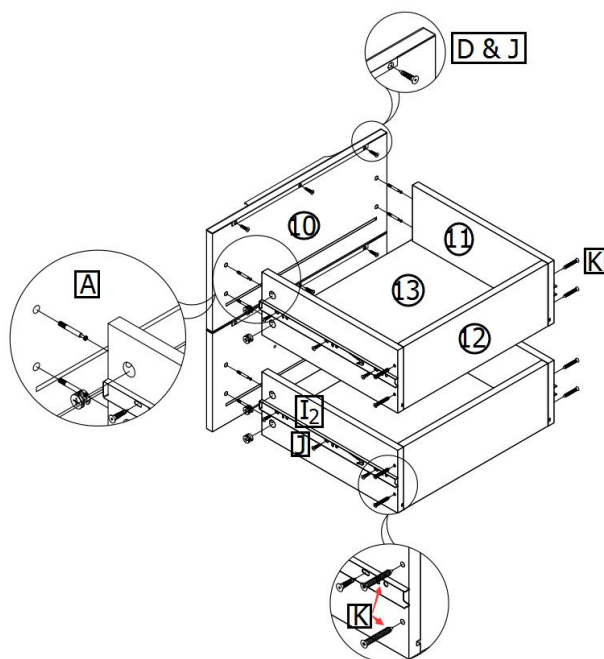


2. Push I2 slide on the drawer into I1 slide on side cabinet.


If drawers cannot move smoothly or fully close, press locking button on slide I2, fully separate, and insert the slide again.

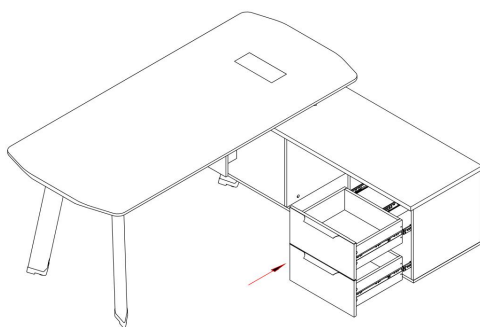

3. Assemble cabinet door. Tighten C hinge with J screws (3.5*14mm).

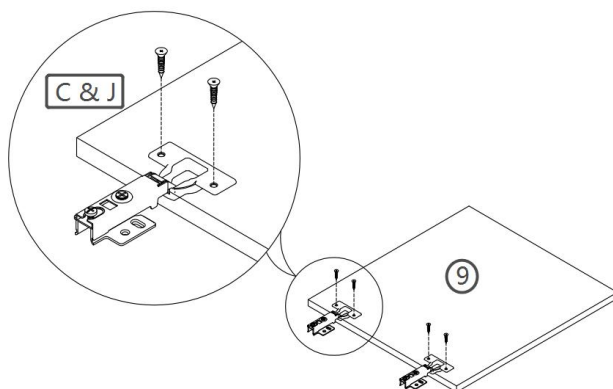

4. Assemble door panel No.9 on side cabinet with J screw (3.5*14mm);

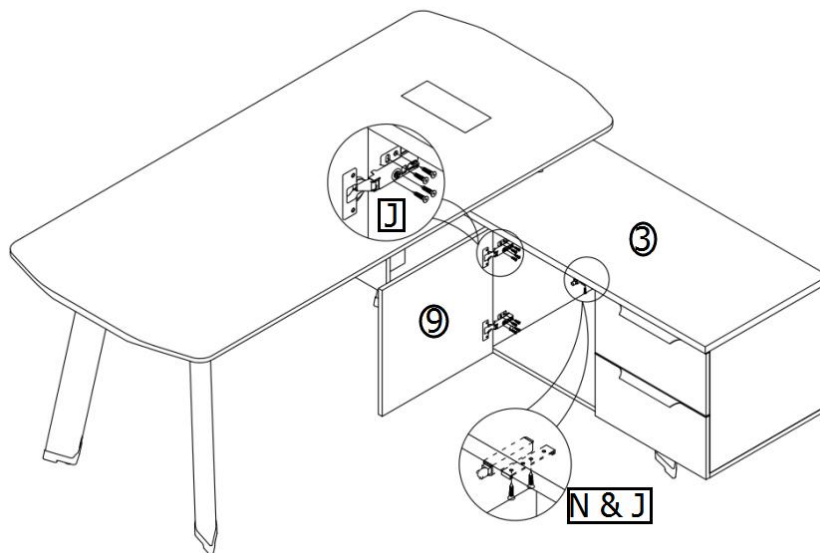


5. Assemble front hanging panel.

Take out panel No.2 from Carton No.3-1.

Insert T into O and tighten it.

Use T bolt(6*25mm) to hang Panel No.2 under the Table Top Panel No.1.

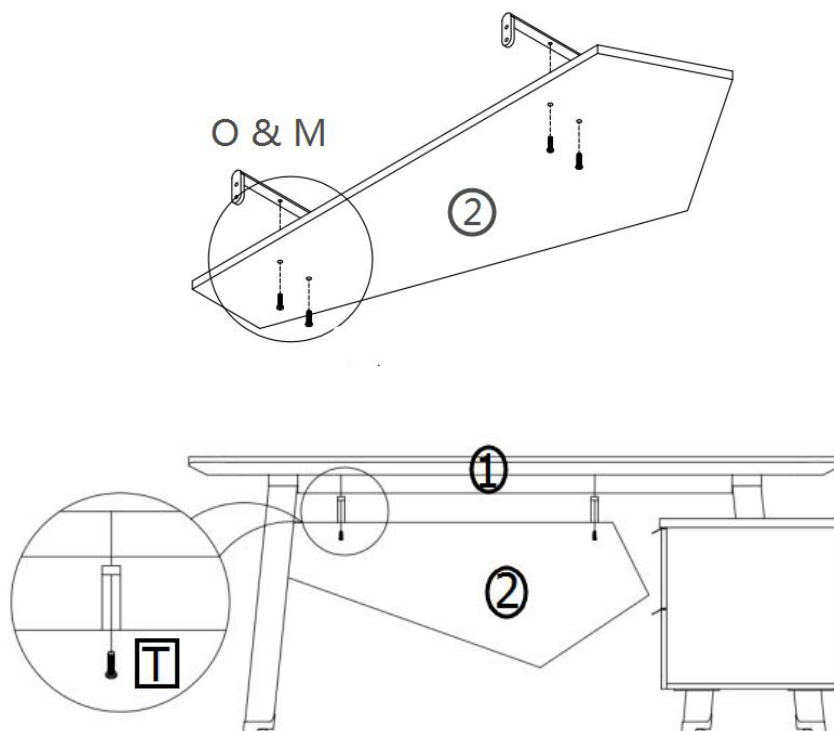

Attention: Stick screw cover sticker on visible A Cam as per request.

Finished assembly

FINAL NOTE:

Do not drag the furniture as this may cause damage to the legs. Instead, ask at least 2 persons to lift carefully with caution from either end.

IMPORTANT: CARE GUIDE FOR YOUR MELAMINE BOARD FURNITURE

Please read up on important information regarding your furniture.

- Dust frequently with a clean damp, lint-free cloth.
- Avoid using chemicals or solvents when cleaning the furniture.
- Do not place hot objects on any furniture surface.
- Avoid exposing your furniture to strong sunlight.
- Do not expose your furniture to any liquids.
- Do not allow sharp or rough object scratch the surface of furniture.
- When moving furniture, do not drag it across the floor.