












Name	Panel	QTY	SKU
Panel	2DR90-1	1	EW-235-00-99-C
Panel	2DR90-2	1	EW-235-00-99-C
Panel	2DR90-3	4	EW-235-00-99-C
Panel	2DR90-4	1	EW-235-00-99-C
Panel	2DR90-5	1	EW-235-00-99-C
Panel	2DR90-6	2	EW-235-00-99-C
Panel	2DR90-7	2	EW-235-00-99-C
Panel	2DR90-8	2	EW-235-00-99-C
Panel	2DR90-9	2	EW-235-00-99-C
Panel	2DR90-10	1	EW-235-00-99-C
Panel	2DR90-11	1	EW-235-00-99-C
Panel	2DR90-12	1	EW-235-00-99-C
Panel	2DR90-13	1	EW-235-00-99-C
Panel	2DR90-14	1	EW-235-00-99-C

Name	Spare parts	QTY	SKU
angle code		2	EW-235-00-99-C
handle		2	EW-235-00-99-C
U groove		1	EW-235-00-99-C
80 screw		2	EW-235-00-99-C
connecting rod		60	EW-235-00-99-C
centrifugal wheel		60	EW-235-00-99-C
ST4x12 screw		56	EW-235-00-99-C
ST4x18 screw		10	EW-235-00-99-C
ST-600 screw expansion tube		2	EW-235-00-99-C
sliding rail		4	EW-235-00-99-C

Installation



1. Screw connecting rails on the all panels individually.



2. Connecting 20890-2, 20890-3, 20890-4 panels with 20890-1 panel by connecting rails.



3. Connecting 20890-2 panel with 20890-3, 20890-4, 20890-5 panels by connecting rails.



4. Screw all centrifugal wheels (bear connecting rails) individually.



5. Install angle codes on 20890-5 panel by fixing 37432 screws.



6. slide out the rail and press the bubble (on the side of the rail) and pull out the inner rail.



7. Align 4 tracks and cabinet position and fix Ø5x32 screws, hole to hole as above photo



7. Connecting 20890-7, 20890-10 panels with 20890-11 panel by connecting rails



8. Connecting 20890-6, 20890-9 panels with 20890-7, 20890-10, 20890-11 panels by connecting rails



centrifugal wheels

9. Screw all centrifugal wheels solidarily



10. Install drawer on 20890-6 panel hole to hole by fixing Ø5x38 screws



11. Install 2 rails (hole to hole) on 20890-6, 20890-9 panels by fixing Ø5x32 screws



12. Connecting 20890-7, 20890-10, 20890-11 panels with 20890-14 panel



13. Connecting 20890-6, 20890-9 panels with 20890-7, 20890-10, 20890-11, 20890-14 panels by connecting rails



centrifugal wheels

14. Screw all centrifugal wheels solidarily




15. Install drawer on 20990-6 panel hole to hole by fixing 210010 screws



16. Install U groove on the panel hole to hole by fixing 210012 screws as photo



17. Install 2 rails on the 20990-6, 20990-9 panels by fixing 210012 screws to get finished drawer as photo

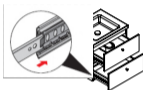

18. Tracks on the drawers are pushed directly into the rail on the cabinet to complete the installation as photo



19. Install 2 handles by fixing 80 screws as photo