


# Anti-tipping Restraint Instructions

## Hardware

- 1 nylon strap
- 2 long screws
- 2 plastic screw anchors
- 2 wall brackets
- 2 short screws

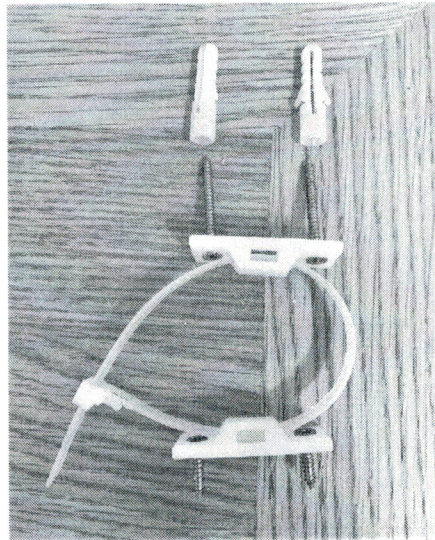

## Assembly

1. When properly installed this hardware can provide protection against the unexpected tipping of furniture
2. Attach one of the mounting bracket and secure to the back top edge of the furniture using the short screws.
3. Mark the location on the wall for mounting the second bracket.
4. Create two appropriate sized holes on the wall and insert the plastic screw anchors.
5. Secure the bracket to the wall using the long screws.
6. Other fixings may be required depending on wall type.
7. Place the furniture so the bracket on the back edge of unit is in line with the bracket on the wall.
8. Lace one end of the nylon restraint strap down through each bracket.
9. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot on the other end.
10. Pull down on the beaded end until it snap-locks into the keyhole.
11. Check to make sure the strap is securely laced and locked to the brackets.