
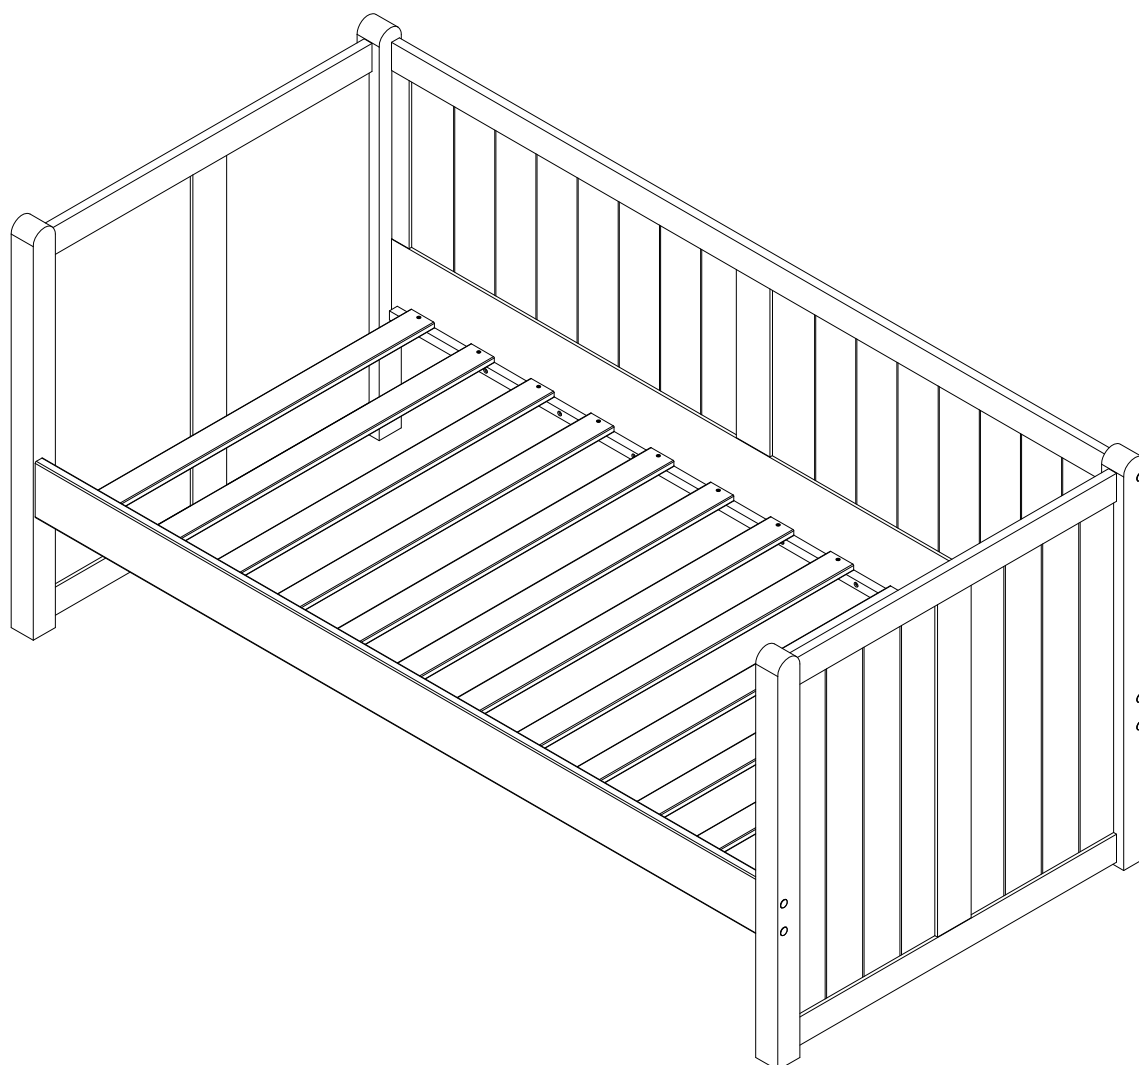



ASSEMBLY INSTRUCTION

MODEL : WS1602BW DAY BED (930 x 1930)MM



HARDWARE LIST


A  PLASTIC DOWEL (M10 x 35MM)	B  JCBC BOLT (M6 x 100MM)	C  JRN NUT (M6 x 13MM)
D  CSK C/B SCREW (M4 x 32MM)	E  HOLE PLUG (15MM)	F  ALLEN KEY (M4 x 60MM)




Do not recommend the use of power drills/drivers for inserting bolts/screws as this could damage the unit.

Tools Required :
Crosshead Screw Driver


PART LIST

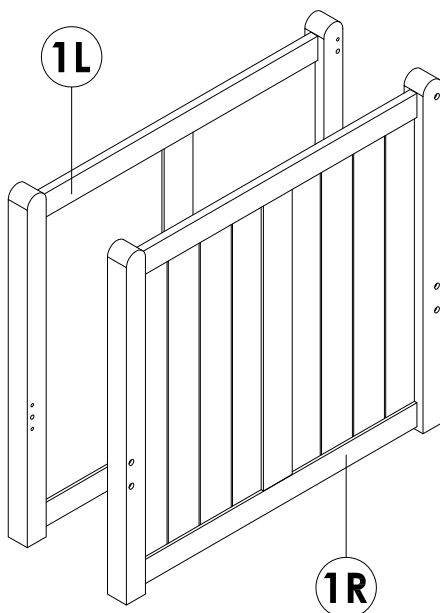


HEADBOARD (L/R)
(2 PCS / SET)
CARTON 1 OF 3

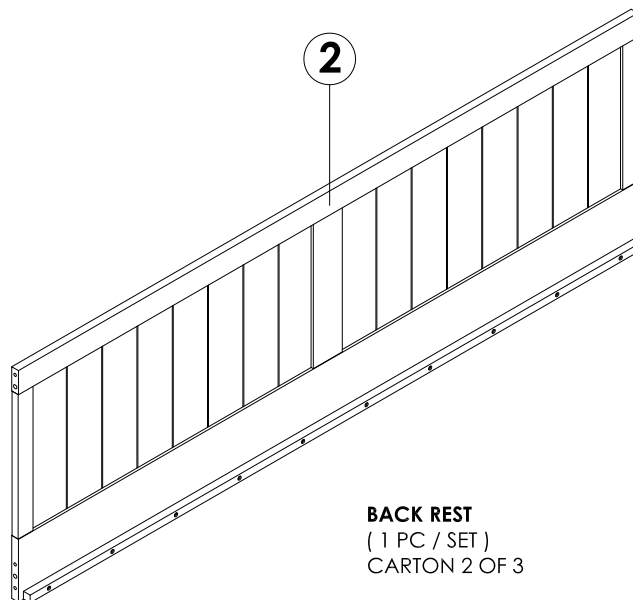


BACK REST
(1 PC / SET)
CARTON 2 OF 3

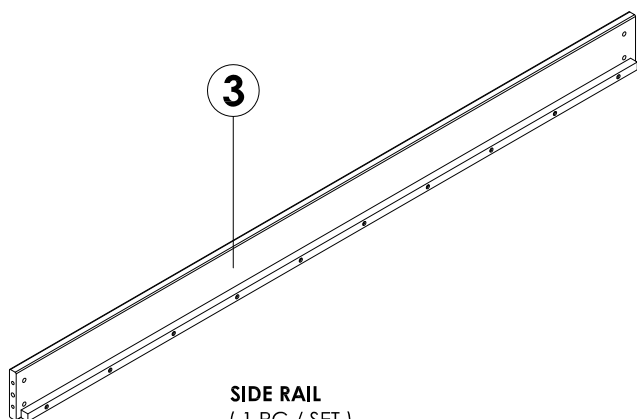

SIDE RAIL
(1 PC / SET)
CARTON 2 OF 3

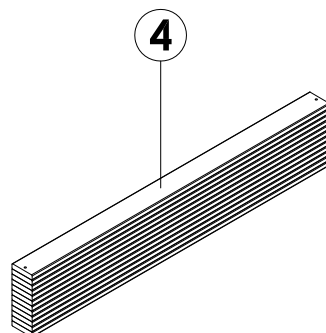


WOODEN SLAT
(12 PCS / SET)
CARTON 3 OF 3

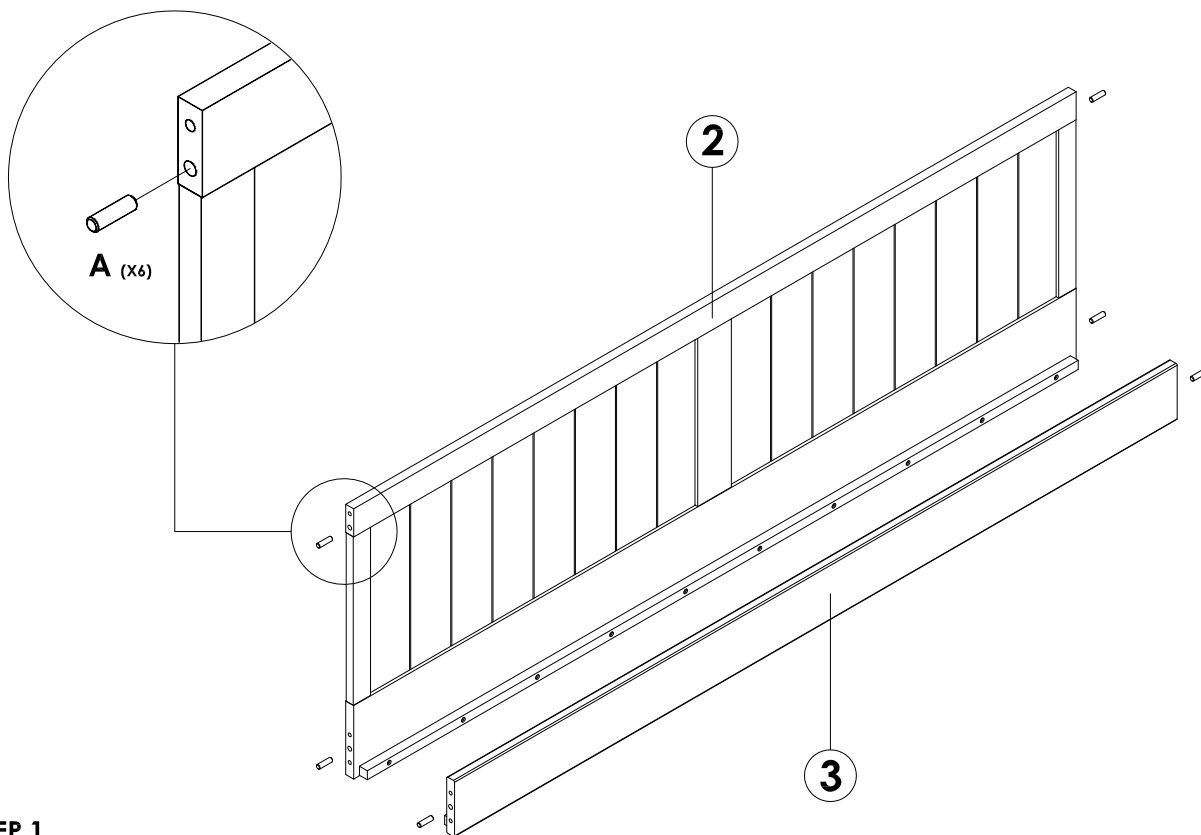


STEP 1

Insert **(A)** into Ø10MM holes on **Back Rest** and **Side Rail**.

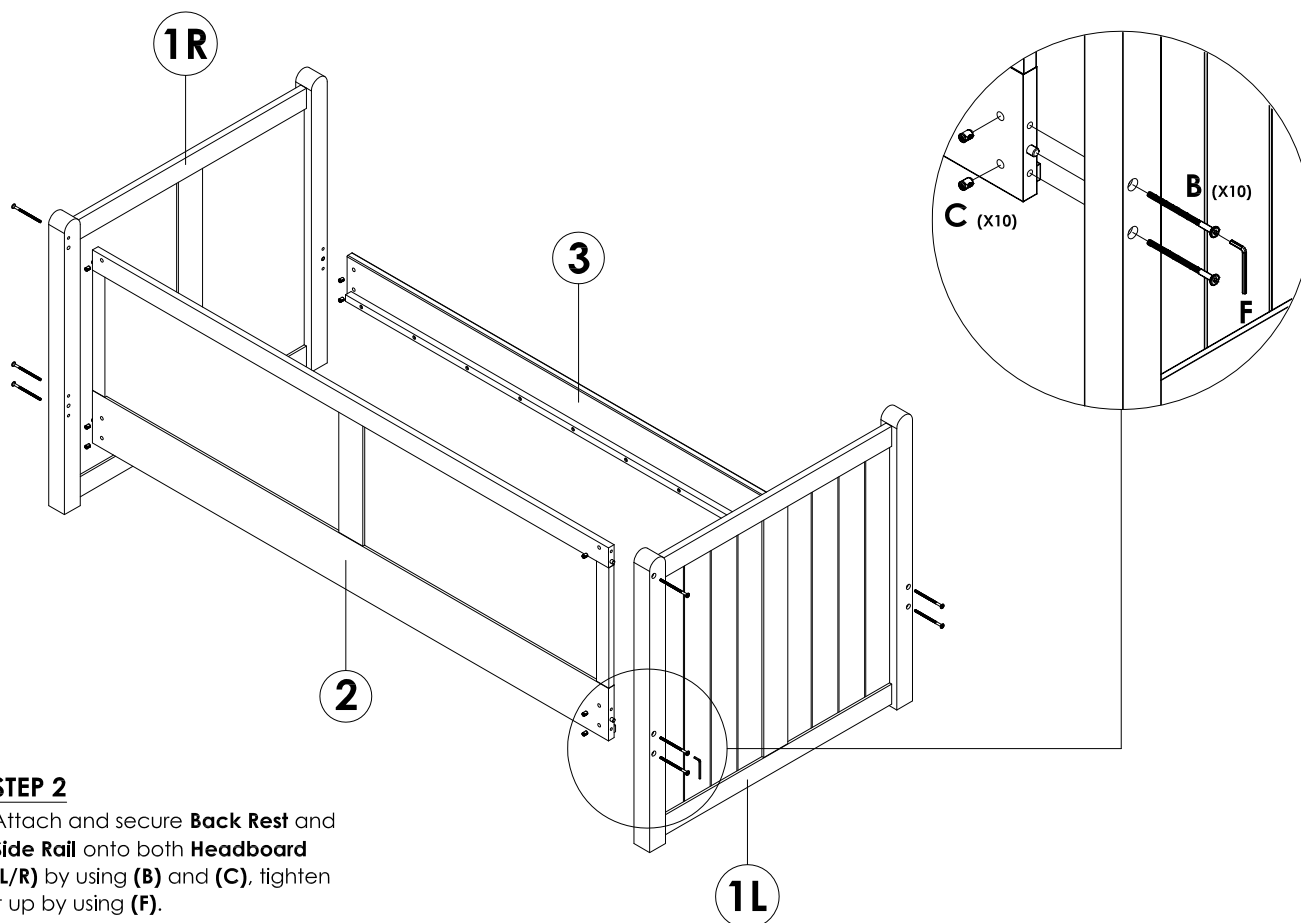

STEP 2


Attach and secure **Back Rest** and **Side Rail** onto both **Headboard (L/R)** by using **(B)** and **(C)**, tighten it up by using **(F)**.

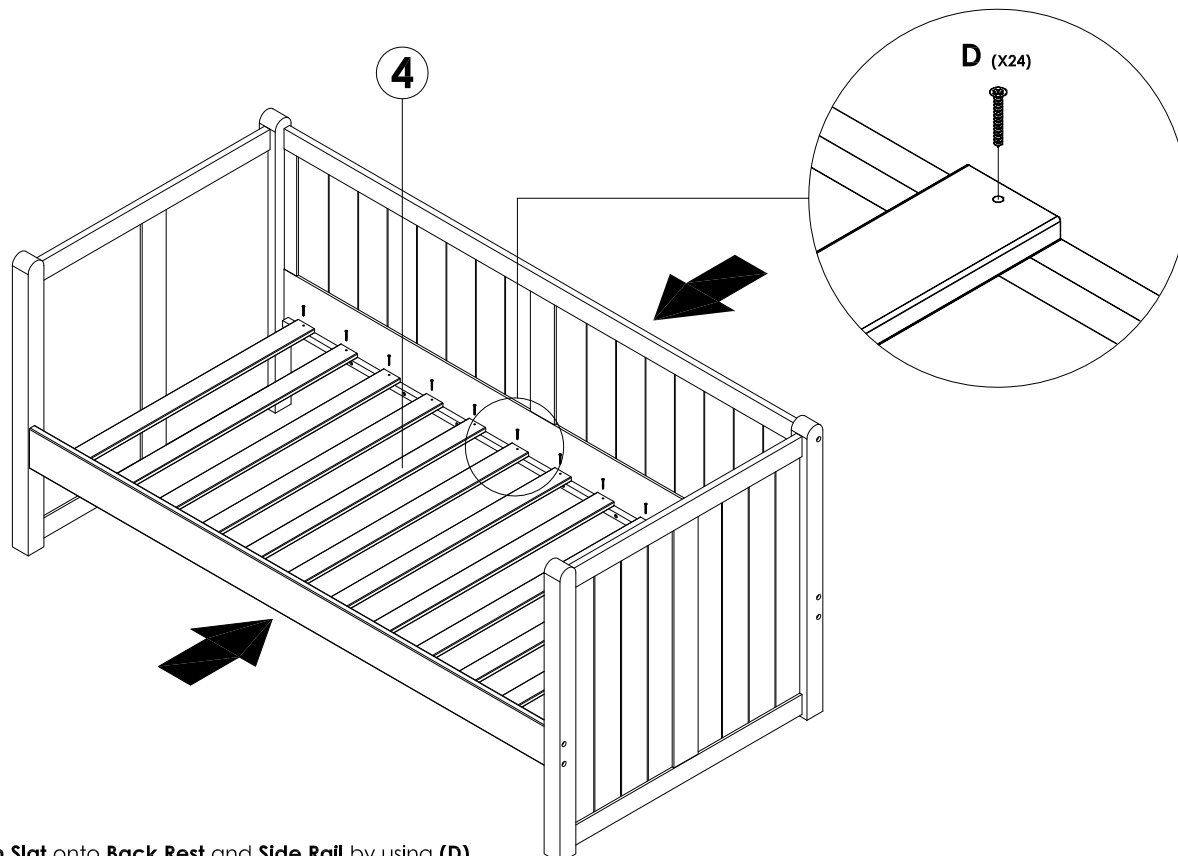

STEP 3

Attach **Wooden Slat** onto **Back Rest** and **Side Rail** by using **(D)**, tighten it up by using a Crosshead Screw Driver.

* Align **Back Rest** and **Side Rail** before tightening the screws.

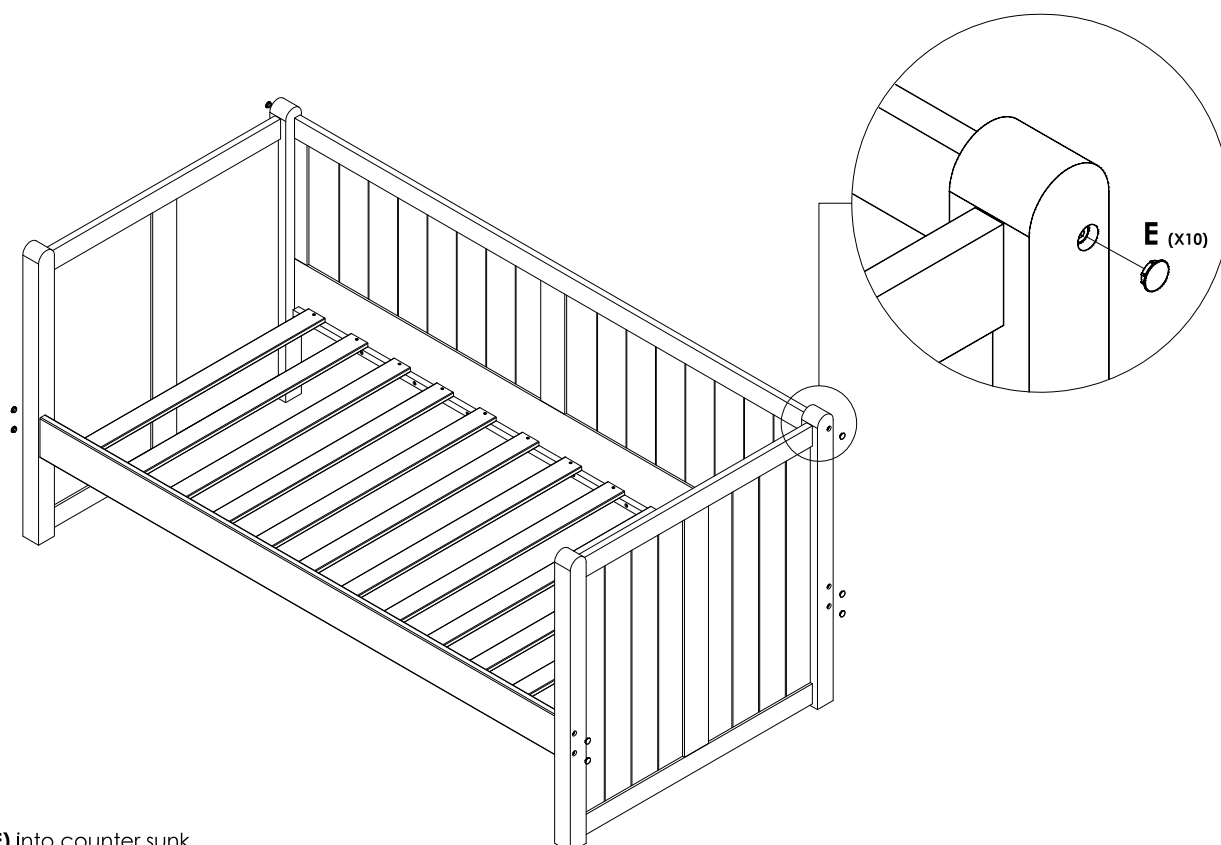

STEP 4

Attach **(E)** into counter sunk holes of **Headboard (L/R)**.
Go on to complete the entire assembly.